

Quick Reference Guide

Please read the Operating Instructions for details.


—Keep this leaflet for your next use.

Check the enclosures:

- | | |
|--|--|
| <input type="checkbox"/> AC Adaptor one | <input type="checkbox"/> Screws two |
| <input type="checkbox"/> Battery Box one | <input type="checkbox"/> Washers two |
| <input type="checkbox"/> Wall Mounting Adaptor . . one | |

How to Set Up the Unit

Connect the unit as shown.

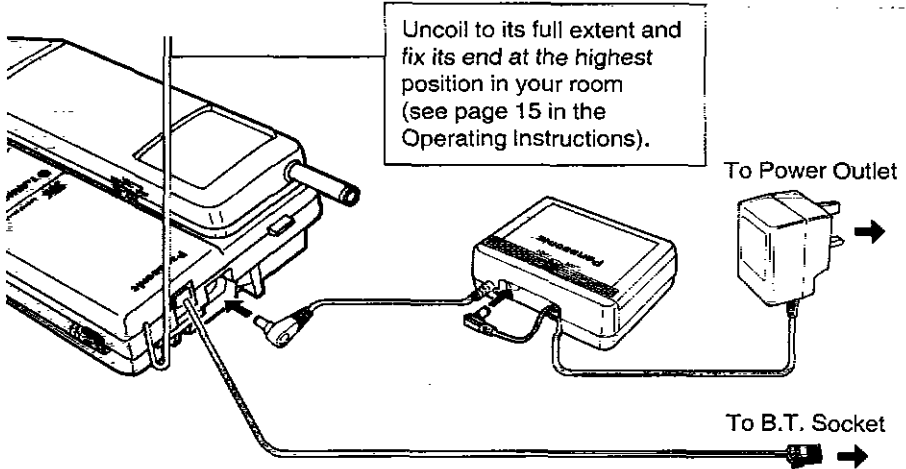

The AC adaptor and the Battery Box must remain connected.

—Regarding installing the batteries into the Battery Box for power failure protection, see page 14 in the Operating Instructions.


CONNECTION OF POWER SUPPLY

This apparatus is intended for use when powered by KX-A14BE and KX-A91E. Other usage will invalidate any approval given to this apparatus.

How to Operate the Unit

Charge the portable handset battery before initial use.

The battery is beneath this cover.

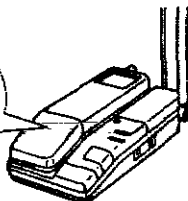

Place the portable handset on the base unit for about 10 hours.

Extend the aerials fully during use.

POWER/RINGER Switch:
Set to "ON", or the portable handset will not operate or ring.

POWER/RINGER
OFF ON





TALK Button

PROGRAM Button

BATT LOW/PROG Indicator

AUTO Button

CH Button

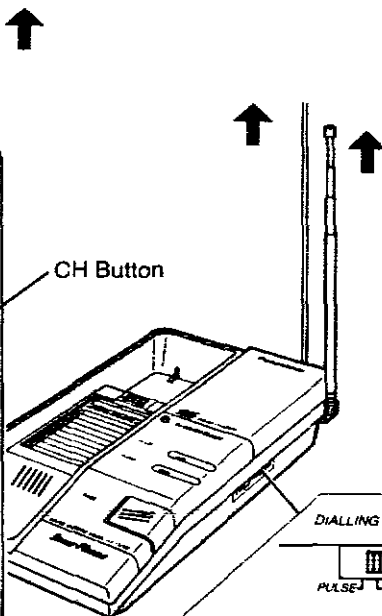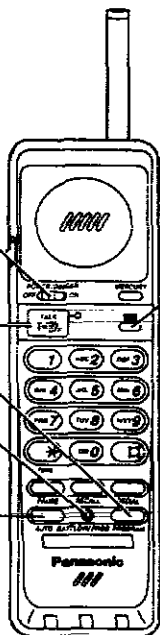

DIALLING MODE


PULSE TONE

DIALLING MODE


Selector:

Set to "TONE". If your telephone line has rotary service, set to "PULSE".


Making calls

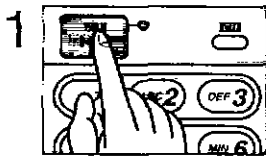

1 Press **TALK** to get dial tone.

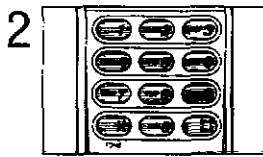


2 Dial a phone number.

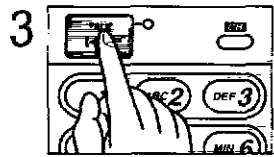


3 To hang up, press **TALK** or place the portable handset on the base unit.

Answering calls

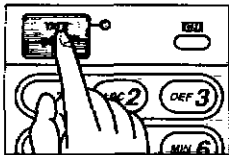

If the portable handset is off the base unit, press **TALK**.


OR

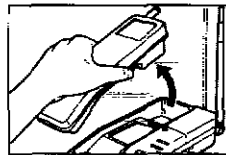


If the portable handset is on the base unit, lift the portable handset.

Storing phone numbers in memory


The dialling buttons (0 to 9) function as memory stations for automatic dialling.

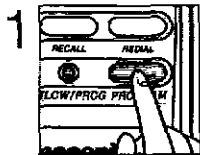


1 Press **PROGRAM**.

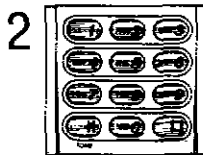

2 Enter a phone number up to 16 digits.

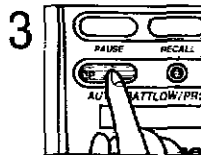

3 Press **AUTO**.

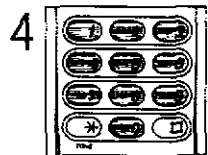

4 Press one of the dialling buttons to select a memory station.

—To store other number, repeat step 1 to 4.

Dialling a stored number from memory


1. Press **TALK** to get dial tone.
2. Press **AUTO**.
3. Press the station number where the phone number is stored.
The stored number is dialled automatically.

Important information

195

Battery charge

Recharge is necessary when the BATT LOW/PROG indicator flashes or beep tone sounds every 15 seconds during a conversation.

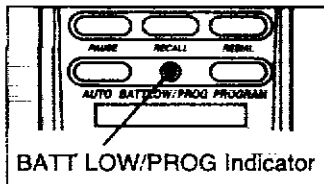


- For maximum battery life, do not charge it after every telephone call. We recommend you charge it every few days. The battery works best if discharged enough before being recharged.
- Clean the charge contacts with a soft cloth once a month, or the battery may not charge properly.


Operating range and noise

Range of operation depends on the construction of your home, weather or usage conditions, because the cordless phone uses wireless radio waves.


For maximum range, it is best to place the base unit in a HIGH and CENTRAL location of the house, with no obstructions. Extend the aerials during use for best reception.

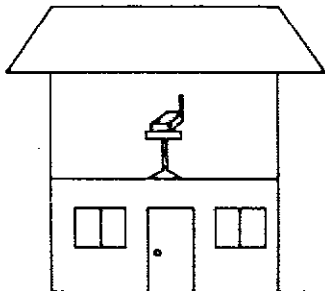

Electrical appliances might interfere with the telephone conversation. In this case, keep the base unit, telephone line cord or AC adaptor cord away from electrical appliances.

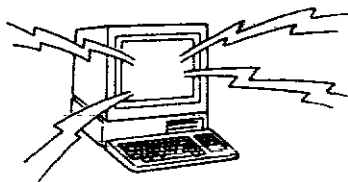

If noise interferes with your conversation:

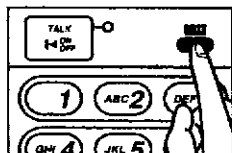

Press CH to select a clear channel.

- If noise will not decrease, approach the base unit.