

SIEMENS

Gigaset
3015
Comfort



 
Operating Instructions

and Safety Precautions 

General

Safety precautions

- Only use the **plug-type AC adapter supplied** as indicated on the underside of the unit.
- Never use ordinary (non-rechargeable) batteries. Only use **approved batteries of the same type** (rechargeable), as otherwise battery damage can result (dangerous), see the table on page 8.
- Medical equipment can be affected by the handset.
- The handset can cause an unpleasant humming sound in hearing aids.
- Do not install the base station in bathrooms or showers.
- Do not operate the telephone in environments where there is risk of explosion (e.g. paint shops).
- Dispose of batteries and the telephone in an environmentally friendly manner in accordance with the relevant legislation.
- Ensure that the operating instructions are included when passing on your Gigaset to a third party.
- The handset's battery compartments feature the following diagrams:














Insert rechargeable batteries correctly in accordance with polarity symbols.



Operate battery type in accordance with these operating instructions.

 Displays

The following symbols appear in the display, depending on the operating situation:

- | | | | |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------|
|  | Network access list |  | Delete character |
|  | Scrolling in menus |  | Internal dialing |
|  | Left/right |  | Redialling number |
|  | Mailbox function:
new messages on the answering machine or new numbers in the caller list |  | Confirmation |
| | |  | Higher menu level |
| | |  | Cancel |
| | |  | Supplementary menu |

Gigaset 3000 Comfort handset: brief overview



Base name

- constant: ready for dialling/receipt
- flashing: no connection!

Charging status

-  full
-  empty

Directory

- activate

Display keys

- see below

Open menu

- on/off

Handsfree talking

- on/off

Talk

- accept call
- dial call number

End call

- end call
- handset on/off: hold key down!
- cancel function


Recall key

- for systems & select service
- insert pause: hold key down

Keypad protection

- on/off: hold key down!

Idle display, display keys



Reception range


Current functions

- of the display keys, e.g. network access list, caller list, internal dialling, redialling number

Display keys

- Functions vary depending on the display
- If there are 2 functions assigned to the key, press either the left or right side of the key

Base station keys

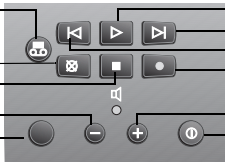

Announcement key

Delete announcement/messages/information

Pause/STOP

Loudspeaker low

Paging key

Play messages back

Forward to next message

Rewind to prev. message























 




 



 
 



 
Record announcement/information

Loudspeaker high

Answering machine key

Quick reference guide

Quick reference guide

Function	Key combination
Activate/deactivate the handset	Hold down  for 1 second
Activate/deactivate key-pad protection	Hold down  for 1 second
Make an external call	 
Redial a number	 or  
Save a call number in the directory	   New Entry OK Name    OK
Dial a number from the directory	 first letter or  
Dial a number from the call list	 or  
Set the handset volume	 Settings OK Sound Settings OK 
Mute the microphone	INT Microphone muted ;  microphone on
Make an internal call	INT e.g.  3
Call all handsets	INT CALL ALL
Transfer call (connect)	INT e.g.  
Internal enquiry call	INT e.g.  2 ; terminate enquiry call: 
Set the date	INT SET  0  8 OK set the date OK
Set the time	INT SET  0  9 OK set the time OK
Listen to messages	INT  9  2 or key  (base station)
Delete individual old messages	At the base station:  during playback
Delete all old messages	At the base station:   .

Contents

Index.....	77
General.....	2
Safety precautions	2
Displays	2
Gigaset 3000 Comfort handset: brief overview	3
Base station keys	3
Quick reference guide	4
Preparing the telephone	5
Checking the contents of the package	5
Installing/connecting the base station	5
Inserting/charging the batteries	7
Attaching the belt clip	9
Activating/deactivating the handset	9
Activating/deactivating keypad protection	9
Setting the date and time	10
Activating/deactivating the answering machine	11
Making calls	12
Making an external call	12
Making an internal call	12
Answering a call	13
Displaying the incoming call number (CLIP)	13
Handsfree talking	14
Muting the microphone	14
Picking up a call from the answering machine	14
Calling a handset directly (direct inward dialling)	15
Call pickup	15
Broadcasting an announcement	16
Fax calls	16
Paging	16

- Enhanced telephone features 17**
 - Redial 17
 - Directory/network access list 18
 - Caller list/mailbox function 23
 - Carrier services 25
 - Open listening at the base 26
 - Recording an external call 26
- Cost-effective telephoning 27**
 - Network access list (Call by Call) 27
 - Displaying the call duration 28
 - Displaying the call charges 28
 - Call allowance account 30
- Answering machine 31**
 - Operation with the base station 31
 - Operation with the handset 36
 - Remote operation (remote retrieval) 42
- Individual answering machine settings 43**
 - Number of rings (charge saving function) 43
 - Message length 43
 - Pause after message playback 44
 - Time stamp for every message 44
 - Open listening at the base station 44
 - Broadcasting an announcement (voice calling) 44
 - Recording quality 45
- Individual handset settings 46**
 - Setting the display language 46
 - Setting the ringer volume 46
 - Setting the ringer melody 47
 - Setting a short ringer tone (advisory tone) 47
 - Setting the handset/loudspeaker volume 47
 - Activating/deactivating beeps 48
 - Auto talk 48
 - Changing the base name 49
 - Registering at more than one base station 49
 - Changing the base station 49
 - Resetting the factory settings 50

- Base station settings 51**
 - Setting the ringer volume 51
 - Setting the ringer melody 51
 - Activating/deactivating key beeps 51
 - Activating/deactivating music on hold 52
 - Setting pauses 52
 - Resetting the factory settings 53
- Using short cuts 54**
 - Handset short cuts 54
- Handset security 57**
 - Changing the telephone PIN 57
 - Hot key (direct station) selection 58
 - Telephone lock 59
 - Dialling an emergency number 59
- Base station security 60**
 - Changing the base station system PIN 60
 - Activating/deactivating the base lock 60
 - Barring/enabling call numbers 61
 - Saving emergency numbers 62
- Operating more than one handset 63**
 - Registering additional handsets 63
 - Making an internal call 64
 - Forwarding a call 64
 - Internal enquiry call 65
 - Accepting call waiting 65
 - Collective call 65
 - Displaying the handset number 65
 - Open listening at the handset 66
 - De-registering handsets 66
 - Disabling external dialling at individual handsets 67
 - Connecting a fax/modem 67
 - Activating/deactivating the ringer 68
 - Setting the ring delay/collective call/direct inward dialling 68
 - Room monitor 70

Connecting to a PABX..... 71

- Setting the dialling mode 71
- Switching to tone dialling 72
- Saving a dial-out number 72
- Pause after dial-out number 73

Appendix 74

- Maintenance 74
- Troubleshooting 74
- Guarantee/service/approval 75

Answering machine remote operation

Important menusCover

Base station settingsCover

Preparing the telephone

Checking the contents of the package

The package contains the following:

- one Gigaset 3015 base station
- one Gigaset 3000 Comfort handset
- one plug-type AC adapter
- one telephone cable
- one belt clip for the handset
- two batteries
- one set of operating instructions

Installing/connecting the base station

Notes on installation

- | | |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none">– The base is designed for operation in protected rooms with a temperature range from +5°C to +45°C.– Install the base station in a central location in the apartment/house, e.g. in the hall. |
|  | <ul style="list-style-type: none">– Do not install the base station in the bathroom or in showers.– Do not operate the handset in environments where there is risk of explosion, such as a paint shop. |

Range

The base station range is approx. 300 m outdoors and up to 50 m indoors. The receive strength icon indicates the strength of the radio contact between the base station and handset:

- ▀▀▀▀ receive strength 100%
- ▀▀▀▀ receive strength 50%
- ▀▀▀▀ no or very low receive strength


Preparing the telephone


Connecting the base station




Only use the plug-type AC adapter supplied as indicated on the underside of the base station.

1.

- Insert **small connector on telephone cord** into  jack (clicks into place)
- Place cord in cables duct
- Insert telephone jack into telephone socket

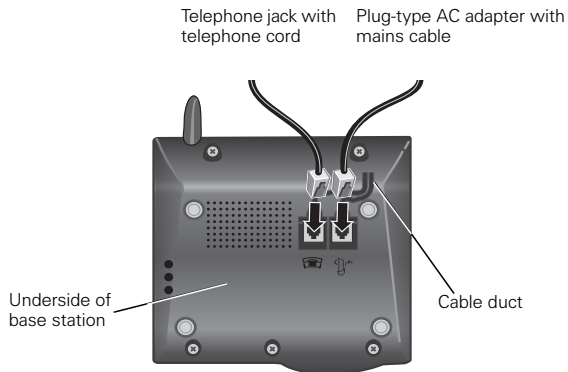

2.

- Insert **small connector on mains cable** into  jack
- Place cord in cables duct
- Insert plug-type AC adapter into socket

Preparing the telephone

Inserting/charging the batteries




- The **handset** is already registered at the base station **when shipped**.
- For information on registering **additional handsets or replacement handsets** (after repairs), see page 63.

Inserting the batteries



- Never use ordinary (non-rechargeable) batteries. Only use **batteries that have been approved** (rechargeable), see table on page 8.
- Only use approved batteries of the same type.
- Never use non-Siemens charging units as these can damage the batteries.

 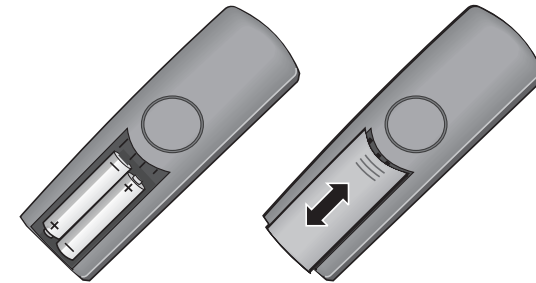

 




- **To open** the cover, press the grooved area on the cover and slide **back**.
- Insert the batteries, ensuring **correct polarity** – see figure on left.
- Slide the cover approx. **3 mm into the battery compartment** and push gently forward until it clicks into place.

Preparing the telephone

Charging the batteries

The batteries supplied are **not charged**. To charge the batteries, insert the handset in the base station or Gigaset 3000L charging unit (accessory) – you will hear the confirmation beep. The charging status icon flashes on the handset display to indicate that a charging operation is in progress:

-  Batteries empty  Batteries $\frac{2}{3}$ charged
 Batteries $\frac{1}{3}$ charged  Batteries full

-  – We recommend initially charging the batteries for at least 16 hours without interruption – irrespective of the charging status icon.
- Once the first charging operation is complete, you can replace the handset in the base station after any call. Charging is controlled electronically. This ensures optimum charging and prolongs battery life.
- The batteries heat up during charging. This is normal and not dangerous.
- The battery charging status is only correctly displayed after uninterrupted charging/discharging. You should therefore avoid opening the battery compartment unnecessarily.

Approved batteries:

Nickel-cadmium (NiCd)	Nickel-metal-hydride (NiMH)
Sanyo N-3U (700 mAh)	Sanyo H-3 U (1500 mAh)
GP GP60AAKC (600 mAh)	GP GP130 AA HC (1300 mAh)
Varta 751RS (700 mAh)	GP GP150 AA HC (1500 mAh)
Mobile Power 700 (700 mAh)	Varta VH 1101 or Phone Power(1000 mAh)
Panasonic 60 DT (600 mAh)	Panasonic HHR-110 AA (1100 mAh)
	Friwo NiMH (1400 mAh)
	Toshiba TH-1200 AARE (1200 mAh)

Handset operating time/charging time:

Capacity (mAh)	Standby time (hours)	Talktime (hours)	Charging time (hours)
700	up to 100	approx. 10	up to 5
1100	up to 160	approx. 15	approx. 9
1500	up to 220	approx. 20	approx. 12


Power consumption:

- In standby mode (without charging) approx. 2W.
- In standby mode during charging approx. 5W.

Preparing the telephone

Press keys:

Attaching the belt clip

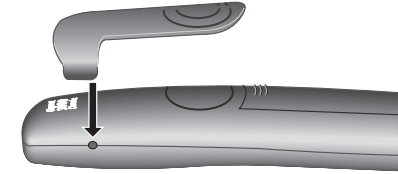

Push the clip onto the back of the handset until the side protrusions click into place.

Activating/deactivating the handset




Press the end call key for **1 second** – you will hear the confirmation beep*!



The handset is activated as soon as you insert the batteries and place it in the base station/charging unit.

Activating/deactivating keypad protection

You can "disable" the handset keys, e.g. when carrying the unit in your pocket or bag. This protects the keypad against inadvertent activation. **An incoming call** automatically deactivates the keypad protection. Calls can be accepted by pressing the talk key .



To activate/deactivate keypad protection, hold down the key for **1 second** – you will hear the confirmation beep*!

* Confirmation beep = 1 long tone; error beep = 4 short tones

Preparing the telephone

Press keys:

 
Setting the date and time

Setting the date

The date setting is required for displaying the date on which the message was received by the caller list and at which messages were output by the answering machine.

Your Gigaset is "Year 2000-compliant".

Initiate the setting – the current setting is displayed; the current input position is flashing:



e.g.

Enter the **day**.
If necessary, press to jump back and start again.

e.g.

Enter the **month**.

e.g.

 
Enter the **year**.

Save the setting and terminate the function.

Entering the time

The time setting is required for displaying the date on which the message was received by the caller list and at which messages were output by the answering machine.

Initiate the setting – the current setting is displayed; the current input position is flashing:



e.g.

Enter the **hours**.
If necessary, press to jump back and start again.

e.g.

Enter the **minutes**.

Save the setting and terminate the function.

The date and time must be reset after a power cut or disconnecting the base station's plug-type AC adapter.

Preparing the telephone

Press keys:

Activating/deactivating the answering machine

You can use the answering machine as soon as the base station has been connected.

Activating:

- Press the answering machine key at the base station. The key lights up.

Deactivating:

- Press the answering machine key at the base station. The key goes out.

Making calls

Press keys:

Making calls

Making an external call

External calls are calls within the telephone network.



Enter the call number.
If necessary, correct with



Press the talk key.



Ending a call:

Press the end call key.



- You can also **press the talk key** first and then enter the call number – each digit is dialled immediately.
- You can **cancel the dial operation** with the end call key .
- You can insert a **pause** with the recall key (hold down key).
- You can opt to **not save entries**, e.g. when controlling external telephone services: press the menu key , select **Switch to Tone** and confirm with **OK** – **none** of the numbers entered afterwards will be saved for number redial.

Making an internal call

You can conduct **toll-free calls with up to 6 handsets**.



Press the display key – your handset's internal call number is displayed.

e.g.

Enter the internal call number of the handset.
Press **CALL ALL** or to call all handsets .



Ending a call:

Press the end call key.

Making calls

Press keys:

 
Answering a call

A call is signalled by the ringer.

Press the talk key

or

if "Auto talk" is activated, simply remove the handset from the base station (see factory setting on page 50).



- If the **ringer is disturbing you**: press the **SILENT** display key.
Calls that appear on the display can be answered, for example, by pressing the talk key .
- For information on setting the handset volume (even during a call), see page 47.

Displaying the incoming call number (CLIP)

If calling line identification (CLIP) is supported by the network carrier and the call number was received, the caller's number appears on the handset's display:

e.g. — Call number
— Bell icon
— SILENT



The name is displayed instead of the call number if the caller's number received is stored in the handset's directory.

or

External Call, if the number was not received

or

Withheld, if the number was suppressed by the caller

or

Internal Call in the case of an internal call.

Making calls

Press keys:

Handsfree talking

Handsfree talking, with the loudspeaker switched on, offers the following advantages:

- Other people can listen in and join in the call.
- You can place the handset on any convenient surface or, by **holding down the handsfree key**, replace it in the base station/charging unit. This leaves your hands free, for example to take notes.
- When dialling, for example, you can hear the dial tone without having to lift the handset to the ear.

Handsfree talking during a call



Activate handsfree talking.

Set the volume: press the handsfree key once more.



Change from handsfree talking to handset.



End the call.

Handsfree talking when dialling/answering a call



Press the handsfree key instead of the talk key .

Muting the microphone

You can deactivate your microphone during external calls in order, for example, to talk privately to somebody in the room. The calling party cannot hear your conversation during this time.



Mute the microphone – the calling party will hear music on hold.



Re-activate the microphone.

Picking up a call from the answering machine

You can pick up a call that is being recorded by the answering machine with a handset.



Press the talk key.

Recording is ended and you can talk to the caller.

Making calls

Press keys:

Calling a handset directly (direct inward dialling)

If you set the direct inward dialling function (see page 68), an external caller can dial the internal call number of a handset directly after your call number.

Once your call number has been dialled, the external caller hears a recorded message **irrespective of your answering machine setting** (see page 32).



A **typical advisory announcement** for direct inward dialling would be, e.g.:
"Dial 1 for Mr. Miller, 2 for Mrs. Moore, 3 for the secretary's office. Press """" if you do not already have a contact."*

If you have not recorded an advisory announcement, the caller hears the standard announcement "Please call extension".

The caller then has 5 seconds to enter the internal call number of a handset.

If the desired user does not answer the call, the call is signalled as a hunt group call at all handsets after several ring cycles (for information on ringer delay, see page 69).

If the call is still not answered by a user and if the answering machine is activated, the answering machine accepts the call after several ring cycles (for information on this setting, see page 43) with the set announcement (announcement 1 or announcement 2). The call is not accepted by the answering machine if the advisory announcement is set.

Call pickup

If a call is not answered at a specific handset, you can pick it up with your handset.



Press the talk key.



Answer the call.

You are connected to the external caller.

Making calls

Press keys:

Broadcasting an announcement

You can use the handset to broadcast an announcement via the base station's loudspeaker. The answering machine must not be recording a message during the announcement.

INT 

Call the answering machine.



Activate the announcement function and broadcast the announcement.



Terminate the announcement.



Press the end call key.

Fax calls

You can register a cordless Gigaset 1000 TAE telephone jack at the base station. You can connect either a corded telephone, a fax machine, or a modem to this jack (see page 67). Fax calls are automatically forwarded to the fax machine by the base station.

Paging



Press the **base station key** – all handsets ring.



Ending paging:

Press the base station key once more or press the talk key  at a handset.

Enhanced telephone features

Press keys:

→→

↓

↻

→→

↓ >≡+

↓ Automatic Redial OK

↻

CANCEL

→→

↓ >≡+

↓ Copy to Dir. OK

Name

>≡+

 


Save Entry OK

Enhanced telephone features




Redial

Your handset automatically stores the last five call numbers dialled. If the call number is saved in the handset's directory, the corresponding name is displayed instead of the number.

Manual redial

 
-  Display the call numbers/names.
-  Select the required call number/name.
-  Press the talk key – the connection is set up.


Automatic redial

-  Display the call numbers/names.
-  >≡+ Select the call number/name.
-  Automatic Redial OK Activate the automatic redial feature.

The handsfree key flashes while the number is being dialled, the loudspeaker is activated and the microphone is off.

If the user answers:

 


-  Press the talk key.

 This function is automatically deactivated after several call attempts and after a successful call.



To cancel redial:

- CANCEL Press the key shown or any other key.

Transferring a call number to the directory

-  Display call numbers.
-  >≡+ Select a call number.
-  Copy to Dir. OK The directory's input field opens. The call number is already entered.

Name Enter names, where applicable, change the call number. Enter letters and characters, see page 19.

-  >≡+ Open the supplementary menu.
-  Save Entry OK Save the entry.

Enhanced telephone features

Press keys:

Changing a call number

You can change the call number and/or add to it with a number from the network access list.

→→ Display call numbers.

↓ ⌂+ Select a call number.

↓ Edit Entry OK The call number is displayed.

⌂ Change the call number.

Where applicable, insert a number, for example, from the network access list via the supplementary menu ⌂+.

⌂+ Open the supplementary menu.

Save Entry OK Save changes for the redial.

Deleting or displaying a call number

→→ Display call numbers.

↓ ⌂+ Select a call number and **select the required function:**


↓ Delete Entry OK The call number is deleted.


or

↓ Display Entry OK The entire call number is displayed.

GO BACK Quit the display.

Directory/network access list

With the **directory** , you can store up to 100 call numbers and then dial them at the push of a button.

The **network access list**  offers you the following possibilities:



- You can store prefixes for telephone companies.
- You can store frequently used call numbers.
- You can, for example, store the number of the company switch and suffix dial the extension number when setting up the call.

Using the directory and the network access list is identical.

Enhanced telephone features

Press keys:

Storing a call number

 /  Display the directory/network access list.

⌂+ Open the supplementary menu.

↓ New Entry OK Select the function.

Name


Enter the name.
For information on entering letters and characters, see page 19.

↓ Scroll to the next line.



⌂+ Enter the call number (see also note below).





⌂+ Open the supplementary menu.

Save Entry OK Save the entry.


- When entering the number, you can insert a pause with the recall key  (hold down) or a number from the network access list via the supplementary menu ⌂+.
- You can store entries during a call.



Dialling from the directory/network access list

 /  Display the directory/network access list.

e.g.  /  Enter the first letters of the name, e.g. press the key  twice for "E" and scroll with .

The names are listed in alphabetical order.

 Press the talk key to start dialling.

 After selecting the number, you can open the supplementary menu ⌂+ and select **Display Number**. Then change the number and press the talk key  to start dialling.

Entering names

To enter **names**, you can choose letters, digits and symbols with the appropriate key.

The entries are sorted in the following **sequence**: *, #, blank, digits (0-9), letters (alphabetical), -, remaining characters.

Enhanced telephone features

Press keys:

Press the appropriate key repeatedly or hold it down:

	1x	2x	3x	4x	5x	6x	7x	8x	9x
	1								
	a	b	c	2	ä	à	â	ã	ç
	d	e	f	3	ë	é	è	ê	
	g	h	i	4	ï	î			
	j	k	l	5					
	m	n	o	6	ö	ñ	ó	ô	õ
	p	q	r	s	7	ß			
	t	u	v	8	ü	ú	ù	û	
	w	x	y	z	9	ý	æ	ø	å
	*	.	-	0	,	+	:	?	!
	a→A	*	/	()	=	&	@		
	#	£	\$						

* Blank

Upper/lowercase:

The **first letter** of the name is **written automatically in upper case**, the letters immediately afterwards are written in lower case.



Manual shift to upper/lower case for **one character**.

Controlling the cursor:



Move the cursor to the left or right or to the end of the word/line in the next line (press briefly or hold down).



Scroll up or down one line.

Deleting a character:



The character to the left of the cursor is deleted (press briefly or hold down).

Inserting characters:

Characters are always inserted to the left of the cursor.

Enhanced telephone features

Press keys:



 
Open the directory/network access list.



Select the required entry.



Open the supplementary menu.



Name

Change the name.

For information on entering letters and characters, see page 19.



 
Scroll to the next line.



Change the call number.



To complete the change, open the supplementary menu.



Save the entry.

Deleting or displaying an entry



 
Open the directory/network access list.



Select the required entry.




Open the supplementary menu.



A confirmation beep is generated. The entry is deleted.

 or



The complete entry is displayed.

GO BACK

Copying an entry

You can copy an entry to another comfort handset to avoid having to input the same entry twice.

Step 1:



 
Open the directory/network access list.

e.g.

Select an entry: enter the first letters of the name, e.g. press for "T", then .



Open the supplementary menu.



Select the function.

When **Copy entry to INT Hset:** is displayed:

e.g. OK

Enter the call number of the receiving handset and confirm.

Enhanced telephone features

Press keys:

e.g. **Telephone PIN**

OK

YES or NO

Step 2:

The **receiving handset** rings:

Accept the call and enter the receiving handset's telephone PIN.

The entry is copied.

Once the entry has been successfully transferred:

Copy an additional entry **or** terminate the function.

Copying the directory/network access list

You can copy the **entire** directory/network access list to another enhanced handset to avoid having to input the same entries twice.

/ Open the directory/network access list.

Open the supplementary menu.

OK

Select the function.

e.g. **3** **OK**

Enter the receiving handset's call number and confirm.

The **receiving handset** rings:

Accept the call and enter the receiving handset's telephone PIN.

OK

The directory/network access list is copied.

Deleting the directory/network access list

All entries in the directory or the network access list are deleted!

/ Open the directory/network access list.

Open the supplementary menu.

OK

Select the function.

Telephone PIN **OK**

Enter the telephone PIN (factory setting: 0000).

JA

Confirm deletion of all entries.

Displaying available memory

/ Open the directory/network access list.

Open the supplementary menu.

OK

The available memory is displayed.

Directory, network access list and short cuts "share" a **single** memory.

Enhanced telephone features

Press keys:

Caller list/mailbox function

If transferred, the call numbers for the **last 30 incoming calls** are stored in the caller list, provided the caller's number was transferred.

New entries in the caller list are indicated by the display key.

You can call up the list via **INT SET 3** if there are no new entries available.

Calling back a caller

The entries are sorted according to the time at which they were **received**. If several calls are received from the same number, the **last call** is saved.

Activate the caller list.

If the caller list contains new entries **and** new messages were recorded, then a selection appears on the display (see 1st display). If the caller list **only** contains call numbers, then the 2nd display appears immediately and you do not need to make any selection.

1st display

New entries in both list:



If necessary, select the caller list.

The number of new and old entries is shown on the display.

2nd display



The **newest entry** is displayed after **2 seconds** or when you press **OK**:

If the setting "**unanswered calls**" is activated:

Date, time (if set, see page 10)

01.02. 05:12PM

00498972244667


(07)



Call number **or** name, if number is in the directory

Call attempts

 
Enhanced telephone features

Press keys:


 If the setting "**all calls**" is active, the entry number and the number of entries are displayed instead of the call attempts, e.g. 15/20. In addition, an ✓ indicates that the call was accepted.

 Scroll to the required entry.
 Call back a caller – the entry is deleted from the caller list and saved in the redial list.


After selecting an entry, you can also:

 Activate the supplementary menu and scroll to the required function:
 Return Call OK
 Call back a caller.

or

 Copy to Dir. OK
 Copy a call number to the directory.


or

 Delete number OK
 Delete a call number from caller list.

Caller list settings



You can make the following settings:

- only **unanswered calls** are saved
- **all incoming calls** are saved

Initiate the function – **Calls List** is displayed.
 e.g. INT SET 0 * OK
 For example, set **all calls**
 Unanswered calls = **1**; all calls = **2**
 OK  Save the setting and terminate the function.

Deleting the caller list


All entries are deleted from the caller list!

Initiate the function.
 INT SET 3  OK
System PIN OK
 Enter the base station's system PIN and confirm (factory setting: 0000).
 1 OK  Delete the caller list and terminate the function.



Enhanced telephone features

Press keys:

Carrier services

Your Gigaset 3015 Comfort simplifies the use of carrier services. The most important services are preprogrammed for you under the base short cuts. Functions are activated with the menu key  when the telephone is idle (before dialling). Functions are activated with the **SVC** display key during a call.


Functions before dialling

Press the menu key. 
 Base User Option OK
 Scroll and confirm.


To select and start the required function:

CLIR OK
 Suppress call number display for the next call.

or

 Call Waiting On OK
 Activate call waiting.


or

 Call Waiting Off OK
 Deactivate call waiting.


Functions during a call

SVC
 Activate functions.


To select and start the required function:

 Enquiry Call OK
 Initiate an enquiry call.


or

 Toggle OK
 Toggle between 2 callers.

or

 3 Way Call OK
 Initiate a 3-way call.

or

 Ring Back OK
 Save an automatic callback.

Enhanced telephone features

Press keys:

Open listening at the base

Persons present can listen in on an external call via the loud-speaker at the base station. You can activate and deactivate the open listening function during a call.

Activating/deactivating open listening



Activate/deactivate open listening.



You can raise or lower the base station volume with the **+** and **-** keys. The modified volume is saved.

Recording an external call

You can record an external call on the answering machine. The answering machine must be activated for this.

You are conducting an external call.



Start recording.
The base station lamp flashes and the call is recorded.



Terminate recording.

or




The external call and the recording are terminated.

Press keys:

Cost-effective telephoning

Network access list (Call by Call)

You can store prefixes for telephone companies and frequently used call numbers in the **network access list** . This simplifies dialling for you. Using the directory and the network access list is identical.

"Linking" call numbers

Open the network access list and select a number.

Open the supplementary menu and confirm a function – the number is displayed.



 Display Number 

e.g. 

Either enter the user's call number **or** open the directory and select a number.



Start dialling – the telephone numbers are dialled one after the other.

Speed dialling from the network access list

– You can save 10 numbers (**0-9**) in the network access list for speed dialling. These **speed dial numbers (0-9)** must be entered **before** the name, e.g. "1 Name".

– Hold down the relevant digit key (**0-9**) to display the number saved.

Prerequisite: speed dial number is saved!

e.g. 

Hold down the relevant digit key – e.g. 1, and the number saved under the name "1 Name" is displayed.

e.g. 

Enter the user's call number **or** open the directory and select the number.



Start dialling – the two parts of the call number are dialled one after the other.

Cost-effective telephoning

Press keys:

Displaying the call duration

The handset automatically displays the current call duration if call charge pulses are not transferred.

Displaying the call charges

Prerequisites: you requested call charge pulse transmission from your telephone company and the correct unit price is set. Call charge display starts as soon as the first call charge pulse is received.

e.g.

EXTERN	
00020	00001

Cost of the current call
Total charge for all calls

Setting the unit price

A unit price must be set to ensure that the call charges are correctly displayed.

If you set the **unit price to zero, units** are displayed instead of the call charges.

- Every modification resets the counter levels to zero. The call allowance account amounts are not affected.
- If the unit price is set to zero, the call allowance account amounts are deleted.

INT SET 3 7 OK

System PIN OK

Initiate the setting – **Charge per Unit** appears.

Enter the base station's system PIN and confirm (factory setting: 0000) – the current setting is displayed.

If necessary, press the * key to toggle between display with decimal point (000.00) and without decimal point (00000).

e.g. 1 2

Enter the unit price.

If necessary, use the ← key to set the charge factor to "00.00" – setting for displaying units.

OK

Save the setting and terminate the function.

Cost-effective telephoning

Press keys:

Displaying/deleting total charges

You can display the total charges for **each handset** and for **all handsets**. Of course, if units are set, units are displayed instead of total charges.

INT SET 0 3 OK

System PIN OK

Initiate the setting – **Total Charge** is displayed.

Enter the base station's system PIN and confirm (factory setting: 0000) – the numbers of all registered handsets are displayed.

• **Total charges for all handsets:**

*

Press the key.

If necessary, press ← to delete and confirm with OK.

0

Terminate the function.

or

• **Total charges for a specific handset:**

e.g. 1

Enter the number of the handset – the following display appears:

e.g.

Total Charge	
0000120	00015

Cost of the current call
Total charge for all calls

If necessary, press ← to delete and confirm with OK.

0

Terminate the function.

Displaying call charges for the last call

If this function is activated, the (total) call charges for the last calls are always displayed when you press the talk key.

INT SET 3 8 OK

System PIN OK

Initiate the setting – **Charge last Call** appears.

Enter the base station's system PIN and confirm (factory setting: 0000).

e.g. 1

For example, activate the display. Activate = 1; deactivate = 0 (factory setting)

OK

Save the setting and terminate the function.

Cost-effective telephoning

Press keys:


Call allowance account

Prerequisite: call charges are displayed.

You can assign a credit balance to **each** handset for **external calls**. The current credit balance is displayed in call status.

If the credit balance runs out:

- An advisory beep is generated during a call when the call allowance account is down to its last five units. The connection is cleared down when the credit balance finally runs out.
- You can continue to call emergency numbers saved at the base station.

 If the base station is set to call charge units, then the call allowance account also uses units, see page 28.

Setting the credit balance

INT SET 0 4 OK

Initiate the setting – **Call allow.acc.** appears.

System PIN OK


Enter the base station's system PIN and confirm (factory setting: 0000) – the numbers of all handsets registered are displayed.

e.g. 1

Enter the handset's call number – the display indicates the current status of the handset's account.

e.g. 2 0 0 0 0

Enter the credit balance amount (5 digits, up to 99999 or 999.99) – old display is deleted.

You can set the amount to zero with the delete key .

OK 

Save the credit balance, terminate the function **and** now proceed as follows to re-activate the **call allowance account**.

Activating/deactivating the call allowance account

INT SET 3 0 OK

Initiate the function – **Hset Restriction** appears.

System PIN OK

Enter the base station's system PIN and confirm (factory setting: 0000).

e.g. 1

Enter the handset's call number.

e.g. 1

For example, activate the call allowance account. Activate = **1**; deactivate = **2**

OK 

Save the setting and terminate the function.

Answering machine

Press keys:

Answering machine

The answering machine is ready for operation once your base station has been put into service.
Answering machine operation is supported by appropriate handset displays and voice messages.



You can operate the answering machine directly via the base station keys, via a registered handset or via an external telephone.

▶ The base station keys are assigned to the relevant digits on the handset (see page 36).



Operation with the base station

Your answering machine is ready for operation as soon as the base station has been put into service. Messages can only be saved with a time stamp once the date and time have been set. The answering machine uses the default female-voice announcements stored ("There is nobody available to take your call right now. Please leave a message after the tone") until you record your own announcement.

Activating:

- ① Activate the answering machine.
The answering machine key at the base station lights up. The answering machine is ready to record.

▶ If the memory is full and an advisory announcement is recorded, the answering machine automatically switches over to "Call advisory without recording".

Deactivating:

- ① Deactivate the answering machine.
The LED goes out.

Selecting announcements

Answering machine

Press keys:

A default announcement that cannot be deleted is set at the factory: *"There is nobody available to take your call right now. Please leave a message after the tone."*

This announcement is used until you record your own announcement or if you deleted your personal announcement.

You can select one of the following announcements:

- **Announcement 1** with message recording and concluding announcement
- **Announcement 2** with message recording and concluding announcement
- **Advisory announcement** without recording
The advisory announcement is also required for the DID function (see page 15).



Select the required announcement.



Scroll back to the previous announcement.



Scroll forward to the next announcement.



The selected announcement is active.

The announcement set is not lost even if the answering machine is deactivated.



When you select **advisory announcement** without recording, the answering machine cannot be activated or automatically deactivates although no advisory is recorded.

Recording announcements

You must first set the desired announcement type before you record an announcement (see above). You can record announcements with or without concluding announcements.

Recording announcements without concluding announcements



Initiate recording.



The answering machine automatically calls all registered handsets. Recording is started from the handset that answered the call.



Press the talk key at the handset.

You can now hear the ready tone. The answering machine key on the answering machine starts to flash.

Speak your announcement or advisory text clearly into the machine.

Example of a **typical announcement**:

"This is the answering machine for Mr. Moore. I cannot take your call right now. Please leave a message after the tone."

Example of a **typical advisory announcement**: *"Our offices are closed. Please ring back during business hours between 9 a.m. and 5 p.m. on weekdays."*

Answering machine

Press keys:

For information on which advisory announcement you can record for direct inward dialling, refer to page 15.

Recording is automatically terminated:

- if you exceed the maximum recording time of 170 s
- if you pause for more than 2 seconds when recording your announcement.



Press the end call key at the handset.

The text recorded is played back.

Recording an announcement with a concluding announcement



Press key at the base station to initiate recording.



Press key at the base station. The answering machine automatically calls all registered handsets. Recording is started at the handset that picks up the call.



Press the talk key at the handset and speak your announcement.



Press key at the base station. You are prompted to record a concluding announcement.

Example of a **typical concluding announcement**:

"You have exceeded the maximum recording time for your message. Thank you for calling."



Press key at the base station to terminate recording.

The text recorded is played back.

Listening to announcements



Press key at the base station to initiate playback.



Press key at the base station to play back the current announcement set.



You can raise or lower the playback volume (of the base station loudspeaker) with the **+** and **-** keys. The modified volume setting is saved.

Answering machine

Press keys:



Initiate the delete operation at the base.



The current announcement set is deleted.



The answering machine automatically deactivates when you delete a call advisory. The fixed default announcement becomes active when you delete an announcement.

Playing back messages

The answering machine key at the base station flashes and the icon appears on the handset's display when new messages were recorded.



Play back messages.

Playback begins with the first new message. The old messages are played back after the last new message.

While playing back messages, you can:



raise or lower the volume.



pause playback.



continue playback.



jump to the start of the current message.



jump to previous messages (press repeatedly).



jump to the next message.



jump to the next messages (press repeatedly).



mark the current message as "new" (not yet played back).



terminate playback.

 


The date and time are not announced if the time is not set (see page 10).

Marking the current (old) message as "new"



Play back message.



Jump to the required message (press one or more times).



The message is marked as "new".

Answering machine

Press keys:

Deleting messages

You can delete either all or individual old messages.

Deleting all old messages



Press key when the answering machine is idle.



Press key within 6 seconds.
All messages are deleted.



You can cancel the delete operation by pressing the key after the message "Confirm delete with previous key".

Deleting individual old messages



The messages are played back.



Jump to the desired message (press the keys shown one or more times).



Press key during playback.
The message is deleted.

Recording infotexts

You can record infotexts for your co-users with the handset.



Initiate recording.
The answering machine automatically calls all registered handsets. Recording is started by the handset that answers the call.



Press the talk key at the handset. You will hear the ready tone.

Speak your infotexts now.



Recording automatically terminates if you pause for more than 8 s during the infotext.



Press key at the base station to terminate recording.
You will hear the end tone.

Answering machine


Press keys:



Operation with the handset

You can operate the answering machine with your handset or remotely (see page 42).

The digits on the handset or on an external telephone correspond to the following base station keys:

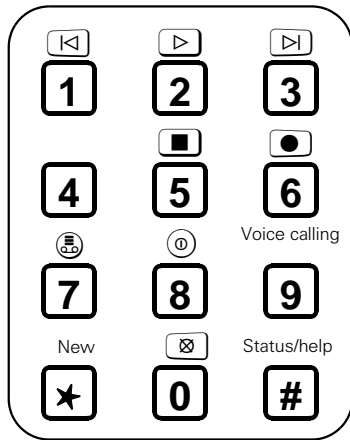

Activating/deactivating the answering machine

INT **WAVE 9**

Set up a connection to the answering machine.

TRV **8**

Activate or deactivate.



Clear down connection.

Answering machine

Press keys:

Selecting an announcement

INT **WAVE 9**

Set up a connection to the answering machine.

PAGE **7**

Check the current announcement.

SEL **3**

To the next announcement.

1

To the previous announcement.

SEL **5**

Set the new announcement.



Clear down connection.

Recording an announcement

INT **WAVE 9**

Set up a connection to the answering machine.

PAGE **7**

MULTI **6**

Start recording the selected announcement.

SEL **5**


Speak the concluding announcement after the prompt.

SEL **5**

End recording.



Clear down connection.

 If you do **not** want to record a **concluding announcement**, press **(5)** **briefly twice**.

Listening to an announcement

INT **WAVE 9**

Set up a connection to the answering machine.

PAGE **7**

ABC **2**

Play back the selected announcement.



Clear down connection.

Deleting an announcement

INT **WAVE 9**

Set up a connection to the answering machine.

PAGE **7**

WAVE **0**

Delete the selected announcement.



Clear down connection.

Answering machine

Press keys:

Playing back messages

A new message is indicated on the handset display by the icon.

You can play back messages either via the handset's digit keys or via the display key.

Playing back messages via the digit keys

 
- Set up a connection to the answering machine.
- Play back all messages.
- Pause playback.
- Continue playback.
- Jump to the start of the current message.
- Jump to the previous message (press repeatedly).
- Jump to the next message.
- Jump to the next message (press repeatedly).
- Mark the current message as "new".
- End playback.
- Clear down connection.

Playing back messages via the display keys

If the caller list contains new entries **and** new messages were recorded, then a selection appears on the display (see 1st display). If the caller list **only** contains call numbers, then the 2nd display appears immediately and you do not need to make any selection.

1st display

New entries in both lists:



Select keys shown.

The number of new and old message appears on the display (see 2nd display).


2nd display



Answering machine

Press keys:

The first new message is automatically played back after 2 seconds.

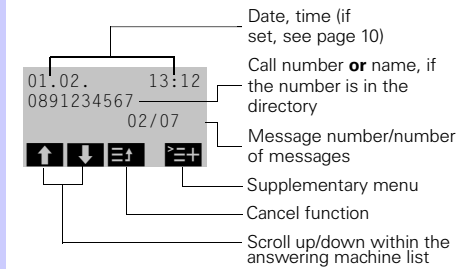

The caller's number (alternative: the name of the caller, if entered in the directory) is only displayed if the call number was transferred by the network access list.

You have the following options:

- Jump to the next/previous message (if necessary, press repeatedly)
- End playback.

The supplementary menu contains the following options:

- Next
- Del. current no.
- Callback
- Status new
- Copy to Dir.

The other functions are activated/deactivated via the digit keypad.

- Press the end call key at the handset.

Answering machine

 
Press keys:



Set up a connection to the answering machine.



Play back messages.



Jump to the desired message (press one or more times).



The message is marked "new".



Clear down connection.

Deleting messages

You can delete all or individual old messages.

Deleting all old messages



Set up a connection to the answering machine.



Initiate the deletion operation.



Press within 6 seconds.

All old messages are deleted.



Clear down connection.

 
Deleting individual old messages



Set up a connection to the answering machine.



Play back messages.



Jump to the desired message (press one or more times).



Press during playback.

The message is deleted.



Clear down connection.

Recording infotexts



Set up a connection to the answering machine.



Initiate recording.

Speak infotext after the ready tone.



End recording.



Clear down connection.

Answering machine

Press keys:

Broadcasting an announcement

You can broadcast an announcement via the base station loudspeaker. The answering machine must not be recording a message when the broadcast is being made.



Set up a connection to the answering machine.



Activate the broadcast announcement function.



End broadcast.



Clear down connection.

Answering machine


Press keys:


Remote operation (remote retrieval)

You can operate your base station's answering machine from any other telephone (e.g. hotel, pay phone) in the same way as from the handset, i.e. via the digit keys.

You must first change your system PIN, page 60.

Information on the functions and the appropriate operating steps is provided as of page 36.

 An external telephone must support tone dialling. Otherwise, a tone transmitter must be used.

 Dial your own call number.
You will hear your announcement.

 +  Press the  and enter the system PIN.

Activating the answering machine remotely

You forgot to activate your answering machine. Let your telephone ring for approx. 1 minute.

You will hear: "Please enter PIN".


 +  Press the  and enter the system PIN.

Your answering machine is now activated.

 Instructions for remote retrieval are provided in credit card format in appendix.

Calling up help and status information



You can only call up help and status information from an external telephone.

 Check the device station and the remote control functions.

You will hear the following status messages one after the other:

- Number of messages
- Advisory announcement available (or unavailable)
- Announcement set
- Answering machine on or off
- Available memory
- If applicable, time setting unavailable
- Function assignment to the keys 0...9 and *.

 Skip status messages.

  End help and status information.

Individual answering machine settings

Press keys:

Individual answering machine settings

The answering machine settings are optimised for you at the factory. Desired settings may be made via the handset.

Number of rings (charge saving function)

INT SET **9** **0** OK

Initiate the setting.

0 or **2**...**9**

You can choose between 2 and 9 rings and set the call charge saving function by entering 0. If the charge saving function is set, you can see if new messages are available.

The answering machine activates after

- 2 rings: new messages have been received
- 4 rings: no new messages have been received.

Factory setting: charge saving function (0).

OK **0**

Save the setting and terminate the function.

Message length

INT SET **9** **1** OK

Initiate the setting.

Factory setting: 120 seconds.

1

30 seconds.

2

60 seconds.

3

120 seconds.

4

unlimited.

OK **0**

Save the setting and terminate the function.

Individual answering machine settings

Press keys:

INT SET **9** **2** OK
 0 or 1

Pause after message playback

Initiate the setting.

If you activate this function (1), the answering machine switches to pause status after every message played back.

Factory setting: no pause (0)

OK 

Save the setting and terminate the function.

INT SET **9** **3** OK
 0 or 1

Time stamp for every message

Initiate the setting.

You can deactivate the time stamp (0).

Factory setting: message with time stamp (1).

OK 

Save the setting and terminate the function.

INT SET **9** **4** OK
 0 or 1

Open listening at the base station

Initiate the setting.

If you do not want to listen in on a message while it is recording (0).

Factory setting: open listening activated (1).

OK 

Save the setting and terminate the function.

INT SET **9** **6** OK
 0 or 1

Broadcasting an announcement (voice calling)

Initiate the setting.

If the answering machine is operated remotely via a handset or an external telephone, the calling party can broadcast an announcement that will not be recorded via the base station's loudspeaker. An external call received during a broadcast can be picked up at any handset. You can deactivate this function (0).

Factory setting: voice calling enabled (1).

OK 

Save the setting and terminate the function.

Individual answering machine settings

Press keys:

INT SET **9** **7** OK
 1 ... 3

Recording quality

Initiate the setting.

The possible recording time depends on the recording quality. You can choose between long recording time (2), high quality (3) and automatic (1).

In automatic mode, the answering machine automatically switches from high quality to long recording time when running out of memory. This action compresses all previously recorded messages.

Factory setting: automatic (1).

OK 

Save the setting and terminate the function.



The answering machine cannot be used and calls cannot be recorded during compression. You will hear an error beep when you press a key at the base station (exception: paging key).

Individual handset settings

Press keys:

Individual handset settings

Setting the display language



Press the menu key.

Settings OK

Confirm the function.

↓ Voice Prompts OK

The active language is marked with a ✓.

↓ OK

Select the required language, confirm it and terminate the function.

Displays for language setting:

Einstellungen	Sprache	Deutsch
Settings	Language	English
Réglages	Langue	Français
Impostazioni	Lingua	Italiano
Ajustes	Idioma	Español
Programações	Língua	Português
Instellingen	Taal	Nederlands

Setting the ringer volume

You can choose between **5 ringer volumes**, the "**crescendo**" ring (increasing volume) and **no ringer**.



Press the menu key.

Settings OK

Confirm the function.

Sound Settings OK

Ringer Volume OK

The ringer sounds at the current volume and the setting is displayed.

← → OK

Set the required ringer volume, save it and terminate the function

Volume levels = **1-5**; crescendo = **C**;
ringer deactivated = **0**

Individual handset settings

Press keys:

Setting the ringer melody

You can choose between **10 ringer melodies**.



Press the menu key.

Settings OK

Confirm the function.

Sound Settings OK

↓ Ringer Melody OK

The current ringer melody sounds and the number is displayed.

← → OK

Set the required ringer melody (0 to 9), save it and terminate the function.

Setting a short ringer tone (advisory tone)

A call is only signalled by a short advisory tone if the **Beep** function is set.



Press the menu key.

Settings OK

Confirm the function.

Sound Settings OK

↓ Beep OK

Switch from **Ringer Melody** to **Beep** (✓ = function on).

Terminate the function.

Setting the handset/loudspeaker volume

You can set the **handset volume to any of 3 levels** and the loudspeaker for **handsfree talking to any of 5 levels** – even during a call.



Press the menu key.

Settings OK

Confirm the function.

Sound Settings OK

↓ Handset Volume OK

Select handset **or** loudspeaker volume and confirm – a melody sounds at the current volume to simplify the setting operation.

or

↓ Handsfree Vol. OK

Set the required volume and save.

← → OK

Terminate the function (**do not press** when a call is in progress!).

Individual handset settings

Press keys:

☰

Settings OK

Sound Settings OK

e.g.

↓ Key Beeps OK

⏹

☰

Settings OK

↓ Auto Talk OK

⏹

Activating/deactivating beeps

You can activate/deactivate the following warning and signal tones:

- **Key Beeps:** every keystroke is confirmed.
- **Batt. Low Beep:** the battery needs to be charged.
- **Confirm. Beeps:** confirmation beep (1 beep) when you conclude inputs/settings and when replacing the handset in the base station, error beep (4 short beeps) when you make an incorrect entry.

☰ Press the menu key.
 Confirm the function.

Scroll to the required beep and press **OK** to activate/deactivate it (✓ = tone on).

⏹ Terminate the function.

Auto talk

When this function is active, you can answer a call by removing the handset from the base station/charging unit.

☰ Press the menu key.
 Confirm the function.

Select the function and press **OK** to activate/deactivate it (✓ = function on).

⏹ Terminate the function.

Individual handset settings

Press keys:

☰

↓ Base settings OK

↓ *3+ OK

Change Base Name OK

Name

*3+ Save Entry OK

☰

↓ Base settings OK

↓ *3+ OK

↓ Select Base OK

Changing the base name

You can change the base's name, e.g. from **Base 1** to **Intern 3** ("3" is the handset's internal number).

☰ Press the menu key.

Confirm the function.

↓ Select the required base station.

☰ Confirm the function.

Enter the required name.
 For information on entering letters and characters, see page 19.

*3+ Save the name.

Registering at more than one base station

You can operate your handset at up to **4 base stations**.

➡ For information on **Gigaset 3015** registration, see page 63!

Changing the base station

Prerequisite: the handset is registered at several base stations.

You can choose one of the following settings:

- Set the handset to a **fixed base station** or
- Set the handset to **Best Base** – the handset **automatically selects** the base with the strongest reception.

☰ Press the menu key.

↓ Select the function.

↓ *3+ Select fixed base or **Best Base**.

☰ Save the setting.

Individual handset settings

Press keys:

Resetting the factory settings

- The **telephone PIN** (handset PIN) is **not** reset.
- The **directory, network access list** and the **caller list** are **not** deleted.

Handset factory settings:

Language setting	German
DSS number (hot key), Redial	deleted
Auto talk, key beeps, battery low beep, confirmation beeps	on
Handset volume, ringer melody	1
Loudspeaker volume	3
Ringer volume	5
Short ringer tone (advisory tone), telephone lock	off
Room monitor level	2



Press the menu key.

Settings OK

Confirm the function.

↓ Default Reset OK

Select the function and confirm.

Telephone PIN OK



Enter the telephone PIN, confirm (factory setting: 0000) and terminate the function.

Base station settings

Press keys:

Base station settings

All base station settings are made **via the handset!**

Setting the ringer volume

You can choose between **5 ringer volumes**, the "**crecendo**" **ring** (increasing volume) and **ringer off**.

INT SET 0 5 OK

Initiate the setting – the ringer sounds, **Base Volume** and the current setting is displayed.

e.g. 4

Enter the number of corresponding to the required volume. Volume levels = **1 to 5**, crescendo = **6**, **0** = ringer off

OK

Save the setting and terminate the function.

Setting the ringer melody

You can choose between **10 ringer melodies**.

INT SET 0 6 OK

Initiate the setting – the melody sounds, **Base MeLody** and the current setting is displayed.

e.g. 3

Enter the desired ringer melody (**0-9**).

OK

Save the setting and terminate the function.

Activating/deactivating key beeps

INT SET 3 * OK

Initiate the setting – the current setting is displayed.

System PIN OK

Enter the base station's system PIN and confirm (factory setting: 0000).

e.g. 0

For example, deactivate key beeps. Deactivate = **0**; activate = **1**

OK

Save the setting and terminate the function.

Base station settings

Press keys:

Activating/deactivating music on hold

INT SET **4** **3** OK

System PIN OK

e.g. **0**

OK **0**

Setting pauses

Pause after connecting to an outside line

INT SET **4** **5** OK

System PIN OK

e.g. **2**

OK **0**

Pause for the recall key

INT SET **4** **6** OK

System PIN OK

e.g. **1**

OK **0**

Activating/deactivating music on hold

This refers to the music that the caller hears when placed on hold, e.g. during an internal enquiry call.

Initiate the setting – **Music on Hold** is displayed.

Enter the base station's system PIN and confirm (factory setting: 0000).

e.g. For example, deactivate music on hold. Deactivate = **0**; activate = **1**

Save the setting and terminate the function.

Setting pauses

Pause after connecting to an outside line

You can use this function to set the length of the pause that is automatically inserted after you press the talk key and before the call number is transmitted.

Initiate the setting.

Enter the base station's system PIN and confirm (factory setting: 0000).

e.g. Enter the pause length. 1 second = **1**; 3 seconds = **2**; 7 seconds = **3**; 2.5 seconds = **4**

OK **0**

Save the setting and terminate the function.

Pause for the recall key

You can use this function to set the length of the pause that is inserted by pressing the recall key.

Initiate the setting.

Enter the base station's system PIN and confirm (factory setting: 0000).

e.g. Enter the pause length. 0.8 seconds = **1**; 1.6 seconds = **2**; 3.2 seconds = **3**

Save the setting and terminate the function.

Base station settings

Press keys:

Resetting the factory settings

INT SET **3** **0** OK

System PIN OK

e.g. **0**

OK **0**

Resetting the factory settings

When resetting the base station, the **system PIN is not changed** and handset registration is not affected. You can:

- reset **all** factory settings, set table below
- delete the **caller list** only
- delete the **call charges/units** only

Base station factory settings:

Ringer volume	5
Ringer melody	1
Price per unit	00.00
Bar/enable call numbers, base lock, last call charges	Off
Number for disabling/enabling, call allowance account, stored emergency numbers	Deleted
External dialling (all handsets)	Possible
Dialling mode	BRD DTMF, flash (250 ms)
Flash time (at telephone systems)	BRD 80 ms
Pause after recall key	800 ms
Pause after line seizure/dial-out number	3 s

Initiate the setting – **Reset Base** is displayed.

Enter the base station's system PIN and confirm (factory setting: 0000).

e.g. For example, reset setting to the factory default. Reset to factory default = **0**; delete caller list = **1**; delete charges/units = **2**

OK **0**

Confirm the delete action and terminate the function.

Using short cuts

Press keys:

Using short cuts

Multiple operating steps can be combined and saved as a short cut to facilitate operation.

Handset short cuts

You can save, change and copy multiple operating steps (inputs) as a handset short cut and assign an appropriate name. You can also delete short cuts via the supplementary menu or display the available memory. Short cuts, the directory and the network access list share the same memory.

Examples of possible handset short cuts (functions):

Function	Input
Previously configured lock ON	*33*C#
Previously configured lock OFF	#33*C#
Connect without dialling ON	*53*N#
Connect without dialling OFF	#53#

Saving handset short cuts

Press the menu key.

Hset User Option Select a function.

Open the supplementary menu.

New Entry Select a function.

Name Enter the name of the short cut. For information on entering letters and characters, see page 19.

Scroll to the next line.

Contents Enter the contents for the short cut, see also following information and "Inserting a function", page 55.

Open the supplementary menu.

Save Entry Save the entry.

Using short cuts

Press keys:

- Where applicable, insert a pause with the recall key (hold down) or a number from the network access list via the supplementary menu when entering the number.
- You can also use the supplementary menu to display the meaning of the current element (character) at the cursor.

Inserting a function:

The following short cut functions can be entered when entering short cut contents:

C Request PIN	I INT
N Request No.	E End Call
P Insert Pause	M Temp. Tone
Q Req. Acknowl.	

Open the supplementary menu.

Insert Function Select a function.

Select a function and confirm.

Starting a handset short cut

Press the menu key.

Hset User Option Select a function.

Select the required short cut.

Press the talk key to start the short cut.

Changing an entry

Press the menu key.

Hset User Option Select a function.

Select the required short cut and confirm.

Edit Entry Select a function.

Name Change the name of the short cut. For information on entering letters and characters, see page 19.

Scroll to the next line.

Contents Change the contents of the short cut.


Open the supplementary menu.

Save Entry Save the change.

Using short cuts

Press keys:

Displaying/deleting an entry

Once you have selected a short cut, you can display it or delete it via the supplementary menu .

Copying a short cut list

You can copy the entire short cut list to another enhanced handset to avoid having to input the same entries twice.

Press the menu key.



 Hset User Option OK

Select a function.




Open the supplementary menu.

Proceed as for the directory/network access list, see "Copying the directory", page 21.

Copying individual short cuts

Press the menu key.



 Hset User Option OK

Select the required function.



Select the required short cut and open the supplementary menu.

Proceed as for the directory/network access list, see "Copying an entry", page 21.

Handset security

Press keys:



Handset security

You can change the telephone PIN (Personal Identification Number), configure hot key selection or lock your telephone (handset).

Changing the telephone PIN

Important functions/settings are protected by the telephone PIN (handset PIN).

 **Do not forget your PIN!** The PIN can only be reset by calling the **Siemens hotline**, see page 75.



Press the menu key.

Settings OK

Select a function.

↓ Security OK

Telephone PIN OK

Enter the current telephone PIN (factory setting: 0000, display ★) and confirm.

Change PIN OK

Select a function.

New telephone PIN OK

Enter the new telephone PIN (4 digits) **twice** and confirm – the new telephone PIN is then saved.

New telephone PIN OK



Terminate the function.

Handset security

Press keys:

Hot key (direct station) selection

When hot key selection is activated, **every keystroke** sets up a connection to the hot key number **stored**. The elderly, for example, can use this function to call for assistance.

Saving, changing, deleting a hot key number

Press the menu key.

Settings OK
 ↓ Security OK
 Telephone PIN OK Enter the telephone PIN (factory setting: 0000) and confirm.
 ↓ Hot Key Set Up OK Select a function.
 Enter or change the DSS (hot key) number, or delete it with .
 Open the supplementary menu.

Save Entry OK Save the number, terminate the function **and** then proceed as follows to **activate hot key selection**.

When entering a number, if necessary open the supplementary menu and enter **I** for an internal DSS number (e.g. **I3**).

Activating/deactivating hot key selection

Press the menu key.

Settings OK
 ↓ Security OK
 Telephone PIN OK Enter the telephone PIN (factory setting: 0000).
 ↓ Hot Key OK Select the function and press **OK** to activate hot key selection.
 ✓ = activated.

Hot key selection is activated.

Deactivating hot key selection:

Press the display key, enter the telephone PIN and confirm.

OFF Telephone PIN OK

Handset security

Press keys:

Telephone lock

If the telephone lock is activated, all functions with the exception of emergency call are disabled. The handset, however, can still receive calls. Simply press the talk key to take incoming calls.

Press the menu key.

Settings OK
 ↓ Security OK
 Telephone PIN OK Enter the telephone PIN (factory setting: 0000).
 ↓ Handset Lock OK Select the function – the telephone lock is activated.

Deactivating the telephone lock:

Press the display key, enter the telephone PIN and confirm.

 

OFF Telephone PIN OK

Dialling an emergency number




Emergency numbers saved at the base station can be dialled when hot key selection/telephone lock is active, see page 62. The **default emergency number is xxx!**

Base station security

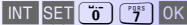

Press keys:

System PIN OK

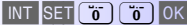System PIN OK

Base station security

Changing the base station system PIN


Initiate the setting – **Base PIN** is displayed.
 Enter the base station's current system PIN and confirm (factory setting: 0000).
 Enter the base station's new system PIN (4 digits) **twice** and confirm – the new system PIN is then saved.
 Terminate the function.

Activating/deactivating the base lock



Outgoing external calls are blocked **for all handsets** when the base is locked. Stored emergency numbers can be dialled, see page 59.
 Initiate the setting – **Base Lock Set** is displayed.
 Enter the base station's system PIN and confirm (factory setting: 0000).
 For example, activate the base lock. Activate = **2**; deactivate = **0** (factory setting)
 Confirm the setting and terminate the function.

Base station security

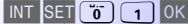Press keys:



System PIN OK





Barring/enabling call numbers

You can use this function to **bar specific call numbers**, e.g. all international numbers (00...). You can also specifically **enable these numbers**. Barring/enabling actions affect **all handsets**.
 All external numbers dialled are checked. Dialling is cancelled and the barred digits are displayed if the call number matches the **barred number**. This does not happen if the **number is enabled**.

Saving/changing/deleting call numbers

You can save **5 call barring numbers**. The numbers can be displayed, changed, and deleted at any time.
 Initiate the setting – **Call Restriction** is displayed.
 Enter the base station's system PIN and confirm (factory setting: 0000) – the 1st entry is displayed:

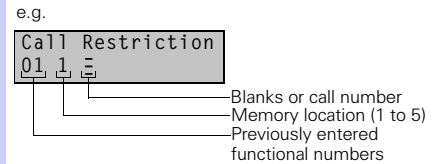

If necessary, press **↓** to scroll to the required entry (memory location).
 Select the entry displayed.
 Enter the call number (up to 8 digits), e.g. **00** to bar **international calls**, press **←** to change or if necessary delete the entire number.
 Save the entry, terminate the function **and now activate barring/enabling**, as described below.

Base station security

Press keys:

INT SET 0 0 OK

Activating/deactivating call barring/enabling

Initiate the setting – **Base Lock Set** and the current setting are displayed.

System PIN OK

Enter the base station's system PIN and confirm (factory setting: 0000).

e.g. 1

For example, bar numbers.
Bar numbers = **1**; enable numbers = **3**;
deactivate call barring/enabling = **0** (factory setting).

OK

Save the setting and terminate the function.

Saving emergency numbers

The emergency numbers 110 and 112 are already saved. You can save an additional **4 emergency numbers**. The emergency numbers are valid for **all handsets**.

▶ An **emergency number can be dialled** even if the telephone is locked or if the call allowance account has run out.

Saving/changing/deleting emergency numbers

INT SET 0 2 OK

Initiate the setting– **Emergency Nos.** is displayed.

System PIN OK

Enter the system PIN and confirm (factory setting: 0000) – the 1st entry is displayed:

e.g.

Emergency Nos.
01 1 =

Blanks or call number
Memory location (1 to 4)
Previously entered functional numbers

If necessary, press **↓** to scroll to the required entry (memory location).

OK

Select the entry displayed.

OK



Enter or change the emergency number (up to 16 digits).
If necessary, press **←** to delete the number

OK

Save the entry and terminate the function.

Operating more than one handset

Press keys:

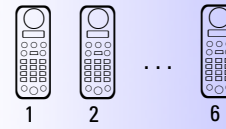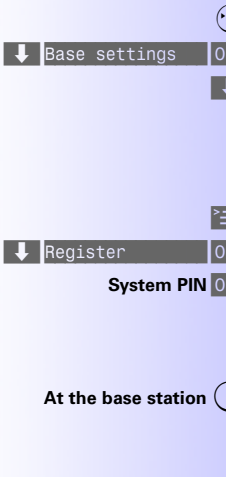
1 2 ... 6

Base settings OK

Register OK

System PIN OK

 At the base station

e.g. 

Operating more than one handset

Registering additional handsets

- You can register and operate up to **6 handsets** at your Gigaset 3015 base station.
- You can register every Gigaset 3000 Comfort handset at up to **4 base stations**.

Registering a Gigaset 3000 Comfort

The **handset** is already registered at the base station when shipped.

Step 1:

Press the menu key.

Select a function.

Select base station.

Normally, enter **1** for base station 1 when registering for the first time. When registering the handset at additional base stations, e.g. in the company, enter **2**, **3** or **4** as the number of the base station.

Open supplementary menu.

Select a function.

Enter the system PIN and confirm (factory setting: 0000) – e.g. **Regstr. Procedure Station 1** is displayed.

Step 2:

Press the base station key until a signal tone is generated at the base station (hold key down for approx. 10 seconds) – unassigned internal call numbers are displayed after a few seconds, e.g. 23456 (number 1 is assigned to the handset supplied).

Step 3:


Enter the required **internal call number of the other handset** – the **stationary** base name, e.g. **Base 1** is displayed **if registration is successful** (stops flashing).

Your handset is ready for operation!

Operating more than one handset

Press keys:

At base station 

- 
● Registering Gigaset 1000/2000
 For information on preparing these handsets, see the relevant operating instructions.
- Registering third-party handsets**
Prerequisite: the non-Siemens handset complies with the **GAP standard!**
GAP (Generic Access Profile) is a European standard for the interaction of cordless telephones and base stations.


 

 Refer to the operating instructions of the handset to be registered for information on how to register it at a **GAP base station**.

Preparing your base station for registration:
 Press the base station key **until a signal tone** is generated at the base station (hold down for approx. 10 seconds).

 Your Siemens base station assigns the **first unsigned** internal call number to the handset after registration.


 

Making an internal call

Internal calls are conducted with your other registered handsets – **free of charge**.

-  Press the display key – the internal call number of your handset is displayed.
- e.g.  Enter the internal call number of the other handset. Press **CALL ALL** to call all handsets.
- Ending a call:
 -  Press the end call key.

Forwarding a call

You can forward an external call to another handset (connect).


 

-  Press the display key – the external user hears music on hold.
- e.g.  Enter the internal call number.
- When the user answers:**
 -  Press the end call key to forward the call.

Operating more than one handset

Press keys:


Internal enquiry call

You are conducting a call with an external user. You can call another internal user to conduct an enquiry call without clearing down the initial connection. You are automatically reconnected to the external user when you end the enquiry call.


-  Press the display key – the external user can hear music on hold.
- e.g.  Enter **the internal** call number of the handset. Press **CALL ALL** to call all handsets.
-  End the enquiry call to revert to the caller placed on hold.



Accepting call waiting

The call waiting tone (1 brief tone) is generated when you receive an external call while conducting an internal call; **EXT** flashes on the display.


-  Press the display key – the internal call is **cleared down**, you are connected to the external caller.


Collective call

All handsets are called and ring. You can accept the call at any handset by pressing the talk key .

-  Press the INT key.
-  Press the display key – all available handset are displayed.

Displaying the handset number

-  Press the INT key – the internal call number of your handset is displayed on the right.

- Ending the display:**
 -  Press the end call key.

Operating more than one handset

Press keys:


Open listening at the handset

You can listen in on an external call at another handset.

You are conducting a call with an external user:

The call is placed on hold.

INT SET DEF 3
e.g. 2

Enter the call number of the other handset – the other handset rings, the other internal user presses the talk key .

LSTN.ON

You are reconnected to the external user. The other internal user can hear the conversation.

Deactivating open listening:

LSTN.OFF

The external connection is not affected.



The internal user can elect to terminate open listening by replacing the handset.

De-registering handsets

A de-registered handset cannot be used to make calls at this base station, e.g. to protect against unauthorised use.

INT SET DEF 3
e.g. 6

Initiate de-registration – **De-register Hset** is displayed.

System PIN OK

Enter the system PIN and confirm (factory setting: 0000) – all registered handsets are displayed.

e.g. 2

Enter the internal call number of the handset to be de-registered – the number is no longer displayed.

OK 

Confirm de-registration and terminate the function.

Operating more than one handset

Press keys:

Disabling external dialling at individual handsets

The factory setting permits you to make external calls from every registered handset. You can use this function to prevent individual handsets from dialling **external numbers**.

You can use "blocked" handsets to:

- make internal calls
- accept external calls
- dial the emergency numbers saved at the base station, see page 59.

INT SET DEF 3
e.g. 0

Initiate the setting – **Hset Restriction** is displayed.

System PIN OK

Enter the system PIN and confirm (factory setting: 0000). The numbers of all registered handsets is displayed.

e.g. 2

Enter the handset's internal call number.

e.g. 0

Deactivate external dialling (block).

Deactivate = **0**; activate = **2**

OK 

Save the setting and terminate the function.

Connecting a fax/modem

You can register fax machines and modems at the base station in the same way as a handset via a cordless **Gigaset 1000 TAE** connector. To do this, you must modify the **device type for the Gigaset 1000 TAE**.

Setting the device type:

INT SET DEF 3
e.g. 9

Initiate the setting – **Device Selection** is displayed.

System PIN OK

Enter the system PIN and confirm (factory setting: 0000) – all registered handsets are displayed.

e.g. 4

Enter the internal call number of the Gigaset 1000 TAE.

e.g. 1

Set the device type.
"stationary" telephone/handset = **1** (factory setting); fax = **2**;
modem = **3**

OK 

Save the setting and terminate the function.

Operating more than one handset

Press keys:

INT SET DEF 3 1 OK

System PIN OK

e.g. DEF 3

OK

Activating/deactivating the ringer

All handsets ring immediately to signal an incoming external call – collective call (factory setting). The calls can be accepted at all handsets by pressing the talk key . However, you can **deactivate** the ringer at **individual handsets** – these handsets no longer ring when external calls are received.

Initiate the setting – **Call Group** is displayed.

Enter the system PIN and confirm (factory setting: 0000) – all handsets **"with"** ringer are displayed.

Enter the internal call numbers of the handset:

- call number is **displayed** = ringer **on**,
- call number is **not displayed** = ringer **off**.

Save the setting and terminate the function.

Setting the ring delay/collective call/direct inward dialling

You can use this function to switch from collective call (factory setting) to ring delay or direct inward dialling:

- If **collective call** is activated, **all handsets ring immediately** when external calls are received.
- If **ring delay** is activated, calls are signalled first at the **priority handset** and then at the other handsets, for example, after 4 rings. The priority handset and the ring delay (number of rings) must first be defined.
- If **direct inward dialling** is activated, an external caller can call a specific handset.

INT SET DEF 3 ABC 2 OK

System PIN OK

1

or

ABC 2

or

DEF 3

OK

Initiate the setting – **Ring Option** is displayed.

Enter the system PIN and confirm (factory setting: 0000).

Set collective call.

Set ring delay.

Set direct inward dialling.

Save the setting and terminate the function.

Operating more than one handset

Press keys:

INT SET DEF 3 DEF 3 OK

System PIN OK

e.g. ABC 2

OK

Setting a priority handset

The handset with 1 as its call number is automatically the priority handset – and rings first (factory setting).

You can set any **other handset** as the **priority handset**:

Initiate the setting – **Ring Priority** is displayed.

Enter the system PIN and confirm (factory setting: 0000) – the priority number is displayed.

Enter the call number of the **priority handset**.

Save the setting and terminate the function.

Setting the number of rings for ring delay

You can set the **number of rings** allowed before the call is signalled at the other handsets.

INT SET DEF 3 DEF 4 OK

System PIN OK

e.g. DEF 5

OK

Initiate the setting – **No.Ring Priority** is displayed.

Enter the system PIN and confirm (factory setting: 0000) – the current setting is displayed, e.g. 3.

Enter the number of rings.
The call is signalled after: 2 rings = 2 to 9 rings = 9

Save the setting and terminate the function.

Operating more than one handset



Room monitor

When this feature is active, an **internal call** is set up to a specified handset as soon as the noise in the monitored room reaches the pre-defined level. You can hear the noise in the room when you pick up the call. The room monitor remains active even after the handset is replaced. Calls to the room monitor only appear on the display.

The **distance** from the object monitored (e.g. baby) should be between **1 and 2 metres**.

Saving the room monitor call number

Press the menu key.

Select a function.

Enter the number of the handset to be called and confirm.

If you entered a 2-digit number by mistake, enter a zero before the number.

Setting the noise level

Press the menu key.

Select a function.

Change the level.
Level 1 = sensitive!

Save.

Activating/deactivating the room monitor

Prerequisite: call number saved!

Press the menu key.

Select a function.

Switch on the room monitor and activate.

Deactivating the room monitor:

The handset reverts to idle status.
The room monitor call number set is not deleted.

Connecting to a PABX

Press keys:

Connecting to a PABX

Setting the dialling mode

Only necessary if your PABX does **not** operate with **DTMF** (dual-tone multifrequency) and flash – see the operating instructions for your PABX!

Options:

- DTMF, flash 250 ms
- DTMF, adjustable flash time
- DP (dial pulsing)

Setting the dialling mode

Initiate the setting – **Dialling Mode** is displayed.

INT SET 3 5 OK

System PIN OK

Enter the system PIN and confirm (factory setting: 0000) – the current setting is displayed.

e.g. 2

Set the dialling mode.
DTMF, flash 250 ms = **1**; DTMF, adjustable flash time = **2**;
DP = **4**

OK

Save the setting and terminate the function.

Setting the flash time

Prerequisite: you switched to DTMF, adjustable flash time as described but your PABX requires a different flash time.

Initiate the setting – **Recall Duration** is displayed.

INT SET 4 2 OK

System PIN OK

Enter the system PIN and confirm (factory setting: 0000).

e.g. 3

Set the flash time.
80 ms = **1**, 100 ms = **2**, 120 ms = **3**, 180 ms = **4**,
250 ms = **5**, 300 ms = **6**, 600 ms = **7**.

OK

Save the setting and terminate the function.

Connecting to a PABX

Press keys:

↓ Switch to Tone OK

Switching to tone dialling

If you are operating the base station at a PABX with dial pulsing (DP), you can switch to tone dialling (DTMF), e.g. to check an answering machine.

Prerequisite: a connection is active!

Tone dialling is active.

Saving a dial-out number

Prerequisite: a dial-out number, e.g. "0", must be dialled before the call number for external calls at your PABX.

The dial-out number is also known as a **prefix code or access code**.

- Please note that the dial-out number must be entered when saving **emergency numbers, direct station selection numbers, all numbers for the directory and prefix numbers for the network access list**.
- Since an **emergency call cannot** be made with the fixed emergency numbers, e.g. 999, you should **re-save** the emergency numbers with the dial-out number, e.g. **0999** for security reasons.
- The **dial-out number** that you save "here", is always automatically inserted before the call numbers in the caller list and dialled.

INT SET 4 0 OK

System PIN OK

e.g. 0

OK

Initiate the setting – **Access Code** is displayed.

Enter the system PIN and confirm (factory setting: 0000).

Enter or change the out-dial number (up to 3 digits).

Save the code and terminate the function.

Connecting to a PABX

Press keys:

INT SET 4 1 OK

System PIN OK

e.g. 1

OK

Pause after dial-out number

Prerequisite: you have saved a dial-out number and would like to change the default pause.

The pause set here is always inserted by the base station after the dial-out number. For information on whether and how long this pause must be, see the operating instructions for your PABX.

Initiate the setting – **Pause AccessCode** is displayed.

Enter the base station's system PIN and confirm (factory setting: 0000) – the current setting is displayed.

Enter the pause length.
1 second = **1**, 2 seconds = **2**, 3 seconds = **3**
or 6 seconds = **4**.

Save the setting and terminate the function.

 
Appendix

Appendix


Maintenance

- Simply wipe the base telephone and handset with a **damp cloth** or an anti-static wipe. **Never** use a dry cloth as this can cause static discharge!

Troubleshooting

Fault	Possible cause	Solution
No display	Handset not activated Batteries flat	Hold down the end call key for 1 second Charge or replace the batteries (page 8)
No reaction to key-stroke	Keypad protection activated	Hold down the  key for 1 second
No radio connection to the base station – Base 1 flashing!	Handset outside the base station range Handset not registered Base station not activated	Move closed to the base station Register the handset (page 63) Check the connector at the base station (page 6)
Handset base station does not ring	Ringer off	Activate the ringer (page 68/page 51)
External call numbers cannot be dialled	Base lock activated Handset lock activated Call number matches a barring code Credit balance for call allowance account has run out External dialling disabled	Deactivate lock (page 60) Deactivate lock (page 59) Barring codes (page 61) Call allowance account (page 30) Disable external dialling (page 67)
Units/call charges are not displayed	Call charge pulse is missing	Call charge pulse transmission requested from your telephone company (page 28)

 Appendix

Fault	Possible cause	Solution
Call charges are not displayed	Price per unit = 0	Set the price per unit (page 28)
The called party cannot hear	The INT was pressed – the microphone is muted	Press  to activate the microphone
The caller's number is not displayed	Call number not transmitted	Request call number transmission feature from telephone company
The answering machine announces that the PIN is incorrect during remote operation	The system PIN entered is incorrect or set to 0000.	Re-enter the PIN or set a system PIN other than 0000.
The answering machine does not record any messages, announcements, or infotexts	Memory is full	Delete old messages. Play back and delete new messages.
The answering machine is activated, but does not record any messages and does not play back existing messages	The answering machine is compressing	Wait for 3 to 5 minutes. The answering machine is fully functional once more.

Guarantee/service/approval

Guarantee


Siemens AG offers a six-month guarantee for this device from the date of purchase from the stockist. Over this period, Siemens AG will rectify all material or manufacturing defects by repairing or replacing the defective terminal.

The guarantee shall not cover damage caused by improper use, wear and tear or third party access. The guarantee shall not cover consumables or defects which only slightly decrease the value or serviceability of the device.

Service

Service contact:

- **Great Britain:** Siemens Service xxxxx

 Siemens Service should only be contacted if problems arise with the unit. Your specialist dealer will be happy to answer any questions on unit operation. Contact your network provider for questions concerning telephone connections.

Appendix

Approval

Gigaset 3015 has received approval for operation in your country as depicted on the underside of the base station.

In the case of approval in compliance with I-CTR 37 (from gazette):

"This equipment has been approved to [Council Decision 99/303/EC - "CTR 21"] for pan-European single terminal connection to the Public Switched telephone Network (PSTN). However, due to differences between the individual PSTNs provided in different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN terminal point.
In the event of problems, you should contact your equipment supplier in the first instance."

A

- Activating
 - beeps 48
 - handset 9
 - keypad protection 9
 - music on hold 52
 - telephone lock/hot key selection 58
- Advisory announcement 32
- Announcement (AM)
 - deleting 34
 - recording 32
 - selecting 31
- Answering machine
 - activating/deactivating 31
- Approval 76
- Auto talk (automatic) 48
- Automatic call acceptance 48

B

- Base station
 - activating/deactivating music on hold 52
 - installation 5
 - resetting the factory settings 53
 - setting pauses 52
 - setting the date 51
 - setting the ringer melody 51
 - setting the ringer volume 51
- Batt. low beep 48
- Batteries, inserting and charging 7
- Beeps 48
- Belt clip 9
- Broadcast announcement
 - conducting 16
 - setting 44

C

- Call allowance account 30
- Call charges, displaying 28
- Call duration, displaying 28
- Call pickup 15
- Call numbers, barring/enabling 61
- Call waiting 65
- Caller list 23
 - call number in the directory 39
- Calling
 - external 12
 - internal 12
- Calls, recording 26

- Carrier services 25
- Charge saving function 43
- Charges, displaying/deleting 29
- CLIP (call number display) 13
- Collective call 65
- Collective call/ring delay, setting 68
- Confirm. beep 48
- Connecting 64
- Contents of the package 5
- Costs, displaying/deleting 29

D

- Date, setting 10
- Deactivating
 - beeps 48
 - handset 9
 - keypad protection 9
 - music on hold 52
 - telephone lock/hot key selection 58
- Default announcement 32
- Direct inward dialling 15
- Directory/network access list
 - call number from the caller list 39
 - changing an entry 21
 - copying 22
 - copying an entry 21
 - deleting all entries 22
 - deleting or displaying an entry 21
 - dialling a call number 19
 - entering names 19
 - saving a call number 19
- Display (symbols/keys), flyleaf
- Display keys 3
- Display language, setting 46
- DP (dial pulsing) 71
- DTMF (dual-tone multifrequency signalling) 71

E

- Emergency number
 - dialling 59
 - saving 62
- Enquiry call (internal) 65

F

- Fax calls 16
- Fax/modem, connecting 67
- Flash time 71
- Forwarding 64

Forwarding a call 64

GGAP standard 64
Guarantee 75**H**

Handset

- changing the base name 49
- changing to another base station 49
- de-registering 66
- disabling external dialling 67
- displaying the internal number 65
- preparing 7
- registering additional handsets 63
- registering at more than one base station 49
- resetting the factory settings 50

Handset lock

- activating 59

Handset volume, setting 47

Handsfree talking 14

Hot key selection 58

I

Infotext (AM), recording 35

Inserting and charging the batteries 7

K

Key beeps

- base station 51
- handset 48

Keypad protection 9

L

Loudspeaker volume, setting 47

M

Mailbox function 23

Making an internal call 64

Making calls

- accepting a call 83
- answering a call 13
- external 12
- internal 12

Malfunctions (help) 74

Message (AM)

- deleting 35
- playing back 34
- terminating playback 34

Microphone, muting 14

Modem/fax, connecting 67

N

Network access list 27

O

Open listening 66

P

PABX

- saving a dial-out number 72
- saving a pause after a dial-out number 73
- setting the dialling mode 71
- setting the flash time 71
- switching to tone dialling 72

Paging 16

PIN, changing

- base station PIN 60
- handset PIN 57

Playing back a message (AM), terminating 34

Q

Quick reference guide, flyleaf

R

Range 5

Recording 14

Recording a call 26

Redial

- automatic 17
- manual 17

Remote retrieval (AM)

- activating the answering machine 36
- playing back messages 38
- playing back/selecting announcements 37
- recording announcements 37
- using help 42

Ringer melody, setting 47

Ringer volume, setting 46

Ringer, activating/deactivating 68

Room monitor 70

S

Safety precautions, flyleaf

Saving

- call allowance 30
- call numbers 19
- credit balance 30
- emergency numbers 62
- system PIN 60

telephone PIN 57

Service 75

Settings 46

- display language 46
- handset volume 47
- loudspeaker volume 47
- ringer melody 47
- ringer volume 46
- short ringer tone 47

Short cuts

- handset short cuts 54

Short ringer tone (advisory tone only) 47

System lock, activating/deactivating 60

T

TAE (telephone connector) 67

Telephone lock 59

Telephone maintenance 74

Time, entering 10


Troubleshooting 74

V

Voice calling 44

Answering machine remote operation

The key functions for operating the answering machine remotely are the same for all telephones, handsets and tone transmitters. The "credit card" clearly indicates the interaction between control commands and keys and how to perform remote operations at an external telephone.

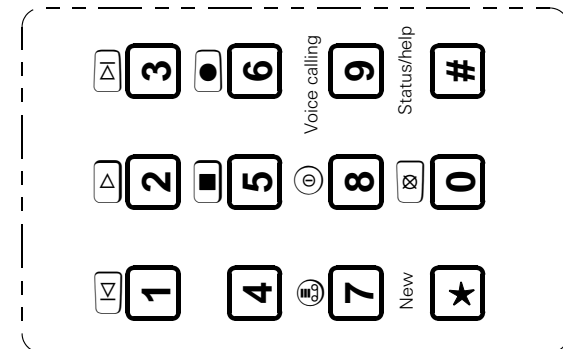

Initiating remote operation

Dial own call number. You hear your announcement text.

+ Press the pound key and enter the answering machine PIN.
Use digit keys to control the answering machine.


Activating the answering machine:
let the telephone ring for approx. 1 minute.

+ Press the pound key and enter the answering machine PIN.
The answering machine switches on.




Important menus

Gigaset 3000 Comfort is a menu-driven handset.

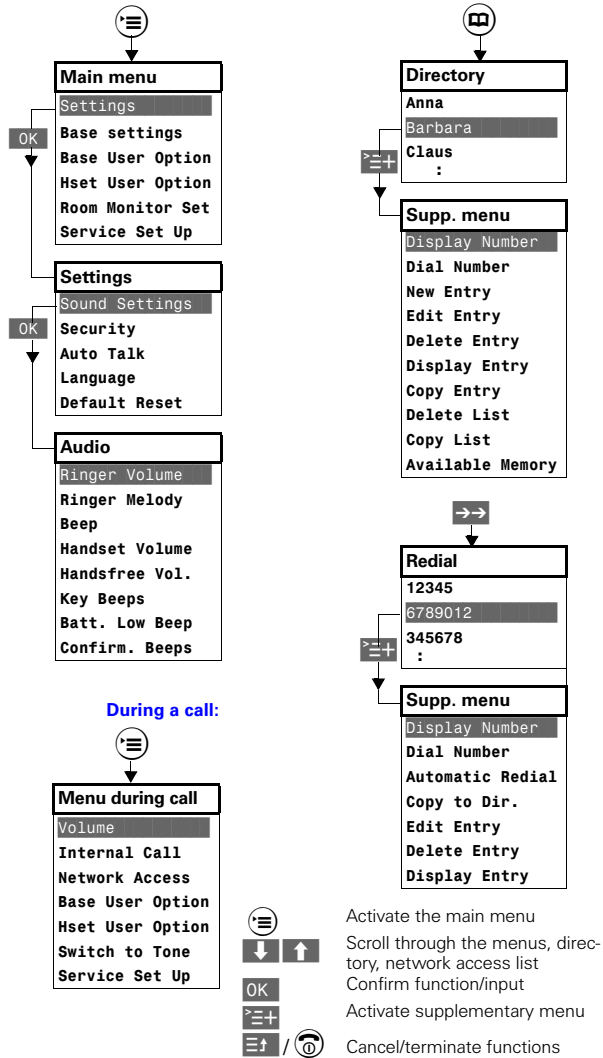

Base station settings

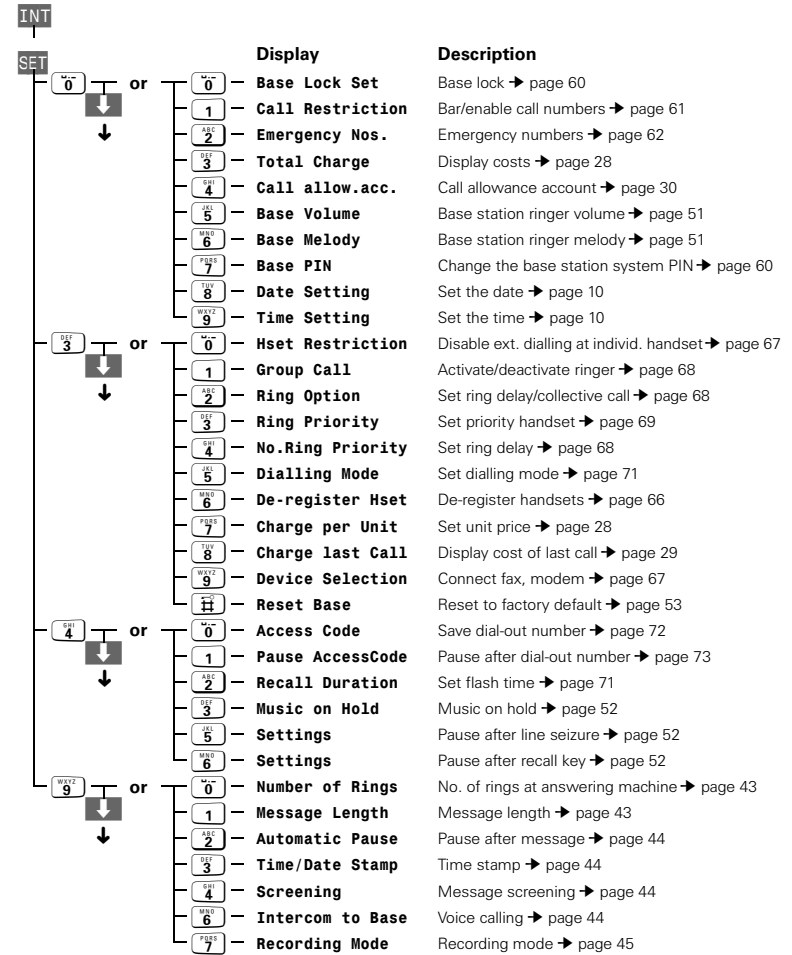

Issued by
Information and Communication Products Group
Hofmannstraße 51, D-81359 München

© Siemens AG 1999. All rights reserved.
Subject to availability.
Right of modification reserved.

Siemens Aktiengesellschaft
Internet address: <http://www.siemens.com/gigaset>

Reference no.: A31008-G3015-B002-1-7619
Printed in Germany
09/99

