


# SIEMENS

Be inspired








 













 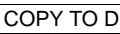



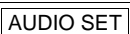




 
 
 

 




 



 
 

 
 
 
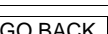
 






 


 






 

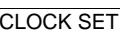


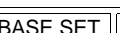

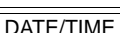


**Operating instructions**

 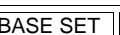and safety precautions 







 



 

 
 

 
 

 



 

## General

### Quick reference guide
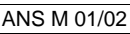
#### Handset

Activate/deactivate the handset	hold down 
Activate/deactivate the keypad protection	hold down 
Activate/deactivate tones	hold down 
Make an external call	 
Redial a number	 If applicable,  select an entry 
Copy keyed telephone number to the directory	   
Dial with the directory	  [Name] and/or  
Dial with the caller list	    if necessary  
Set the handset volume	       
Make an internal call	 e. g.  or    
Call all handsets	  or   
Transfer call to another handset	 e. g.  
Internal enquiry calls	 e. g.  ; End:   
Set the date	         Date entered 
Set the time	          Time entered 
Set the alarm clock	    Enter the alarm call 

#### Answering machine

Play back messages	   
To the next message	 or 
To the next message but one	  or  
Repeat the message	 or 
To the previous message	  or   
Deleting all old messages	     
Deleting individual messages	

## Brief overview of the handset

### Status LED (li.-em. diode)

lights up during a call;  
flashes at:  
- incoming call  
- new messages  
- alarm call

### Talk key

- answer a call  
- dial a telephone number

### Directory key

Open the directory

### Key 1

Hold down to select the answering machine/the mailbox

### Asterisk key

Hold down to activate/deactivate the ringer

### Recall key

- Pause (hold key down!)  
- R key function (flash)

Microphone

### Charg. status

### Display (display field)

### Current display and display keys

see below!

### End call key and On/Off key

- end the call  
- cancel function  
- one menu level back (press briefly)  
- Return to idle state (hold down)  
- when the telephone is idle on/off (hold down!)

### Pound key

Hold down to activate/deactivate keypad protection

### Select Services key

Open the network access list

## Display and display keys

### Time

### Internal telephone number

### Asterisk

The asterisk indicates that the alarm clock is set.

### Charging status

☐ battery empty  
☐ battery fully charged  
flashes: when empty



### Display keys:

Press the corresponding keys to initiate the function shown in the display




General

Display symbols

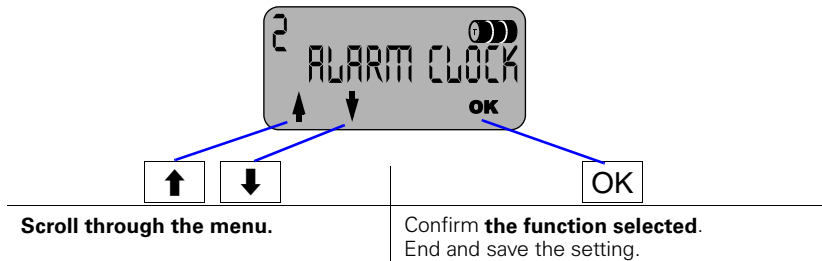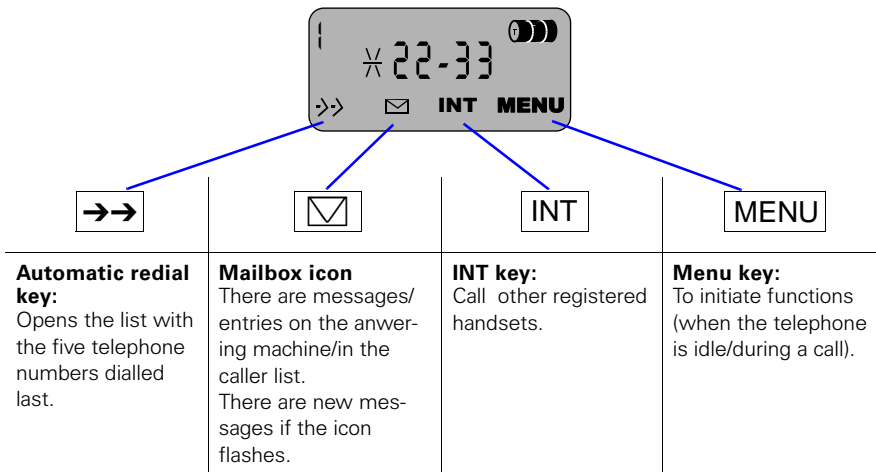

**Then:**  
**Press** **briefly:** 1 menu level up  
**hold down** : Return to the idle state  
**No input:** Automatically to the idle state

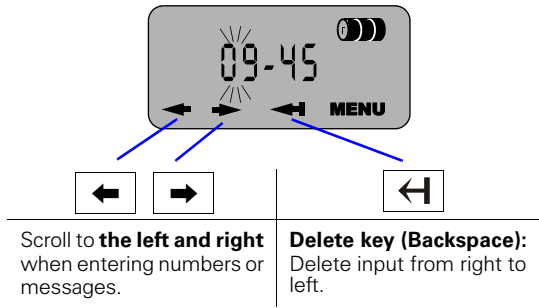

# Contents

Quick reference guide . . . . .	II
Brief overview of the handset . . . . .	III
Display and display keys . . . . .	III
Display symbols . . . . .	IV
<b>Safety precautions . . . . .</b>	<b>4</b>
<b>Preparing the telephone . . . . .</b>	<b>5</b>
Installing the base station . . . . .	5
Operating the handset . . . . .	7
Attaching the belt clip . . . . .	8
Activating/deactivating handset . . . . .	8
Activating/deactivating keypad protection . . . . .	8
<b>Date and time . . . . .</b>	<b>9</b>
Setting the date and the time . . . . .	9
Setting the alarm clock . . . . .	10
<b>Making calls . . . . .</b>	<b>11</b>
Making an external call . . . . .	11
Internal dialling . . . . .	11
Answering a call . . . . .	12
Displaying telephone numbers (CLIP) . . . . .	12
Listening in at the base station (“Speaker On/Off”) . . . . .	13
Muting the microphone . . . . .	13
Picking up a call from the answering machine . . . . .	13
Mailbox . . . . .	14
<b>Enhanced telephone features . . . . .</b>	<b>15</b>
Automatic redial . . . . .	15
Directory and network access list . . . . .	16
Character map . . . . .	17
Caller list . . . . .	20

**For further information please refer to the index – page 58!**

---

<b>Operating the AM</b> .....	<b>23</b>
Activating/deactivating the AM .....	23
Announcement of the remaining memory .....	24
Setting a different language .....	24
Recording your own announcement .....	25
Listening to announcements .....	26
Deleting messages .....	27
Picking up a call from the answering machine .....	27
Setting the answering machine for speed dialling .....	28
Remote operation .....	28
<b>Individual answering machine settings</b> .....	<b>30</b>
Charge saving function (number of rings) .....	30
Message length and recording quality .....	31
Listening in .....	31
Activating/deactivating the loudspeaker for the answering machine .....	31
<b>Registering and de-registering handsets</b> .....	<b>32</b>
Automatic registration .....	32
Manual registration .....	33
De-registering handsets .....	34
<b>Operating several handsets</b> .....	<b>35</b>
Changing the name of a handset .....	35
Changing a handset's internal number .....	35
Making internal calls .....	36
Connecting a call .....	36
Internal enquiry calls .....	37
Accepting or rejecting a waiting call .....	37
Joining in a call ("barging in") .....	38
Deactivating the ringer .....	39
<b>Individual handset settings</b> .....	<b>40</b>
Changing a handset's display language .....	40
Modifying the volume and changing the melody .....	41
Activating/ deactivating Auto talk .....	42
Resetting a handset to the factory setting .....	42

---

<b>Base station settings</b> .....	<b>43</b>
Changing the system PIN .....	43
Modifying volume and melody .....	44
Repeater support .....	45
Resetting the base station to the factory setting .....	46
<b>Connecting the base station to a PABX</b> .....	<b>47</b>
Dialling mode and flash time .....	47
Switching temporarily to tone dialling .....	48
Setting pauses .....	48
<b>Appendix</b> .....	<b>49</b>
Maintenance .....	49
Troubleshooting .....	49
Guarantee .....	50
Service: .....	51
Technical data .....	52
<b>Menu table</b> .....	<b>54</b>
<b>Accessories</b> .....	<b>56</b>
<b>Index</b> .....	<b>58</b>
<b>Answering machine remote operation</b>	

## Safety precautions

---

# Congratulations



on your Siemens Gigaset!

The following pages describe how your telephone works, so that you will be able to use it easily.

## Safety precautions



**Only use the power supply unit supplied.**



Only use **approved rechargeable batteries of the same type.**  
Never use ordinary (non-rechargeable) batteries. Otherwise health risks and personal injuries cannot be excluded.



Insert rechargeable batteries in accordance with polarity symbols (this instruction is found in the handset's battery compartments).



Use the batteries indicated in these operating instructions (this instructions is found in the handset's battery compartments).



Medical equipment can be affected by the use of the telephone. Observe the conditions in your environment (e.g. doctor's practice).



The handset can cause an unpleasant humming sound in hearing aids.



Do not install the base station in bathrooms or showers.



Do not operate the telephone in environments where there is risk of explosion (e.g. paint shops).



Ensure that the operating instructions are included when passing on your Gigaset to a third party



Dispose of batteries and telephone in an environmentally friendly manner.



Not all functions described in these operating instructions are available in all countries.

---



## Preparing the telephone

 


The package contains the following:

- one base station,
- one Gigaset 4000 Classic handset,
- one power supply unit,
- one telephone cord,
- one belt clip for the handset,
- two batteries,
- one set of operating instructions.

## Installing the base station

### Notes on the installation



The base station is designed for operation in protected rooms with a temperature range from +5 °C to +45 °C. Install the base station in a central location in the flat/house e. g. in the hall.



- Never place your Gigaset in or around any of the following: heat sources, direct sunlight, other electrical equipment.
- Protect your Gigaset against moisture, dust, corrosive liquids and vapours.

### Range

The base station range is approx. 300 m outdoors and up to 50 m indoors.

## Preparing the telephone


### Connecting the base station

#### for the analogue network:

Power supply unit  
(220/230 V) with  
mains cable


Telephone jack with telephone cord  
(type varies depending on country!)

- 1**
- Insert **the small plug on the mains cable**,
  - place cord in cable duct,
  - insert power supply unit into mains socket.

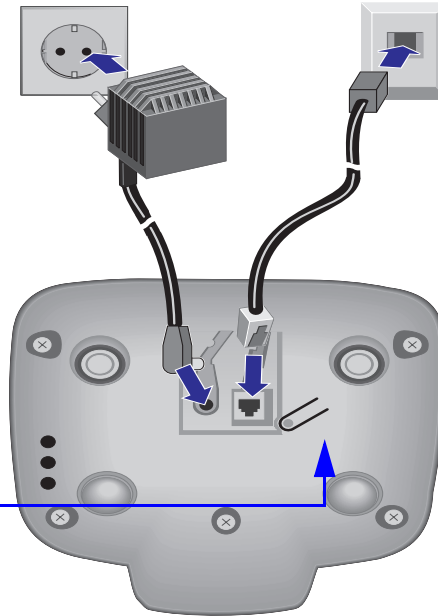

Key to register  
additional hand-  
sets

- 2**
- Insert **small coloured plug on the telephone cord into jack** (clicks into place),
  - place cord in cable duct,
  - insert telephone jack into tele-  
phone socket.

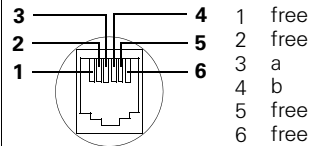

- **Only use the power supply unit supplied** as indicated on the underside of the device.
- **If you buy another cord, ensure that it has 3-4 assignment (terminal assignment).**



Exercise caution when using a new telephone cord. Only use the cord provided.

## Operating the handset

The display is protected by a plastic film.  
**Remove the protective plastic film!**



 
## Inserting the batteries



- Insert the batteries **ensuring correct polarity** – see figure on left.
- Replace cover and push gently **upward** until it clicks into place.
- **To open**, press the grooved area on the cover and slide **back**.



- Only insert the recommended rechargeable **batteries** (see page 52). Never use ordinary (non-rechargeable) batteries or health risks and personal injuries cannot be excluded.
- Never use non-Siemens charging units as these can damage the batteries.



## Placing the handset into the base station and charging the batteries

Before activating your handset, place it in the base station with the display facing upward. After approx. one minute, the handset's internal number is displayed (e.g. "INT 1").



For information on how to register **further handsets** (bought additionally), see page 32.



Leave the handset for approx. five hours in the base station to charge the batteries. The charging status icon flashes on the handset indicating that the batteries are being charged:

- |  |                              |  |                     |
|--|------------------------------|--|---------------------|
|  | Batt. empty (symbol flashes) |  | Batt. 2/3 charged   |
|  | Batteries 1/3 charged        |  | Batt. fully charged |

### Note:


Your Gigaset is now ready for operation. Your answering machine is set with a standard announcement. Please set date and the time (see page 9), so that the time of incoming calls can be noted correctly.

## Preparing the telephone



- Once the initial charging operation is completed you can replace your handset into the base station after each call. Charging is controlled electronically. This ensures optimum charging and prolongs battery life.
- The batteries heat up during charging. This is normal and not dangerous.
- The battery charging status is correctly displayed only after uninterrupted charging/discharging. You should therefore avoid opening the battery compartment unnecessarily.

### Attaching the belt clip

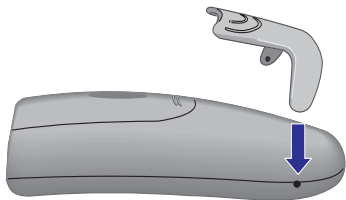

Push the belt clip onto the back of the handset until the side protrusions click into place.

### Activating/deactivating handset



To activate/deactivate, **hold down** the end call key – You will hear the confirmation beep\*.




The handset is activated as soon as you insert the batteries and place the handset in the base station.

### Activating/deactivating keypad protection

You can disable the handset keys when carrying the unit in your pocket or bag. This protects the keypad against inadvertent activation.

If there is an incoming call, the key lock is automatically deactivated and re-activated after the call has ended.

Accepting a call: Press the talk key .



To activate/deactivate, **hold down** key – you will hear the confirmation beep\*.

\* Confirmation beep = rising tone sequence,  
Error beep = falling tone sequence.

Press keys:



## Date and time

Your Gigaset has an alarm clock function to help you keep track of your schedule.

### Setting the date and the time

The date and time setting is necessary in order for the date and time of the arrival of messages/incoming calls to be displayed correctly.

You can also set the clock mode, i.e. 12 h mode ( **AM** and **PM** ) or 24 h mode.

#### Date

MENU

Open the menu.

↓ BASE SET OK

Select the menu item and confirm.

↓ CLOCK SET OK

Select the menu item and confirm.

↓ DATE SET OK

Select the menu item and confirm.

The current setting is displayed in the DD-MM-YY mode.

e. g. 2<sub>ABC</sub> 0+ 0+ 5<sub>JKL</sub> 0+ 1<sub>QW</sub>

Enter the day/month/year (e.g. 20.05.2001 as shown).

← →

If necessary, jump to a digit, for example to correct it.

OK

Save the setting.

#### Time

MENU

Open the menu.

↓ BASE SET OK

Select the menu item and confirm.

↓ CLOCK SET OK

Select the menu item and confirm.

↓ DATE/TIME OK

Select the menu item and confirm.

The current setting is displayed as HH:MM.

e. g. 1<sub>QW</sub> 9<sub>WXYZ</sub> 0+ 5<sub>JKL</sub>

Enter the hours/minutes e.g. 19.05 h as shown.

← →

If necessary, jump to a digit, for example to correct it.

OK

Save the setting.

If 12 h mode is set as **CLOCK MODE** :

AM OK

Confirm first half of the day.

or ↓ PM OK

Select second half of the day and confirm.

OK

Save the setting.

## Date and time

### Press keys:

MENU  
 ↓ BASE SET OK  
 ↓ DATE/TIME OK  
 ↓ CLOCK MODE OK  
 24 H OK

or

↓ 12 H OK

### Display mode (12 or 24 hours)

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm 24 h mode.

Select 12 h mode and confirm.

### Setting the alarm clock

You can use your handset like an alarm clock.

**The date and time must already be set** (see page 9).

### Activating the alarm clock

The active alarm clock rings every day at the set time.

MENU

↓ ALARM CLOCK OK

e. g. 0+ 7PQRS 1ABC 5JKL

← →

OK

Open the menu.


Select the menu item and confirm.

Enter the time for the alarm call (hours/minutes)  
e.g. 7.15 h as shown.

If necessary, jump to a digit, e. g. to correct it.

Save the setting and terminate the function.

The asterisk indicates that the alarm clock is set.

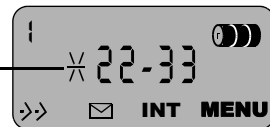

### Deactivating the alarm clock

The alarm clock is set, but you do not want the alarm to sound.

MENU

↓ ALARM CLOCK OK

Open the menu.

Select the menu item and confirm.

The alarm call is deactivated. The asterisk before the time display is no longer shown.

### Turning off the alarm call

An alarm clock rings and the status LED flashes (approx. 30 s). Press any key to turn off the alarm call.


Press keys:

## Making calls

### Making an external call

External calls are calls into the public telephone network.



Dial the telephone number, if necessary use the display key  to correct single digits.






Press the talk key.



To end the call, press the end call key.

 


- You can also press the talk key  **first** and then enter the telephone number – each digit is dialled immediately.
- You can cancel the dialling operation with the end call key .
- You can insert a pause with the recall key  (hold key down), e.g. for international calls.

### Internal dialling

Internal calls are calls to other registered handsets.

Internal calls are free of charge (e.g. to call within your home from the kitchen to the living room).

INT e. g. 

Enter the handset's internal telephone number.

or

INT

Press.



Select the desired user and press the talk key.

INT 

#### Call all handsets:

All handsets are called.


#### Ending a call:



Press the end call key to end the call.

## Making calls

### Press keys:

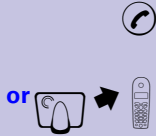


## Answering a call

Your telephone rings (ringer) and the status LED flashes.

Press the talk key

Simply remove the handset from the base station (factory setting: Auto talk, see page 42).




- If the **ringer is disturbing you**: Open the menu via **[MENU]** and select **[SILENT]**.
- As long as the call is displayed, you can accept it by pressing the talk key  for example.
- Setting the handset volume (while you are talking, see page 41).

## Displaying telephone numbers (CLIP)

The network provider must support the calling line identification (CLIP) and the telephone number must have been transmitted. Contact your network provider.

An incoming call is displayed as follows (example):

Telephone number

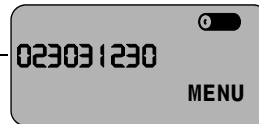

If the number received is saved in the handset directory, the stored name is displayed (example: **[ANNE]**).

If the telephone number or the name is not displayed, you see:

**[<< >>]**

If you have not requested **CLIP**

**[UNAVAILABLE]**

If the caller has not requested the telephone number transmission or if display of the number was deliberately suppressed by the caller (**CLIR**)

<b>CLIP</b>	Calling Line Identification Presentation = Displaying the caller's telephone number
<b>CLIR</b>	Calling Line Identification Restriction = display of the incoming telephone number suppressed.



Press keys:

↓ BASE SPKR OK

MENU

INT

MENU

GO BACK OK



## Listening in at the base station ("Speaker On/Off")

You can switch on the base station loudspeaker, so that other people in the room can hear what your caller on the telephone is saying.

Open the menu.

Select the menu item and confirm.

To deactivate, repeat this procedure.



Before you activate this function, you should inform your caller about your intention.

## Muting the microphone

You can deactivate your microphone during external calls in order to talk confidentially to another person in the room, for example. The external caller cannot hear your conversation during this time. You do not hear your caller either.

Mute the microphone – the call is placed on hold and the external caller will hear music.

Re-activating the microphone:

Open the menu.

Confirm.

You return to the external caller.

## Picking up a call from the answering machine


While the answering machine is recording a message (answering machine symbol is flashing), you can still answer the call if you want to talk to the caller.

Press the talk key.

The recording stops and you can talk to the caller.

## Making calls

Press keys:

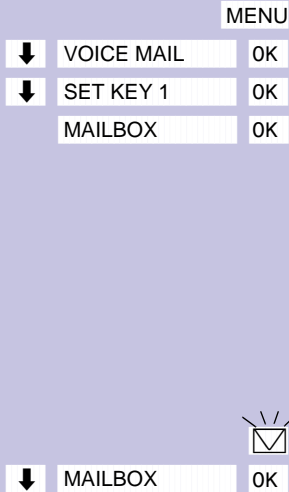

## Mailbox

### Storing the mailbox for fast access

You can use the integrated answering machine or mailbox for fast access.


Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the telephone number of the mailbox and confirm.



Once you have selected the answering machine/mailbox, simply hold down the  key on the handset. You are directly connected to the answering machine/mailbox (fast access).

### Checking the mailbox

#### Prerequisite:

You have entered the number of the mailbox.

Display flashes.

Select the menu item and confirm.

## Enhanced telephone features

Press keys:

### Enhanced telephone features

In addition to standard telephoning, your Gigaset offers a number of other fast, convenient features.



#### Automatic redial

Your handset automatically saves the five telephone numbers dialled last or names.



Display the telephone number/name.



Select the required telephone number/name.



Press the talk key – the telephone number is dialled.

#### Delete the redialling list



Open the redialling list.

MENU

Open the menu.

6 MND

DELETE?

OK

Press digit 6 and confirm the prompt.



Display the telephone number.



MENU

Select a telephone number and open the menu.



COPY TO DIR

OK

Select the menu item and confirm.



OK

If necessary, change the telephone number and confirm.




If necessary enter the name.  
Input of letters and characters (see page 17).

OK


Confirm input.


## Enhanced telephone features

Press keys:

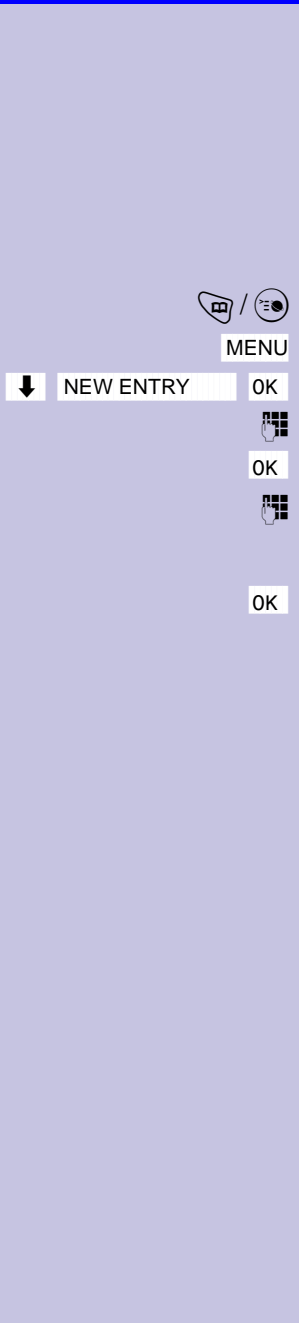

### Directory and network access list

With the **directory**  you can store up to 20 telephone numbers and then dial them at the push of a button.

In order to make calls cost-effectively you can save the prefixes (Call-by-Call) of telephone companies in the **network access list** \*.

#### Storing an entry



Open the directory/network access list.

MENU

Open the menu.



NEW ENTRY

OK

Select the menu item and confirm.



Enter the **telephone number**.

OK

Confirm input.



Enter **the name**.

For information on entering letters and characters (max. 12) see the character map.

OK

Confirm input.



Max. number of numbers:

Directory 22 digits


 







 


Network access list 12 digits

\* not available in all countries

## Enhanced telephone features

 


Press keys:

## Character map

	1 x	2 x	3 x	4 x	5 x	6 x
	□	1				
	A	B	C	2		
	D	E	F	3		
	G	H	I	4		
	J	K	L	5		
	M	N	O	6		
	P	Q	R	S	7	
	T	U	V	8		
	W	X	Y	Z	9	
	+	0	-		?	_
	*	/	(	)	,	
	□					

Press the relevant key repeatedly or hold it down:



Controlling the cursor with  . Deleting a character with . Characters are always inserted to the left of the cursor.

The entries are sorted in the


**following sequence:**

 1. Blank (□)
2. Digits (0 to 9)
3. Letters (alphabetical)
4. Remaining characters

To avoid the alphabetical sequence of the entries in the directory, enter a blank before the name. This entry then goes to the first position (example: entering "□Karla").

## Enhanced telephone features

### Press keys:



or




### Dialling a number from the directory

Open the directory.

Enter the first letter of the name (e.g. for the name Emma - first letter "E"): Press the **3 DEF** key twice and scroll with the **↓** key. The names are listed in alphabetical order.

Press the talk key. The telephone number is dialled.



After selecting the number, you can also open the menu, select **EDIT ENTRY**, extend/change the number and dial with the talk key .

### Dialling with the network access list

You can use this function to put a network provider's prefix in front of the telephone number (linking).

Open the network access list.

Select Call-by-Call number and open menu.

Confirm entry.

Enter the number for "linking"

Select the telephone number for "linking" and confirm.

Press

### Displaying and changing a directory entry

Open the directory.

Enter the first letter of the name.

Open the menu.

Select the menu item and confirm. The number is displayed.

If necessary, change telephone number. For information on entering letters and characters, see page 17.

 
Confirm input.

Overwrite the name.

Confirm input.

## Enhanced telephone features

### Press keys:




Open the network access list.



MENU

 Select a telephone number and open the menu.



Select the menu item and confirm. The number is displayed.



Overwrite number if necessary.

For information on entering letters and characters, see page 17.

OK

Confirm input.




Overwrite the name.

OK

Confirm input.

### Deleting a single entry from the directory

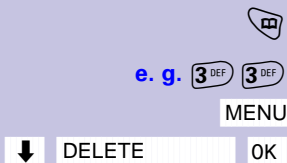


Open the directory.

e. g. 3 DEF 3 DEF

Enter the first letter of the name.


MENU

 Open the menu.



Select the menu item and confirm.

### Deleting a single entry from the network access list

 


Open the network access list.



MENU

 Select a telephone number and open the menu.



Select the menu item and confirm.


### Deleting all numbers in the directory



 Open the directory/network access list.

MENU

Open the menu.



Press digit 6 and confirm the prompt.

## Enhanced telephone features

### Press keys:


### Caller list

The numbers of the last 30 calls are saved in the caller list.

**Prerequisite:** The incoming call number has been transmitted (CLIP).

If several calls are received under the same number, the last call is saved.


### Activate the caller list

If there are new calls,  in the display and the status LED flash.



Press the display key of the flashing icon.



Even if there are no new entries, you can open the caller list by pressing .



Open the caller list.

If the status LED does not flash, no new calls or messages have been saved.



CALLS 02/06

Select caller list.

The display in the example means:

 symbolizes caller list.



symbolizes 2 new calls.



symbolizes 6 old calls.



OK

The number received last is displayed.



Scroll to the next or previous entry. One list entry is displayed.



You can delete a phone number from the list via  and .



Terminate the function.

or

### Call back a caller






Calling back a caller.

The entry is copied to the redialling list.



## Enhanced telephone features

### Press keys:

   
 CALLS 02/06 

 MENU

 COPY TO DIR 







### Copying telephone number to the directory

Open the caller list.

Select the menu item and confirm.

Select the required entry and open menu.

Confirm. Extend the number if necessary.

Confirm input.

Enter the name.

For information on entering letters and characters, see page 17.

Confirm input.



You can also store a telephone number during a call via **MENU** and **COPY TO DIR** ("notebook function").


 
### Caller list settings


Optionally you can choose to save:

- only the **missed calls**
- **all incoming calls.**



   
 CALLS 02/06 

 MENU

 LIST MODE 

MISSED 

or

 ALL 

Open caller list.

Select the menu item and confirm.

Open the menu.

Select the menu item and confirm.

Confirm.

Select the menu item and confirm.

### Deleting the caller list

   
 CALLS 02/06 

MENU

 DELETE LIST 

Open the caller list.


Select the menu item and confirm.

Open the menu.

Confirm.

## Enhanced telephone features

### Press keys:

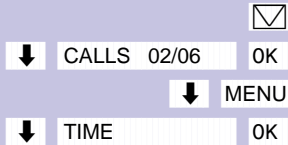

### Finding out the date and time of a call

In the caller list you can also display the time the call was received.

Open the caller list.

Select the menu item and confirm.

Select the required entry and open menu.

Select the menu item and confirm.

The display shows for example:

**23/12 11-56**

In the example, the call was received on the 23.12. at 11.56 h.

If the time is set to the 12 h mode, an **A** behind the time indicates the first half of the day and a **P** indicates the second half of the day.

### Finding out the status of a call

In the caller list you can also display whether an entry is new or old whether the call was answered. In the answering machine list you can also display whether there is a message belonging to the call.

Open the caller list.

Select the menu item and confirm.

Select the required entry and open the menu.

Select the menu item and confirm.

The display shows the following examples:

**NEW 02/04**

The second of four new calls.

**OLD 01/03**

The first of three old calls.

**ANSWERED**

The call has been answered (LIST MODE ALL).

**AM ANSWER**

 
The answering machine has answered the call

**NEW MBX MSG**

There is a new message from the network provider in the list.

**OLD MBX MSG**

The message from the network provider has already been read.



Press keys:

## Operating the AM



It's hard to imagine life without an answering machine to record every incoming call during your absence. It is operated via the handset and is ready for operation immediately after your base station is activated.

The answering machine operation is supported by appropriate handset displays and by announcements that you hear on the handset.

As long as you have not set the date and time (see page 9), recorded messages do not receive a "time stamp"

In addition to the telephone's own answering machine, you can select an answering machine from your network provider (e.g. the **mailbox**). **None** of the following functions relates to the network provider's answering machine. Check with your network provider for these.

## Activating/deactivating the AM

Your answering machine is activated and ready for operation once your base station has been put into service. For recording messages with a time stamp, the date and time must be set (see page 9). The answering machine uses the standard announcement stored until you record your own announcement.

MENU

Open the menu.

↓ VOICE MAIL OK

Select the menu item and confirm.

↓ ANS MACHINE OK

The answering machine is now activated (marked with ✓) and ready to record.

OK

To deactivate, confirm the marked function again.



If the answering machine's memory is full, the answering machine switches itself off. Delete old messages (see page 27).

## Operating the AM

Press keys:

### Announcement of the remaining memory

Whenever you switch the answering machine on or off you will automatically be notified of the remaining memory on the handset.

### Setting a different language\*

You can change the language for acoustic operation and for the standard announcement.

Open the menu.

MENU



Press the key combination, then choose the language.

1	acoustic signals
2	English
3	French

\* Not available in all countries!

Press keys:

MENU  
 ↓ VOICE MAIL OK  
 ↓ ANNOUNCEMENT OK  
 REC ANC OK

## Recording your own announcement

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

You hear a notification of the recording and then the ready tone (short beep).

Record your announcement.

Example of a **typical announcement**:

*„ I cannot take your call right now. Please leave a message after the tone. “*

OK

Terminating a recording.

The recorded announcement is repeated for checking.

or



The recording is deleted.

The standard announcement is active again.



Recording is automatically terminated:

- If you exceed the maximum recording time of 170 s
- If you pause for more than two seconds when recording your announcement

## Operating the AM

### Press keys:

		MENU	
↓	VOICE MAIL	OK	
↓	ANNOUNCEMENT	OK	
↓	PLAY ANC	OK	
		or	
↓	DEL ANC	OK	
	SURE?	OK	
↓	ANS M 01/02	OK	



### Checking an announcement or deleting it

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.


or

Select the menu item and confirm.

Confirm prompt.

The standard announcement is active again.

### Listening to announcements

The status LED and the mailbox icon  in the display flash to indicate that there are new messages or calls.

Press the display key of the flashing icon.

If there are no new messages or calls, you can listen to old messages:

Press the display key.

Select the menu item and confirm.

The display in the example means:

ANS M	answering machine.
01	three new messages.
02	four old messages.

The playback begins immediately with the first new message. After the last new message, the old messages are played back. After the last message, you hear the end tone.



No more messages can be recorded if **AM MEM FULL** is displayed.

### Pause during the playback



Pause.



Press once more to continue.



If playback is interrupted (pause) for more than a minute, the answering machine reverts to idle status.

**Press keys:**

To the start of the current message.



To the previous message.



To the next message.



Skip ahead one message after next.

## Deleting messages

You can delete either individual messages or all old messages.

### Deleting individual messages

While playing back the message to be deleted:



Press the display key.

### Deleting all old messages

During playback or a pause:

MENU

Open the menu.



DELETE OLD

OK

Select the menu item and confirm.

SURE?

OK

Confirm.

## Picking up a call from the answering machine

While the answering machine is recording a message (status LED lights up), you can still pick up the call if you want to talk to the caller.




Press the talk key.

The recording is terminated and you can talk to the caller.

## Operating the AM

### Press keys:

	MENU	
↓	VOICE MAIL	OK
	SET KEY 1	OK
	MAILBOX	OK
		OK

or

	MENU	
↓	VOICE MAIL	OK
	SET KEY 1	OK
↓	ANS MACHINE	OK

## Setting the answering machine for speed dialling

You can choose between the mailbox and the answering machine (factory setting) of your telephone for fast access.

Open the menu.

Select the menu item and confirm.

Confirm.

Confirm.

Enter the mailbox's telephone number and save the setting.


Open the menu.

Select the menu item and confirm.

Confirm.

Select the menu item and confirm.



The current setting is marked with ✓. Just hold down the  key on the handset and you are connected directly to the answering machine (speed dialling).

## Remote operation

You can check your base station's answering machine from any other telephone (e.g. hotel, pay phone).

### Prerequisite:

You can only operate your answering machine remotely if you have **already** changed the factory default system PIN (0000) **at home** (see page 43).



You will find instructions for this in credit card format in the appendix.



**Press keys:**

## Initiating remote replay



Dial your own telephone number.  
You will hear your announcement text.

### **While you are hearing your announcement:**



Press key and enter system PIN. You are informed whether new messages have been recorded.  
You will hear the new messages.

### **You have the following options:**



Go to the start of the current message.  
Go to the previous messages (press repeatedly).



**or** Pause.  
Continue (press once more).



**or** Go to the next message.  
Go to the following messages (press repeatedly).



**or** Delete the current message.



---

For remote replay, your telephone must support tone dialling (DTMF). You can hear a tone when you press a key. If not, you must use a tone generator (available in shops).

---

## Activating the answering machine remotely

If you forgot to activate your answering machine, you can switch it on remotely. Let your telephone ring for approx. 1 minute.

You will hear: "Please enter PIN ."



Enter system PIN (must not be 0000!).

Your answering machine is now activated.

## Individual answering machine settings

Press keys:

### Individual answering machine settings

The answering machine has already been preset for you at the factory. You can however make individual settings using the handset.

#### Charge saving function (number of rings)

For remote operation, you can set how many times the telephone rings before the answering machine is activated. You can choose between two to nine rings and the **automatic** charge saving function.

With the automatic charge saving function (factory default) the answering machine is activated after:

- 2 rings: there are new messages,
- 4 rings: no new messages have been received.

When operating remotely you then know that if the telephone rings three times there are no new messages – if you end the call now, no call charges are incurred.

MENU

Open the menu.

↓ VOICE MAIL OK

Select the menu item and confirm.

↓ RING DELAY OK

Select the menu item and confirm.

↓ OK

Set the number of rings or the charge saving function and confirm.

## Individual answering machine settings

Press keys:

MENU

↓ VOICE MAIL OK

↓ MESSAGE SET OK

MSG LENGTH OK

↓ OK

or

↓ QUALITY OK

↓ OK

MENU

↓ VOICE MAIL OK

↓ CALL SCREEN OK

OK

MENU

↓ VOICE MAIL OK

↓ SPKR ON/OFF OK

OK

### Message length and recording quality

If you like, you can set a maximum recording time for your answering machine.

On delivery the message length is **120 seconds**, and the recording quality is **LONG PLAY** (recording time at least 15 minutes).

If you select **HIGH QUALITY** for the recording quality, the recording time is reduced to approximately 7 minutes.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

Select unlimited, 30, 60 or 120 seconds and confirm.

Select the menu item and confirm.

Select standard ("LONG PLAY") or high quality ("HIGH QUALITY") and confirm.

### Listening in

While a message is being recorded you can listen in on the loudspeaker of any handset (factory setting: activated).

Open the menu.

Select the menu item and confirm.

Listening in is activated and marked with ✓.

To deactivate, confirm the marked function again.

### Activating/deactivating the loudspeaker for the answering machine

When the loudspeaker is activated (factory setting), you can also listen to messages and announcements (date, time) when they are played back on the base station.

Open the menu.


Select the menu item and confirm.

The loudspeaker is activated and marked with ✓.

To deactivate, confirm the function marked again

## Registering and de-registering handsets

Press keys:

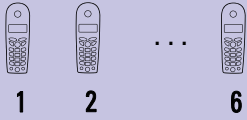

## Registering and de-registering handsets

To be able to make calls with your handset, you must “introduce” it to its base station (registering). This is very simple and occurs automatically.

Handsets of the Gigaset 2000/3000 families and non-Siemens handsets must be registered manually.


### Automatic registration

#### Gigaset 4000 handsets at the Gigaset 4010/4015 base station



Automatic registration (“introducing”) is only possible for the supplied handset and any other G4000 handsets bought additionally. Before activating your handset, **place it** in the base station **with the display facing upward**. After approx. 1 minute, the handset's internal number is displayed (e.g. “ 1 ”).



Make sure that you do **not** press the On/Off key  before placing the handset in the base station. If you have inadvertently activated the handset, please deactivate it.

The next unassigned internal number (1 – 6) is automatically assigned to the handset. If all numbers are assigned, the internal number 6 is re-assigned. The handset which was registered under number 6 is then deregistered.

It is possible to assign a different internal number (see page 35) or a different internal name (see page 35) to a handset later.

## Registering and de-registering handsets

Press keys:

### Manual registration

#### Gigaset 4000 handsets at the Gigaset 4000 base station

If a handset has already been registered at a different base station, you must now register it at your base station. The Gigaset 4000 Classic handset cannot be registered at more than one Gigaset 4010/4015 Classic base station at one time.



#### Step 1:

MENU

Open the menu.



REGISTER HS

OK

Select the menu item and confirm, **PIN \*\*\*\*** is displayed.



 
OK

Enter the 4-digit system PIN (factory setting: 0000) and confirm.

After entering the system PIN, **REGISTER HS** flashes in the display.



#### Step 2:



Hold down the key underneath the base. A signal tone is generated at the base station. The next unassigned internal number (1 – 6) is automatically assigned to the handset.

If all numbers are assigned, the internal number 6 is re-assigned. The handset which was registered under number 6 is then deregistered.

After about a minute the internal number of the handset is shown in the left-hand corner of the display (e.g. "2").

## Registering and de-registering handsets

Press keys:

### Registering Gigaset 2000/3000 handsets and non-Siemens handsets at the Gigaset 4010/4015 base station

#### Prerequisite:

The non-Siemens handsets must also comply with the **GAP standard!**

However, it is possible that not all functions will be available on your handset!

<b>GAP</b>	<b>Generic Access Profile</b> = European standard for the interaction of handsets and base stations
------------	---



 
#### Step 1:

Register your handset according to the operating instructions of the relevant handset.

After registration, your Siemens base station assigns the **first unassigned** internal number to the handset.



#### Step 2:



Press the key on the underside of the base station briefly

A signal tone is generated at the base station.

### De-registering handsets

#### Prerequisite:

You can only de-register handsets with a Gigaset 4000.

INT

Press the display key.

The list of internal users is displayed.



Select the handset to be de-registered.

MENU

Open the menu.

↓ DE-REG H/SET OK

Select the menu item and confirm  is displayed.

OK

 
Enter the 4-digit system PIN (factory setting: 0000) and confirm.

DE-REGISTER? OK


Confirm the prompt.

## Operating several handsets

Press keys:



## Operating several handsets

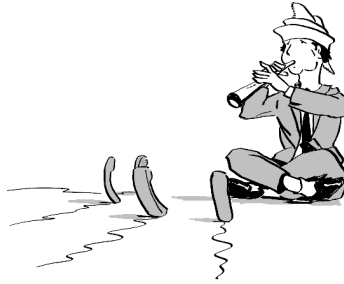

Turn your Gigaset into a small PABX. You can register and operate up to six handsets at your base station.

### Changing the name of a handset

The names 1, 2 etc. are assigned automatically. However, you can change these names, e.g. to "ANNE," "OFFICE" etc. (10 characters maximum).

	INT	Press the display key.
		Select the required handset.
	MENU	Open the menu.
EDIT NAME	OK	Select the menu item and confirm.
		Enter name (see character map on page 17).
	OK	Confirm input.

### Changing a handset's internal number

You can change the number of a handset.

 
	INT	Press the display key.
	MENU	Open the menu.
RE-ASSIGN NO	OK	Confirm. All registered handsets are displayed.
	OK	Select a handset.
e. g.	OK	Select a free internal number and confirm.



If the selected internal telephone number has already been assigned to a different handset, you will hear an error beep (descending tone sequence).

## Operating several handsets

### Press keys:

INT e. g. 

 
or INT

INT 



INT

e.g. 



## Making internal calls

Internal calls are calls to other registered handsets; they are free of charge.

Enter the handset's internal number.

Press.

Select the desired user and press talk key.

### Calling all handsets:

All handsets are called ("collective call").

### Ending a call:

Press to end the call.

## Connecting a call

You can transfer an external call to another handset.


Press the display key – the external user hears music on hold.

Enter the internal number.

When the internal user answers, announce the external call. Then:

Press the end call key. The call is connected.



Instead of announcing the call, you can also immediately press the end call key  .

 
If the internal user does not answer or if his line is busy, the call is automatically returned to you.



## Operating several handsets

### Press keys:

INT

e. g. 

MENU

GO BACK

OK

or



MENU

ACCEPT

OK

or



REJECT

OK

## Internal enquiry calls

You are conducting a call with an external user. You can call another internal user and conduct an enquiry call without clearing down the initial connection. You are automatically reconnected to the external user when you end the enquiry call.

Press the display key – the external user hears music on hold.

Enter the internal number of the handset. You are now talking to the second internal user.

### Ending the enquiry call:

Open the menu.

Confirm.

You are reconnected to the external user.

The external call is transferred to the second internal user.

## Accepting or rejecting a waiting call

You hear the call waiting tone (short beep) if you receive an external call while conducting an internal call. This function must be requested from the network provider.

Open the menu.

Confirm. The internal call is **ended**. You are connected to the external caller.

Select the menu item and confirm.

You are still connected to the internal user.

## Operating several handsets

### Press keys:

MENU		
↓	BASE SET	OK
↓	ADD FEATURES	OK
↓	BARGE IN	OK

### Joining in a call ("barging in")

An internal user conducts an external call. A second internal user can barge in on this call and speak to the other users. This is indicated by a signal tone (not available in all countries!).

### Activating/deactivating this function

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

To deactivate, confirm the function marked with ✓ once more with **OK**.

### Barging in

You see **LINE IN USE** in the display and want to barge in.



Lift the handset. The conference call is signalled by a beep in the active call.

During the call, you see the display

**LISTENING IN**.



Replace the handset to leave the call.



The conference cannot be initiated if open listening ("speaker on") is active for the external call.

## Operating several handsets

### Press keys:



Hold down the \* key until the handset does not ring any more.  
The ringer is **permanently** deactivated.  
To re-activate the ringer, press .

or

MENU

 
Open the menu.

SILENT

Press.


The ringer is deactivated **for the current call**.

### Paging



Press the base station key briefly – all handsets ring at the same time ("Paging").

### End paging:

 

Press the base station key very briefly or press the talk key on a handset.


**(not available in all countries!)**

## Individual handset settings

Press keys:



## Individual handset settings

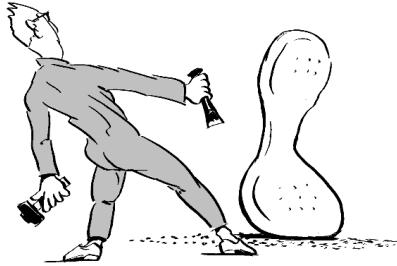

You can set your handset according to your wishes to distinguish it from the standard settings and to obtain optimum convenience.

### Changing a handset's display language

**MENU**

Open the menu.

**9** WXYZ

**2** ABC

First press 9, then 2 and then:

**0+** **1** a-d

for German,

**or** **0+** **2** ABC

for English (factory setting),

**or** **0+** **3** DEF

for French,

**or** **0+** **4** GHI

for Italian,

**or** **0+** **5** JKL

for Spanish,

**or** **0+** **6** MNO

for Portuguese,

**or** **0+** **7** PQRS

for Dutch,

**or** **0+** **8** TUV

for Danish,

**or** **0+** **9** WXYZ

for Norwegian,

**or** **1** a-d **0+**

for Swedish,

**or** **1** a-d **1** a-d

for Finnish,

**or** **1** a-d **2** ABC

for Czech,

**or** **1** a-d **3** DEF

for Polish,

**or** **1** a-d **4** GHI

for Turkish.

## Individual handset settings

Press keys:

MENU  
 ↓ AUDIO SET OK  
 H/SET VOL OK  
 ↓ OK

MENU  
 ↓ AUDIO SET OK  
 ↓ RINGER OK  
 ↓ OK

MENU  
 ↓ AUDIO SET OK  
 ↓ MELODY OK  
 ↓ OK

## Modifying the volume and changing the melody

### Handset volume

You can choose from three levels of volume for the handsets – **even during an external call**.

Open the menu.

Select the menu item and confirm.

Confirm.

You hear the current volume and its level is displayed. Select the required volume and confirm.

### Ringer volume (“ring tone”)

You can choose from seven options:

- Five ringer volumes (1 - 5),
- “crescendo” ring (increasing volume; 6),
- No ringer (ringer off; 0).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

You hear the current volume and its level is displayed. Select the required volume and confirm.

### Ringer melody

You can choose from ten ringer melodies (1 – 10).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

You hear the current melody and its number is displayed. Set the required melody and confirm.

## Individual handset settings

### Press keys:

MENU



or



MENU



or



MENU



RESET ? OK

### Activating/deactivating battery low beep


When this function is activated, you are acoustically informed that the battery is almost empty (factory setting).

Open the menu.

Activate the function.

Deactivate the function.

### Activating/ deactivating Auto talk

When this function is activated, you can remove the handset from the charging unit without pressing the handset key  to accept a call ( factory setting).

Open the menu.

Activate the function.

Deactivate the function.

### Resetting a handset to the factory setting

The directory, the network access list and the caller list are not deleted when you reset the handset. Registration at the base station is not affected.

Open the menu.

First press 9 and then 3 to activate the procedure

Confirm prompt.

Function	Factory setting
Handset volume (see page 41)	1
Ringer volume ("ring tone," see page 41)	5
Ringer melody (see page 41)	1
Auto talk (see page 42)	on
Battery low beep (see page 42)	on
Display language (see page 24)	english
Alarm clock (see page 9)	off

Press keys:



## Base station settings

All base station settings are conveniently made via the handset!

### Changing the system PIN

To prevent unauthorised registration of a handset, you should change the preset system PIN (factory setting: 0000) to a PIN that only you know. This also enables remote operation (answering machine).

MENU

Open the menu.



BASE SET

OK

Select the menu item and confirm.



SYSTEM PIN

OK

Select the menu item and confirm.



Enter the currently valid system PIN (4 digits; factory setting: 0000).

For security reasons only four asterisks (\*\*\*\*) are displayed.

OK

Confirm.  is displayed:



Enter the new system PIN (4 digits).

OK

Confirm.  is displayed:



Repeat the new system PIN.

OK

Confirm.

## Base station settings

### Press keys:

MENU

↓ BASE SET OK

AUDIO SET UP OK

SPEAKER VOL OK

↓ OK

MENU

↓ BASE SET OK

AUDIO SET UP OK

↓ RINGER VOL OK

↓ OK

MENU

↓ BASE SET OK

AUDIO SET UP OK

↓ MELODY OK

↓ OK

## Modifying volume and melody

### Loudspeaker volume

You can adjust the volume of the loudspeaker. There are five levels to choose from (1–5) (“listening in” see page 13).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

The level is displayed. Select the required level and confirm.

### Ringer volume (“ring tone”)

You can choose from seven options:

- Five ringer volumes (1 – 5),
- “crescendo” ring (increasing volume; 6),
- No ringer (ringer off; 0).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

You hear the current volume and its level is displayed. Select the required level and confirm.

OFF

Incoming calls are not signalled at the base station but only on the handset.

CRESCENDO

Increasing volume.

### Ringer melody

You can choose from ten ringer melodies (0 – 9).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

You hear the current melody and its number is displayed. Select the required melody and confirm.



## Base station settings

Press keys:

		MENU	
↓	BASE SET	OK	
↓	ADD FEATURES	OK	
↓	REPEATER	OK	
	SURE?	OK	

### Repeater support\*

With the Gigaset repeater you can extend the range from your base station to the handset and increase the areas in which reception is possible.

If you want to use a repeater, you must activate this function.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm prompt.

---

\*. not available in all countries

## Base station settings

Press keys:



MENU

↓ BASE SET OK

↓ BASE RESET OK

☐ OK

RESET ? OK

## Resetting the base station to the factory setting

Resetting the base station does not affect the system PIN or handset registration.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the system PIN (factory setting: 0000) and confirm.

Confirm prompt.:

Function	Factory setting
Ringer volume (see page 44)	5
Ringer melody (see page 44)	1
Loudspeaker volume (see page 44)	2
Joining a call (barging in) (see page 38)	off
The handset's name (see page 35)	INT 1 to INT 6
Pause after R (see page 48)	800 ms
Pause after line seizure (see page 48)	2,0:1
Dialling mode (see page 47)	DTMF
Flash time (at PABXs, see page 47)	100 ms

Answering machine (AM, see page 23)	activated
Announcement (see page 25)	standard announcement
Open-listening (see page 31)	activated
Quality (see page 31)	longplay
Message length (see page 31)	120 s
Number of rings (see page 30)	automatic
The AM language (see page 24)	country-specific

## Connecting the base station to a PABX

Press keys:

# Connecting the base station to a PABX

## Dialling mode and flash time



### Step 1: Changing the dialling mode

It is necessary to change the dialling mode only if your PABX does not operate with the preset tone dialling (DTMF - dual-tone multifrequency). **Please refer to the operating instructions of your PABX.**

Options:

- Tone dialling (DTMF),
- **Dial pulsing (DP)**. (country-specific)

MENU

↓	BASE SET	OK
↓	ADD FEATURES	OK
	DIAL MODE	OK
↓		OK

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

Select the required dialling mode and confirm.



### Step 2: Setting the flash time:

#### Prerequisite:

Your PABX requires a flash time different to the preset flash time, **Please refer to the operating instructions of your PABX.**

MENU

↓	BASE SET	OK
↓	ADD FEATURES	OK
↓	TBR	OK
↓		OK

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the flash time and confirm.

80 ms, 100 ms, 120 ms, 180 ms, 250 ms, 300 ms, 600 ms.



The current setting is marked with ✓.

## Connecting the base station to a PABX

### Press keys:

MENU  
 ↓ TEMP TONE OK

### Switching temporarily to tone dialling

If your PABX still operates with dial pulsing (DP) but tone dialling (DTMF) is required (e.g. to check the mailbox), you must switch to tone dialling (DTMF) during the call.


**Prerequisite:** You are conducting a call!

Open the menu.






Select the menu item and confirm.  
Tone dialling is active.

### Setting pauses

#### Pause after line seizure

With this function you can set the length of the pause inserted automatically after pressing the talk key  before transmitting the telephone number.

Open the menu.

MENU  
     
 p. ex.  OK

 
Initiate the setting.

Enter the pause length and confirm.




 

1 second = **1**; 3 seconds = **2**; 7 seconds = **3**;  
2.5 seconds = **4**.

The setting is saved.

#### Pause after recall key

With this function, you can set the length of the pause that is inserted after holding down the  - key.

Open the menu.

MENU  
     
 p. ex.  OK

Initiate the setting.

Enter the pause length and confirm.

**1** = 800 ms; **2** = 1600 ms; **3** = 3200 ms

The setting is saved.



## Appendix

### Maintenance

Simply wipe the base station and handset with a **damp cloth** or an antistatic wipe. **Never** use a dry cloth as this can cause static discharge!

### Troubleshooting

If your telephone does not behave the way you want it to, first try to solve the problem using the following list.

Fault	Possible cause	Solution
No display.	Handset not activated Batteries empty	<b>Hold down</b> the end call key  <b>for 1 second</b> Charge or replace the batteries (see page 7).
No reaction to key-stroke.	Keypad protection activated	<b>Hold down</b> the  key <b>for 1 second</b>
No radio connection to the base station – all displays flashing.	Handset outside the base station range. Handset not registered Base station not activated	Move closer to the base station. Register the handset (see page 32). Check the connector at the base station (see page 6).
Handset that is in the base station is not charging.	Line seized by a second handset for a long period.	Maximum charging power is only possible while <b>nobody</b> is making calls.
Handset/base station does not ring.	Ringer off	Activate the ringer (see page 41/page 44).
Your caller on the telephone cannot hear you.	The <b>[INT]</b> key was pressed – the microphone is “muted.”	Press <b>[GO BACK]</b> <b>[OK]</b> to re-activate the microphone.
The incoming call number is not displayed although CLIP is set.	The telephone number transmission is blocked.	Callers must permit the transmission of their telephone numbers at their network providers.

## Appendix

<b>Fault</b>	<b>Possible cause</b>	<b>Solution</b>
The ringer/dialling tone cannot be heard.	You have changed the telephone cord on your Gigaset.	Ensure, when purchasing a new cord, that it has the correct pin assignment (see page 6).
Error beep is generated (descending tone sequence)	Wrong input	Repeat the procedure; note the display and, if necessary, refer to the operating instructions.
The answering machine announces "PIN is incorrect" during remote operation.	The system PIN entered is incorrect.	Re-enter the system PIN.
The answering machine does not record any messages, announcements or infotexts	Memory is full	Delete old messages Play back and delete new messages
An answering machine message does not have a time stamp	The date/time not set	Set the date/time

## Guarantee

Over the guarantee period from the date of purchase from the stockist, Siemens AG will rectify all material or manufacturing defects by repairing or replacing the defective device.

As of 01.01.2002, the European guarantee period will be 12 months.

The guarantee does not cover damage caused by improper use, wear and tear or third party access. The guarantee shall not cover consumables or defects which only slightly decrease the value or serviceability of the device.

## Service:

[www.siemens.com/troubleshooting](http://www.siemens.com/troubleshooting)

<b>Abu Dhabi:</b>	Siemens hotline	02 6423800
<b>Egypt</b>	Siemens hotline	01 33 13 144
<b>Ivory Coast</b>	Siemens hotline	80 000 333
<b>Kuwait</b>	NGEECO	481 87 49
<b>Morocco</b>	Setel S.A.	22 669232
<b>Oman</b>	Siemens hotline	79 10 12
<b>Pakistan</b>	Siemens hotline	02 15 67 35 65
<b>Republic of South Africa</b>	Siemens hotline	08 60 10 11 57
<b>Saudi Arabien</b>	Siemens hotline	02 6515094
<b>Tunisia</b>	Siemens hotline	01 86 19 02



Siemens Service should be contacted if problems arise with the unit. Your specialist dealer will be happy to answer any questions on unit operation. Contact your network provider for questions concerning telephone connections.

Your Gigaset is intended for operation in your country, as depicted on the underside of the base station. Country-specific features have been taken into account.

The conformity of the device with the essential requirements of the R&TTE directive is confirmed by the CE symbol.

Excerpt from the original declaration:

„We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with the registration number „Q810820M“ in compliance with ANNEX V of the R&TTE-Directive 99/05/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/05/EC is ensured.“

Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. If necessary, a copy of the original DoC can be made available via the company hotline.

**CE 0682**

## Appendix

### Technical data

#### Recommended batteries

Nickel-cadmium (NiCd)	Nickel-metal-hydride (NiMH)
Sanyo N-3U (700 mAh)	Saft RH 6 NiMH 1300 (1300 mAh)
Mobile Power 700 (700 mAh)	Panasonic HHR-110 AA (1100 mAh)
Panasonic 600 DT (600 mAh)	Panasonic Pro+ 1500 (1500 mAh)
Emmerich 700 (700 mAh)	Sanyo HR-3U (1600 mAh)
	GP GP130 AAHC (1300 mAh)
	Varta Phone Power (1300 mAh)
	Emmerich 1300 (1300 mAh)

#### The handset's operating times/charging time

Capacity (mAh)	Standby time (hours)	Talktime (hours)	Charging time (hours)
700	up to 200 (8 days)	more than 10	approx. 5.5
1200	up to 320 (13 days)	more than 17	approx. 9
1600	up to 400 (18 days)	more than 23	approx. 12



We recommend initially charging the batteries for at least 16 hours without interruption – irrespective of the charging status icon!

The battery charge capacity decreases after a few years for technical reasons.



## Appendix

<b>Feature</b>	<b>Value</b>
DECT-Standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequencyrange	1880 - 1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Power supply	Base station 220/230 V ~/ 50 Hz (power supply unit SNG X-a)
Base station power consumption	standby approx. 3 Watt when calling approx. 5 Watt
Environmental conditions for operation	+5 °C to +45 °C 20 % to 75 % relative humidity
Dialling mode	DTMF (tone dialling)/DP (dial pulsing)
Flash time	Flash: 100 ms
Dimensions Base station	136.6 x 149 x 64.2 mm (L x W x H)
Dimensions Handset	155.5 x 53.6 x 36.2 mm (L x W x H)
Weight	Base station 215 g Handset with batteries < 160 g
Length of the cords	Telephone connecting cord approx. 3 m Mains cable approx. 3 m

## Menu table

# Menu table

It is faster to select a menu function by pressing **[MENU]** than selecting the digit combinations by scrolling, e.g. **[5\*][2\*][2\*]** = **5-2-2** to set the time.



## Main menu

**[MENU]** when the telephone **is idle**, press:

<b>2</b>	ALARM CLOCK	Enter alarm call		
<b>3</b>	AUDIO SET	<b>3-1</b>	H/SET VOL	set
		<b>3-2</b>	RINGER	set
		<b>3-3</b>	MELODY	set
<b>5</b>	BASE SET	<b>5-1</b>	AUDIO SET UP	<b>5-1-1</b> SPEAKER VOL set (G4015 only)
				<b>5-1-2</b> RINGER VOL set
				<b>5-1-3</b> MELODY set
		<b>5-2</b>	CLOCK SET	<b>5-2-1</b> DATE SET
				<b>5-2-2</b> DATE/TIME
				<b>5-2-3</b> CLOCK MODE <b>5-2-3-1</b> 24 H
				<b>5-2-3-2</b> 12 H
		<b>5-3</b>	SYSTEM PIN	enter
		<b>5-4</b>	BASE RESET	factory setting
		<b>5-5</b>	ADD FEATURES	<b>5-5-1</b> DIAL MODE <b>5-5-1-1</b> TONE
				<b>5-5-1-2</b> PULSE
				<b>5-5-1-3</b> DTMF-EARTH (country-specific)
				<b>5-5-2</b> TBR <b>5-5-2-1</b> 80 MS
				<b>Until</b>
				<b>5-5-2-7</b> 600 MS
				<b>5-5-3</b> REPEATER on/off
				<b>5-5-6</b> BARGE IN on/off
<b>6</b>	VOICE MAIL	<b>6-1</b>	SET KEY 1	<b>6-1-1</b> MAILBOX
				<b>6-1-2</b> ANS MACHINE
		<b>6-2</b>	ANS MACHINE	on/off
		<b>6-3</b>	SPKR ON/OFF	on/off
		<b>6-5</b>	ANNOUNCEMENT	<b>6-5-1</b> REC ANC
				<b>6-5-2</b> PLAY ANC
				<b>6-5-3</b> DEL ANC
		<b>6-6</b>	MESSAGE SET	<b>6-6-1</b> MSG LENGTH
				<b>6-6-2</b> QUALITY <b>6-6-2-1</b> LONG PLAY
				<b>6-6-2-2</b> HIGHQUALITY
		<b>6-7</b>	CALL SCREEN	
		<b>6-8</b>	RING DELAY	
<b>7</b>	REGISTER HS			

## Menu table


### Directory/network access list

Press  /  to open the corresponding list.

The following **[MENU]** functions are now available:

<b>1</b>	EDIT ENTRY	Add number
<b>2</b>	NEW ENTRY	Save new telephone number
<b>3</b>	SHOW ENTRY	Display/change telephone number
<b>4</b>	DELETE	Delete entry

### Messages

 
Press  to open the list with the messages.

The following **[MENU]** functions are now available:

<b>1</b>	ANS M	(if available)																					
<b>2</b>	MAILBOX																						
<b>3</b>	CALLS	<table border="1"> <tr> <td><b>3-1</b></td> <td>DELETE</td> <td>Delete entry</td> </tr> <tr> <td><b>3-2</b></td> <td>COPY TO DIR</td> <td>Copy no. to the directory</td> </tr> <tr> <td><b>3-3</b></td> <td>TIME</td> <td>Display date/time</td> </tr> <tr> <td><b>3-4</b></td> <td>STATUS</td> <td>Indicate new/old</td> </tr> <tr> <td><b>3-5</b></td> <td>LIST MODE</td> <td></td> </tr> <tr> <td><b>3-6</b></td> <td>DELETE LIST</td> <td><b>3-6-1</b> MISSED</td> </tr> <tr> <td></td> <td></td> <td><b>3-6-2</b> ALL</td> </tr> </table>	<b>3-1</b>	DELETE	Delete entry	<b>3-2</b>	COPY TO DIR	Copy no. to the directory	<b>3-3</b>	TIME	Display date/time	<b>3-4</b>	STATUS	Indicate new/old	<b>3-5</b>	LIST MODE		<b>3-6</b>	DELETE LIST	<b>3-6-1</b> MISSED			<b>3-6-2</b> ALL
<b>3-1</b>	DELETE	Delete entry																					
<b>3-2</b>	COPY TO DIR	Copy no. to the directory																					
<b>3-3</b>	TIME	Display date/time																					
<b>3-4</b>	STATUS	Indicate new/old																					
<b>3-5</b>	LIST MODE																						
<b>3-6</b>	DELETE LIST	<b>3-6-1</b> MISSED																					
		<b>3-6-2</b> ALL																					

## Accessories

### Accessories



Upgrade your Gigaset to a cordless PABX:

- Everyone has their own handset
- Toll-free internal communication
- Transferring external calls to the right person etc.

#### Gigaset 4000 Classic handset

The Gigaset 4000 Classic offers you the following features:

- 12-digit display to show the time, telephone numbers etc.
- Directory with 20 entries
- Alarm clock
- Automatic redialling of the last 5 numbers



The package includes: Handset with charging unit  
Colour: midnight blue or glacier green

#### Gigaset 4000 Comfort handset

The Gigaset 4000 Comfort offers you enhanced options.

- 5 line illuminated graphic display
- Walkie-Talkie
- Handsfree talking
- Directory for approx. 200 telephone numbers/names
- Room monitoring
- Reminder function
- Full ISDN functionality in connection with an ISDN base station.



The package includes: Handset with charging unit.  
Colour: midnight blue or glacier green.\*

\* Depending on the country

## Accessories



### Gigaset repeater

With the Gigaset repeater you can extend your Gigaset's range and open up areas in which reception was not possible.

All functions of the handset can be used in the extended transmission area **(not available in all countries!)**.



### Gigaset 4000 Micro handset

- Illuminated keypad
- Vibration alarm
- Connector jack for headset and MP3 player
- 5-line illuminated graphic display
- SMS
- Walkie-Talkie
- Handsfree talking
- Directory for approx. 200 telephone numbers/names
- Room monitoring
- Appointment alarm

The package includes: Handset with charging unit

Colour: midnight blue\*

All **devices, accessories** and **batteries** are available in **specialised shops**.

## Index

---

# Index

## A

- Accessories **56**
- Activating
  - handset **8**
  - keypad protection **8**
- Alarm call **10**
- Alarm clock **10**
  - activating **10**
  - deactivating **10**
- Announcement
  - Remaining memory **24**
- Announcement (own, AM)
  - recording **25**
- Answering machine (AM)
  - activating/deactivating **23**
  - individual settings **30**
  - listening to announcements **26**
  - picking up a call **27**
- Auto talk
  - activating/deactivating **42**
- Automatic redial **15**

## B

- Barging in (joining a call) **38**
- Base station
  - connecting **6**
  - connecting to a PABX **47**
  - installing **5**
  - resetting to the factory setting **46**
  - setting pauses **48**
  - setting the ringer volume **44**
- Batteries
  - inserting **7**
  - loading **7**
  - recommended **52**
- Battery low beep **42**
- Belt clip **8**
- Brief overview **III**

## C

- Call
  - connecting **36**
  - ending **11**

- Call waiting **37**
- Callback a caller **20**
- Caller list **20**
- Changing the display language **40**
- Changing the system PIN **43**
- Character map **17**
- Charge saving function **30**
- Charging status icon **7**
- CLIP
  - caller list **20**
  - displaying numbers **12**
- Collective call (making internal calls) **36**
- Confirmation beep **8**
- Connecting a call **36**

## D

- Date setting **9**
- Deactivating
  - battery low beep **42**
  - handset **8**
  - keypad protection **8**
  - ringer **39**
- Delivery package **5**
- De-registering handsets **34**
- Dialling modes **33, 34, 47**
- Directory **16**
  - deleting a single entry **19**
  - deleting all entries **19**
  - dialling a number **18**
  - storing an entry **16**
- Display keys **III**
- Displaying telephone numbers (CLIP) **12**
- DP (Dial pulsing) **47**
- DTMF (dual-tone multifrequency) **47**

## E

- Enquiry call (internal) **37**
- Error beep **8**

## F

- Factory setting
  - base station **46**
  - handset **42**
- Flash time **47**

**G**GAP standard **34**Guarantee **50****H**

Handset

activating/deactivating **8**all handsets ring ("Paging") **39**automatic registration **32**de-registering **34**name of a handset **35**operating **7**operating times/charging time **52**registration **32**resetting to the factory setting **42**Handset volume **41****I**Internal dialling **11**Internal enquiry calls **37**Internal number **35****K**Keypad protection **8**Keys **III****L**

Listening in

at the base station ("speaker on/off") **13**on the answering machine **31**Listening to announcements **26**Loudspeaker volume **44****M**Mailbox **14**Maintenance **49**Making an external call **11**

Making calls

answering a call **12**external call **11**internal dialling **11, 36**Medical equipment **4**Muting the microphone **13****N**Name of a handset **35**Network access list **18**deleting a single entry **19**

Network access list (call-by-call)

displaying and changing an entry **18, 19**entering a name **18**storing an entry **16**Notebook function **21**Number of rings **30****O**Operating times of the handset **52**Operation see preparing the telephone **5****P**PABX **47**switching to tone dialling **48**Paging **39**Pause **11**Picking up a call **13**Preparing the telephone **5**Protective plastic film **7****R**Range **5**Recording quality **31**Redialling list **15**Registering handsets **32**Remaining memory **24**Remote operation **28**Repeater **45**

Ring tone

base station setting **44**handset setting **41**Ringer melody (base station) **44**Ringer melody (handset) **41**Ringer volume (base station) **44**Ringer volume (handset) **41**Rings see number of rings **30**

## Index

---

### S

Safety precautions **4**

Service **51**

Setting the language

    answering machine **24**

    display **40**

Settings **40**

    answering machine **30**

    display language **40**

Speed dialling **28**

Standard announcement **25**

Symbols **IV**

### T

Technical Data **52**

Telephone number **16**

    copying to the directory **21**

    redialling list **15**

Time setting **9**




Tone dialling **48**

Troubleshooting **49**




## Answering machine remote operation

The functions of the keys for operating the answering machine remotely are the same for all telephones, handsets and tone transmitters. The "credit card" shows you how to perform remote operations on an external telephone (e.g. from a pay phone, from a hotel etc.) and the meaning of the keys.


SIEMENS Gigaset 4015		SIEMENS Gigaset 4015		
<p><b>Initiating remote operation:</b></p>  <p>Dial your own telephone number. You will hear your answering machine.</p>	<p><b>9</b> + </p> <p>Press the key and enter the system PIN. Use digit keys to control the answering machine.</p>	Back	Pause/ Continue	Next
		<p><b>Activating the answering machine:</b> Let the telephone ring for approx. one minute.</p>  <p>Enter the system PIN. The answering machine is activated.</p>	<p><b>1</b></p> <hr/> <p><b>4</b></p> <hr/> <p><b>7</b></p> <hr/> <p><b>*</b></p>	<p><b>2</b></p> <hr/> <p><b>5</b></p> <hr/> <p><b>8</b></p> <hr/> <p>Delete</p> <p><b>0</b></p>

# Operating the telephone


1

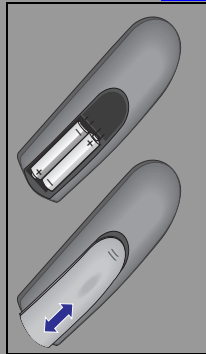

2

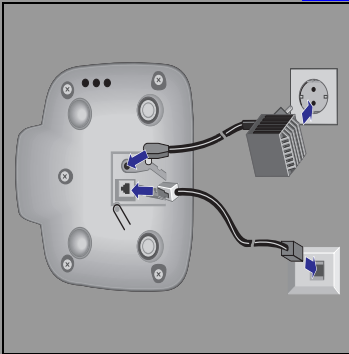

3

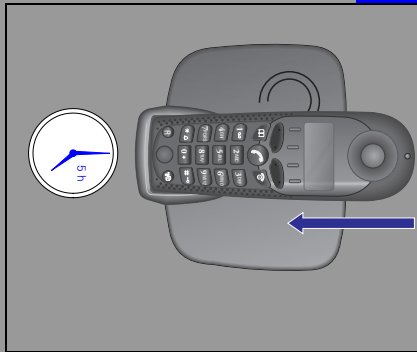

Issued by  
Information and Communication mobile  
Haidenauplatz 1  
D-81667 München

© Siemens AG 2001  
All rights reserved. Subject to availability.  
Right of modification reserved.  
Printed in Germany (09/2001).

Siemens AG  
<http://www.my-siemens.com>

Reference No.: A31008-G4015-J101-1-7619



A31008- G4015- J101- 1- 7619