

Introduction

Congratulations on being the proud owner of the latest wireless communications device—Motorola A6188!

One can make phone call, send faxes, short messages and e-mails as well as surf the net with the sleek and portable handset. The handset also comes equipped with an electronic diary, dictionary, calculator and many other capabilities comparable to a Personal Digital Assistant (PDA).




With large touch screen and the ability to capture pictorial figures, these features form the revolutionary new concept in the mobile communications products—easier to use and with greater capabilities, you can have information and control just at your fingertips.

With the extraordinary design, you can explore the whole myriad of wonderful applications beyond your imagination. This user manual will provide an easy and fast guide for you to explore the interesting world of communications.

- Safety Information - *provides you with an understanding of the products safety features so as to enable you to use the product safely and efficiently;*
- Usage Overview - *gives an outline on the usage of the various features and the basic operation methods an introductory on the handset capabilities.*
- Phone Capabilities - *shows the full capabilities of the Motorola A6188 as a superior mobile phone in its class;*
- Information Capabilities - *helps you to better manage your wide-ranging information and allows you to experience the unparalleled information transmission capabilities of this compact but powerful phone;*
- Surfing the InterNet - *details the way to access the internet through the phones WAP capabilities;*
- Call Register - *records the details of all the calls and messages, making sure that you will not miss out on any single communications or information;*
- PDA - *provides an integrated tool to enhance your efficiency;*
- Systems Setup - *gives a step by step guide on how to set up the various functions of the Motorola A6188 so that you can tailor them to meet your personal communications needs;*
- Data Synchronization with PC - *makes PC an extension to your phone by creating a whole new world of exciting opportunities with the PC.*



Introduction

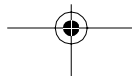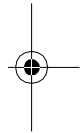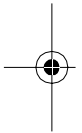

Contents

Gives an outline on the various functions of the handset features and their respective positions. For detailed information, please refer to the detailed contents

Detailed Contents 5

Details the handset features and the contents of the user guide for your easy reference.

Safety Information 9

Important information to ensure the efficient and safe operation of your phone.

Usage Overview 13

Gives an outline on the various parts of the handset and the basic operation methods

Phone Functions 33

Explains how to make a call and other phone capabilities

Address Book 41

Using the phone book to store important contact details and other information

Messages 53

How to send short messages, e-mails and other messaging services.

Surfing the Internet 65

Details the way to access the internet through the phones WAP capabilities.

Call Registers 71

Records missed calls and keeps the details of all the calls and messages, making sure that you will not miss out on any single communications or information

PDA Capabilities 75

 
An integrated tool encompassing the capabilities of diary, memo pad, dictionary, calculator etc to enhance your efficiency

Systems Setup 93

Gives a step by step guide on how to set up the various functions of the Motorola A6188 so that you can tailor them to meet your personal communications needs

SIM Card 113

To use the services and capabilities provided by the service operator.







Contents

Games 117

Five in a Row, Hua Rong Dao, Memory

Data Synchronization with PC..... 121

    To transfer data between the handset and PC



Detailed Contents

Safety Information..... 9

Usage Overview..... 13

- Exterior of the phone
- SIM card, battery
- Charging a battery
- Turn on the phone
- Handset mode
- PDA mode
- Handset mode----the complete process of turning on a phone
- Choosing the working mode
- Turn off the phone
- Showing and operating the screen
- Basic screen showing and capabilities
- How to key in words
- Operating terms used in this guide

Phone Functions..... 33

- Making a phone call
- GSM emergency phone call
- Receiving a phone call
- Phone capabilities while in dialing or idle mode
- Making an International Direct Dial (IDD) phone call
- Inserting pauses into phone numbers---extension or voicemail system
- Phone capabilities while connecting (after dialing)
- In-Call menu
- Hold current call and make new call
- Switch calls
- Divert call
- Conference call
- Adding new conference call member
- Separating selected conference member from the call
- Accepting a waiting call

Address Book..... 42

- Address book
- Personal contact details
- Adding contact details
- Check / Edit contact details
- Search contact details
- Delete contact details
- Classification of contact details
- Adding classifications
- Deleting classifications
- Grouping

Set up groups	
Check group members	
Adding group members	
Delete group	
Saving contact details in handset to SIM card	
Saving contact details in SIM card to handset	
Messages.....	62
Sending messages	
Commonly used short messages	
Message settings	
Retrieving messages	
Check messages	
To retrieve phone number from messages	
Using messaging service	
Retrieving voicemail messages	
Adding new classifications of messages	
Edit message folder	
Delete message folder	
Empty trash folder	
Making phone calls or sending messages from address book	
Surfing the Internet.....	78
WAP setting	
WAP browser	
Initiating WAP surfing capabilities	
Browsing information and using surfing capabilities	
Making a selection	
Keying in the words	
Making phone call or receiving phone call while surfing the internet	
Tips on Internet services	
To end the internet surfing	
Surfing the MyMotorola.com	
Call Registers.....	86
Records the last 20 calls	
PDA Capabilities.....	89
Diary	
Diary	
Calendar	
Daily activities	
Re-select a day	
Add or modify daily activities	
Delete daily activities	
Word Time	
Select city	

Time setting
Date setting
Recording events / activities
Voice recording events / activities
Voice recording
Replay and check recording

Memo Pad

Recording words
Check and edit memo
Delete memo
Sending memo

Sketch Pad

Recording sketches
Check and edit sketches
Delete sketches.....
Faxing sketches.....

Dictionary

Calculator

Systems Setup 109

Settings, setting selections and setting values
Settings capabilities
Safety / Security features
Handset memory usage situation
Initial settings
Handset settings
Ringing tone and volume
Show settings
Network settings
Current management
Accessory settings


Sim Took Kit Services 134**Games..... 137****Data Synchronization with PC..... 138**

Synchronization software
Using data synchronization capabilities
Check data synchronization records

Reference 140

This user guide uses *italic fonts in blue colour* to represent words shown on the actual handset screen.




 
The manufacturer reserves the right to change any technical or product specifications without informing the user.



Detailed Contents

8

    Detailed Contents



Safety

IMPORTANT

Read this information before using your wireless handheld phone.

Exposure To Radio Frequency Signals

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

International agencies have set standards and recommendations for the protection of public exposure to RF electromagnetic energy.

- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996
- Verband Deutscher Elektrotechniker (VDE) DIN-0848
- United States Federal Communications Commission, Radio Frequency Exposure Guidelines (1996)
- National Radiological Protection Board of the United Kingdom, GS 11, 1988
- American National Standards Institute (ANSI) IEEE. C95. 1-1992
- National Council on Radiation Protection and Measurements (NCRP). Report 86
- Ministry of Health (Canada), Safety Code 6

These standards are based on extensive scientific review. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the updated ANSI standard.

The design of your phone complies with these standards when used normally.

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate local agency regulations.

Phone Operation

Normal Position

Hold the phone as you would any other telephone, with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

Observe the following guidelines to operate your phone most efficiently.

- Extend your antenna fully, if applicable.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Batteries

CAUTION: All batteries can cause property damage, injury, or burns if a conductive material, such as jewelry, keys or beaded chains, touches exposed terminals. The material may complete an electrical circuit and become quite hot. To protect against such unwanted current drain, exercise care in handling any charged battery, particularly when placing it inside your pocket, purse, or other container with metal objects. When the battery is detached from the phone, your batteries are packed with a

protective battery cover; please use this cover for storing your batteries when not in use.

Driving

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Observe the following guidelines when using your phone while driving.

- Give full attention to driving--driving safely is your first responsibility.
- Use hands-free phone operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches (6") be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should **ALWAYS** keep the phone more than six inches from their pacemaker when the phone is turned **ON**
- should not carry the phone in a breast pocket
- should use the ear opposite the pacemaker to minimize the potential for interference
- should turn the phone **OFF** immediately if you have any reason to suspect that interference is taking place

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone **OFF** in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone **OFF** in any facility where posted notices so require.

Aircraft

Switch **OFF** your phone before boarding an aircraft.

Airline regulations prohibit using your phone while in the air. Check and comply with the policy of your airline regarding the use of your phone while the aircraft is on the ground.

Blasting Areas

To avoid interfering with blasting operations, turn your phone **OFF** when in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

Potentially Explosive Atmospheres

Turn your phone **OFF**, do not remove your battery when you are in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks from your battery in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; areas where fuel odors are present (for example, if a gas/propane leak occurs in a car or home); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you normally would be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. **Do NOT** place objects, including both installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

European Union Directives Conformance Statement



This product is in conformance with the requirements of the applicable EU Council Directives.

Declarations of Conformance with the requirements are located at:

Motorola Ltd.

European Cellular Subscriber Division

Midpoint, Alençon Link

Basingstoke, Hampshire RG21 7PL

United Kingdom

APPROVED for connection to
telecommunications systems specified
in the instructions for use subject to
the conditions set out in them.



 
S/1357/4/V/

Using the Phone

External Features

Come and get to know your latest telecommunications device!

! Do not use a rough cloth or any abrasive material to clean the device as these might scratch the surface of the device. Also do not use any solvents to clean the device.

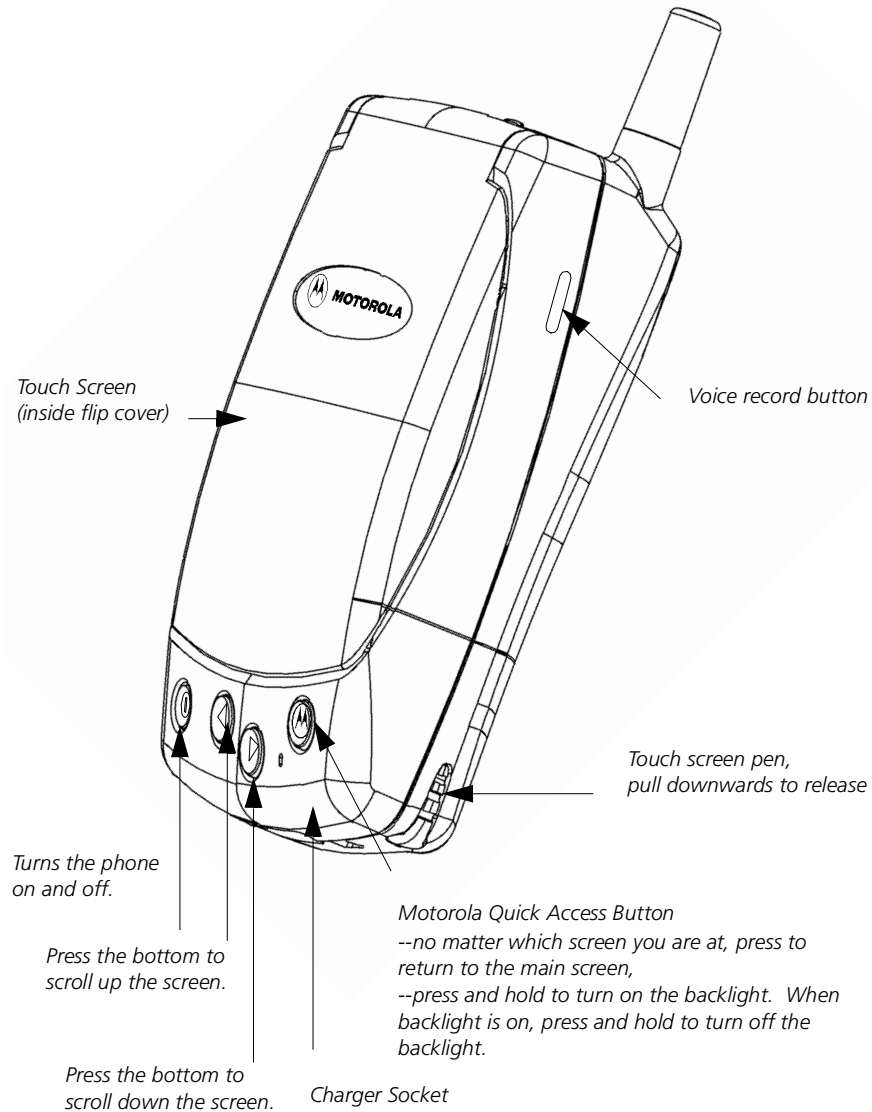

Using the Phone

Every aspects of the phone put you in control and give you unrivalled power.....

Rolling the button upwards: To increase the volume / To "Move Forward"


- to increase the ear piece volume during a phone call
- in the main menu screen, "Move Forward" to select the various functional symbols
- in the display, "Move Forward" to select the various display selections
- in the dialogue box, 'Move Forward" to select the various buttons
- to turn off the Ringer or VibraCall when the phone is ringing or vibrating.

Rolling the button downwards: To decrease the volume / To "Move Backwards"

- to decrease the ear piece volume during a phone call
- in the main menu screen, "Move Backwards" to select the various functional symbols
- in the display, "Move Backwards" to select the various display selections
- in the dialogue box, 'Move Backwards" to select the various buttons
- to turn off the Ringer or VibraCall when the phone is ringing or vibrating.

Pressing the button inwards : The Smart Button

- to answer a phone call upon opening the flip.
- to answer a phone call upon connecting to an ear piece
- Last number redial (in new edition)
- selection functions

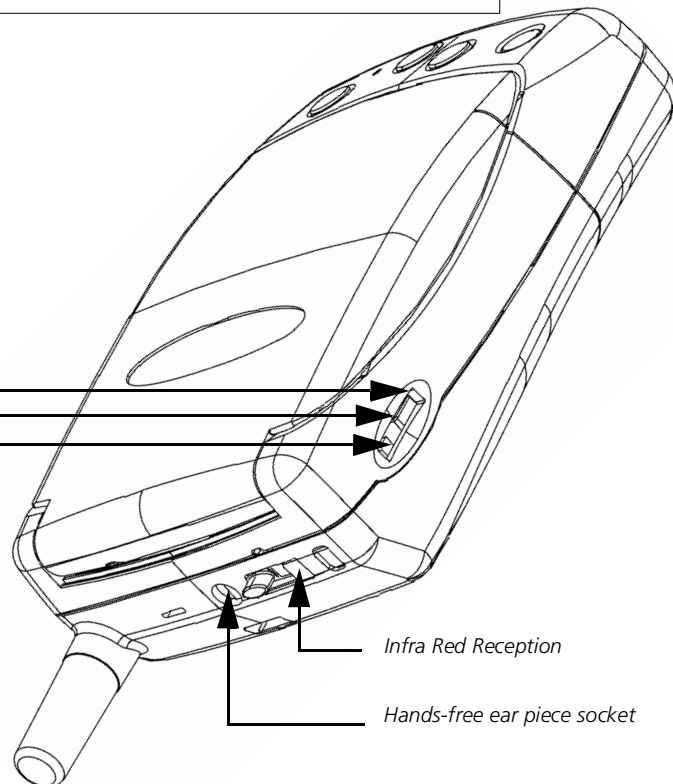

SIM Card / Battery

SIM card is a smart card provided by the mobile communications service provider. It stores the phone number supplied to you by the service provider and other service details. Your handset is connected to the network via the SIM card, enabling it to have the various communications functions. The SIM card also allows you to store important phone numbers and other information. In fact, you can use your SIM card on any GSM handset and you will be charged for the call.


! *You will not be able to make or receive calls or send messages if you do not have a SIM card inserted into your phone. Some networks allow you to make emergency calls without a SIM card inserted.*

! *Like a bank or credit card, you should keep your SIM card secure. Do not bend or scratch your card and avoid exposure to static electricity or water.*

! *Switch off your phone before inserting or removing the SIM card. Failure to do so may damage the memory of your SIM card.*

Follow the steps below while changing the battery or inserting the SIM card (for first time use, you can skip the step on battery removal).

- 1 Press the release catch on the battery compartment and lift off the cover by sliding off the bottom of the phone
- 2 Push the battery towards the bottom of the phone and lift the battery out from the bottom end.

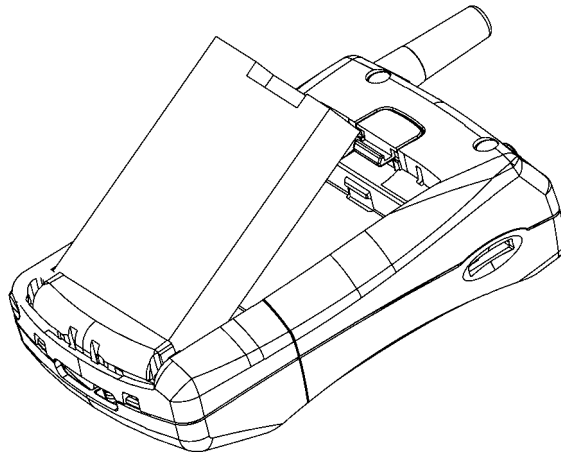


- 3 Slide the SIM cover and lift up the cover.
- 4 Place the SIM card into the recess in the base of the phone, making sure that the corner of the SIM card fits the recess corner.
- 5 Replace the SIM cover, then press and slide it to lock it in place.
- 6 Align the connections on the battery with the connections on the phone. Press the battery towards the connections and push it downwards
- 7 Slide back the cover until it clicks into place.

! *After inserting the SIM card, turn on the phone. If the SIM card is inserted in the wrong way round, damaged or there is no SIM, Check Card message may be shown*


in the screen. If so, remove the SIM card, check that it is the right way round and then re-insert it into the phone.


■ If either of the Bad Card, See Supplier ,Locked, See Supplier messages are displayed, then you will need to contact your cellular service provider.

Tips: Regarding the battery

 To ensure maximum battery performance, a new battery (or a battery that has not been used for several months) should be charged for at least 14 hours before use (but NOT more than 24 hours).

A new battery will require several full charge / discharge cycles in order to achieve its optimum performance.

 A new battery, or a battery that has not been used for several months, may cause a prematurely fully charged indication. Ignore this indication and let the battery charge for several more hours.

 Do not use lithium ion batteries at extremely low temperatures as the maximum standby / talk time will not be available when cold.

Battery Performance and Maintenance

- Best battery performance will be achieved when you regularly charge and discharge batteries as instructed in this manual
- Battery performance is greatly affected by network coverage.
- Set "Battery Saving Mode" to on (see Phone Setup menu) and / or "Frequency of Search" to slow or medium (see Network Setup menu).
- If left unused, a fully charged battery will discharge itself in approximately one month.
- When not in use, store your battery uncharged in a cool, dark and dry place.

Important Battery Information



Always treat your batteries with care. See the Safety Information on batteries.

- Never leave your batteries in extremely high temperatures (over 60 degrees Celsius), for example near the window, under the direct sunlight.
- Only Motorola Original Accessory batteries can be charged in the phone or the optional desktop charger. This is to protect you and your phone from the risks of incorrect charging.

Charging

Your handset allows you to monitor your battery level by showing the battery level indicator. When the battery is completely discharged, your phone will turn off. When "Low Battery" is displayed on the screen, you should take the following steps:

Low battery level:

when the battery level is low and only a few minutes of talk time remain, a warning signal (two beeps) will sound, the battery symbol will begin to flash, and "Low Battery" will be displayed, prompting you to charge your battery. In addition, the top right corner of the screen will display  or  , indicating that the battery level is low.

Insert battery:


the display will prompt you to insert the battery if you have connected the phone to an external current mains before inserting the battery.


Invalid battery:




this display will be accompanied by a warning beep. This is to warn you that the battery cannot be re-charged (though the battery can provide power to the phone). This may indicate that the battery is not Motorola Original Accessory Battery. It is suggested that you use only Motorola Original Batteries and other accessories as Motorola will not be held responsible for any damage to the phone, financial loss or bodily injuries arising from the use of non-Motorola original other batteries and accessories.

A Travel Charger will be able to charge a battery fitted in a phone (as well as providing power to the phone directly. To charge a battery using the travel charger:

- 1 Make sure that the phone is fitted with a battery;
- 2 Connect the charger to the charger socket of the phone;
- 3 Insert the charger plug into a suitable mains power socket.

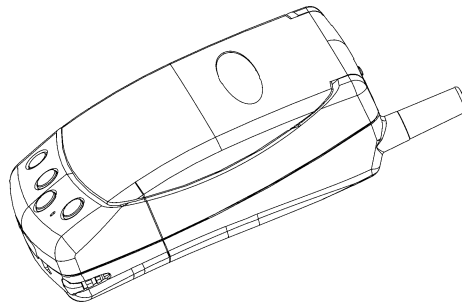 **Important!** Please make sure that the local mains (?) voltage at your location matches that of your charger.



- 4 When it starts to charge, you will hear an alert beep and the screen will show "Charging". Charging can take place when the phone is on or off. When the phone is on, charging does not affect the normal operation of the phone. The top right corner of the screen will display  or , indicating that the battery is charging.
- 5 When charging is completed, the screen will show " Charging Complete". Disconnect the phone from the power mains socket connection. When you turn on the phone, the top right hand corner of the screen shows , indicating that the charging is completed.

Switching The Phone On

Due to the superior functions of the Motorola A6188, it possesses many different options to turn on the phone:

Under normal situations (in the case of a new phone or without changing the default phone settings), please refer to the phone mode.

When you require the diary, memo pad or calculator etc, please refer to the PDA mode.

After setting the PIN, handset number lock and other selections, please refer to the phone mode for the complete process of turning on the phone.


Phone Mode

⚠ *As this mode transmits the wireless radio frequency which may affect the normal operation of some electronic equipment, please ensure that safety regulations are adhered to before activating the phone mode.*


⚠ *Do not turn on the phone mode on board the planes.*


Methods to turn on the phone:

The first method:

Flip open the flip then press and hold the  button for a short while (about 1 to 2 seconds) before releasing the button.

The second method:


- 1 Flip open the flip then press and hold the  button for about 4 to 5 seconds (until the screen shows the mode of operation in the dialogue box) before releasing the button.
- 2 The screen shows the mode of operation in the dialogue box:

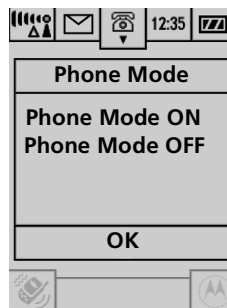


- 3 Select **ON** to turn on the phone mode; under this mode, you can make phone calls and send messages. Then press **OK** to confirm your selection.


👉 Note: *The above 2 methods will only work if you have not pre-set the phone PIN and the SIM card PIN. Please refer to the "Complete Process of Turning On the Phone".*

PDA Mode

- 1 Flip open the flip then press and hold the  button for about 4 to 5 seconds (until the screen shows the mode of operation in the dialogue box) before releasing the button.
- 2 The screen shows the mode of operation in the dialogue box:

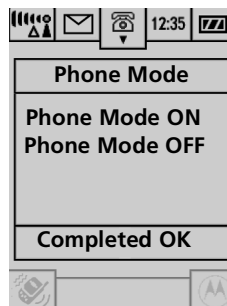


- 3 Select **OFF** to turn off the phone mode and select the PDA mode; under this mode, you cannot make phone calls and send messages. Then press OK to confirm your selection.

 *Note: Besides using the above method to activate the PDA mode, you can also refer to the "Complete Process of Turning On the Phone" to activate the PDA mode.*

Complete Process of Turning On the Phone

If you have pre-set the PIN, phone number lock and manual selection of network (refer to Systems Setup), you will need a few more steps to turn on the phone mode. But it also enhances the security of your phone and the versatility of its functions.

Flip open the flap then press and hold the  button got a short while, about 1 to 2 seconds:


If the SIM card is not inserted, locked, not registered or damaged, the screen will show the following 2 selections:

Press to OFF the phone: the phone will be turned off

Press to confirm: the phone will operate in the PDA mode.

If the SIM card is working and the PIN is set (refer to PIN settings), the screen will prompt you to key in your PIN as follows:




To get into the "PDA" mode, simply select PDA to turn on the phone. Alternatively, key in your PIN (for security reasons, the screen will only show * to represent each digit; to correct the last digit, simply press  to delete the last digit) and then press Enter to confirm your selection and get into the phone mode.

If the PIN is incorrect, the screen will show "Wrong Pin".

You can either:


Select PDA, and get into the PDA mode.

Select "Retry" to key in the PIN again.

 *The SIM card will be automatically locked upon 3 consecutive keying of the wrong PIN. Please refer to the "Systems Setup" to unlock the SIM card or contact your service provider.*

If you have set up the phone number lock (refer to Phone Number Lock Settings), the screen will prompt you to key in your number lock to unlock the phone. Please key in the number lock using the same method as keying in your PIN.

If the wrong number lock is keyed in, the screen will show "Wrong Number Lock" and you have to retry. The phone will be turned off and locked automatically (even the PDA mode cannot work) if you keyed in the wrong number lock for 3 consecutive times.

 *Refer to the "Systems Setup" to pre-set the PIN and Phone Number Lock*

If the correct PIN and Phone Number Lock have been keyed in, the screen will show the "Phone Mode" dialogue box. Select **ON** to activate the phone mode, then press **OK** to confirm the selection. The phone will then scan for the network.


If the phone is pre-set with "Automatic Network Selection" (see "Network Settings" under "Network Setup"), the main menu will appear after scanning and selecting an available network.

The process of turning on a phone is completed.

If the phone is pre-set with "Manual Network Selection", the screen will prompt you to select the communication services. You can either:

Press **Cancel** to select the PDA mode.

Press **OK** to select a network from the available networks:

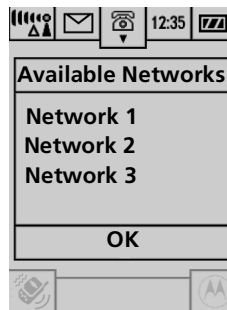


Press **Cancel** to select the PDA mode.

Selection a certain network (e.g. Network 1) and starts to register with that network. When the registration is completed, the screen will return to the main menu and the entire process of turning on the phone is completed.

Depending on the different settings, you may not need to go through the entire process to turn on the phone.

Selecting the Handset Operation Mode

After turning on the phone, the top left hand corner of the screen will show the icon (Phone mode) or icon (PDA mode), prompting you to select the operation mode:

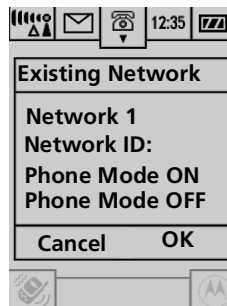

Select **Phone Mode ON** and press **OK** to confirm your selection to go to the Phone Mode.

Select **Phone Mode OFF** and press **OK** to confirm your selection to go to the PDA Mode.


Select **Cancel** to dismiss the dialogue box and the current phone operation mode remains unchanged.

Turning OFF the phone

When the phone is ON, flip open the flip then press and hold the button for about 1 second before releasing.


Screen Display and Operation

After turning ON the phone, the screen will display the following:

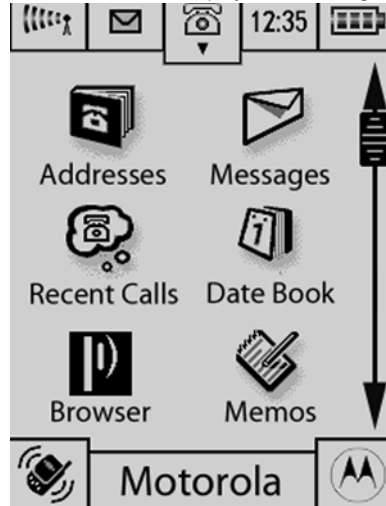

Function Icon
Phone Book
Messages
Current Operation
Display
Call Register
Diary
WAP browser
SIM card
Arrow to scroll the
screen display
Service Provider
Function Display

Use the arrow to scroll the down the screen to display more functions of the Motorola A6188:

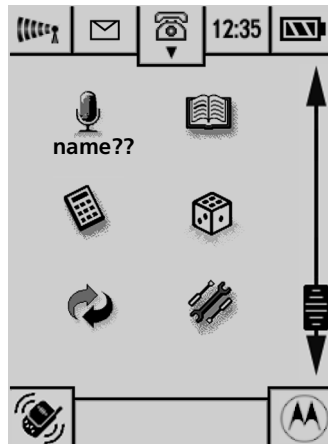

calculator
dictionary
data synchronization
games
Systems Setup
Service Provider

If the SIM is having SIM Toolkit Application, the main screen will be different. will be displayed and will be embedded into .

Operation Display icons

The Current Operation Display icons show various information on the phone, including:


Phone Mode Function








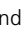 
Shows that Line 1 is active;
[icon2] shown that Line 2 is active).

The icons indicate when the device is in phone mode, and also and the status of the lines. You can get into the phone mode by pressing on the icons to make a call.




Reception Level Indicator:

The  icon shows the radio frequency has NOT been activated and the handset is not able to make phone calls or send messages.





The  icon with the triangle shows that the phone is in the stage of roaming between the networks.

The , , ,  and  icons show the reception level, from the weakest to the strongest.

Current Messages Mode

 shows that there isn't any missed calls or unchecked messages;
flashing  and  show that there is a missed call and/or unchecked message.
Selecting the icon allows you to check on the missed call and message.

Battery Level Indicator

The , ,  and  icons show the battery level, from the weakest to the strongest.

Flashing , ,  or  show that the battery is charging.

Selecting the icon allows you to check on the current battery level.




Clock

12:35 Selecting this icon allows you to adjust the local and regional time(s).

Function Displays

The Function display icons include the following:

Vibration / Ring Alert


-  Rings when there is a call / message.
-  Vibrates when there is a call / message.
-  Vibrates and then ring when there is a call / message.

Service Provider's service trademark


Shows "Phone Mode OFF" when the phone mode is not turned on.


Shows "Emergency Call" when the phone can only make emergency calls.


When the phone is turned ON, it will systematically show the phone mode, network registration and other information.

 Pressing this icon will show information about the phone owner and phone book details.

Function Icon: Execute the various applications/functions by selecting the respective Function Icons.

 To send, retrieve, check and manage short messages as well as the voicemail services

 Records the important phone numbers, addresses and other contact details.

 Allows you to plan your daily activities.

Diary



**WAP
browser**

Allows you to surf the internet using this function icon.



**Call
Register**

Records the last 20 outgoing calls, incoming calls and missed calls.



Memo Pad

Allows you to note down words, pictures as well as sending the written words or faxing the pictorial figures.



???
Setup

Enables you to record up to 3 minutes of voice, providing a fast and efficient way of storing information.



Directory

English-Chinese or Chinese-English dictionary



Calculator

An integrated tool with functions of a calculator.



Services

Provides a selection of services under the SIM card smart applications (requires a SIM card that supports STK).



Games

Games: Allows you to invoke games to play.



TrueSync

TrueSync: Data synchronization with your PC



**System
Setup**

Allows you to customize the settings of the systems to your individual needs.

Motorola A6188 is the latest wireless communications tool that combines the capability of a phone and a PDA. In fact, its way of operation is similar to that of a PDA as well—the LCD screen displays all the function icons and you can use the stylus provided to touch the screen and select the required functions, writing notes, drawing pictures and keying in information. It's made so simple that effectively, what you see on the screen is what you get! The screen will change in accordance to the different functions selected, giving you a wealth of information and guiding you as you go along with the operations.

The following are the most frequently used display and operational parts of a PDA:


PDA Icons

There are 2 main types of icons namely, Function Icons and Display Icons.

Function Icon: Represents a certain function. Selecting a function icon will activate the function that it represents.

Display Icon: Purely for display purposes to make the screen easier to understand and user-



friendly.

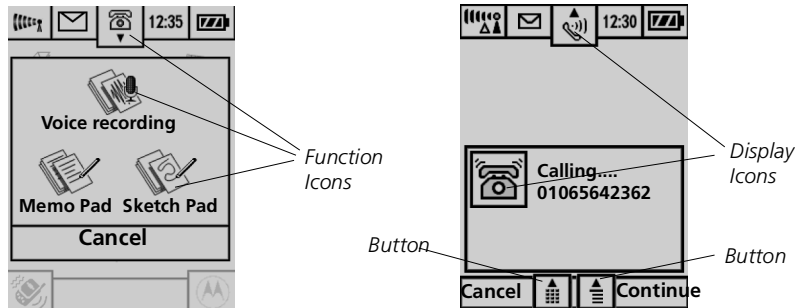


Button

Press a button to execute a certain function. The mostly common buttons are **Cancel** and **OK**, which are usually found at the bottom of a screen (at the Function Display or Dialogue Box). Selecting **OK** executes the function then returns to the previous menu; selecting **Cancel** aborts the function at the screen and merely returns to the previous menu.

  Most Commonly Used Button—Function Selection Button

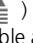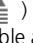 You can see this () button at the function displays of many screens. It can efficiently select the functions available at the current operation mode. Press () and a dialogue box with many different function selections will appear. You may activate a certain function by pressing the relevant function selection.

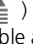
The function selections in a dialogue box change with the different handset operation modes. If you do not wish to select any functions, you may press () to dismiss the function dialogue box.

Title


Uses words or pictures to describe the functions. Certain displays only show the titles e.g. the narrow LCD display of a traditional analogue phone when making a phone call.

Key-in Area

You can use a stylus to key in words, figures or store pictures in the Key-in Area (there is a line at the bottom of the display to distinguish the key-in area). *Missing a sentence here.*

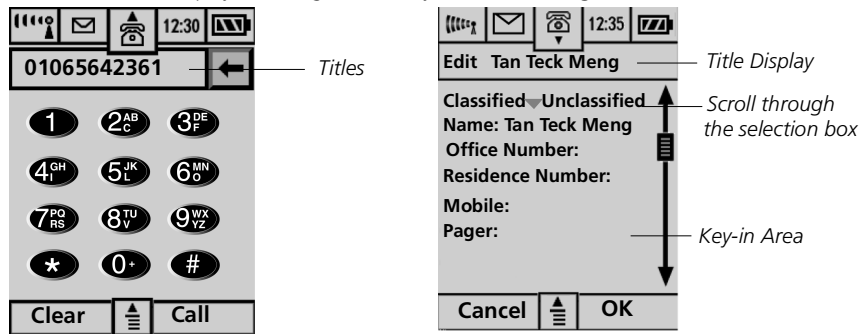


Scroll through the Selection Box

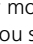 The current selection is shown on the selection box. For more selection options, press the small arrow () to scroll through the selection box. When you see a certain option that you wish to select, simply select the option to make it the current selection.


Single Selection Box

The current selection is being highlighted. If you wish to change the current selection, simply choose your selection and to replace the current selection. In this case, there is only ONE selection allowed.

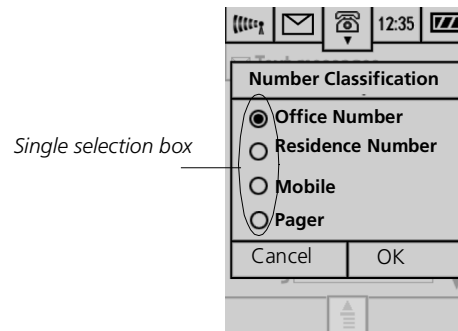

Multiple Selection Box

The current selection(s) is marked with a cross. Simply press the selection that you wish to select and there can be multiple selections in this group.

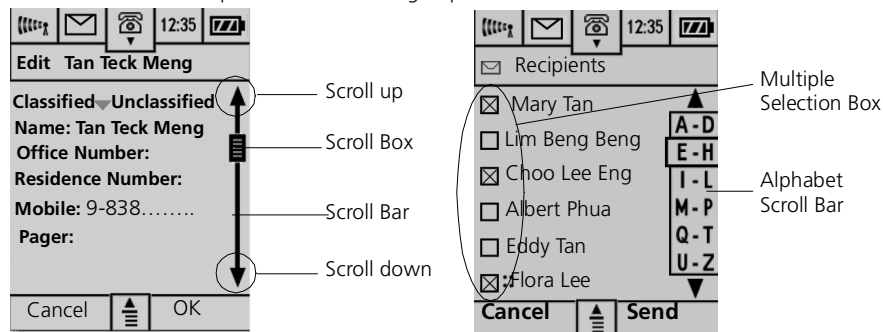

Scroll Bar


When there is a lot of information that cannot be shown in the screen at the same time, you can either Scroll Up or Scroll Down for more information. The position of the Scroll Box shows the amount of current information relative to the total amount of information that is available.

As shown in the above diagram, you can use the following methods to scroll the screen:

- 1 By using touchscreen, dip the the up and down arrows to move up or down the screen one row at a time (to move a smaller area at one time).
- 2 Press the scroll bar between the Scroll Box and the Scroll Up or Scroll Down keys to move either up or down by one screen (to move a bigger area at one time).
- 3 Press and drag the Scroll Box to any position that you wish.

You may also use the scroll up and scroll down keys at the handset keypad to scroll the screen. With these keys, you can scroll up or down one screen at a time.

 
You may also use the scroll keys located at the left-hand side of the handset (Increase Volume / Move Forward or Decrease Volume / Move Backward) to scroll up or down one row at a time.

 The Rocker Switch located at the left-hand side of the handset can also be used to move forward or backward to select the Function Icon as well as move up and down

to select the various selections in the dialogue box. Press the switch to execute the highlighted icon function.


There is also an alphabet scroll bar that is used to display and arrange information (e.g. names in English or Chinese Pin Yin) in alphabetical order.

You may select either Eng or Chinese to arrange the information in alphabetical order (if you select Eng, it will not affect the order of the information in Chinese and vice versa). You may select the alphabet according to the grouping (e.g for alphabet F, select the grouping from **F--J**), the screen will then display the information under this grouping in an alphabetical order.

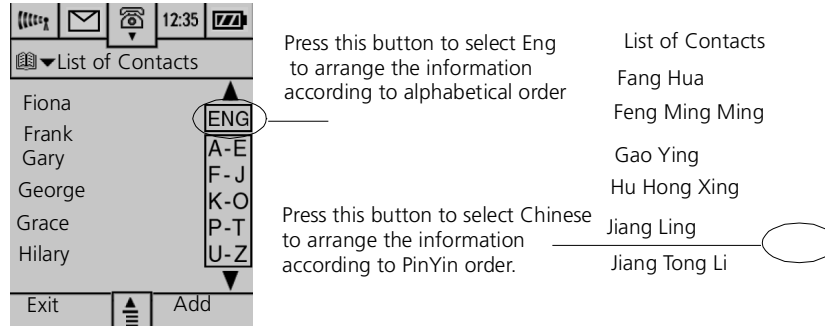


Missing translation of Input Row and Function Row

Function Display Row: is formed by many buttons and icons, usually at the last row of the screen display.

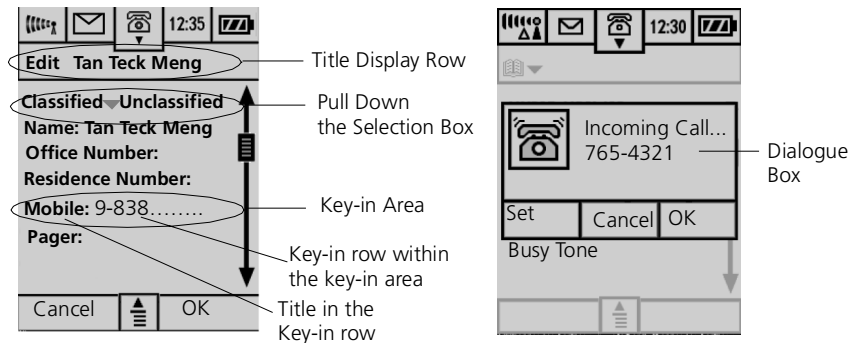

Dialogue Box: The screen will display a box that includes title, buttons, selection boxes etc to give user information as well as to seek instructions from user and execute these instructions

accordingly.


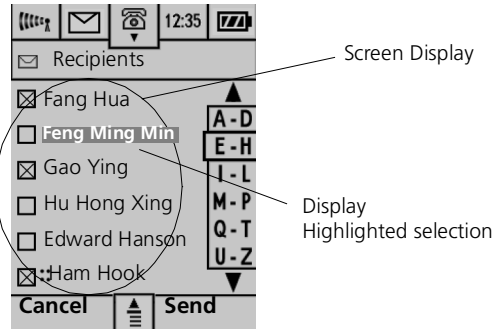


Many of the screens of the Motorola A6188 are similar to the above diagram, displaying information such as names, titles etc. When the screen cannot display all the relevant information, the scroll bar will appear to facilitate the scrolling up and down of information.

Missing Please refer to the Scroll Bar section in User Guide.
???



Using the Phone

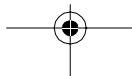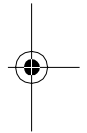


How to Key In Words

The *Motorola A6188* provides a few ways to efficiently key in your important information. To key in words, simply press the Key-In Area that is designated with a straight horizontal line and you can select the different methods to key in the words.

Handwritten Script Board:

One main method to key in information with a *Motorola A6188* is to use a handwritten board. It uses the **Motorola Wisdom Pen Handwriting Recognition** technology that recognizes handwritten characters and allows you to store information in either English or Chinese and even punctuates in a natural and efficient manner.

Press the Key-in Area and the following screen will appear for you to store or edit information:

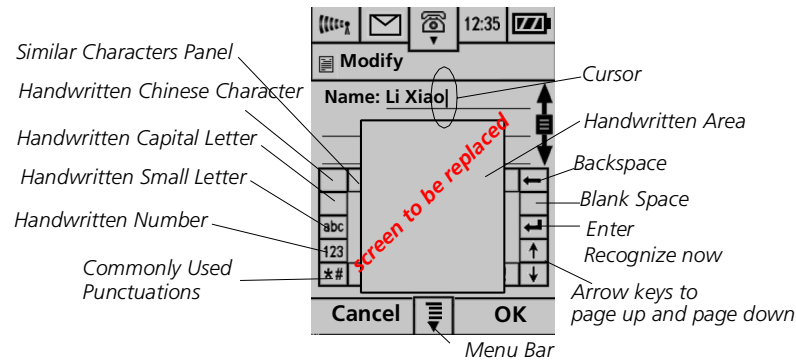


The upper part of the screen shows the wordings that are to be edited, with the cursor showing the exact position where the keyed in words would appear. Use the stylus to touch the key-in area at a position where you wish to key in words. The cursor will appear at the point where the stylus touches the screen. (You can use this function to insert words within a sentence or delete some words.)

Before keying in any information, select and press **Chinese**, **ABC**, **abc** or **123** to choose the type of information you wish to key in.

Use the stylus to note down the information in the Handwritten Area. When you have finished writing and/or pause, it will automatically recognize the most similar character and place it at the cursor position. If the incorrect word is given, you can change it by selecting one of the characters in the Similar Characters Panel at the last cursor position. Press **OK** after finished writing in the Handwritten area to speed up the recognition.

You can make use of the function keys around the Key-In Area to add in the most commonly used punctuation marks, backspace, return, etc.


When you have finished keying in the information, press **OK** to reflect the changes and return to the previous menu. Press **Cancel** when you do not want to save the changes and return to the previous menu.

Press  to select other methods to key in information




Pin Yin Keyboard:

After selecting the Pin Yin keyboard to key in information, a 'simulated' keyboard will appear at the screen (see diagram below) to allow you to key in Chinese characters using Pin Yin method.

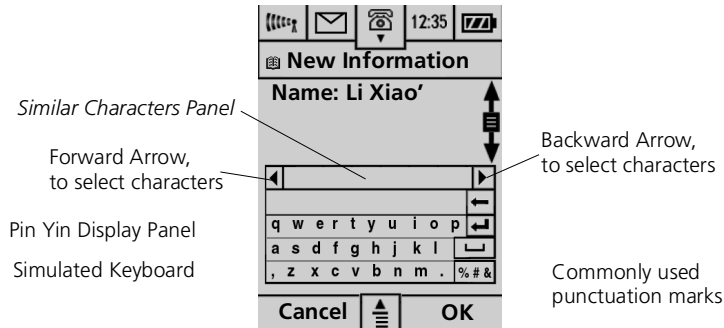

Use the stylus to select the alphabet in the simulated keyboard to represent the corresponding Pin Yin of the Chinese character. The keyed in alphabets are displayed in the Pin Yin Display Panel while the corresponding Chinese characters appear in the Similar Characters Panel. Use the forward and backward keys to scroll through the Panel to show more Similar Characters. Then press and select the desired character to place it at the cursor position.

If you need to key in punctuation marks, press the **Commonly Used Punctuation Marks** button and the following screen will become:

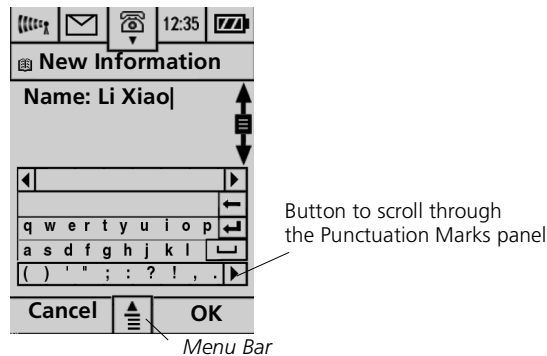


Once the desired punctuation mark is selected and keyed into the Key-In Area, you may press the down arrow at the lower right hand corner of the keyboard to enter the **Simulated Keyboard** again and may continue to enter more words.

Zhu Yin Keyboard:

Use Zhu Yin to key in Traditional Chinese characters, please refer to the earlier description on **Pin Yin Keyboard**.

English / Numbers Keyboard:

 
Once you select English Keyboard to key in your information (which can be English or Numbers), a **Simulated alphanumeric Keyboard** will appear in your screen (as shown in the below diagram):

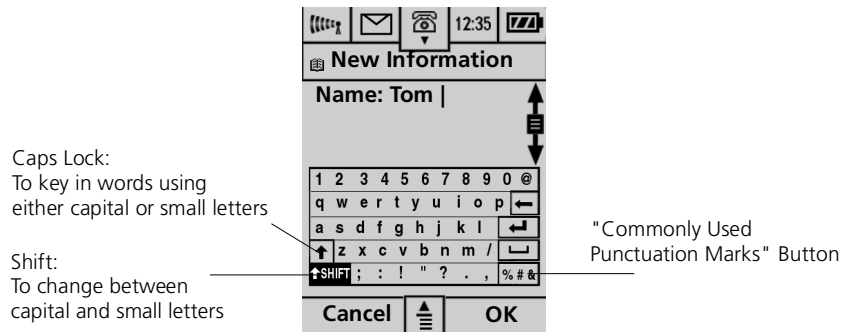

Numeric Keypad:

about numeric keypad.....

no such option or screen!!

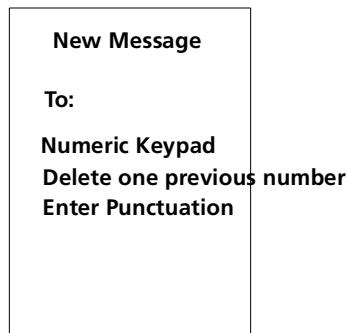

Press on those Numeric buttons to enter the number in the Key-in area, then press **OK**.

If you need to input punctuations, press ****** so that the numeric keypad screen will change into punctuation screen. Press **123** again to return to numeric keypad screen.

Terms Used In this Guide

"Touch" or "Press":

Use the stylus or finger to "Press" a certain position of the screen (e.g. Button, Function Icon, Pull Down Selection Box, Single Selection Box, Multiple Selections Box etc) to execute a corresponding function that the icon or button represents. **Press** would also apply to using your fingers to press the device keypad (e.g. to turn on/ off a phone, recording button, rolling button etc.).

"Edit" or "Key In"

To perform the function of keying in or editing of information. After pressing the Key-in Area, you can either use Handwriting Recognition method or a **Simulated Keyboard** to key in the information. Press **OK** to confirm your selection in the Similar Character Panel and the character will be placed at the position of the cursor. You will then be returned to the previous menu and the characters entered will appear at the Key-in-Area.

"Select"

Use to operate the Pull Down Selection Box, Single Selection Box , Multiple Selection Box or Listings Display Selection etc.

Highlight

On a usual screen display, icons and text are usually black in color and the screen should have no color for the background. If a particular icon or text has been selected, the color will be inverted; that is the character or icon will be in white and the background will be black to show the highlighting.

Select Character

When reading a Short message, you can use your Stylus to press on a particular words , keep contact with the screen and slide. The words at the sliding path will then be having an inverted color. You may release the Stylus from the screen when destination has been reached.. The characters which are having the inverted color from the point your Stylus touches the screen until the point your Stylus releases the screen is considered to be selected.

As these operating terms are frequently used in this user guide, it is imperative that you have an understanding of these basic operation methods. With this basic understanding, you are free to explore the versatility and unparalleled benefits of your advanced *Motorola A6188*!

 
Phone Functions

The Phone mode is only operational in areas where the network/service is available.

Making a Phone Call

[The Motorola A6188 is having a large number of adress book functionality and is able to record the last 20 calls (including missed calls, outgoing calls and received calls). It is suggested that you make use of this function to increase the efficiency of your communications. Please note that you may also use the pad of your touch screen to dial a phone number.]

- 1 Press at the main menu and your screen will appear as follows:

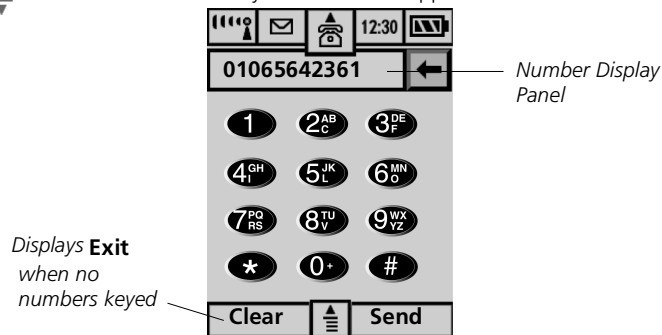

- 2 Press the number that you wish to call and the number will appear at the Number Display Panel. Press if you wish to delete the last digit. Press **Clear** to clear the entire phone number at the display panel.
- 3 Press **Send** to make a phone call by dialing the number at the display panel. Press **End** to end a call or just close the phone flip to hang up the phone.

To make International Direct Dial (IDD) calls or call direct extensions, see the In-Call Menu functions.

Press or press button to return to the main menu.

If there is no number in the Number Display Panel, press "Redial" to redial the last dialed number.

To make phone calls from the Adress Book, see "Using the Address Book to Call and Send Messages."

To dial a number from a SMS message, see "Retrieving a Phone Number from a Message".


GSM Emergency Phone Call

The worldwide GSM standard provides a single, uniform number, 112, to dial in cases of an emergency. You will be able to make an emergency call provided your phone is in an area covered by the GSM network.

Receiving a Phone Call

To receive a phone call, your phone must be switched on. You must also be in an area where there is network coverage and your All Call Diversion and Call Barring settings should not be set to divert or bar incoming calls.

When there is an incoming call, your phone will ring (or vibrate) and the screen will display:

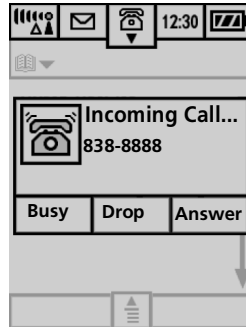

Press **OK** to answer the call. When the call is finished, press **End** to end the call or simply close the clip to hang the phone.

Press **Drop** to reject a call with an announcement or routing the call to diverting number.

Press **Busy** to reject a call with a busy tone.


If you pre-set the "Key Answer Only" to OFF, the call will be answered upon opening the flip. If the flip is currently open, press the Smart Button to answer the call.

If the phone flip is opened, you can then press the Rocket switch to answer the call.

When in the Phone mode, the Function status will change according to the current call state.

- Not dialing or not during a phone call
- Dialing or in use
- Call Waiting/ Call on hold


Press and the Function Display Box will appear (see diagram below). You can choose the function by pressing the desired function in the box. The functions will change in accordance with the current call state.

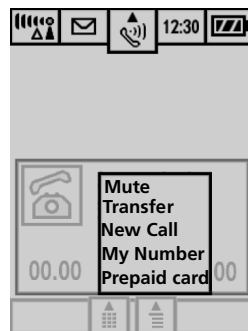

If you do not wish to select the function, press to dismiss the Function Display Box.

Off-Connection Functions (Before Connection and During dialing Functions)

Some services will only be available provided that you have subscribed them from your Cellular Service Provider.


Press  and you could select the following options, including:

Redial: Automatically redials the last number

Show ID: This option allows you to make a call without the remote receiver getting information of your phone number.

Hide ID: This option allows you to make a call without the remote receiver getting information of your phone number.

Switch to Line 2: SIM card can have 2 numbers to be used. They are Line 1 and Line 2. This option is used to when choosing the first number or the second number to be used for dialing.

 *This option will only be available provided that it is supported by your Cellular Service Provider and that you have subscribed it from your service provider.*

International Direct Dialing Call

This allows you to call from any country without knowing the local international access code. Simply add the international dialing prefix +, followed by the country code and the phone number to make an international call.

Inserting Pauses for Dialing Extensions or Voice Message Center

To insert a three-second pause character in a phone number:

At the position where the pause is reached, the phone will wait for 3 seconds before it proceed to dial the rest of the dialling string. However, the first pause in the dialling string is an exception. When the pause is reached, the phone will wait until the call is answered. This is used for example, if after the phone number 765-4321, you wish to insert a pause, then dial 7227 so that you will be transferred directly to the extension 7227 of the phone number 765-4321.

Pause--A Working Example:


If you have a tone-based voicemail system on 555-8888 with a mailbox number of 1111 and password of 2222. Then you may dial the following number:

555-8888 [xx] 1111 [xx] 2222 OK

My Number: To display your own phone number.



Prepaid Card: Show the total remaining amount the card is having. The rate depends on the rate preset in the device.


During Conversation Functions

 *Some services will only be available provided that you have subscribed them from your Cellular Service Provider and if the Cellular Service Provider is having this service.*

Press **End** to stop the dialing and end the call.

Press **Hold** to put the call on hold

Press  to put the call on hold and change into the Dial Pad (the Function Icon will show , indicating that the call has been put on hold). You may then dial another number.

Press  to select the following options:

Mute

Turns Mute On or Off.

This function temporarily turns the microphone off during a phone call. Reselect this option to resume your conversation.

Transfer

This option transfers a call to another telephone.

New Call

This function allows you to make a new call.

My Number

Shows the phone number of the handset

Pre-Paid Card


Shows the remaining amount of the pre-paid phone card.

Hold Call and Dial another Number

Some services will only be available provided that you have subscribed them from your Cellular Service Provider and if the Cellular Service Provider is having this service.

During an active call:

- 1 Press and the screen will show:

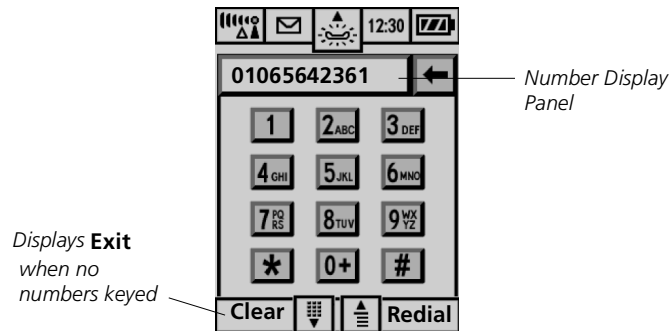


- 2 Press the number that you wish to call and the number will appear at the Number Display Panel. Press if you wish to delete the last digit. Press **Clear** to clear the entire phone number at the display panel.
- 3 Press **Send** to make a phone call by dialing the number at the display panel. If the new call is successful, you are currently having two active calls. Press **End** to return to the original call and to cancel the dialing of the second phone.

Switch Call

This service will only be available provided that you have subscribed it from your Cellular Service Provider and if the Cellular Service Provider is having this service.

When holding an active call, if you have successfully dialed another phone number, the screen will show:

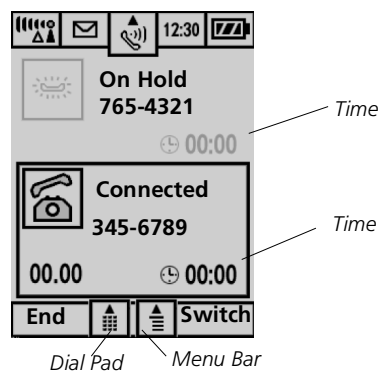

Press **Switch** to switch between the active call and the call that is on hold.

Press **End** to continue with the active call.

Transfer Call

Transfers a call to another telephone. .

This service will only be available provided that you have subscribed it from your service provider and if the Cellular Service Provider is having this service.

To transfer an active call (only one call), please follow the steps below:

- 1 Press and then press Transfer.
- 2 Press the number that you wish to call and the number will appear at the Number Display Panel. Press if you wish to delete the last digit. Press **Clear** to clear the entire phone number at the display panel.
- 3 Press **Trfer** to transfer the call.
- 4 Press and the call will not be transferred.



Number Display Panel

If you have an active call and a call on hold, to transfer a call:

Press and then press **Trfer**. When the call is transferred, it will automatically end your call. The earlier call which you have previously put on hold is now active.

Making a Conference Call

This service will only be available provided that you have subscribed it from your Cellular Service Provider and if the Cellular Service Provider is having this service.


This option joins the active call with a hold call. With conference call, you can have a conference with up to five other telephones. At any time during your call, you can add, disconnect or separate individuals from the Conference Call.

Initiating a Conference Call

To initiate a conference call, you should:

- 1 Firstly, dial one party of the conference call;
- 2 Then, place this call on hold and dial another phone number. You will then have one active call and one call on hold.
- 3 Press to enter the in-call menu and select **Link Call**. Yourself, the currently active call and the call on hold will then join into one conference call. The screen will show the

number of parties in the conference call.

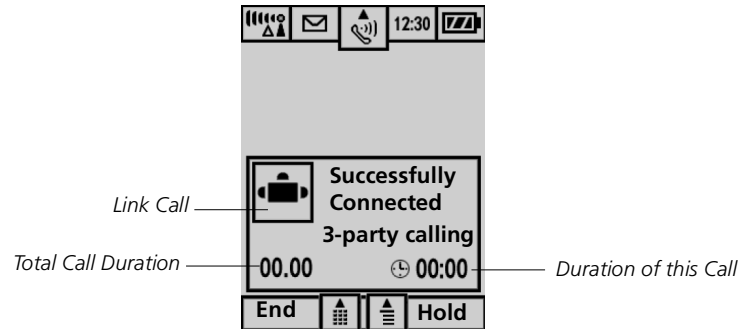

Adding a New Call to the Conference Call

While in a conference call, you can add new call by:

- 1 placing another number for dialing. Please refer Dialing Phone Call section.
- 2 Or by answering a call waiting call.


No matter which method is chosen to add a new call, the original Conference Call will be first placed on hold while the new call is being connected.

Press and then press **Link Call** to connect the new call with the original Conference Call in progress.

Separating a Member From a Conference Call

- 1 Press and then press **Split....** The screen will show:

Press this down pull down selection box to find the selected member whom you wish to separate from the Conference Call.

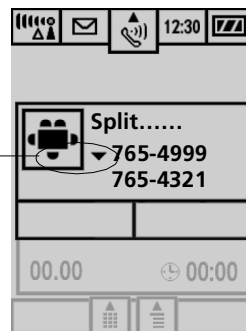


- 2 Find the selected member (telephone numbers or names) whom you wish to separate from the Conference Call by scrolling down the selection box.
- 3 Press **OK** to confirm splitting the selected member from the Conference Call.
- 4 Press **Cancel** to cancel the split call. At this point, the selected call will be separated from the main Conference Call and private conversation between you and the selected member is possible. To re-join all the parties again, press and then select **Link Call**.

Call Waiting


When there is an active call (with another call on hold) and another call is coming in, the screen

will show:




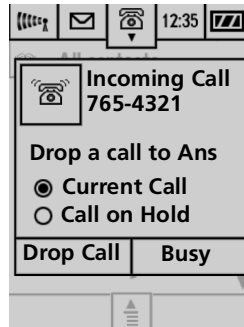


You may

- 1 First choose the line **Current Call** or **Call on Hold** to be dropped.
- 2 Press **Drop Call** to pick up the incoming call and drop the selected line.
- 3 Press **Busy** to reject the incoming call with a busy tone.

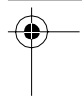

Phone Functions

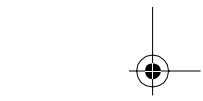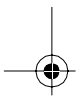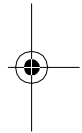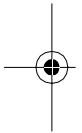

Address Book

Personal Contact Information

The Address Book stores and records important contact details and information including names, addresses, telephone numbers, fax numbers, pager numbers, important dates etc. Once stored, a number can be quickly retrieved and dialed plus you can even use the information to send faxes and e-mails.

The category of contact details helps you to organize and retrieve your information efficiently. You can classify your contacts according to your communication needs. It enables you to store important information effectively and retrieve information efficiently. The *Motorola A6188* provides some basic information categories:

All Contacts: To list the contacts under all categories


Business: Business contacts

Personal : Personal contacts

Owner: Information about yourself which is required for surfing the internet.

SIM Card: the contacts information saved in the SIM card (indicated by showing (a) before the family name).

Fixed Dialing: This option allows you to switch Fixed Dialing On or Off and to enter or change entries in the Fixed Dial list. The feature allows you to limit use (typically third-party use) of your phone to a predefined list of telephone numbers. See "Call Barring" Under Systems Setup.

 *This option will only be available provided that you have subscribed it from your Cellular Service Provider.*


Unfiled: Contacts that are not classified at the moment. Default category setting for all new contacts.

In addition to the above categories, you can also add in your own categories to allow you to manage your information efficiently and tailor existing categories to meet your communication needs.


Unless you classify the contacts under Phone Memory or SIM Card Memory, all other contacts information will be stored under the Phone Memory. Depending on the type of SIM card and the services that you subscribe, most SIM cards allow only basic contacts information to be stored (usually a name and a phone number under each contact).


On the other hand, the Phone Memory can store a wealth of information. When you change your cellular device, the information stored in the SIM Card Memory (of the original SIM card) is transferable while the information stored in the Phone Memory remains with the original device.

Grouping

You can use grouping to group relevant contacts in a group (colleagues, members of the same club etc) to facilitate the sending of the same information to the group. A  icon before the group listing indicates that the contacts listed below are in the same group.


Adding New Contact Information

- 1 Press  at the main menu to enter the Address Book:

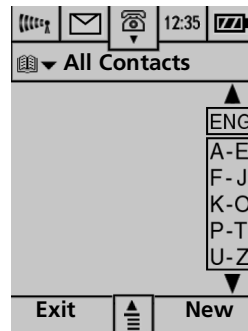


(The above screen shows that no contact information has been stored under the Address Book).

 - 2 Press **New** to modify the contacts information as follows:

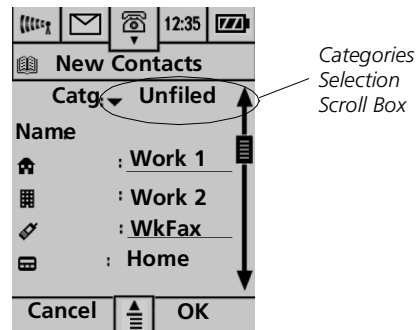


- 3 Under **Categories**, press and scroll down the Categories Selection box. The screen will show:

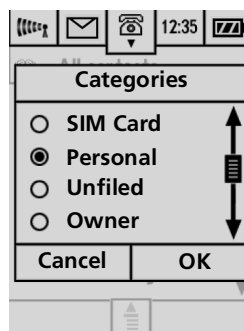

Select the type of categories; that can be SIM Card, Personal, Unfiled, Owner or some other self-defined categories (See Adding or Editing Categories). If you do not select any category, All Contacts information will be listed. If you select SIM Card, selected contacts information will be saved in the SIM card while the contacts information under the rest of the categories will be stored in the device.

- 4 Press the Key-In Area and key in relevant information in the respective Key-In Area (eg name, office number etc).

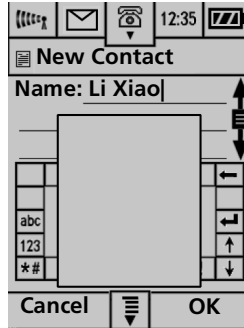

Press **OK** to save the edited information;

Press **Cancel** to abort all editing and return to the previous screen menu.

A6188 can store various information (including numbers):

- Name:
- Work Number 1:
- Work Number 2:
- Work Fax:
- Home Number:
- Hm Fax:
- Mobile Number
- Pager Number (SMS Service Centre Number)
- E-mail address 1:
- E-mail address 2:


And non numeric information including:

The following items are information stored under the Business Contacts:


- Title:
- Company:
- Work Address:
- Country:
- Province:
- City:
- Address:
- Postal Code:


Home Address (The following items are information stored under Personal Contacts)

- Country:
- Province:
- City:
- Address:
- Postal Code:
- Web Page:
- Birthday:


- Anniversary date:
 - Note:
- 5 Press **OK** to save the changes;
Press **Cancel** to cancel any changes made and return to the Address Book menu.
-  After making a call, you can save the phone number of the last call in your Address Book.
- 1 After pressing **End** to end a call, press the **Store** button.
 - 2 Under the **Category** Selection box, select the type of category that you wish to save the phone number under. Press **OK** to confirm your selection.
 - 3 You will then enter into a screen for editing the contact information. The phone number will automatically appear in the key-in area for phone numbers. All you need is to key in the name under the key-in area for names.
 - 4 Press **OK** to save the information under the Address Book. Press **Cancel** and the information that you have just added in will NOT be saved.

Search/ Edit Contact Information

- 1 Press  at the main menu to enter into the Address Book menu:

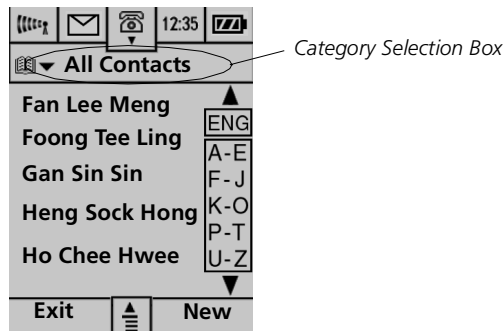


- 2 You can select a Categories (which can be Personal, SIM Card, Unfiled or some other self-defined categories) from the single-selection box. Press **OK** to confirm your choice. Press **Cancel** and the screen will show the list of All Contacts.

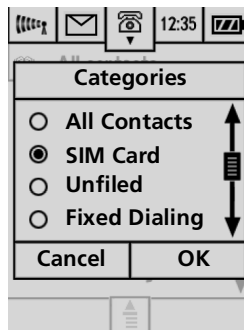

- 3 Use the Alphabet Scroll Bar to scroll the screen and select the first letter of the English surname (or the First letter of the Pin Yin), until you have found the name that you wish to check/ edit. Press to select the name.
- 4 Under the selected name, the screen will show all contact details. You can use the scroll

 bar to scroll down the screen for more information.

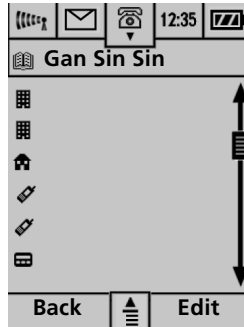

- 5 Press **Edit** to edit the contact information. Press the relevant key-in area to edit information in the respective key-in areas.

 


- 6 Press **Cancel** to return to the previous menu.

 
Press at the Address Book menu and then press **Sort Names** and the **Sort Name By Selection Box** will appear, prompting you to select the mode of arrangement (Pin Yin, Zhu Yin and Strokes). Press **OK** to confirm. At the Address Book menu, the surnames are then re-arranged according to your selection of the arrangement mode.

Search Contact Information

- 1 Press at the main menu to enter the Address Book menu. Then, press at the Address Book menu:

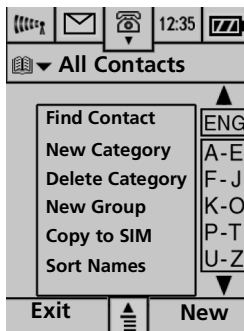

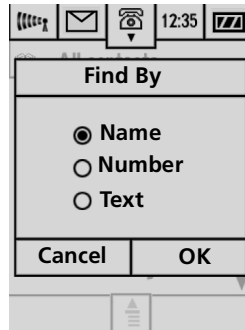


- 2 Press **Find Contact** and the FindBy Box will appear as follows:



- 3 Select the **FindBy** and you can choose to search the contacts according to Name, Number or Text.
- 4 Make your search selection and press **OK**.
- 5 The screen will then show the search results, listing the contact details that match the search criteria. Press and select the name to show more contact information. Press **Cancel** to return to the previous menu. If there are no matches to the search criteria, the screen will show **No Matche Found**.

Delete Contact Information

 - 1 Press  at the main menu to get into the Address Book menu. Search for the name that you wish to delete and enter the screen to show the chosen contact information.
- 2 At the Contact Information, press  and the screen will show:

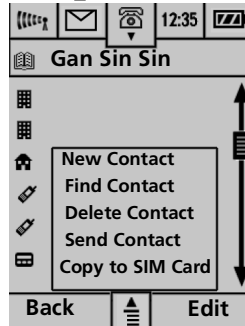



- 3 Press **Delete Contact** and the Delete Dialogue Box will show:

 


- 4 Press **OK** to delete the contact information. Press **Cancel** to abort the deletion and return to the previous menu.

Creating Your Own Categories



Adding Self-Defined Categories

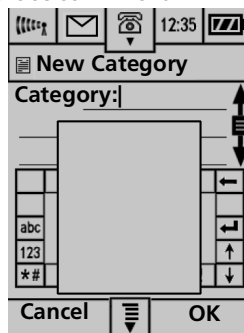- 1 Press  at the main menu to get into the Address Book menu. At the Addresses menu, press .
- 2 Select **New Category** and the screen will show:



- 3 At the key-in area of category, key in the name of the new category that you wish to create.
- 4 Press **OK** to confirm the creation of the new Category

 
Deleting Self-Defined Categories

- 1 Press  at the main menu to get into the Address Book menu. At the Address Book menu, press .

- 2 Press **Delete Category** and the following selection box will appear:



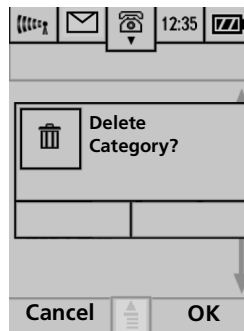

- 3 Select the category that you wish to delete and press **Ok**. The delete dialogue box will appear as follows:



- 4 Press **OK** to confirm deleting the selected Category.
Press **Cancel** to return to the previous menu and the selected category will NOT be deleted.

Creating Groups

Setting Up Groups

- 1 Press  at the main menu to get into the Address Book menu.
At the Addresses menu, press .
- 2 Press **Add Grouping** (New Group) and the following screen will appear:



- 3 Press the **Category** Selection Box to select the category of the grouping.

4 Press key-in area of the **Name** and key in the name of the grouping that you wish to create.

5 Press **Recipients** to enter the following screen:



6 Go through the listing and select the recipient by marking a ☒ in front of the name. Press **OK** after selecting the members.

 
7 Press **OK** at the Add Grouping menu.

Only mobile numbers in Address Book can be used in grouping.

Searching Group Recipients

1 Press at the main menu to get to the Address Book menu. At the Address Book menu, information that has a icon in front belongs to a grouping.

2 Press the **Name** of Grouping to enter into the following screen:

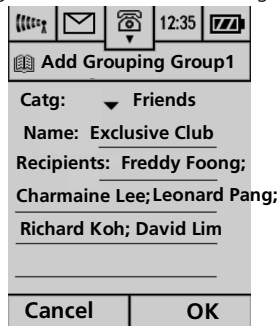

Adding Group Recipients

- 1 Press at the main menu to get to the **Address Book** menu. Scroll and select the desired grouping which you want to display more information about.
- 2 Press and select the **Recipients** to go to the Recipients Selection menu.
- 3 Select all the contacts/ names that you wish to add to the grouping and press **OK**.
- 4 Press **OK** at the Group Information menu. (See Create Grouping and Search Grouping Recipients).

Deleting Groups


- 1 Press at the main menu to get to the Address Book menu. Then scroll and select the required grouping.


2 Press .

3 Press **Delete Group** and press **OK** to confirm delete.

Copying Contact Information to a SIM Card


You can copy contact information in your mobile to a SIM Card. By using the same SIM Card, you can also retrieve the contact information in another GSM phone.

 *The size of the SIM Card memory determines the amount of information that can be stored in the SIM Card, while the function of the SIM Card determines what type of information can be saved. Usually, a SIM Card can only store contacts information like names and phone numbers.*

1 Press  icon at the main menu to get to the Address Book menu. Under the Search Contacts screen, press and select the contacts which you wish to copy to the SIM Card.

2 Press .

3 Press **Copy to SIM** and the following selection box will appear:

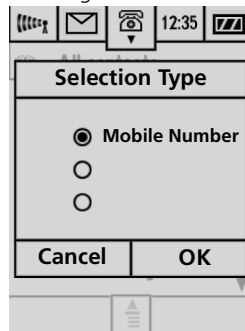



Select Mobile from the single-selection box. (Normally, a SIM Card memory can only store one contact number under one name).

4 Press **OK** to save the selected information to the SIM Card. Press **Cancel** to return to the Contacts information menu and do NOT save any contacts information to the SIM Card.

Copying Contact Information from a SIM Card to a Phone


You can also save contacts information in a SIM Card to a phone

1 At the main menu, press  icon to get to the Address Book menu. Under the Search Contacts screen, press and select the SIM card contacts which you wish to copy to the phone.

 *To facilitate the search of contacts information saved in a SIM Card, you may select the category as SIM Card. All contacts information saved in a SIM Card will then have a [xxx] icon in front of the contacts' surnames.*

2 Press .

- 3 Press **Copy to Phone** and the following selection box will appear:


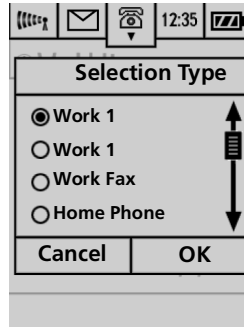


The selection box lists down all the various types of phone number. Select one type from the single-selection box to be the destination of the SIM card number being copied

- 4 Press **OK** to save the selected contacts information to the phone.
Press **Cancel** to return to the Contacts information menu and do NOT copy the contacts information to the phone.




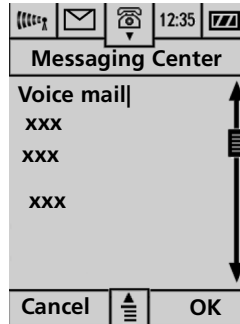
Addresses Menu

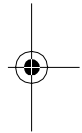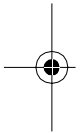

Messages

The GSM device besides being used for normal voice calls, possesses the capability of sending and receiving messages to and from other devices. The *Motorola A6188* with its extra large touch display and icons provide the user with the ease of operation in sending and receiving messages, and many other features.

At the Main menu press  to enter the Message Center display:



Here, you can manage various types of messages. In the display shown above, each row is known as a folder. Selecting any of them will enable you to enter a different display in which you can manage your messages differently. The number behind the folder indicates the current number of messages in that particular folder. The numbers in brackets indicate new and unread messages.

Every folder has different functions and each operation is different too. The functions are explained below:

Voice Mail: When you are unable to attend to the incoming call, the incoming call will be automatically directed to the voicemail number to enable the other party to leave you a voicemail which you can retrieve later.

 **Voicemail requires the Cellular Service Provider to support the service and that you have already subscribed the service.**


Text Msgs: Send and Receive messages

 New Messages (unread message)

 Old Messages

 **SMS messaging requires the Cellular Service Provider to support the service and that you have already subscribed the service.**

Info Service: These are general messages such as weather forecasts or stock market information broadcasted to your device.

 **Info Service messaging requires the Cellular Service Provider to support the service and that you have already subscribed the service.**

Quick Text: When editing messages, you can use the built-in library of (commonly used phrases) Quick Text

SIM card: SMS messages stored in your SIM card. The messages can be moved to another folder if necessary

Draft: Folder to Store unfinished messages.

Sent Messages: On successful sending of a message, a copy of it will be stored in this folder. Icons - to show already sent message.

Outbox: Messages waiting to be sent will be stored in this folder. You can still edit the messages before sending.


Icons - to show yet sent message

Icons - not sent but will be set to sent after the time delay

Deleted Items (Trash): Deleted Messages will be Store in Trash. These messages can be restored before the folder is emptied.

Personal Folder: Besides the above-mentioned folders, you can create personal folders according to your preferences to file different types of messages.

You can send and receive messages, delete or file messages in different folders.

 To enable proper filing operation, please ensure that your device setup configuration is correct. Please see Message Setup.

Sending Messages

This option allows you to send messages to other cellular phones that support SMS service.

 Please ensure that the device setup configuration is set correctly (see Message Setup).

- 1 At the Main menu Display, press  , to enter the Message Center Display.
- 2 At the Message Center Display, press **Compose** to enter New Message Display:



- 3 There are two ways to input a recipients particulars.


Press the line behind the **recipient (To:) column** and a numeric pad display will appear:




Use the numeric pad display to enter the hand phone number and then press **OK**.

Or Press the **(To:)** ; if there are records in the Addresses, a display showing a list of names will

appear:

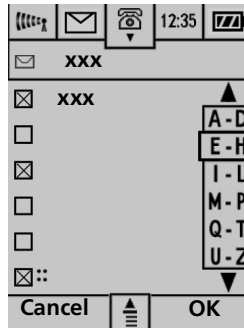

Press the scroll bar to scroll through the list to make your selection. This method allows the multiple entry of recipients. Press **OK** and the name will be shown on the **(To:)** column. Press **Cancel** to return to the New Message Display and the (To:) column will remain unchanged. If there is no record in the Addresses, a Send To display will appear:

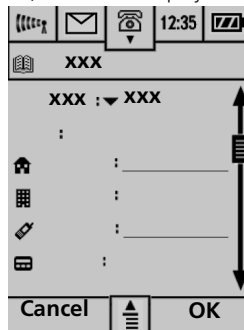

[Press each item to enter the Editor display. You can then input the recipients number and other information by writing on the screen (or by other ways of input, see Addresses Menu).]??????????/



When the record of the recipient is not available in the Phonebook, you can press in the **Send To** display and then press **New Contact** to record the relevant information of the recipient into the Addresses for further reference. Then after that, it will be available to be chosen (see Adding New Contact Information under Addresses).


Selecting multiple recipients allows one message to be sent to multiple recipients.

4 Press **Message Content** line to enter the text editor: Press **OK** when finished and the

message will be saved and you will return to the New message display.



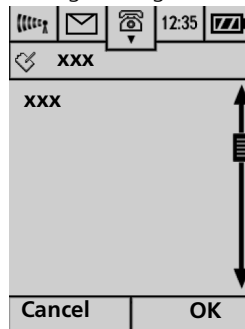


 In the New Message (can not do that in Editor display, Only in New Message Display can do that) display, press  and then press **Quick Text** to make use of the built-in library of phrases to make message editing faster.



Press any of the text to select and the text will appear into the message editor.

Press **New** to add your own words or phrases into the existing library and then press **OK** to save.

Press  to restore the Quick text Library to the default factory setup configuration.

 
 At the New Message display, press  , and then press **save to draft** to save the message in the Draft Folder without sending. You can still retrieve the message later.

5 At the New Message display, press **Send** to send the message.



6 Press **Cancel** to return to the New Message display, or press **now** to send or press **later**

to send message at a scheduled time.

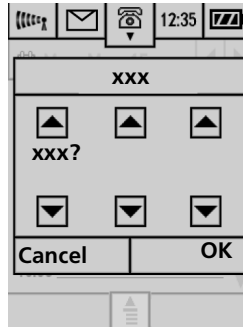


Use the *up* or *down* arrows to adjust the time and press **OK** to set the time for scheduled sending of messages.

[!] *Scheduled sending of message will only be effective provided that you are within your Cellular Service Providers coverage and your device is turned on at the scheduled time period*

Messaging Setup

Before you can send any messages, you must setup the device properly.

At the Main Menu display, press to enter the Message Center display. At the Message Center display, press and then press **setup** to enter the Messaging Setup display. (or press the **System Menu** at the main menu, and then press **messaging setup** to enter the Message setup display).

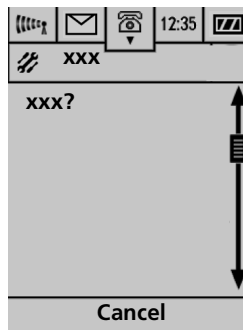

A list of settings will display which you can edit individually:

Press **Voice Mail**: a numeric pad display screen will appear:



Backspace

Symbols

Press the numeric pad to enter the Voicemail center phone number. Press **OK** to save the Voicemail number.

To enter symbols, press symbols and the display will change:




Enter Number

Press **123**, to return to the numeric pad display.


You might need to subscribe the Voicemail Service through the Cellular Service Provider: Upon subscription, you will receive the service center number.

Press **Text Message**: To edit or input the Text message service center number, storage location and deletion criteria of incoming message

1 Press **Service Ctr Info** to enter the Service Ctr Info Display:

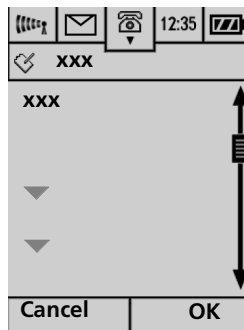

Press the line below Service Ctr Numbr: to enter the numeric pad display in which you can enter the service center number (see Voicemail).

 You may need to subscribe to SMS (Short Message Service) through your Cellular Service Provider. Upon subscription, you will receive the service center number.

Press **Expire After**: Enter the time limit for message entry.

Press (Outgoing) **Message Type** to select text or Fax method of sending message.

2 Press *Incoming Message*: To select whether to save incoming messages into the SIM card or to save incoming messages into Inbox.

 
3 Press *Remove Based On*: To select the conditions for deletion of messages.


You can select:

age: keep for a pre-determined time defined in the number of days in the Delete After: field *do not remove*:

Number: customized deletion and keep the last number of items defined in Keep Last: field *do not remove*

Press **Info Service** to see the setup configuration:

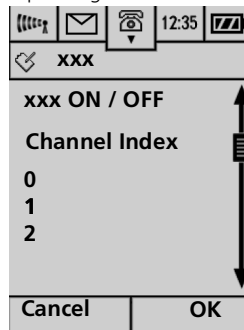

 You may need to subscribe to Cell Broadcast Service through your Cellular Service Provider: Upon subscription, you will receive the relevant information on different channels.

Press **On/Off** at Receive: To turn on or off the service.

Press the line of 1., 2., 3., 4... etc under *Channel index*: To enter channel frequency.

 
Selecting the below:

- Draft:
- Sent
- Outbox
- Trash

Enable you to setup the deletion criteria: See Messaging Setup item no. 3.

Receiving Messages

When a new message arrives, there will be an alert sound and the display will flash dialogue box.

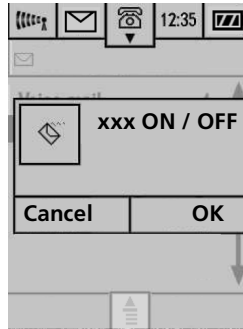

Press **Dismiss**: Keep message in Incoming Folder for future reading.

 
Press **Read**: Read message immediately.

If you miss the dialogue box and the Incoming message, you will still see and , flashing at the top left corner. Press , to read the message.

If your device is off, the service center will send the message to the device as soon as it is turned on.


Checking Messages

- 1 Press to enter the Message Centre;
- 2 Scroll and select the folders that you want to enter.

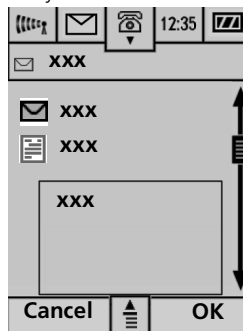

- 3 In the particular folder display, press and press **View By** and the View By display

 will appear:

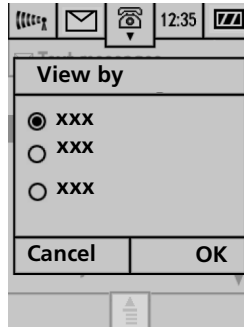


Select one and press **OK** and the messages will be arranged accordingly.


*At the folder display, press **TrashAll** to delete all messages:*

At Folder Menu, press and press **Setup Folder** to edit the configurations directly. (See Messaging Setup).

  4 Press the message header that you want to read (hear) to see more details:

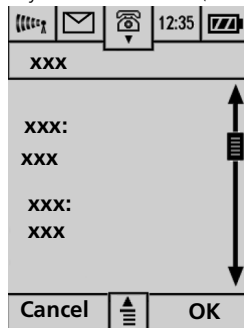

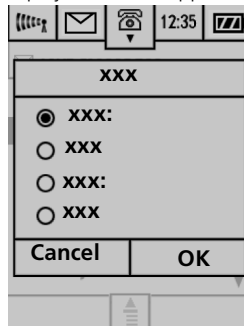

Press **File** and the Save to Folder display below will appear:





You have a choice to save the message to any folders. Select Folder Press **OK** to save to selected folder.


Using different folders, you can efficiently manage the messages. (e.g. friends email, companies document, draft and deleted) (See Add New Folder)

 
Press **back**, to return to previous screen.

 When reading message, press  and press **Move to Trash** to delete the particular message.

 
 When reading message, press  and press **Forward message** to forward the particular message to someone else.

Retrieving Phone Numbers from Messages

 When reading message, if the content has a phone number, the phone number can be extracted and save to Phonebook.

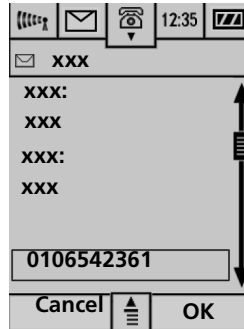



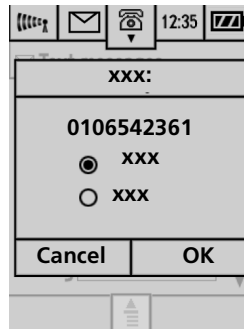

- 1 Highlight the number and Press highlighted number to enter into the Number Options display below:





- 2 Choose **Dial or Store**: Press **Cancel** to return to the previous screen. Press **OK** to dial if the dial option is selected. Or, **Select Msg Type display** will appear if the **Store** option is selected.
- 3 Select the desire type of phone number and press **OK**. (Refer Look at the S. Chinese Manual)


Using Cell Broadcast (Info Service)

- 1 At the Main Menu display, press  to enter the **Message Center** display.
 - 2 Press **Info Service** to enter the display, which will provide various channels to choose from.
-  Press  and press **Message Setup** and press **Info Service** so that you can set up the different channels. (See Message Setting)
- 3 Use the scroll bar to scroll through all the headers.
-  Press **Move all to Trash** to delete all the messages under any particular header.

- 4 Press the header to enter the read message display:


 Press lock so that when deleting all messages, the locked messages can be kept. A  will show the locked status. To unlock, press **unlock**.

 
Receiving Voicemail Messages

At the Main Menu display, press  to enter **Message Center** display; Press **Voice Mail** and the device will dial the Voicemail Service Centre to retrieve the voicemail.

Please go to the Message Setup Menu to edit the Voicemail service center number if you have not done so. (See Message Setup)

Adding New Messages Folders

- At the Message center Menu, press  :
- Press **New folders**, and the **New Folder** display will appear:

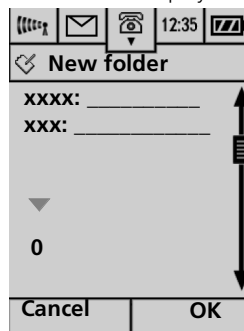

- Enter the name of the new folder and select the category. The routing allows the messages within the folder to be send to predetermined recipients.

Press **routing** and the recipients information display will appear. Select and press **OK**, the selected recipients information will be saved.

Remove Based On: enables automatic management of folders according to your wishes.

Press **Remove Based On: criteria** and the few selections below will appear:

Remove Based On: (Please refer to the upper part of the document which has the same function)

 
age: keep for a predetermined time according to delete after the number of days depends on Delete After: field

do not remove:



Press **Number:** customized deletion to keep the latest number of messages depends on Keep Last: field.

- Press **OK**: The new folder will appear in the Message Center display.

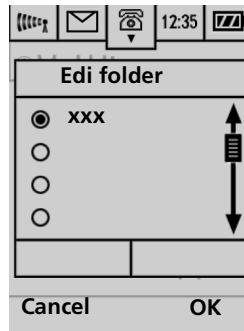
 
☞ At the Main Menu, press  to enter **Message Center** and press , follow by pressing on **Edit Folder** to make the Edit folder display appear:



Select the folder and press **OK** to enter the editor display. You can change the name, routing, etc. (See Messaging Setup)



☞ At the Main Menu, press  to enter the **Message Center** and press , follow by pressing on delete folder to delete a folder built by yourself.

! Only those folders that you created can be rename or delete. The original folders (by factory default) cannot be rename or delete.

☞ At the Main Menu, press  to enter the **Message Center** and press  follow by pressing on empty trash to clear the messages in the deleted folder. The messages deleted cannot be restored.

Making Phone Calls or Sending Messages Through Address Book

The Motorola A6188 provides a much-simplified way of operation by standardizing dialing and messaging functions.

- 1 Press  at Main Menu.
- 2 Search for the call recipient. (or message recipient).
- 3 Once located, press the name and the particulars of this recipient will appear on the display.
- 4 Once the phone number or hand phone number is selected (it may be a number with icon  for sending SMS directly), the respective displays will appear for you to make phone call or send message with the selected number already filled in.

See Address Book, Phone Dialing and Short Messages Services for their respective functions.

Surfing The Internet

Through the WAP Browser, you can connect to the Internet to get all your required information. The Motorola A6188's enlarged touch screen allows you to surf the Net with much more convenience.


■ The option of surfing Internet depends on the availability of service from the Cellular Service Provider and whether you have subscribed the Service. Please check with your Cellular Service Provider with regards to WAP (Wireless Application Protocol) configurations.

In order to connect to the Internet using WAP, you will need:

- 1 Subscribe to a WAP service.
- 2 Connect WAP service to your device.
- 3 Use a WAP Browser to get connected to Internet.

You need to subscribe to an Internet access through an Internet Cellular Service Provider (or ISP).

WAP Setup

 Your Internet Cellular Service Provider may help you to setup your WAP when you subscribe their service.

If you need to manually setup the Internet configuration, you will need to setup the DNS (Domain Name Service) address and the IP address. The IP (Internet Protocol) address connects your phone to Internet while the DNS address relays all incoming data and outgoing request, thus allows you to surf the Internet.

You need to know the following: (This information should be obtained from ISP upon your initial subscription):

Types of DNS address:

DNS address provides the link from phone to Internet. Types of service areas can be differentiated into data routing and dual short message.

IP address:

IP address is made up of a set of four numbers, Example --- 123.456.789.123

Port Number:

Connection to the Internet via a port number.

Internet dial-in number:

Your ISP will provide you with a dial-in number, which allows your device to be connected to the Internet

Username:

Your ISP will provide you with a log-in username.

Password:

The password helps to prevent unauthorized access to the Internet. This password is provided by your ISP and can be subsequently changed.

Modem Speed:

There is a selection of various speed: 2400bps, 4800bps, 9600bps or 14400bps; among them, GSM Network's standard speed is 9600bps.

Inactive Time:

A timer that tracks the connection time. Once connected to the Internet, and if there are no activities within the preset duration, the device will be automatically disconnected. The default

time delay is 600 seconds while the longest time delay is 1000 seconds.

Modem Types:

By Modem or ISDN.

Types of connection:

To use proxy or not, depends on the ISP.

In your Phonebook, your personal contact details should include your hand phone number. The ISP will use this number as the Main account number. If the number is not listed in your Address Book, please remember to input your hand phone number.

See details in Phonebook—Personal contact details—adding contact details.

The Motorola A6188 can input up to 3 DNS addresses (In this way, whenever a DNS address is down, the next DNS address in line will be used so as not to interrupt the Internet connection).


The DNS address is arranged from the most preferred to the least preferred order and it could be setup separately.

Setup of WAP procedures are as follows:

- 1 On the Main Menu, press **[P]** to enter the WAP function display:




- 2 In the WAP function display, press **[Menu]**, and select **setup** to enter the WAP setup display.


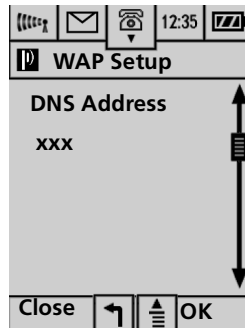


- 3 Select **DNS1 (DNS2 or DNS3) address** to enter the configuration display to setup the


DNS address:

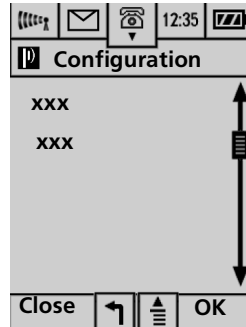

- 4 According to the different types of DNS addresses, enter the various information into the respective columns or use the pull down screen to select accordingly.
- On the display for setup of DNS address, press to select the following functions:
Preferred DNS Address — listing the selected DNS address as top priority;
Delete DNS Address — delete the selected DNS address.

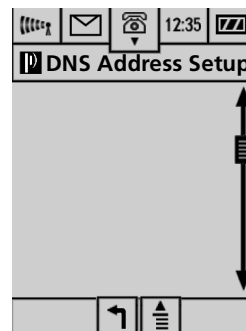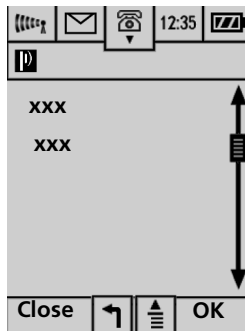

- 5 After entering the correct information, press **OK** and you will return to the Browser setup display.

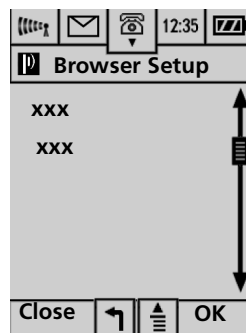


- 6 Select the **DNS address setup** to enter the ISP dialing display.
- 7 Press **OK** after you have entered all the correct information. You will then return to the Browser setup display. Press **OK** again.

8 First turn off your device and then on again to complete the setup.

All the configuration will change once you activate your device. This will complete the WAP setup.

Activate WAP Browser

 
 Ensure all configurations are correct before activating WAP browser.

On the Main Menu, press  to connect to the Internet: The display will show: **connection in progress...**, **sending ...**, **receiving ...**, etc.



During the process, you can press **exit** to stop the connection.

If the connection is successfully, you will enter into the WAP function. You will see the Browser Main display:

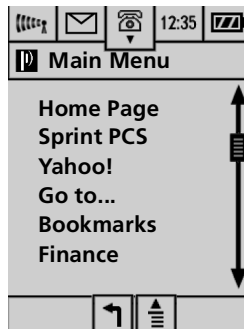

The above screen shows an example of WAP information Menu. However, your ISP will determine the information and function.

Similar to browsing the Internet on PC, you can use the scroll bar, arrow keys, back and forward icon, etc to browse the various websites. You will get to browse the vast Internet contents ...

You can also select the function keys to perform the respective tasks:

Or press  to select the functions offered by your phone set:

Return: back to previous page.


Home: back to initial specified homepage.

Browser Setup: browser setup page.

Setup: setup for WAP functions.


Exit: exit from Browser function and WAP function, to return to Main Menu.

Using Toolbars on Homepage

At Browser display, press  and then select toolbar. You will enter into the ISPs designated

homepage.

This homepage is a specially designed web page. It can perform many of the functions that ISP provides, such as HELP, setup of Home page, Set Bookmark, provides URL address etc. Your ISP will determines the contents and functions.

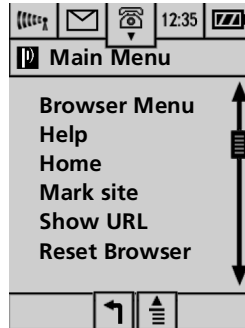

Browsing Information and Using Surfing Capabilities


Making a Selection

If the homepage is made up of various contents that are being arranged accordingly. You can use the scroll bar, the arrow keys, and the page key to browse through the contents. Upon selection, you can visit the next web page or press **back** to visit the previous page.



Entering Information

Some web pages allow user to input information. You can press **insert** to enter or edit any information. This is similar to the message function. Please see details on the message function.

Disconnecting from the Internet

On the homepage, press , and then press **exit** to disconnect from the Internet.

Visit MyMotorola.com

On the Main Menu, press  to enter the WAP function display. Press  and select **My Motorola** to get into MyMotorola.com website.

You can also visit this website by using any PC at this address: <http://www.mymotorola.com>

MyMotorola.com website is your source of free resources provided by Motorola. At this website, you can:

Register your own particulars including your hand phone information in order to get technical support tools, personal information tools and exciting WML website addresses.

Download TrueSync and other latest software.


Design your own homepage to store your data. In this way, no matter where you are, you can still use your Motorola A6188 to get connected to the Internet to obtain the data.

Standardize your Phonebook in your device with your PC.



Play games on Internet.

Enjoy Internet Relay Chat with friends.

Come and enjoy the exciting WAP service now!

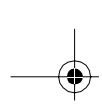

Surfing The Internet

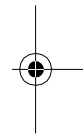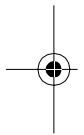




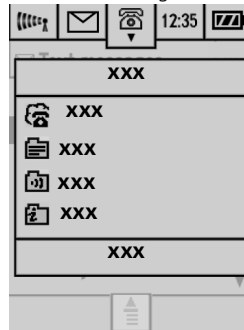
Call Registers (Recent Call)


With Recent Call (MY SUGGUSTION) you dont need to worry even when you miss any incoming calls or messages as your *Motorola A6188* will keep an accurate and detailed record. It will automatically prompt you with an alert when you miss calls or messages.

For all daily activities listed in your DayView, it will also automatically prompt you.

! Messages or incoming calls must be made within the cellular service coverage and your device must be turned on to be accurately registered.


When you see a  and  blinking simultaneously on your top left corner of your screen, this means that you have a missed call or a new message. Select  and you will see a dialog box:



 indicates that you have a missed call.

The number beside the lcon indicates the number of missed calls.


Select this and you can read the last 20 Missed, last 20 Answered and last 20 called.

The  indicates that you have incoming messages, faxes or emails.

The number beside the lcon indicates the numbers of new messages

If there is only one new message, you can read the message simply by selecting it.

If there are many messages, you will enter the inbox display where the messages will be arranged according to the received time. You can then highlight any one of them to read. See Messages.

The  indicates that you have a new voicemail.

The number beside lcon indicates the number of unread voicemail messages.

Select this to retrieve your voicemail messages by connecting to the preset voicemail service number.


 indicates that you have a news update from your Cellular Service Provider.

The number beside lcon indicates the number of unread news updates.


Select this to read your news updates. See Messages.

Press **exit** if you want to ignore the alert for news updates and the dialog box will disappear.

Last 20 Call Records

On the Main Menu, press  to show the last 20 call records.

The last 20 call records display will be shown as below:

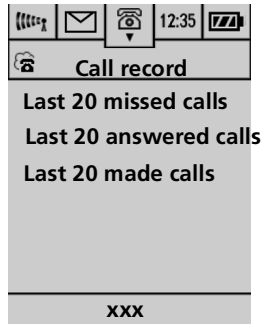



- 1 Browse the option to see the **last 20 missed calls**, **last 20 Answered calls** or **last 20 made calls**. Select one to see more details. For example, to see the last 20 missed calls:



- 2 Phone numbers (or memory code with callers name) will be listed according to the time received. You can view them one by one or using the scroll bar to search for a particular number. Pressing *clear all* will erase all numbers.
- 3 Highlight and select any numbers to retrieve details of the call.




- 4 Press **Callback** to dial the selected number.
Press **back** to return to the previous display.

 Press  and then press **store number** to store this selected number in the Address Book.

See Address Book.

Once an event reaches the scheduled time in the diary, the device will flash a message in a dialog box to remind you:

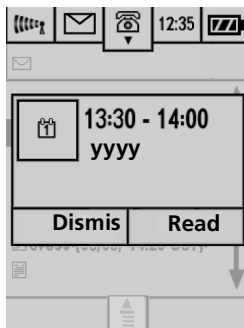


Press **Dismiss**: To close the dialogue box.

Press **Read**: To read the details of the event.




Call Registers (Recent Call)

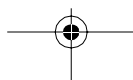

PDA Capabilities



Date Book

In the Main Menu, press  to bring up the Date Book display:

The black bar at the bottom left of the date box indicates that there is an appointment scheduled on that day.



The length of the black bar indicates the number of appointments scheduled for that day.

Press  or  to flip to the next or the previous month in the Date Book.

Browse the calendar and press the highlighted date box to select the day.

Press **DayView** to bring up the display to view the appointments scheduled for that day. Press Exit to return to the Main Menu.

 Press  to select the following options:

 
New Event :To add another appointment to that day.

View Today:Similar to the Appointment button.

Jump To:Skip to see another days appointment by using the Enter Date dialogue box.

DayView

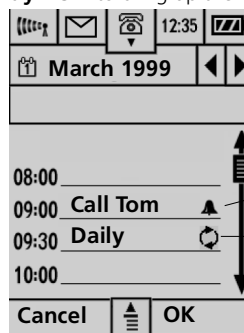

In the Date Book display, press **DayView** to bring up the DayView display.



Indicates alert at the time of appointment.

Repeat everyday

Use the scrollbar to browse through the days appointments, press **appointment** to bring up the New/Edit Event appointment display. The details of the appointment will be displayed for editing.

Press  or  to flip to the next or the previous DayView.

Press **calendar** (MthView) to return to the Monthly Calendar display. Press exit to return to the Main Menu.

 Press  to select the following options:

New Event

View Today

Jump To

(doesn't have Setup menu here in T. Chinese Menu, but the Setup menu suppose here(DayView) in Taichi.)???

Setup

Begin Day View at:

Remove Event when: 30 day

60 day

90 day


180 day

 
1 year (need to be explain)...


never remove

Lunar Calendar: On/Off

Jump To

In the MthView or DayView display, press  and then press **Jump To** to bring up the dialogue box:

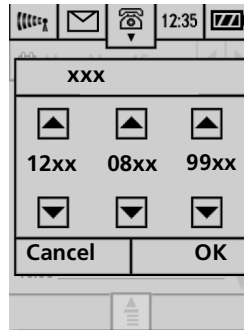


Press  or  (the number will increase or decrease by 1) to enter the year, month and date.

Press **OK** to enter the DayView display to view the appointment for that day.

Press **Cancel** to return previous display.

New/Edit Event

 In the MthView or DayView display, press  and then press **New Event** to enter the display as shown below:

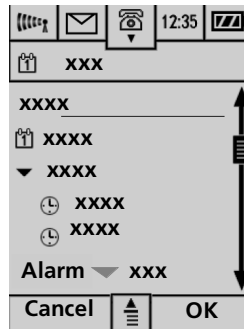

Press **Title** to bring up the Title editor display. Enter the Title for the new event. (See Handwriting Board ??? .)

Location: Press the line beside Location to enter the Location information

Notes: Press the line beside Notes to enter the extra note information

 
Press [1] **Date** to bring up the Select date dialogue box and enter the date for the new Event (see Jump To).

Press the **Set Time** pull-down box to select:

No Time

Or

Set Time by touching the **Begin** (Start) and **End** to bring up the Start/End Time dialogue box:

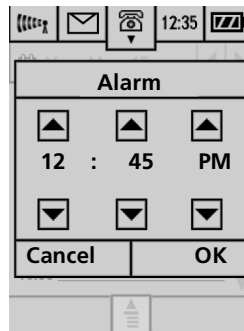

Touch or (the number will increase or decrease by 1) to enter the hour and minute.

Press **OK** to return to the Set Time function to save the change. Press **Cancel** to cancel the change.

Press the Reminder **Alarm** pull-down box to set the alarm at the time of appointment. The selections are:

No Alarm

- No Alarm at the appointment time.

On Time

- Activate Alarm right at the appointment time

1Min Before

- Activate Alarm 1 min before the Appointment

5 Min Before

- Activate Alarm 5 min before the Appointment

10 Min Before

- Activate Alarm 10 min before the Appointment

20 Min Before

- Activate Alarm 20 min before the Appointment

***suppouse have On Time, 15 min, 30 min, 1 hour and 1 day in Taichi??

Press the **Repeat Event** pull-down box to select the frequency of repetition of the alarm. The selections are:

Never

-The event is performed only once.

Daily

Weekly

Monthly

Yearly

After selecting the *Repeat* option, press the **Set End Date** pull-down box and set the t date to determine when the repeating event will cease. Set it by pressing **No End Date** and choose **Set End Date**. then press the icon and use the Enter Date dialogue box to set the time and date or select *No End Date* to let the Alarm go on forever.



If **Weekly** is selected. You may specify the weekly interval that the alarm will activate by pressing the **Every** ____ **Week** option and entering the number. Press the **On** pull-down box to select the day of the week that the alarm will be activated.

If **Monthly** is selected. You may specify the monthly interval that the alarm will activate by pressing the **Every** ____ **Month** option and entering a number. Press the **On** pull-down box to select the day of the month the alarm will be activated.

If **Yearly** is selected. Alarm will be activated every year.

For example, a persons birthday alarm will be activated 1 year. (Of course, if the persons birthday is on the 29th Feb, then the alarm will be activated only every 4 year!)

 
***when I selected yearly, the Every: ____Years is gray-out (can not specify the yearly interval).??

 Press  and select **Delete Event** to remove appointments from the DayView display.

After the appointment is entered and its setting completed, press **OK** to return to the DayView display. Press **Cancel** to return to the DayView display with no changes.

Delete Event

In the New/Edit Event display, press  and select **Delete Event**

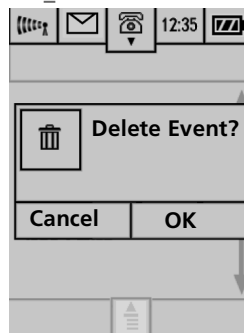


The Delete Event dialogue box appears. Press **OK** to delete event. Press **Cancel** to return to the New/Edit Event display with no changes.

World Time


World Time lets you set the local time and the time for major cities around the world.

 In the Main Menu, touch the digital clock that resides on the Call status bar at the top part of the screen to bring up the World Time screen:

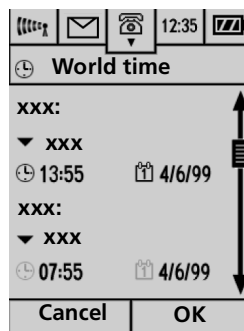

In the World Time display, you may select to display the time in either **12 Hrs** or **24 Hrs** format.

 
You may also select **Daylight Saving** at this display:

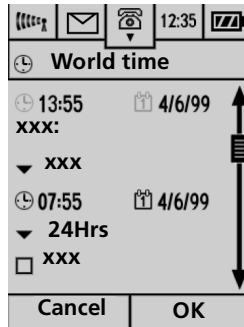

Select City

Set the time and date for the local time first. The device will automatically calculate the time and the date of the other cities with reference to the local time.

 In the World Time display, press the **Local** pull-down box and the **Select Cities** dialogue box will appear:

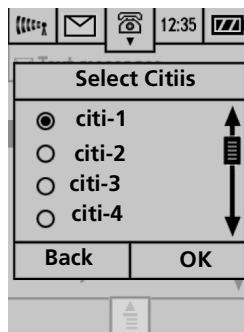


Use the scroll bar to locate the city that you want. Highlight the city name to select it. Press **OK** to return to the World Time display and fill in the city name to the Local pull-down box ; Press **back** to return to the World Time screen with no changes.

Select Time


In the World Time display, press to bring up the **Select Time** dialogue box. Touch or (the number will increase or decrease by 1) to set the hour and minute and also the setting for **AM** or **PM** (for 12Hrs Clock Setting). Press **OK** to return to the World Time display to save the

 changes; press **Cancel** to return to the World Time display with no changes.

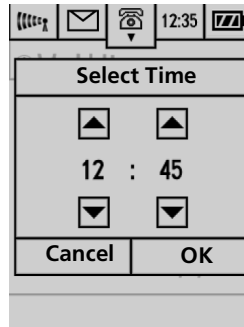

Select Date

 In the World Time display, press **[1]** to bring up the **Set Date** dialogue box. Press or (the number will increase or decrease by 1) to set the Year, Month and Day. Press **OK** to return to the World Time display to save the changes or press **Cancel** to return to the World Time display with no changes.

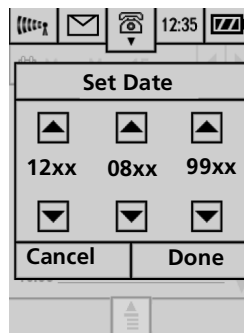

Follow the above steps to adjust the Time and Date of other cities from the **World** pull-down box in the World Time display.

Select 24 Hrs or 12 Hrs from the pull-down box to set the time display format.

Mark the ☒ Daylight Saving checkbox to set the Daylight Saving time.

When the World Time setting is completed, press **Done** to return to the Main Menu to save the changes. (only have Done button show on Taichi)

Event Recording Functions

Memo Pad allows you to record and store messages and ideas in 3 different ways:

- Record Voice Memo,
 - Write Text or
 - Draw sketches.
- ??

 
Voice Notes

***different page between T. Chinese Menu and English Menu (English in page 96 and T. Chinese in Page 104)??

Motorola A6188 can be used to record verbal messages when other recording tools are not convenient.



Recording

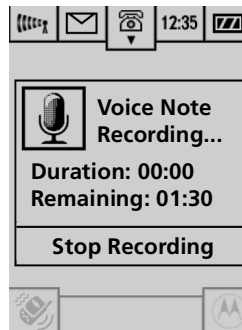
Press the **Record** button on the right side of the phone to start the recording. The display as shown below:



Press the **record** button on the right side of the phone again to stop the recording. You may also press **Stop Recording** on the display to end the recording. At the end of the recording, the phone will automatically combine the start time and the date to form the Heading to store the Voice Notes display.


Replaying and Searching

 At the main menu, press the  icon. Alternatively, you may press the  icon followed by selecting **Voice Notes** under the selection box.(when SIM is having STK functionals built-in)

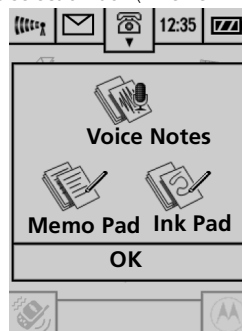

Entering the Voice Notes menu:

 At the Voice Notes menu, all information is recorded in a chronological order. To delete all existing recordings, press icon at the **Voice Notes** menu and select **Erase All**. Press **Exit** to go back to the main menu. Use the scroll bar to scroll up or down the screen to find the title of the recording. Then select the required title to display more details about this particular recording:

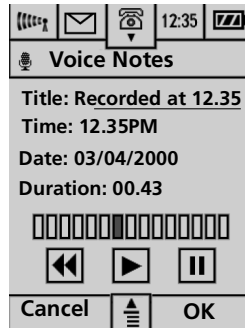



Press icon to play the recording and icon to stop playing, while pressing the icon pauses playing. Press to show the previous recording.

Press the Title key-in area and use the stylus to change the title of the recording. Press **OK** to save the new title and return to the Voice notes menu. Press **Cancel** to return to the previous menu, without saving the changes.

Press the icon at the Voice Notes menu and select **Remaining Time** to find out the amount of time remaining for recording.

  Press **New** at the Voice Recording menu to activate the voice recording function.

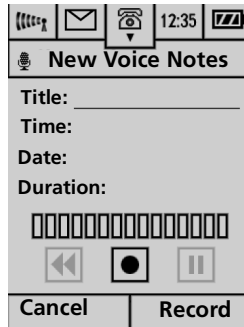


You can press the key-in area for Title, and key in the required information. Press  to record. After recording, it will go back to the Voice Notes display. Press **Done** to go back to Voice Notes menu.

***No response for Press **Time**, **Date** or **Duration** in Taichi??


Note Pad


(English Menu in P.98 and T. Chinese Menu in P.96)??

 You can use the Note Pad to store written information and send the stored information as SMS messages directly.

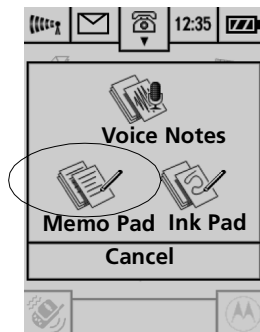

Recording Words

 - 1 Press the  icon at the main menu and select **Note Pad** at the selection box:

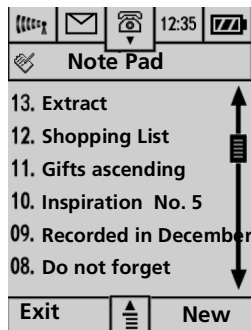

- 2 Press **New** to go to the Editing screen to edit the Note Pad:


Gifts ascending

- 3 Press the key-in area for the Title to key in the Title.
 4 Press the key-in area for the Text to key in the Contents. After keying in all the information, press **OK** to save the information Text.

** Screen to be changed (as in CCD)

 
- 5 Press **OK** to save the new note.

Searching and Editing a Note

- 1 Press the  icon at the main menu and select **Note Pad** at the selection box:

- 2 The memos are arranged in a chronological order (starting from the most recent memo to the oldest memo). Use the scroll bar to scroll up or down the screen to search for the title of the note that you want.


- 3 Press the selected Note Title to display more details about that particular note:

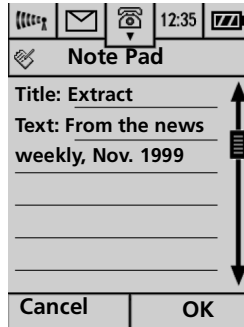


- 4 Press the key-in area for the Title to edit the Title. Press the key-in area for the Text to edit the Contents. After keying in all the information, press **OK** to save the information.
- 5 Press **Exit** to go back to the main menu.

Deleting a Note

 At the Note Pad Title Display menu, press and then select **Delete All**. The screen will appear as shown below. Press **OK** to delete all memos.

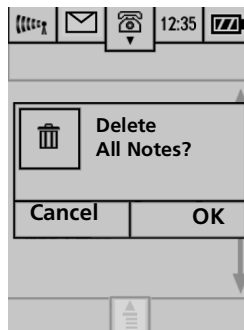

 At the Note displaying screen, press and then select **Delete** to delete the current Note. The below dialogue box will be shown:

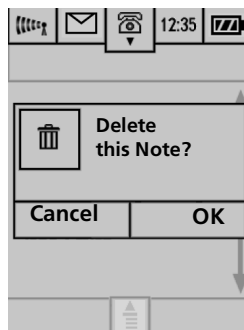


Sending a Note

Press at the Note displaying screen and then press **Send note**. The phone will then show you to add in new messages, select recipients etc and you can send the contents of the note as


short messages. (See Send Messages under Messages Settings)

(Ink) Pad

 You can use the Ink pad to store graphical input and even send these graphics as faxes.

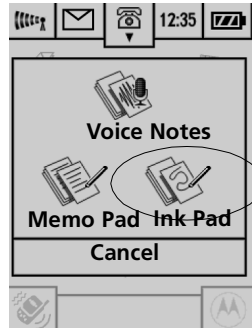


Recording Sketches

- 1 Press the  icon at the main menu and select **Ink Pad** at the selection box. The Ink Pad menu will show as follows:




 - 2 Press **New** and go to the Ink Pad menu as follows:

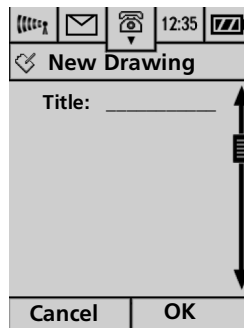

- 3 Press the key-in area for the Title to key in the Title. Press **OK** after you keyed in the title.
- 4 Press the sketch area under the title to enter the Edit Image menu. You can now draw

 any Images in the sketch area. Press **OK** to save the Image.

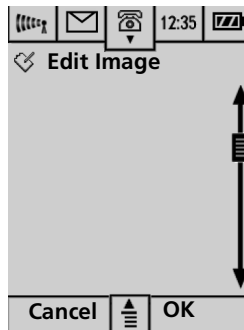

At the *Edit Image* menu, you can:

Press and select **Delete Last Stroke** to delete the last stroke.

(can not find this function in Taichi and T. Chinese)??

Press and select **Clear All** to clear all the strokes.

Press and select **Switch to Eraser** to change the tip of the stylus to eraser (the default setting of the stylus tip is pencil) which can be used to erase graphics. To change the stylus tip back to pencil, simply press [xxx] and then select **Switch to pencil**.

5 When you are done with the title and the sketch, press **OK** to save the image.



Searching and Editing Images

1 Press the icon at the main menu and select **Ink Pad** at the selection box. The **Ink**

Pad menu will show as follows:




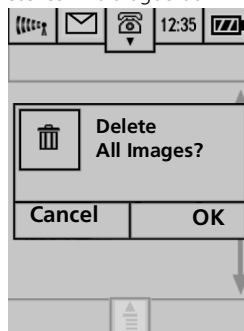 
- 2 The images are arranged in a chronological order (starting from the oldest to most recent images). Use the scroll bar to scroll up or down the screen to search for the image title.
- 3 Press the selected title and go to the Image displaying screen menu as follows:




- 4 You can choose to just check through the images or press sketch area to make changes to the image or the title. (***)just click on the image or the Title to make changes to the image or the Title. Also, doesn't have EDIT button in Taichi???)
- 5 Press **Cancel** and then press **Exit** to go back to the main menu.

Deleting Images


Press  at the **Ink Pad** Display menu, then select **Delete All** to delete all the images. <MISS>Press **OK** can delete all Sketches. A dialogue box will be shown as follows:



Press  at the Image Displaying screen and select **Delete Current Sketch** to delete the current image. Press **OK** to confirm the deletion of the current image as shown:



Fax Drawing


Press  at the image displaying screen and select **Fax Drawing**. Then key in the fax number in the **Nbr** field and (key in the **Attn** field and **subject** if necessary, then press **send**. The image will be sent as Outgoing fax to the entered number). Send the contents of the sketch as outgoing fax. Refer to Send Messages under Message Settings.

 
Press **TO:** to choose Fax Machine or A6188 to determine the destination of the Fax.

<MISS> HINTS???????????

Dictionary



The dictionary of the *Motorola A6188* possesses the capability of translating words and terms from English--Chinese and Chinese--English.

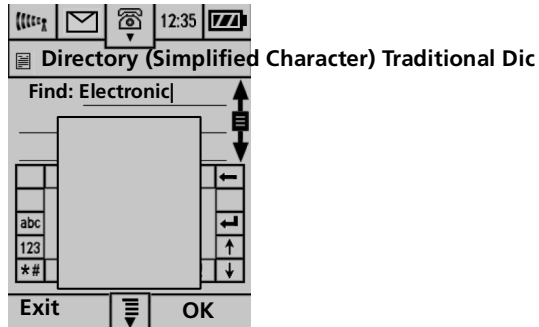- 1 Press  at the main menu to enter the **Dictionary** menu:



**** Screen to be changed (as in CCD)**

- 2 Key in or write the words in the handwritten script board (can be English / Chinese characters or terms) <If English word is written, the dictionary will check for the corresponding Chinese translation and (vice versa)??.>***T. Chinese Menu doesn't have this instruction.

 Press  and select the mode of keying in the words (can be Pin Yin, Zhu Yin or English). Refer to the usage of the handwritten script board.

- 3 After keying in the words, press **OK** and the list of similar / related words will be shown

as follows:




- 4 Press or to scroll up or down the screen to search for more related words. You can also press or to scroll the screen to the left or right. If the screen has already displayed all the related words and there is no need to use the scroll keys, these icons will be grey in colour and deactivated
- 5 When you have found the required word / term, select it and enter the **Term Explanation** screen:



 
- 6 Press **FindNew** to enter the **Find** display. Press **OK** after you keyed in the words to begin a new search. Press **Back** to return to the previous menu.
- 7 Press and then select:
 - Other tenses**: shows the other tense of the word / term (whether it is a noun, verb etc)
 - Previous Word**: shows the word before the searched word in the dictionary.
 - Next Word**: shows the word after the searched word in the dictionary.
 - Exit Dictionary**: Exits from the dictionary and returns to the main menu.

***Taichi also have "Synonym" and "Antonym" in menu. Its depends on the word (you input) have "Synonym" and "Antonym or not.???"

Calculator

- 1 Press  at the main menu and go to a **Simulated Calculator** screen:

Calculation
in progress

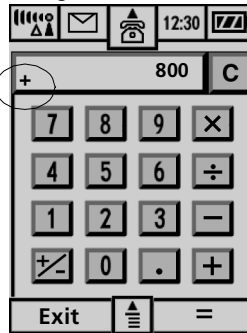

- 2 Press the numeric pad and calculation pad.
- 3 Press = to show the calculated results. Press **C** to clear the numbers in the number display. Press **CE** (or press **C** twice) to clear all previous calculations.
- 4 Press **Exit** to return to the main menu.

 Press  and then press

Memory +: To add the number in the number display to the number stored in the memory.

Memory -: To subtract the number in the number display from the number in the memory.



Memory Clear: to clear the number in the memory (the number in the memory becomes 0, and the **M** in the left corner of the number display will be dismissed).

Memory Recall: to show the number in the memory in the number display

can not find this function in Taichi, also in T. Chinese Menu doesn't have this instruction.???



Event Recording Functions

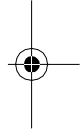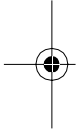

Systems Setup

Setups, Selections and Values

The setup of a systems determines how to execute the various functions. When the device is launched to the market from the factory, the system is setup such that you can execute various functions simply by inserting a SIM Card. However, to satisfy more diverse communications needs, you can re-define and tailor the systems setup to meet your sophisticated communication requirements.

There are ten main types of systems setup, including:

- Security
- Memory Usage
- Initial Setup
- Phone Setup
- Sounds & Alerts
- Display Setup
- Messaging Setup
- Network Setup
- Browser Setup
- Power Management

Each type of setup also entails a few selections where you can choose to select the setup and input the various setup value (See Systems Setup, Setup Selections and Setup Value at the later part of this section). These different settings control the function of a phone.

In addition, some setup selections are also related to the various functions of a phone. They do not come under Systems Setup, but are included in the related functions, e.g.:


Messaging??? Setup: Refer to Short Message ??? Function


(Daily Activities Arrangement) Date Book Setup: Refer to PDA Function.

Lunar Calendar Setup: Refer to PDA Function.

<MISS> T. Chinese Menu doesn't have this instruction???

Setup Capabilities

Press  at the main menu to go to the **Systems Setup** Display:

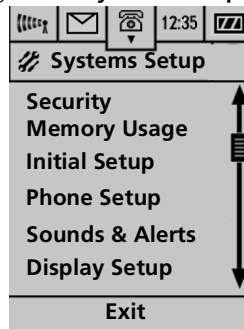


You can use the scroll bar to scroll up or down the screen to look for the type of setup that you want to change.

Press **Exit** to return to the main Menu display.

The following section covers the various Setups, the Setup Selections, the Setup Values and the Default Settings of the various Setup selections.

Security Features

You can execute the functions of the Security Settings by setting up the PIN and various selections to prevent the use of the phone by unauthorized users and to restrict the use of certain phone functions.

Press  at the main menu to enter the **Systems Setup** menu. Select **Security Features** and go to the **Security Setup** display:



The Phone Lock function protects your phone from being used by unauthorized users as you need a PIN to unlock your phone before using it.

The PIN is a 4-digit number. The default manufacturer's setting for PIN is 1234 but you can change the PIN for security purposes.

Lock Phone Now

Press **Lock Phone Now** and you can lock the phone immediately, preventing it from being used. The phone can only be unlock by keying in the right phone unlock code. After pressing this selection, the screen will appear as follows:



Key in the Unlock code and then press **Enter**

If the wrong code is keyed in, the screen will show **Invalid Code, please try again.**

If the correct code is inputted, the screen will show **Phone Locked**. The following screen will

appear:



***Menu Bar and Send Button gray out???

Key in your Code: you can use the number pad to key in your Code and press Enter to unlock the phone. After key in the number, the send button change back to normal but the menu bar still gray out

Press delete the last digit.

When the phone is locked, you can still make GSM emergency phone calls by keying in "112" and press **Send** to make the call. When the phone is dialing (but not connected), you can press **End** to stop the dialing and end the call.

Auto Lock

You can setup the phone such that Auto Lock will be activated every time you turn on the phone. You can choose to either turn the **Auto Lock ON** or **OFF**.

When the Security setup menu shows that Auto Lock is ON (or Auto Lock is OFF), press **Auto Lock**, key in your Phone Unlock Code and press **Enter**. When the Phone Unlock Code is correct, you can change the Auto Lock to OFF (or Auto Lock is ON) and return to the Security Features menu. Press **Cancel** to return to the previous menu without changing the settings.

Fixed Dialing

Fixed Dialing allows you to limit use (typically third-party use) of your phone to a predefined list of telephone numbers of, if you wish, to a list of country codes, area codes, or other prefixes of your choice.

The availability of the Fixed Dialing function depends on the type of SIM Card.

When the Security Features menu shows that **Fixed Dialing** is **ON** (or Fixed Dialing is **OFF**), press **Fixed Dialing**, key in your SIM PIN and press **OK**. When the PIN is correct, you can change the Fixed Dialing to OFF (or Fixed Dialing is ON) and return to the Security setup menu. Press **Cancel** to return to the previous menu without changing the settings.

<<Missing a paragraph about status and how to add contact in Fixed Dialing>>??

SIM Request

 
PIN is the secret code of the SIM Card. You can pre-set a PIN to prevent unauthorized users from using your SIM Card. You can select this function as **ON** or **OFF**. If you select the function as ON, you have to key in your PIN every time you turn on the phone, failing which you will be unable to use the phone.

When the Security setup menu shows that **SIM Request** is **ON** (or SIM Request is **OFF**), press **SIM Request**, key in your PIN and press **Enter**. When the PIN is correct, you can change the PIN Requirements to OFF (or SIM Request is ON) and return to the Security setup menu. Press **Cancel** to return to the previous menu without changing the settings.

Call Barring

Call Barring is a network feature which can be used to selectively bar outgoing and incoming calls.

At the Security Features menu, press **Call Barring** and Press **Done** to return to the Security setup menu without changing the settings.

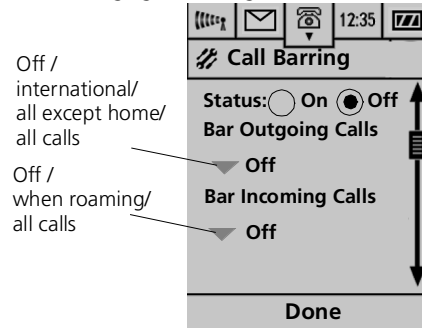

You can select the mode of Call Barring as **ON** or **OFF**.

Press the **Bar Outgoing Calls** to select the call barring options.

International Calls: When selected, this option will bar outgoing international calls

All Except Home: When selected, this option will bar outgoing international calls, except those to your home country.

All Calls: When selected, this option will bar all outgoing calls, except GSM emergency calls.

Off: When selected, this option will disable all call barring for outgoing calls.

Press the **Bar Incoming Calls** to select the call barring options.

when Roaming: When selected, this option will bar incoming calls when you are roaming between networks.

All Calls: When selected, this option will bar all incoming calls

Off: When selected, this option will disable all call barring for incoming calls.

Roaming between the networks refers to roaming between the different GSM networks, not necessarily in terms of roaming in different regions or countries. For example, regardless of whether a China Telecom subscriber is in Beijing or XiAn, as long as he is still using the China Telecom network (and not other networks), he is NOT considered as roaming between networks.


Press **Done** to change the settings and return to the Security setup menu.

<Press **Cancel** to return to the Security Feature menu without changing the settings.>***

T. Chinese Menu doesn't have this instruction.???


Passwords: allows you to change your PIN

Press **Passwords** and the PIN Display menu will show:

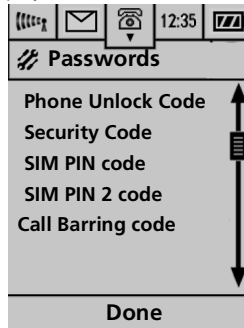

Press **Done** to return to the Security setup menu. Press a particular PIN selection to edit and change the PIN. For example, changing the Phone Unlock Code in this case:



 To change the SIM card PIN code, the PIN Requirements must be set to **ON** and you must enter the old PIN code before you can proceed.

When you keyed in the wrong PIN code, the screen will show **Invalid PIN code, 2 more tries**. If you keyed in the wrong PIN again, the screen will prompt **Invalid PIN code, 1 last try**. If the PIN number is entered incorrectly 3 times in a row, your SIM card will automatically lock-up and the Blocked message will be displayed.

If your SIM card is lock-up, and you receive the Blocked message, you will need to enter a PIN Unblock (PUK) code and key sequence before you can use the phone. You will need to contact your service provider (SingTel Mobile, M1, etc.) for the PUK code to unlock the SIM card.

⚠ If the PUK code is entered incorrectly 10 times in a row, your SIM card will become permanently blocked.

SIM Card Unlock Screen:

Press **PDAMode** selects and activates the PDA mode. In this mode, the device is not able to make any calls (not in phone mode) and the SIM card remains locked.

At the PIN code: Use the number pad to enter the PIN code. Press to delete the last digit. Press **Enter** and the screen will prompt you to enter the SIM card PIN code. Press **OK** and go to the PUK screen as follows:



At the PIN code: Use the number pad to enter the PIN code. Press to delete the last digit. Press **OK**. If the PIN code and the earlier PIN are entered correctly, the SIM card will be unlocked.

Device Memory Usage Status


Various device functions like address book, messages Center, (activities planner)???, Date Book, Note Pad, Ink Pad, etc use the main memory of the device, while the SIM Card phone book and short message folder use the memory of the SIM Card. When a lot of information has been stored and the main memory is going to be full, the screen will show:

 


***No OK button show on Taichi – memory full message just appear a few seconds and automatic disappears???

You may choose to delete some information from the various phone functions or transfer the information to a PC using the data synchronization method, freeing up the memory space. (Refer to the delete operation of the various phone functions and Data Synchronization method).

Checking Memory Usage Status


Press  at the main menu to go to the **Systems Setup** menu, then select **Memory Usage** to go the Memory Usage Situation display as follows:

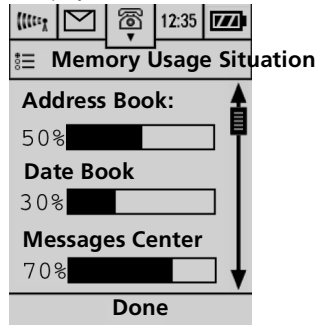


You can use the scroll bar to scroll up or down the screen to check the memory usage situation of the various phone functions and decide if you need to delete or transfer the data.

Press **Done** and return to the **Systems Setup** screen.

Initial Setup

You can use the initial setup to set the clock, date, language, details of the phone owner and other basic information. Press  at the main menu to go to the **Systems Setup** display, then select **Initial Setup** to enter the following display:

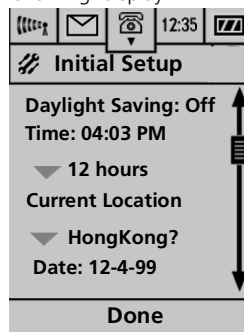

You can use the scroll bar to scroll up or down the screen to check the various setup selections and the setup value.

Press **Done** and return to the **Systems Setup** display.

Daylight Saving: you can choose to turn the Daylight Saving mode **On** or **Off**.

At the Initial Setup display,

when it shows Daylight Saving On, select Daylight Saving mode to turn it Off.

when it shows Daylight Saving Off, select Daylight Saving mode to turn it On.

Clock Settings: you can use this to adjust the time of the phone.

Select **Time** at the Initial Setup screen, a clock settings dialogue box will appear, prompting you

to adjust the time. (See the Clock Settings under Diary)

Time Format

At the Initial Setup display, you can select either the 24 hours or 12 hours selection box to set up the time format.

Date Settings: you can use the date settings to set the date.

Select Date at the Initial Setup screen, the date setting dialogue box will appear, prompting you to set the date. (See Date Settings under Calendar).

Date Format

At the Initial Setup display, press the Date Format selection box to select the date format.

yyyy-mm-dd (Year-Month-Day)

mm-dd-yyyy (Month-Day-yr)

dd-mm-yyyy (Day-Month-yr)

Language Selection: used to change the language for display messages. When you select a language, all further display prompts and help messages will be in the selected language.

At the Initial Setup display, press the **Language Selection** box and select a language option from the single selection box. Selection options include:

English

Simplified Chinese

Traditional Chinese

Automatic

(Chinese input)

Simplified

Traditional



Press **OK** to confirm your choice and the chosen language will be displayed. Press **Cancel** to abort changing the language currently being used.

Place (Current Location)

At the Initial Setup screen, press the Current Location selection box and a dialogue box will appear, prompting you to select a city.

Personalization


At the Initial Setup screen, press personalization to go to the NewPerson / Edit:Owner display to search and edit various information about the phone owner. See Search / Edit Contacts Information under the Address Book.

 Press  icon at the main menu to display the phone owner's properties.

Startup Greetings: the greeting that will be shown when you turn on the phone.

At the Initial Setup display, press Startup Greetings and enter the required greeting at the key-in area. Press OK to confirm the greeting that you have just entered and the greeting will be shown every time you just turn on the phone.


Master Reset

 **This option should be used with caution.**

This option is used to restore certain phone options to their original settings.

Select **Master Reset** at the Initial Setup display. The screen will prompt you to enter the security code. If the correct security code is entered, the dialogue box will show "**Reset Settings to Factory?**" Press **OK** to return to default settings and press **Cancel** to abort operation.

Master Clear

 **This option should be used with extreme caution.**

Besides performing the same operations as Master Reset, the Master Clear will also clear the


Phone Book entries from phone memory (not from SIM memory).


Select **Master Clear** at the Initial Setup screen. The screen will prompt you to enter the security code. If the correct security code is entered, the dialogue box will show **Clear all Data from Phone?** Press **OK** to execute the operation and press **Cancel** to abort the operation.

“***Taichi have “Text Input” instruction in Initial Setup display”??

Phone Setup


This setup determines the performance of the phone during a phone call.

Press  at the main menu to go to the **Systems Setup** display. Select Phone Setup to enter the Phone Setup display as follows:

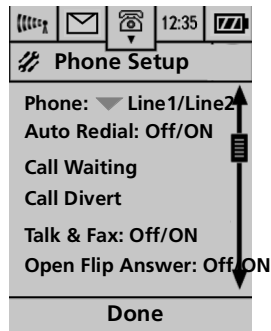

Phone Selection for Phone Line

A SIM Card carries two lines and this option allows you to switch between Line 1 and Line 2. Press and Scroll down the selection box to select a line (usually Line 1 is being used).

 *Availability depends on the type and settings of the SIM card, and/or your subscription to this feature.*

Auto Redial

You can select to turn this option on or off. If your call attempt does not succeed, After few seconds will automatic redial the phone number.

when it shows Auto Redial On, select Auto Redial to turn it Off.

when it shows Auto Redial Off, select Auto Redial to turn it On.

Flip Answer

when it shows Flip Answer On, select Flip Answer to turn it Off.

when it shows Flip Answer Off, select Flip Answer to turn it On.

Auto Answer

Sets up the phone such that incoming call will be automatically answered upon the second ring.

***this function doesn't work (without using handsfree)???

when it shows Auto Answer On, select Auto Answer to turn it Off.

when it shows Auto Answer Off, select Auto Answer to turn it On.

My Number

You can enter the names and telephone numbers of Line 1 and Line 2.

Talk & Fax

This is a network feature that allows you to speak and then send or receive a fax during the course of a single call. ***when I select “Talk & Fax” ON , the Phone can not receive or answer

any call.

when it shows Talk & Fax On, select Talk & Fax to turn it Off.

when it shows Talk & Fax Off, select Talk & Fax to turn it On.

Call Waiting


[Note!] This is an option that requires the network support.

You can set it on or off such that you can place an active call on hold and accept an incoming call or start a second call (and not set busy tone).

when it shows Call Waiting On, select Call Waiting and the phone will register with the network (the screen will show " Please wait...") to turn it Off and press **OK**.


when it shows Call Waiting Off, select Call Waiting and the phone will register with the network (the screen will show " Please wait...") to turn it On and press **OK**.

Call Divert

 *Call Divert requires network support.*

If your phone is unavailable or you do not wish to receive calls, incoming calls can be diverted to other phone numbers (or fax numbers).

Select **Call Divert** at the Phone Setup display and the Call Divert display will appear as follows:

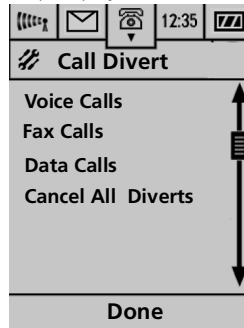

Press **Cancel All** Diverts to cancel the diversion of incoming calls.

Press Voice Calls, Fax Calls or Data Calls. After registering with the network, you can select the various diverting options. For example, in the case of diverting Voice Calls:

Divert All Voice Calls

At Call Diverting title, press All Voice Calls. This option has two settings, On or Off.

If you change the setting to On and press key-in area of To:, you will be asked to enter a diversion phone number using the digit keypad. Press **OK** to confirm the key-in number.

Press **OK** and all incoming calls will be diverted to the keyed in phone number.

Detailed Divert

This option allows you to divert voice calls to different numbers, depending on the different status of your phone.

If Busy

Diverts incoming calls when your phone is busy

If Not Reachable

Diverts incoming calls when you are not in the network coverage area.

If No Answer

Diverts incoming calls if you do not answer the call.


You can divert the calls under different conditions. Refer to Divert All Voice Calls.

After you have set up the diversion, press **OK** to return to the Phone Setup menu.

***Taichi also have "Unavailable" in the Voice Call Divert display.???

Call Meters

At the Phone Setup Display, select **Call Meters** to enter the Call Meters display as follows:

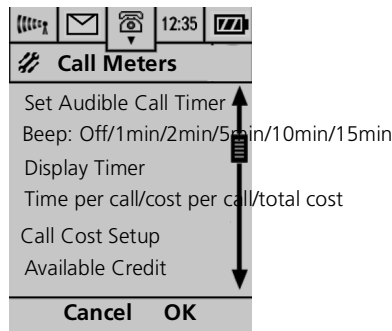

Audible Timer

The timer is set up such that it will beep at pre-set intervals .

At the Audible Call Timers screen, press the beep selection box to select the pre-set intervals.

Selection options include:

- Off
- 1 minute
- 2 minutes
- 5 minutes
- 10 minutes
- 15 minutes

Display Timer

This feature allows you to display the duration of your calls.

At the Display Timer, scroll down the selection box to choose:

- time per call
- cost per call
- Total cost

Call Cost Setup

This option requires network support provided by the service operators.

At the Phone Setup menu, select **Call Charges Settings**. The screen will prompt you to enter a PIN2. If the correct PIN is entered, you will go to the Call Charges settings to do the following settings:

Total Call Charges

Two setting under this option: On or Off to determine whether to limit Total Call Charges. You can also choose to **Set Total Charge Limit** by entering the Charge Limit amount in the key-in area.

Set Charge Type

This option defines whether charge information is displayed as either phone time units or currency.

Currency

Press **Currency** (if you have selected phone units, the currency scroll box will become grey colour, indicating that it is not in use) and select the type of currency that you want.

Charges

Defines the call charges per time unit

Reset Total Charge Limit

Select this option and press **OK** to confirm your selection. You will then return to the Call Meters screen, with a new / reset total charge limit.

Available Credits



Select this option displays the remaining credits of a pre-paid telephone call.

Total Call Charges

Displays the costs of all your chargeable calls.

Lifetime Timer


This option is used to display the total time of all calls made on your phone.

 
 Press  at the Call Meters screen, then select **Reset Call Timer**. A dialogue box will appear, press **OK** to confirm your selection and the Call Timers and Call Charges Meters will be reset to zero.

The Lifetime Timer cannot be reset as it records the lifetime of your phone.

@@ upto here is from amended source fm HK???

Ringtone and Volume (Sounds & Alert)

In the Main Menu, press  to enter the **System Setting** display. Press on **Sounds & Alerts** to bring up the setting display:

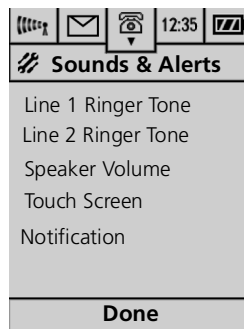


You may adjust the volume, status and sound type for all the above choices.

VibraRing setting the vibration and ringing for incoming call.

You can have different settings for Line 1 and Line 2.

In the **Sounds & Alerts** setting display, press **Line 1 Ring Tone** or **Line 2 Ring Tone** to enter

the VibraRing display:

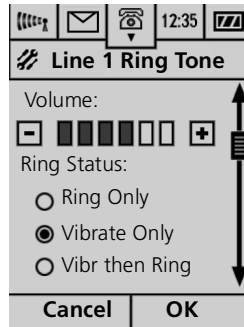

Press on or to lower or increase the volume:

In the **Ring Status**, select one of the following options:

Ring Only

Vibrate Only

Vibrate then Ring

Silent

In the **Ringer Styles**, you can choose between 18 different types of ringing tone (Standard, British, ...Music6, Music7).

After you have finished the setup, press on **OK** to return to the **Sounds & Alerts** display to save the changes.

Keypad Tone ??

In the Ring and Tone setting display, press on **Keypad Tone** to bring up the display.

Press on or to lower or increase the volume:

In the **Tone Type** setting display, you can select the different type of keypad tone:

Beep (DTMF)

Tone

Silent

After you have finished the setup, press on **OK** to return to the **Sounds & Alerts** display to save the changes.

Touch Tone setting the display tone.

In the Ring and Tone setting display, press on **Touch Tone** to bring up the display.

Press on or to lower or increase the volume:

In the **Tone Type** Setting, you can select the different type of tones:

Dial Tone

Single Tone

Silent

After you have finished the setup, press on **OK** to return to the **Sounds & Alerts** display to save the changes.

Alarm Sound

You can set the Alarm Sound for receiving messages and scheduled appointment.

In the Ring and Tone setting display, select Alarm Sound to enter the display.


In the Volume Setting, press on or to lower or increase the volume


Mark the ☐ checkboxes ☒ for *Text Message*, *Voicemail*, *Message Services* and *Appointment* to

enable the Alarm Sound for the various options.



Press on the **Alarm Type** pull-down box to select between 13 different types of ringing tones. After you have finished the setup, press on **OK** to return to the Ring and Tone display to save the changes.

Display Settings

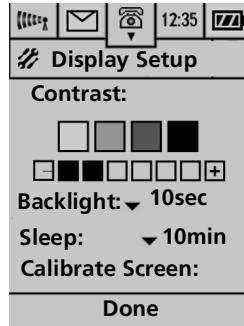In the Main Menu, press  to enter the **System Setting** display and press on **Display Setting** to enter the display.



In the Display Setting display, there are four boxes underneath the **Contrast** setting to select between the 4 different contrast levels.

Press on  or  to decrease or increase the brightness.

In the **Display Setup** display, press the **Backlight** delay pull-down box to set the elapsed time interval before the background light goes off during period of inactivity:

- 10 second
- 20 second
- 30 second
- 60 second


In the **Display Setup** display, press the **Sleep** mode pull-down box to set the elapsed time interval before the screen goes into sleep mode: (which will resume on any activity)

- 1 min
- 2 min
- 5 min

When the Stylus Pen is not pointing accurately on the display, it is time to calibrate it. In the Display **Display Setup** display, you can press on **Calibrate Screen** to enter the following display:



Follow the instructions (touch the center of the circle) and after a few tries, the following display will appear:

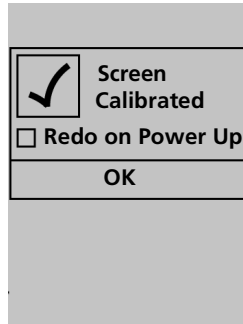

If the **Redo On Power Up** checkbox is marked, the above *Calibrate Screen* display will appear first when the power is turn on.

Network Setting

In order to use the hand phone, it must be registered in either a GSM900 or GSM1800 band network or a GSM900/GSM1800 dual-band network.

Generally, the phone will automatically search for a network that it can register and use.

The phone will follow this sequence in registering a network:


- The network that is incorporated into the SIM card


- The preferred network list

- The network that is above specific service strength

- The stronger network


The phone will not search for a network that is barred by the SIM card

In the Main Menu, press  to enter the **System Setting** display and then press on **Network Setup** to enter the display:

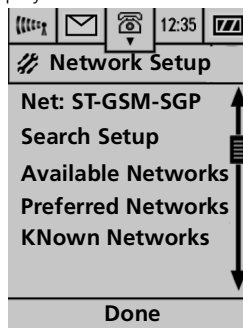

The current network is shown in the Network Setting. Press on **Net:** and the following dialogue

box will appear:

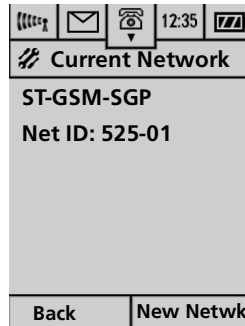


After viewing the current network details, you can press on **Back** to return to the Network Setting display.

Press on **Search Setup** and the display will show **Searching For Network...** .If a network is found, the display will show **Registering Network...** .If no network is found, the display will show **No Network Found**.

Network Search Setting

This setting allows you to specify how the phone searches and registers the network and also the number of networks it can search for.

In the **Network Setup**, press on **Search Setup** to enter the display:

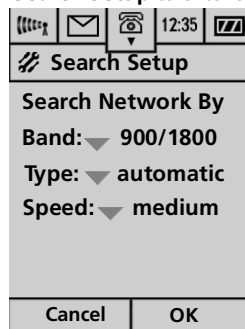

Network Band

Network band allows you to specify the preferred network band. A change of the network band might cause a failure in network search. Please use a suitable network band. See...[?]

In the Network Search Setup display, select the **Band** pull-down box to select between:

- 900 MHz,
- 1800 MHz or
- 900/1800 MHz band.

Network Type

Lets you specify the ways the phone search and register a network.

In the Network **Search Setup** display, select the **Type** pull-down box to select between:

- Automatic or
- Manual Search.

In the **Automatic** Search method, the phone will follow the sequence listed above in its attempt to register a network. If it is successful, the name of the network will appear on the status bar at

the bottom of the display and it awaits confirmation. If it is unable to locate a network and after a certain time (the duration is dependent on the number of networks it searches for), it will repeat the search process.

In the **Manual** Search method, a network sequence list will appear (see *Available Network*). Use the scroll bar to select the network that you want. Press on **OK** to register the network. If the registration is successful, the name of the network will appear on the status bar at the bottom of the screen and it awaits confirmation. If it is unable to locate the network and after a certain time (the duration is dependent on the number of networks it searches for), it will list the network sequence again.

Search Speed

This function decides when the network registration is unsuccessful, how much time should lapse before it tries to register again.

In the Network **Search Setup** display, select the **Speed** pull-down box to select:


- Slow,
- Medium,
- Fast or
- Continuous.

 *Fast and Continuous Search Speed drain the battery power.*

Available Networks


Show the networks that are present in the area, which it can attempt to register.

In the Network Setup display, you can press on **Available Networks** to enter the display which lists the networks that are present in the area:

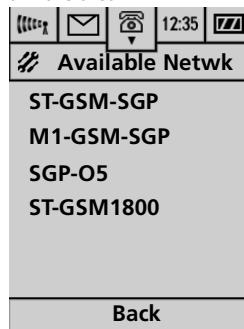

If listed networks are more than 6, use the scroll bar to view the available networks in the area. Press on **Back** to return to the Network Setting display.

Select the network that you want to bring up the dialogue box:

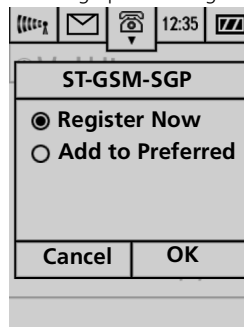


Select between **Add to Preferred Network** or **Register Now**. Press on **OK** and the respective messages **Adding To Preferred Network...** or **Registering...** will appear. On completion, it will return to the **Available Netwk** display.


Preferred Network

Shows the preferred network list. Networks can be appended from here.

In the **Network Setup** display, press on **Preferred Networks** to enter the display:

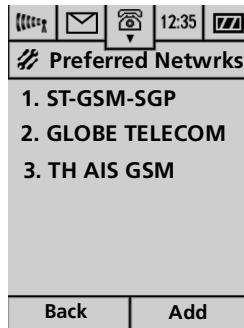


If listed networks are more than 6, use the scroll bar to see the preferred network list. Press on **Back** to return to the **Network Setup** display. Press on **Add** to bring up the **Add Network** display:

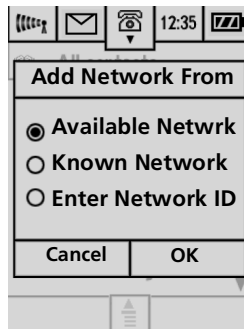


Select **Available Network** or **Known Network** and it will be appended to the Preferred Network list. In addition, you may choose to **Enter Network ID** to append the network to the Preferred Network list. Press on **OK** to begin adding.

If **Enter Network ID** is selected, press on **OK** to enter the display:

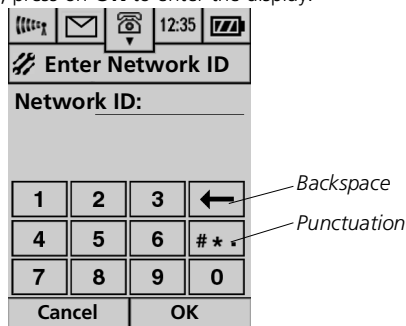

Select **Network ID** on the display and enter the number. Press on **OK** and if the network is available, it will be added to the Preferred Network list and the display will return to the **Preferred Networks** display.


In the **Preferred Networks** display, select the network name (Example, **Network1**) to bring up the dialogue box:

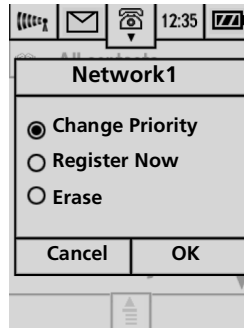

Select either **Change Priority**, **Register Now** or **Erase**. Press on **OK** to go to the next display or *back* to return to **Preferred Networks** display.


If **Register Now** is selected, **Searching...** will appear. If the network is found, **Registering...** will appear. If the registration is successful, the network will be used.

 If **Change Priority** is selected, the following display will appear:

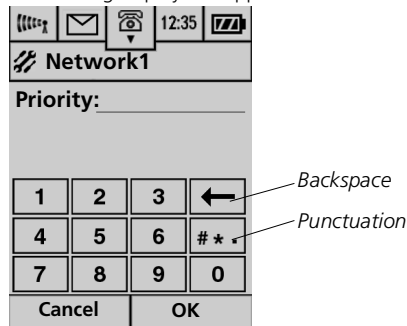


Select **Priority** on the display to enter the nominal position of the network. For example, press on **1** and **OK** to position the network at the top of the preferred network list and the rest of the network will subsequently be shifted one rank behind.


Select **Erase** to bring up the dialogue box:

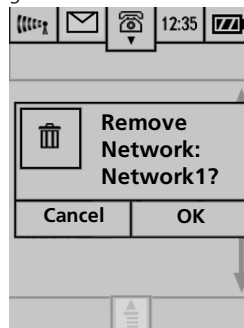

Press on **OK** to remove the network from the Preferred Network list and return to the **Preferred Netwrks** display.

Power Management

In the Main menu, press  to enter the **System Setting** display. Press on **Power Management** to enter the display:

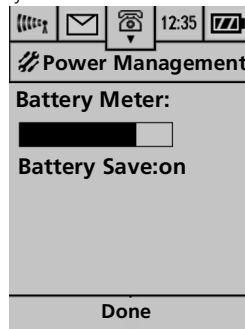


The bar indicates the remaining power of the battery.

In the **Power Management** display, select the **Battery Save** mode to toggle between **On** and **Off**.

Accessories Setting

Accessories Setting for Car Phone and Headset (Hands-Free Set).

In the Main menu, press  to enter the **System Setting** display. Press on **Accessories Setting** to enter the display.

In the **Car Phone** setting, you can select:

Auto Pick Up: automatically pick up incoming calls.

Auto Hands-Free: automatically switch to hands-free function.

Silent Car Stereo: cars stereo volume automatically goes off on any incoming calls. Automatically goes on again when call is over.

When the phone is attached to the car phone accessory set, select **Auto Shutdown Delay** to set the elapsed time interval to automatically shutdown the phone when it is not being used:

15 min

30 min

60 min


Do not shutdown

In the Headset (*Hands-Free Set*) setting, select **Auto Pick Up** to enable the phone to automatically pick up incoming calls when the headset is being attached to the phone.


After the setting is completed, press on **OK** to go back to the **System Setup** display to save the changes.

SIM Toolkit Services

The Motorola A6188 supports the various SIM Toolkit (STK) services offered by the network providers. This greatly enhances the capabilities of your Motorola A6188.

 *The features are dependent on whether the network providers offer the services and whether you have subscribed to the services.*

Your cellular service provider determines the messages associated with the SIM Toolkit services. In the Main menu, press  to enter the **SIM Card Services** display:

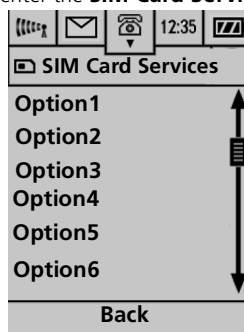


Press on **Back** to return to the Main Menu.

Use the scroll bar to view the list of services provided and select the **Service** name to see more options.


The display and various options might be in the following format:

Next Level List of Options

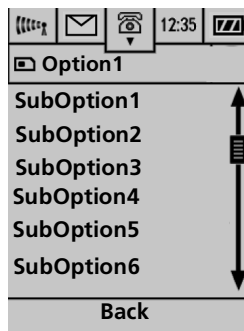

Select the option to go to the next level of choice or press on **Back** to return to the previous display.


Service Message

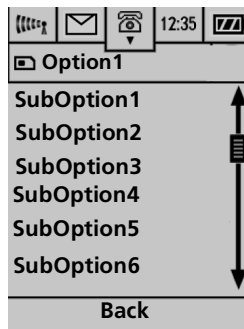

Read the messages or press on **Back** to return to the previous display.


Entering a Message and Be Prompted

**** Screen to be changed (as in CCD)**

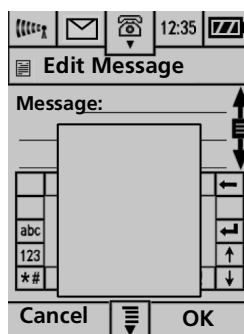

This service prompts you to enter a message. Press on **OK** when done.

Connect to Service

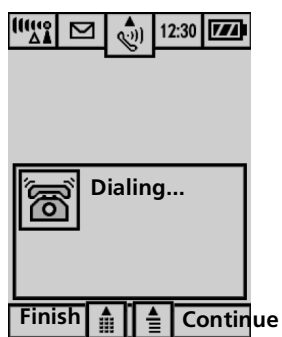


When dialing a service,
Press on **Finish** to return to previous display.
Press on **Continue** to dial this service. (See Phone Feature)

Sending a Short Message

In the course of sending or receiving message, you can press **Cancel** to terminate the process.
After a message is sent, you may receive a message transmitted by the network provider.

Games

The Motorola A6188 provides three classic games Wu Zi Qi, Hua Rong Dao and Memory. In the main menu, press  to list the games.



Press on the game name you wish to play.


Wu Zi Qi


The game Wu Zi Qi is also known as Five Pawns. It originated from the ancient Chinese chess game of Go and is now featured in international competitions. The rules of Wu Zi Qi are simple but the game play is intricate in nature. The chessboard is a 15 by 15 grid. Two players each with either a black or a white sets of beads compete with each other. Each player takes turn to place a bead at a crosshair of the grid. The first player to form a string of five beads in a horizontal, vertical or diagonal line wins the game.

Using the *Motorola A6188*, you can compete with another person or play against the processor on the phone.

At international competition, the game has numerous rules. The international competition rules of play are available at the website <http://games.chinaroad.cn.net/wuziqi/>. The *Motorola A6188* does not follow entirely all the competition rules of play, but only uses a simplified set of rules. in order to regulate the first move player. If any rule is contravened, the first move player will lose the game.


Press **Wu Zi Qi** game to display the Wu Zi qi game screen.:

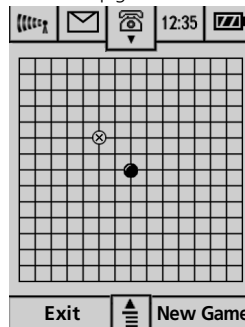

To begin the game, regardless of who makes the first move (selectable by pressing  for game options) the first bead always begin at the centre of the board.

Press on **New Game** to start a new game at any time. When it is your turn, use the Stylus to select the spot where you want to place the bead. You must attempt to form a string of five beads faster than your opponent does and at the same time prevent the other player from doing

the same. The phone will announce the result of the game by displaying **You Win!** or it will display **Phone Wins!**

Press  to select the following game options:

New Game

Select **New Game** option if you wish to start fresh game. Selecting New Game option before the current game is running asks you **Quit and Play New Game?** Press **OK** to continue.

Confirm Move: On/Off

Select between **On** or **Off**. If you choose On, the lower right hand corner of the screen will become OK. After you place your move, your opponent will not place yet. You can choose to change your move to another position until you press **OK**.

Opponent

In the **Opponent** dialogue box choose either **Phone** or **Another Player** as the second player. When selected **Phone**, check the **I Go First** box to determine which player goes first. Press **OK** to select.

Difficulty Level

In the **Opponent** dialogue box Select **Novice**, **Intermediate** or **Expert** by pressing respective radio button and press **OK** to continue.

Instructions

In the **Instructions** screen you see text instructions about playing the Wu Zi Qi game. Press scroll bar to read it fully. Press on **Exit** to return to the Wu Zi Qi game screen.

In the Wu Zi Qi game screen press on **Exit** to quit to the Game Menu.

Practice hard on your Motorola A6188 and obtain your international Dan ranking in Wu Zi Qi!

Wu Zi Qi Basic Violations

O represents the placement position of a first move player bead.

X represents the violation position.

3 in a row violation

OOX	OO	OOX
O	X	O
O	OO	O

4 in a row violation

OOOX	O	OOOX
O	OOXO	O
O	O	O
O	O	O


Single row violation

OOXOOO

Hua Rong Dao

The game of Hua Rong Dao originated from the story of the capture and release of King Cao Cao during the period of the three kingdoms of ancient China.

This is a traditional Chinese intellectual game of jig-saw. King Cao Cao holds four grids on the game board and has the largest square. Besides the King there are five Generals each holding a space of two grids squares, and soldiers of one grid square each. The King is surrounded by the Generals. Using the two empty grids you have to move the squares until the King reaches the exit point in the least number of steps.

At the main menu press  to enter the games menu. Press **Hua Rong Dao** to begin the game.



Press **New Game** to start a new game at any time

Press the squares (King's photo) on the board to move the squares to adjacent space available.

If a square does not have a space to move, pressing it will have no effect.


If the square has only one possible direction to move, pressing it will move it into that direction.


Every move is counted one by a counter.

If there are two possible directions to move, the pressed square will become highlighted. Just press on the desired space and the square will move into that direction. Every move on the board is counted one by the counter.

Press **Exit** to end the game and return to the Game Menu.

Memory

At the main menu press  to enter the games menu. Press **Memory** to begin the memory game. Press **New Game** to start a new game at any time.

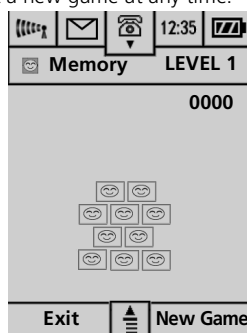

At the start of the game you will see a few stacks of cards on the display. Each of them will be facing down. Click on the stacks to flip open the first card. The idea of this game is to remember the objects on the cards and match a same object on the subsequent click.

Once you have match on a subsequent click the two cards will remain open. If you do not have a match on the second click you need to click on a third card. If you do not get two matching cards from the three opened cards, all the three will close. If there is a pair of match among the 3 opened cards, the matching pair will remain open and the third one will close itself.

When all the cards are open you have completed the game! The counter will show you the number of errors you made and the number of tries you took to complete the game. The lesser the number of tries and errors, the better is your skill in this game of memory.


Press  to enter game options.

LEVEL 1 - 6: you can select any number from one to six for the Level of difficulty. The higher the level the more number of stacks.

2 Players: you can also select modes for single or double players.

Instructions: Press to open the instructions display. Scroll down to read the text.

If you choose double player mode, the display show as below:

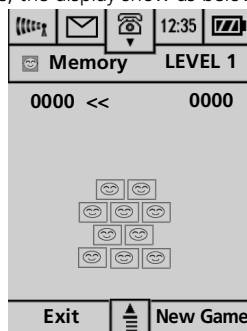

On the top of the display there is a counter that gives the score of the active player. The player with a higher score on the counter will be the winner.

The << appears beside the score to indicate which player is active. The active player will continue to play until the marker changes to >> when his opponent takes over. If you have a match of cards opened, the active player will score one point. The game ends when all the cards are open.


Data Synchronization with PC

Synchronization Software

Through the *TrueSync* software, Motorola A6188 can send and receive communications log, appointments and email between itself and a PC (personal computer). This ensures that data on both sides is updated at all time.

Communications link between the PC and the Motorola A6188 can either be through a cable or by infrared connection.

Before using *PC Sync*, the *TrueSync* software must first be install on the PC. The software is in the accompanying CD-Rom.

 For further details, please refer to the *TrueSync* manual.


TrueSync can only be install on Windows 95/98.


Installation

- 1 Power on the PC.
- 2 Put the *TrueSync* CD-ROM into the CD-Rom drive.
- 3 Press **Start** and select **Run**.
- 4 Type **X:\Setup** (X is the drive name).
- 5 Press **OK** to run the setup.
- 6 Follow the installation instruction to install the software.

Performing Data Synchronization

If a cable is used for the connection between the PC and the phone, please plug in the cable before the PC is power on.

- 1 Run the *TrueSync* software.
- 2 In the Main Menu, press  icon to enter the PC **Synchronize** display or press on *System Setting* and then press on *PC Sync* to enter the display.???

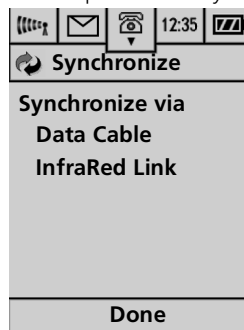

- 3 If cable is used, Press **Data Cable**.

If infrared connection is used, point the Motorola A6188 infrared interface at the PC's infrared receiver. Press on **InfraRed Link** and **Connecting...** will appear. If **Cancel** is pressed at this stage, the display will return to the PC Synchronize display.

- 4 If the connection is successful, the **Begin PC Sync?** dialogue box will appear.

Press on **Cancel** to return to the PC Sync display.

Press on **OK** to begin the process of synchronization.


If the infrared connection is broken for some reason or if the PC system hangs and synchronization is incomplete, it will return to the PC Synchronize display.

Data Synchronization with PC

- 5 In the process of synchronization, the following messages will appear: **Ready To Begin PC Sync, Reading, Synchronizing Appointment (or Message or Email), and Arranging.** In the process, pressing on *Cancel* will result in the message *PC Sync Cancelled*. Press on *OK* to return to the PC Sync screen.
- 6 When *PC Sync* is completed, the message **PC Sync Complete** will appear. Press on **OK** to return to the PC Sync display.

If the battery is low or if the infrared connection is broken or if the PC system hangs, *PC Sync* will terminate and the message **PC Sync Failure** will appear or the message **PC Sync Error - Check Record** will appear.

Checking the Data Synchronization Record

In the Main Menu, press  icon to enter the PC **Synchronize** display

or press on *System Setting* and then press on *PC Sync* to enter the display.???




Press on *Check PC Sync Record* to enter the display. Use the scroll bar to see the log record of *PC Sync* time, date, data and error messages. Press on **OK** to return to the PC Sync display.

 
??






References


References

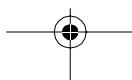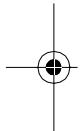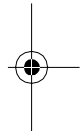





References

   

 


Glossary

  
Motorola
Internet
Systems Setup
Data Synchronization
Browser
Palm Pilot
Switch Calls
Transfer Calls
Conference Call
Diary
Calendar
Memo Pad
Sketch Pad
Initial Setup
Radio Frequency
Pacemaker
Hearing Aid
Airbag
Vibrate
Vibrate and then ring
Smart Card
Battery Cover
Network Coverage
Re-charging
Dialogue Box
Screen
Set Busy Tone
Mute
Restrict My Number
Phone Book
Messages
Drafts
Sent Messages
Saved Messages
Trash
Retrieving Voicemail
Delete
Cancel
OK
Touchscreen
Dial-up
Port
Inactive Time
Return
Add



Glossary

 
 
Glossary **G1**





Glossary

  Set Bookmark
Download
World Time
Phone Setup
Show Settings
Network Selection
Autoroam between networks
Unlock
Auto-redial
Flap-Open-Answer
Call Duration
Call Meter
Call Charge Setting
Lifetime Timer
Preferred Networks



G2

Glossary

