

Welcome

This reference guide describes the many features in your phone.



MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

© Motorola, Inc. 2003.





















Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.




 


While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.

Menu Map

Main Menu

-  **Games & Apps**
-  **Tools**
 -  SIM Apps
 -  Calculator
 -  Datebook
 -  Shortcuts
 -  Dialling Services
 - Barred Dial
 - Fixed Dial
 - Service Dial
 - Quick Dial
 -  Fast Menu
-  **Settings**
(see next page)
-  **Phonebook**
-  **Messages**
-  **Recent Calls**
-  **Web Access**
 -  Browser
 -  Web Shortcuts
 -  Stored Pages
 -  History
 -  Goto URL
 -  Browser Setup
-  **Camera**
-  **Multimedia**
 -  Pictures
 -  Sounds
 -  Videos
 -  Video Camera

Note: This is the standard menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available for all users.

Shortcuts
Lock/unlock keypad: Press  
Display my phone number: Press  
Go to dialled calls list: Press 
Exit menu system: Press 

See page 48 for more about Shortcuts

Settings Menu



Personalise

Main Menu
Home Keys
Colour Style
Greeting
Banner
Banner Graphic
Wallpaper
Screen Saver
Quick Dial



Ring Styles Lights

Call-Light ID
Notice Lights



Connection

IrDA Link
Active Call
Bluetooth Link
Sync



Call Divert

Voice Calls
Fax Calls
Data Calls
Cancel All
Divert Status



In-Call Setup

In-Call Timer
Call Cost Setup
My Caller ID
Answer Options
Call Waiting
Msg Alert



Initial Setup

Time and Date
VideoGateway
1-Touch Dial
Auto Redial
Display Timeout
Backlight

Scroll
Animation
Vibe Sync
Language
Battery Save
DTMF
Master Reset
Master Clear



Phone Status

My Tel. Number
Active Line
Battery Meter
User Account
Storage Devices
Location
Other Information



Headset

Auto Answer
Ringer Options



Car Settings

Auto Answer
Auto Handsfree
Power Off Delay
Charger Time



Network

New Network
Network Setup
Available Networks
My Network List
Service Tone
Call Drop Tone



Security

Phone Lock
Lock Keypad
Lock Application
Fixed Dial
Restrict Calls
Call Barring
SIM PIN
SIM PIN2

Universal PIN
WIM PINs
New Passwords



Java Settings

Java System
Network Access
DNS IP

Contents

Menu Map	3
Messages and Email	8
Setting Up the Message Inbox	8
Creating and Sending Messages	14
Viewing Message Status	17
Receiving Messages	18
Reading, Locking, or Deleting Messages	19
Setting Up Your Phonebook	22
Viewing Entry Details	22
Creating a Phonebook Entry	23
Storing a PIN Code with a Phone Number	25
Recording a Voice Name For a Phonebook Entry	26
Dialling a Phonebook Entry	27
Editing a Phonebook Entry	28
Using Phonebook Categories	29
Showing or Hiding Private Entries	32
Sorting the Phonebook List	32
Setting the Primary Number for a Phonebook Entry	33
Copying Phonebook Entries	34
Checking Phonebook Capacity	36
Setting 1-Touch Dial Preference	36
Sending an Entry	37
Synchronising Your Phonebook	37
Personalising Your Phone	38
Personalising a Ring Style	38
Activating Ringer IDs	38
Setting Ringer or Keypad Volume	39

Setting Reminders	39
Activating Haptic Vibrations	40
Creating and Editing Alert Tones	40
Personalising Display Text	45
Setting the Menu View	45
Personalising the Menu	45
Personalising Soft Keys	46
Setting the Menu Language	47
Setting Menu Scroll Behaviour	47
Setting Menu Animation	47
Resetting All Options	47
Clearing All Stored Information	47
Creating and Using Shortcuts	48
Getting More Out of Your Phone	51
Making a Conference Call	51
Diverting a Call	52
Barring a Call	53
Using Fixed Dial	54
Service Dialling	55
Quick Dialling	55
Using DTMF Tones	56
Monitoring Phone Use	56
Using Hands Free Features	60
Using Applications During a Call	62
Connecting Your Phone to an External Device	63
Data Calls	68
Using Sync	70
Sending Files from Your Phone	71
Adjusting Network Settings	71
Monitoring Battery Charge	72
Viewing Phone Specifications	72

Personal Organiser Features	73
Datebook	73
Calculator and Currency Converter	79
Security	81
Line Security	81
Locking the SIM Card	81
Locking and Unlocking Applications	82
News and Entertainment	84
Mobile Internet	84
Java Applications	88
Games	92
SIM Applications	93
Troubleshooting	94
Index	101

Messages and Email



Text, Email, Video, and MMS messages are brief messages that you can send and receive. Received messages appear on your display or in your message inbox.

You must set up the inbox *before* you can send and receive these messages. Contact your service provider for details. The total number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored in your phone.

Note: Your service provider may have already programmed the text message inbox settings for you.

Setting Up the Message Inbox

Find the Feature



> **Messages**



> *inbox to set up*

You can select **Message Setup** (for text messages), **Email Msg Setup**, **Browser Msg Setup**, or **Info Srvc Setup**. See the following **Setup Options** tables.

Message Setup Options

Setting	Description
MMS Message Setup	change settings for Video Message and Multimedia messages See the table following this.

Setting	Description
Inbox View	select whether the inbox list shows message senders or subjects
Service Centre No.	enter the phone number for the service centre that handles your outgoing messages
Reply Type	scroll to the default type of replies you want to send
Cleanup	the period of time that your phone waits before it deletes a message
Email Gateway	enter the gateway number

MMS Msg Setup Options

Setting	Description
Hide Fields	select which optional fields will not appear in your Message form
Autosignature	enter text to attach to the end of all of your messages
Download	choose to download new messages automatically, or to Defer (see page 18)
Unread Only (IMAP setting)	choose to receive only unread messages
Receive Date Range (IMAP setting)	choose to receive only messages that arrived on specified days

Setting	Description
Filter	select phone numbers and email addresses from which messages will automatically be deleted
Expire After	enter the expiry period—the number of days your network tries to resend unreceived messages
Reply Type	select the default type of replies you want to send—Video Message or Multimedia
Size Limit	set the maximum allowable size of an incoming message
Server Info	display the selected MMS Server

Email Msg Setup Options

Setting	Description
ISP Settings	select a GPRS or CSD Email connection, and change connection settings
Email Provider	select the provider name This changes Protocol , Host and Port settings (below) for sending and receiving Email
Protocol	select POP3 (stores Email on your phone) or IMAP (stores Email on the server)

Setting	Description
User ID	your login User ID to send and receive Email
Password	your login Password to send and receive Email
Sending Host	IP or DNS server address for sending Email (such as mail.test.com)
Sending Port	port number for the sending host
Receiving Host	IP or DNS server address for receiving Email (such as pop.test.com)
Receiving Port	port number for the receiving host
Return Address	the address where replies to your messages are sent (usually your Email address)
Name	name to appear on messages from you (such as Bob)
Cleanup	the period of time that your phone waits before it deletes a message
Save On Server	keeps copies of messages on the server (use a PC or other client to delete them on the server)
Email Notify	select whether your phone notifies you when you receive Email This has no effect if you set Check New Msgs to No .

Setting	Description
Check New Msgs	<p>select how often your phone checks for Email</p> <p>If you select No, you can only check for email using Send/Receive Mail (see page 18) or by opening your Email Messages inbox.</p>
Hide Fields	select message information that should not appear when you create an email message
Auto Signature	enter text to attach to the end of all of your messages
Unread Only (IMAP setting)	choose to receive only unread messages
Receive Date Range (IMAP setting)	choose to receive only messages that arrived on specified days
Attachments (IMAP setting)	select the attachment types you can receive
Size Restriction	<p>set a size limit for Email messages</p> <p>Messages larger than the limit remain on the server. IMAP downloads all message headers.</p>

Brsr Msg Setup Options

These are the settings for the Browser messages sent by your service provider:

Setting	Description
Expire After	enter the expiry period—the number of days your network tries to resend unreceived messages
Cleanup	the period of time that your phone waits before it deletes a message
Msg Notification	select whether your phone notifies you when you receive high priority and medium priority browser messages.
Service	select whether you want to receive all browser messages, only browser messages from one service centre, or no browser messages

Info Srvc Setup Options

These are the settings for the Information Services messages sent by your service provider:

Setting	Description
Service	turn cell broadcasts on or off
Active Channels	edit the list of channels that send you messages


Setting	Description
Languages	change the languages in which you accept messages Note: You cannot change Lang1. It is the language set in the Initial Setup menu.
Cleanup	the period of time that your phone waits before it deletes a message

Creating and Sending Messages

Note: Your message inbox must be set up before you can send and receive messages. See page 8.

You can send a text message to one or more recipients. You can manually enter each recipient's phone number or email address, or select numbers/addresses from the phonebook or recent call lists. You can also send a message to a Mailing List containing multiple addresses (see page 23 to create a Mailing List).

There are four different types of messages: **Text Message**, **Email**, **Video Message**, and **Multimedia**. For a description of the items in each message type, see page 16.

Shortcut: While dialling (with digits visible in the display), you can press  > **Send Message** to create a text message addressed to the number entered.

Find the Feature





 > **Messages**
 > **Create Message**

Press

1 



To

scroll to **New Text Message**,
New Email, **New Video Message**, or
New Multimedia

Press	To
2 SELECT ()	select the type of message you want to send
3 keypad keys	complete the message contents (see the table after this procedure)
4 DONE ()	finish the message Your phone displays Send Message Now?
5 YES () or NO ()	send the message choose to Send Later , Save to Drafts , or Discard Message Send Later stores the message in your Outbox , to send at a later time. Save to Drafts stores the message in your Drafts folder, where you can edit it and send it at a later time.

Message Contents

Note: You cannot send Email messages to phone numbers.

Item	Description
To (all message types)	one or more phone numbers or email addresses where you want to send the message Tip: Remember to press and hold  to add a space between numbers that you enter manually. You can press BROWSE () to select one or more phone numbers or email addresses from the phonebook or recent calls lists
CC (not for Text Messages)	phone numbers or email addresses where you want to send a carbon copy of the message
BCC (not for Text Messages)	phone numbers or email addresses where you want to send a blind carbon copy of the message (nobody can see their address, and they cannot see the other addresses)

Receiving Messages

Note: You must set up the text message inbox before you can receive text messages. See page 8.


When your text message inbox is full, you must delete old messages before you can open new ones.

Your phone checks for new **Email** messages periodically, or whenever you select


 > **Messages**  > **Send/Receive Mail**

or else

 > **Messages** > **Email Msgs**

When you receive a new text message, your phone displays **New Message**  and gives an alert. If reminders are turned on, your phone sends a reminder every five minutes until you close the new message notification, read the message, or turn off your phone (see page 39). From the new message notification:

Press

READ 

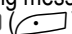
To

open the message (or your text message inbox if there are multiple messages)

or

DETAILS 

open message details (or a list of messages if there are more than one)

When you are viewing message details, press **DOWNLD**  to download and read the message.

Note: **DETAILS** appears for MMS messages if **Download** is set to **Defer** (see page 9)

Reading, Locking, or Deleting Messages

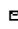
Messages in the inbox are sorted from newest to oldest. The following indicators show message status:


 unread


 read


 unread with attachment

 read with attachment

 unread and urgent

 read and locked

 unread and urgent with attachment






 read and locked with attachment


Note: The files that you download or receive as attachments might have a lock that keeps you from forwarding them.

The oldest messages are deleted automatically as specified by the inbox **Cleanup** setting. If you want to save a message, you should lock it to prevent it from being deleted during cleanup.

Find the Feature



 > **Messages** > **Message Inbox**

	Press	To
1		scroll to the message
2	READ ()	open the message
3	SAVE ()	close the message
	or	
	DELETE ()	delete the message
	or	
		open the Message Menu to perform other procedures

While reading a message, press  for these options:

Option	Description
Voice Call Back	Make a voice call to the number in the message header or embedded in the message.
Video Call Back	Make a video call to the number in the message header or embedded in the message.
Preview Video Call	Preview your phone's camera image before making a video call to the selected number.
Go To	Launch the micro-browser and go to a Web address (URL) embedded in the message.
Reply	Open a new text message, with the sender's Reply To number or email address in the To field.
Forward	Open a copy of the text message, with an empty To field.
Lock/Unlock	Lock or unlock the message.
Store	Display a list of items that can be stored, including the sender's number or email address, and a selected image or sound file.
Delete	Delete the message.
Delete All	Delete all inbox messages.
Delete Messages	Choose to delete only messages that are read, unread, or delivery reports.
Create Message	Open a new text message.

Option	Description
Setup	Open the text message inbox setup menu.

Note: To play attached sound files, press  to select the icon, then press **PLAY** (.

Setting Up Your Phonebook

You can store a list of names and phone numbers or email addresses in your phone's electronic phonebook.

To see the names in your phonebook, press > **Phonebook** from the idle display. Scroll to a name and press to call the entry or **VIEW** () to view entry details as shown below.

To show the entries in a category, see page 32.

Viewing Entry Details

Voice Name indicator indicates a recorded voice name

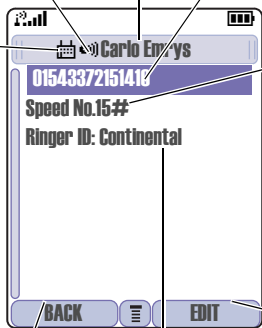 
Entry's **Name**

Entry's **phone number, email address, or mailing list**

Type indicator identifies number type:

- Work
- Home
- Main
- Mobile
- Pager
- Email

Entry's speed dial number



Edit entry

Return to list

Press to open the **Phonebook Menu**

Entry's ringer ID setting

Notes:

- *Email entries, Mailing List entries, and entries stored on the SIM card do not have **Type**, **Voice Name**, or **Ringer ID** information.*
- *If the phonebook entry is a mailing list, list members are listed after the entry's name*

Creating a Phonebook Entry

You can store an entry on your phone or on the SIM card.


Note: You can also use the following procedure to store a fixed dial entry by scrolling to and selecting **Fixed Dial**.

Enter Information

To create or edit a phonebook entry:



Find the Feature

 > **Phonebook**
 > **New** > **Phone Number** or
Email Address or **Mailing List**

Shortcut: Enter a phone number in the idle display, then press **STORE** () to create a phonebook entry with the number in the **No.** field.

A phone number or email address is required for a phonebook entry. All other information is optional. You can enter the following information for a phonebook entry:

Phonebook Item	Description
Name	enter a name for the phonebook entry
Category	scroll to the category that classifies the entry

Phonebook Item	Description
No., Email, or Members	enter the phone number or email address, or select phonebook entries to add as members of the mailing list
Type	scroll to the type of phone number (only for phone numbers not stored on the SIM)
Store To	choose to store the entry on the phone or the SIM card.
Voice Name	record a voice name for the entry. See page 26.
Speed No.	change the number you use to <i>speed dial</i> the entry.
Ringer ID 	change the ring tone for calls from this entry
Picture	choose a picture to appear for calls from this entry
Call-Light ID	change the backlight that appears for calls from this entry
Private 	indicate if this is a private entry (to show or hide private entries, see page 32)
More	create another entry with the same Name

Complete Phonebook Entry

When you are finished entering information for a phonebook entry:

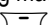
Press

DONE 

To

store the entry and return to the phonebook list

Storing a PIN Code with a Phone Number

You can store a PIN code with the phone number for calls that require additional digits (for example, to make a calling card call, or to retrieve voicemail or answering machine messages). While entering a phone number, press  and select:

Option	Description
Insert Pause	Your phone dials the preceding digits, waits for the call to connect, then sends the remaining digit(s).
Insert Wait	Your phone dials the preceding digits, waits for the call to connect, then prompts you for confirmation before it sends the remaining digit(s).
Insert 'n'	Your phone prompts you for a number before dialling the call. The number you enter is inserted into the dialling sequence in place of the ■ character.

Notes:

- *You can store a maximum of 32 digits per number for a phonebook entry stored on the phone. The maximum number may vary for entries stored on the SIM card. Each character counts as one digit.*

- You cannot store numbers that contain a **w** or **n** character on the SIM card.

Recording a Voice Name For a Phonebook Entry

You can record a voice name for a new or existing phonebook entry. A voice name lets you call the phonebook entry using voice dial (see page 27).

Note: You cannot record a voice name for an entry stored on a SIM card.

Tip: Make your voice recording in a quiet location. Hold the phone about four inches (10 centimetres) from your mouth, and speak directly into the phone in a normal tone of voice.

Find the Feature

 > **Phonebook**

Do This

To

1 Press 

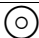
scroll to the entry that needs a voice name

2 Press **VIEW** ()

display the entry's detailed view

3 Press **EDIT** ()

edit the phonebook entry

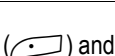
4 Press 

scroll to **Voice Name**

5 Press **RECORD** ()

begin the recording process

The phone displays **Press Record then say name.**

6 Press **RECORD** () and say the entry's name (in two seconds)

record the voice name

The phone displays **Press Record then REPEAT name.**


Do This

- 7 Press **RECORD**  and repeat the name

To

confirm the voice name

The phone displays **Trained: Voice Name**.

- 8 Press **DONE**  store the voice name

Dialling a Phonebook Entry

Use one of the following procedures to call a number (or send a text message to an email address) stored in your phonebook. To use speed dial or 1-touch dial, see your User Guide.

Phonebook List

Find the Feature

 > **Phonebook**

Press

- 1 keypad key letter

To

jump to entries that begin with that letter (optional)

- 2 

scroll to the entry

- 3 

make the call

Voice Dial

Find the Feature

 > **Tools** > **Voice Dial**

Do This

- 1 Press **SELECT** 

To

activate the voice dial mechanism


The phone displays **Say Name Now**.

Do This	To
2 Say the pre-recorded phonebook entry name	to select the entry to be dialled

Video Dial

Find the Feature  > **Phonebook**

Press	To
1 keypad key letter	jump to entries that begin with that letter (optional)


2 	scroll to the entry
-------------------------------------------------------------------------------------	---------------------

3  > Video Call	make the call
---------------------------------------------------------------------------------------------------------	---------------


Editing a Phonebook Entry

You can also use the following procedure to edit a fixed dial entry by selecting  > **Tools** > **Dialling Services** > **Fixed Dial**.

Find the Feature  > **Phonebook**

Press	To
1 	scroll to the entry you want to edit

2 VIEW 	display the entry's detailed view
---------------------------------------------------------------------------------------------------	-----------------------------------

3 EDIT 	edit the phonebook entry
---------------------------------------------------------------------------------------------------	--------------------------

Edit the entry information described on page 23.

Tip: Press  to open the **Phonebook Menu** to perform various operations on the selected entry.

Deleting a Phonebook Entry

To delete an entry:

Find the Feature

 > **Phonebook**

Press

1 

To

scroll to the entry you want to delete

2 


open the **Phonebook Menu**

3 

scroll to **Delete**

4 **SELECT** ()

select **Delete**

5 **YES** ()

confirm the deletion

Using Phonebook Categories



Phonebook categories let you use special ring tones and backlight colours for phonebook entries you classify as “Business,” “Personal,” “General,” or other categories. Your phone and your UICC or SIM card both store each category you create.

Create or Edit a Category

Find the Feature

 > **Phonebook**

 > **Categories**

Press

1 

To
















scroll to a category to edit (select any category if you are creating a new one)

2 

open the **Categories menu**

3 

scroll to **New** or **Edit**

Press	To
4 SELECT 	select New or Edit
5 CHANGE 	select the category Name
6 keypad keys	enter the category name
7 OK 	store the category name
8 CHANGE 	open the member list
9 	scroll to a phonebook entry you want to add or remove
	Note: You cannot add entries stored on a SIM card.
10 ADD 	add an unchecked entry
or	
REMOVE 	remove a checked entry
11 DONE 	close the member list
12 CHANGE 	select the category Ringer ID
13 	scroll to the ringer ID to use for calls from category entries
14 SELECT 	select the ringer ID
15 CHANGE 	select the category Call-Light ID
16 	scroll to the backlight pattern for calls from category entries
17 SELECT 	select the backlight
18 DONE 	store the category and return to the phonebook list

Delete a Category

Find the Feature

 > **Phonebook**
 > **Categories**

Press

To

1 

scroll to the category

2 

open the Categories menu

3 

scroll to **Delete**

4 **SELECT** 

delete the category

5 **DONE** 

confirm the deletion

Reorder Categories

Find the Feature

 > **Phonebook**
 > **Categories**
 > **Reorder List**

Press

To

1 

scroll to the category you want to move

2 **GRAB** 

grab the category you want to move

3 

move the category up or down the menu

4 **INSERT** 

insert the category in the new location

View Category Entries

You can select a category to show only its entries:

Find the Feature

 > **Phonebook**
 > **Categories** > *the category you want to see*

Showing or Hiding Private Entries

You can show or hide the phonebook entries you mark as private. To mark an entry as private, see the **Private** item on page 24.

Find the Feature

 > **Settings** > **Security**
> **Show Private Entries** or
Hide Private Entries

You can also press  > **Setup** in the phonebook to change this setting.

You must enter your private entry code to show private entries. To change your private entry security code:

Find the Feature

 > **Settings** > **Security**
> **New Passwords**
> **Private Entries Code**



Sorting the Phonebook List

You sort your phonebook list by speed dial number (the standard), name, voice name, or email address.





Tip: The voice name sort is identical to the name sort, except that the entries with voice name tags appear first.

Find the Feature


 > **Phonebook**
 > **Setup** > **Sort By**

Press	To
1 	scroll to the order you want
2 SELECT ()	select the order you want

If you select **Speed No.**, **Voice Name**, or **Email**, the procedure is complete. If you select **Name**, you must specify whether you want to view all numbers or just the primary number for each name:

Press	To
3 CHANGE ()	change view preference
4 	scroll to Primary Contacts or All Contacts
5 SELECT ()	select the view preference
6 DONE ()	set the view preference

To set an entry's primary phone number, see the following procedure.

Tip: When the phonebook list displays primary numbers only, you can scroll to a name and press  left or right to view other numbers associated with the name.







Setting the Primary Number for a Phonebook Entry

When you enter multiple phone numbers for the same name, you can set one as the primary number.

Note: You cannot set a primary number for entries stored on a SIM card.

Find the Feature

 > **Phonebook**

Press	To
1 	scroll to the entry
2 	open the Phonebook Menu
3 	scroll to Set Primary
4 SELECT 	select Set Primary
5 	scroll to the number you want to set as the primary number
6 SELECT 	set the primary number

Depending on how the phonebook list is sorted, the primary number is listed first, or is the only number that appears for a phonebook entry. See page 32.

Copying Phonebook Entries

You can copy entries from one position to another, such as from positions in your phone memory to positions in your SIM card memory.

Note: *These procedures do not delete the original entries.*

Copy a Single Entry

Find the Feature

 > **Phonebook**

Press

To

1 



scroll to the entry

2 

open the **Phonebook Menu**

3 

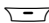








scroll to **Copy Entry**





Press	To
4 SELECT 	select Copy Entry The phone displays the next available speed dial number.
5 keypad keys	edit the speed dial number
6 OK 	copy the entry to the new speed dial location

Copy Multiple Entries

Find the Feature

 > **Phonebook**

Press	To
1 	open the Phonebook Menu
2 	scroll to Copy Entries
3 SELECT 	select Copy Entries
4 	scroll to From (start)
5 CHANGE 	select From (start)
6 keypad keys	enter the low speed dial number for the range of entries you want to copy
7 OK 	store the number
8 	scroll to From (end)
9 CHANGE 	select From (end)
10 keypad keys	enter the high speed dial number for the range of entries you want to copy
11 OK 	store the number

Press	To
12 	scroll to To (start)
13 CHANGE (	select To (start)
14 keypad keys	enter the low speed dial number for the entries' new location
15 OK (	store the number
16 DONE (	copy the entries

Checking Phonebook Capacity

You can check phonebook capacity to see how much space is left for storing phonebook entries on your phone and on the SIM card.

Find the Feature

 > **Phonebook**

Press

1 

To

open the **Phonebook Menu**

2 

scroll to **Phone Capacity** or **SIM Capacity**

3 **SELECT** (

select **Phone Capacity** or **SIM Capacity**





Your phone displays the phone memory meter, or the number of SIM card phonebook entries available.

Setting 1-Touch Dial Preference

You can set 1-touch dial to call the entries in your phone memory phonebook or the SIM card phonebook.

Find the Feature

 > **Settings** > **Initial Setup**

Press	To
1 	scroll to 1-Touch Dial
2 CHANGE 	select 1-Touch Dial
3 	scroll to the list you want
4 SELECT 	select the list

Sending an Entry

You can send pictures, sounds, bookmarks, events, and contacts to a connected computer. See page 71.

Synchronising Your Phonebook

You can synchronise your phonebook entries with an Internet server using a wireless connection. See page 70. This synchronises the **Category**, **Ringer ID**, **Icon ID**, and **Mailing List** information for each phonebook entry.

Personalising Your Phone





Personalising a Ring Style

You can change the alerts that notify you of the following events: incoming calls, text messages, voicemail messages, data calls, alarms, and reminders. Any changes you make are saved to the current ring style.

Find the Feature

 > **Settings** > **Ring Styles**
> **Alert Detail**

Alert represents the current ring style.

Press	To
1 	scroll to the event
2 CHANGE 	select the event
3 	scroll to the event you want
4 SELECT 	select the alert

Note: Some ring tones vibrate automatically. If you use one of these tones, your phone vibrates even when it is not set to **Vibrate** or **Vibe&Ring**. To turn off these vibrations, see page 40.

To turn off alerts for messages that arrive during a call, see your User Guide.

Activating Ringer IDs

When ringer IDs are turned on, your phone uses distinctive ringer alerts to notify you of incoming calls or messages from specific entries stored in your phonebook or specific categories of entries in your phonebook.

Note: To assign a ringer ID to a new or existing phonebook entry, see page 23.

Find the Feature

 > **Settings** > **Ring Styles**
> **Alert Detail** > **Ringer IDs**

Alert represents the current ring style.

Press

1 

To

scroll to **On** or **Off**

2 **SELECT** 

select the option

Setting Ringer or Keypad Volume

Find the Feature

 > **Settings** > **Ring Styles**
> **Alert Detail**


Alert represents the current ring style.

Press

1 

To

scroll to **Ring Volume** or **Key Volume**

2  left or right

scroll to the desired volume

3 **OK** 

confirm the new volume

Setting Reminders

Reminders are alerts that ring or vibrate to notify you about a voicemail or text message you have received, or a datebook event you have scheduled.

Turning Reminders On or Off

Find the Feature

 > **Settings** > **Ring Styles**
> **Alert Detail** > **Reminders**

Alert represents the current ring style.

Press

1 

To

scroll to **Beep** or **Vibrate** to set the reminder alert type, or **Off** to turn off all reminders

2 **OK** ()

select the reminder alert

Activating Haptic Vibrations

Some ring tones and games include vibrations. You can turn these vibrations on or off for your phone.

Find the Feature

 > **Settings** > **Initial Setup**
> **Vibe Sync** > **On** or **Off**

If you turn on **Vibe Sync**, your phone vibrates for some ring tones and games even when the ring style is not set to **Vibrate** or **VibeCRing**.

Creating and Editing Alert Tones

You can create and store custom alert tones on your phone. The tones appear in the list of available alerts.

Creating a Tone

Find the Feature






 > **Settings** > **Ring Styles**
> **My Tones** > **(New Tone)**

Press


1 **CHANGE** ()

To

select **Notes**

Press	To
2 	enter notes for the tone (see the following section)
or keypad keys	
3 OK 	store the notes
4 CHANGE 	select Name
5 keypad keys	enter the name for the tone
6 OK 	store the name
7 DONE 	store the tone


Entering Notes

Press  up or down to select a note in octaves 0-8.

Basic notes: c d e f g a b **Sharp Notes:** #c #d #f #g #a



You can also enter note details and rests. For example, ***2#g0r** plays a second-octave G sharp whole note followed by a rest. Press number keys repeatedly to cycle through the options in the following table.







Note Table

Key	Display	Description
	1	1/2 note, as in *4c1
	.	dotted note, as in *4c. which is 1 and 1/2 counts
	:	double dotted note, as in *1a: which is 1 and 3/4 counts
	;	2/3 length note, as in *1a; which is 2/3 of a count

Key	Display	Description
2 [~]	a	A note
	b	B note
	c	C note
	2	1/2 note, as in *4c2
3 [~]	d	D note
	e	E note
	f	F note
	3	1/8 note, as in *4c3
4 [~]	g	G note
	4	1/16 note, as in *1c4
5 [~]	5	1/32 note, as in *4c5
6 [~]	6	sets octave six, as in *6
7 [~]	r	inserts a rest (you can add length modifiers, such as r1)
	7	sets octave seven, as in *7
8 [~]	8	sets octave eight, as in *8
0 [~]	0	whole note, as in *4c0
	*	sets an octave when followed by 0-8, as in *4c for a C note in octave four
	#	sharp note, as in *4#c
	£	flat note, as in *4£d
*	move cursor left	
#	move cursor right	

Example

To create a simple tone, you can enter notes by pressing  up and down, and enter rests by pressing . For example:



Press	To	Display
1 	scroll up to *4c , then wait for the highlight to disappear	*4c
2 	scroll up to *4d The phone adds a 2 after each note, to indicate it is a half note. To change the length, see page 41.	*4c2*4d
3 	scroll up to *4e	*4c2*4d2*4e
4 	enter a rest	*4c2*4d2*4e2r
5 	scroll down to *4c	*4c*4d*4e2*4c
6  > Play All	play the tone	





Editing a Tone

You cannot edit the standard alert tones included with your phone. To edit a custom tone that you created:

Find the Feature

 > **Settings** > **Ring Styles**
> **My Tones**

Press	To
1 	scroll to the tone
2 EDIT 	open the tone details






Press	To
3 	scroll to Name or Notes
4 CHANGE 	select the details to edit
5 	enter new text or notes
or keypad keys	
6 OK 	store the details

Deleting a Tone

You cannot delete the standard alert tones included with your phone. To delete a custom tone that you created:

Find the Feature

 > **Settings** > **Ring Styles**
> **My Tones**

Press	To
1 	scroll to the tone
2 	open the My Tones Menu
3 	scroll to Delete
4 SELECT 	select Delete
5 YES 	confirm the deletion

Downloading a Tone

You can download custom ring tones from the micro-browser application, or from a text message. To download tones from the micro-browser, see page 86. To download tones from a text message, see page 18.

Send Tones

You can send ring tones to other wireless phone users. To insert a tone in a text message, see page 14.

Personalising Display Text



To change the greeting that appears when you turn on your phone:

Find the Feature

 > **Settings** > **Personalise**
> **Greeting**

You can set the banner graphic in the idle display to an analogue clock or a status icon:

Find the Feature

 > **Settings** > **Personalise**
> **Banner**

Setting the Menu View

You can set your phone to display the main menu as graphic icons (the default setting) or as a text-based list.

Find the Feature

 > **Settings** > **Personalise**
> **Main Menu** > **View**
> **Icons or List**

Personalising the Menu

You can reorder the items in your phone's main menu.

Note: The first nine items appear on the main menu, while the rest appear under the **Extras** (🔧) option on the main menu. You cannot move the **Extras** option.

Find the Feature

 > **Settings** > **Personalise**
> **Main Menu** > **Reorder**

Press

1 

To

scroll to the menu item you want to move

2 **GRAB** 

grab the menu item you want to move




3 

move the item up or down the menu

4 **INSERT** 

insert the item in the new location

Personalising Soft Keys

You can assign new main menu items to the soft keys (left  and right ) and  in the idle display.

Find the Feature

 > **Settings** > **Personalise**
> **Home Keys**

Press

1 

To

scroll to the keypress you want to assign (**Scroll Up**, **Scroll Down**, **Scroll Left**, **Scroll Right**, **Left Soft Key**, or **Right Soft Key**)

2 **CHANGE** 

select the icon or soft key

3 

scroll to a menu feature

4 **SELECT** 

confirm the menu feature

Setting the Menu Language

You can set the language in which menu features and options are displayed.

Find the Feature

 > **Settings** > **Initial Setup**
> **Language**

Setting Menu Scroll Behaviour

You set the highlight bar to stop or wrap around when you reach the top or bottom of a menu list.

Find the Feature

 > **Settings** > **Initial Setup**
> **Scroll**

Setting Menu Animation

Menu animation provides smooth scrolling of the highlight bar and menu items as you scroll through a menu list. Turn off menu animation to extend battery life.

Find the Feature

 > **Settings** > **Initial Setup**
> **Animation**

Resetting All Options

Reset all options back to their original factory settings, except for the unlock code, security code, and lifetime timer.

Find the Feature

 > **Settings** > **Initial Setup**
> **Master Reset**

Clearing All Stored Information

Reset all options back to their original factory settings, except for the unlock code, security code, and lifetime timer, erase all downloaded pictures, animations, and sound files, and clear all

user settings and entries except for information stored on the SIM card.

Caution: Master clear *erases all user-downloaded content and user-entered information* stored in your phone's memory, including phonebook and datebook entries. Once you erase the information, it cannot be recovered. Master clear does not delete any information stored on the SIM card.

Find the Feature

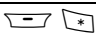
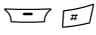


 > **Settings** > **Initial Setup**
> **Master Clear**

Creating and Using Shortcuts

Shortcuts let you quickly access your favourite menu features. Your phone is pre-programmed with several shortcuts, but you can add more.

Standard Shortcuts

The following shortcuts are pre-programmed in your phone. You cannot edit or delete them.

Press	To
	lock/unlock your keypad
	display your phone number
	go to the dialled calls list
	exit the menu system, return to the idle display

Adding Shortcuts

You can create a keypad shortcut to a menu item.

Do This

1 Press 

To

enter the menu system

Do This

2 Scroll to the item you want to add to Shortcuts

To

highlight the menu item

3 Press and hold



open the shortcut editor

The phone displays:

Assign Shortcut for: *Item*?

where *Item* is the name of the item you selected.

4 Press YES ()

view your options

Shortcut Options

Option	Description
Name	this name appears in the shortcut list
Key	the key you press to use the shortcut

Using Keypad Shortcuts

Press

1

To

open the menu

2 the shortcut key number

go to the menu item, or perform the menu action

Selecting Shortcuts from the List

Find the Feature

> **Tools** > **Shortcuts**

> *Shortcut Name*

Edit or Delete a Shortcut

The shortcut list is sorted by key. If you change a shortcut's key, you change its place in the list.

Find the Feature



> **Tools** > **Shortcuts**
> *Shortcut Name*

Press

1

To

scroll to the shortcut

2

open the **Shortcut Menu** below

Shortcut Menu









Option	Description
Edit	Edit the shortcut.
Reorder List	Change the shortcut list order.
Delete	Delete the shortcut.
Delete All	Delete all shortcuts.

Getting More Out of Your Phone

Making a Conference Call



Link an active call and a call on hold together so that all parties can speak to each other.

Press	To
1 keypad keys	dial the first person's number
2 	call the number
3 HOLD  (if available) or  > Hold	put the first call on hold Your phone displays a  (flashing phone) indicator next to the call on hold.
4 keypad keys	dial the next person's number
5 	call the number Your phone displays a  (active call) indicator next to the new active call.
6 LINK 	connect the two calls
7 	end the entire call

Tip: Repeat steps 3-6 to add additional parties to the conference call.

Diverting a Call



Call diverting sends your phone's incoming voice, and/or data calls directly to another phone number.

Set Up or Cancel Call Diverting

The call diverting options for voice or data calls are:

All Calls	diverts all calls
If Unavailable	diverts calls if your phone is unavailable
Detailed	uses different diverting numbers if you are out of range, unable to answer, or busy (<i>voice calls only</i>)
Off	does not divert calls

Find the Feature

 > **Settings** > **Call Divert**

Press

1 

To

scroll to the type of calls you want to divert

(**Cancel All** cancels all call diverting and ends the procedure.)

2 **SELECT** 

open the call divert details for that call type

3 






scroll to **Divert**

4 **CHANGE** 

change the **Divert** option

5 

scroll to the call divert option you want

Press	To
6 SELECT 	store the option
7 	scroll to To (same for If Busy , If No Answer , or If Unreachable)
8 CHANGE 	change the phone number
9 keypad keys	enter the diverting phone number
or	
BROWSE 	browse through your phonebook or other lists for the diverting phone number
10 OK 	store the diverting phone number

Note: Repeat this procedure to enter diverting information for other call types.

Check Call Diverting Status

Your network may store call diverting status for you. To confirm the network call diverting settings:

Find the Feature

 > **Settings** > **Call Divert**
> **Divert Status**
> *type of call*

Barring a Call








Call barring lets you restrict outgoing or incoming calls. You can restrict all calls, calls to international numbers, or calls while roaming.

Find the Feature

 > **Settings** > **Security**
> **Call Barring**

Press

To

- | | | |
|---|-------------------------------------------------------------------------------------------------|----------------------------------------------------|
| 1 |  | scroll to Outgoing or Incoming calls |
| 2 | CHANGE  | select the option |
| 3 |  | scroll to a restriction setting |
| 4 | SELECT  | select the restriction setting |
| 5 | keypad keys | enter your call barring password |
| 6 | OK  | submit your password |

Using Fixed Dial



When you turn on fixed dialling, users can only call numbers stored in the fixed dial list. Use this feature to limit outgoing calls to a predefined list of numbers, country codes, area codes, or other prefixes.

Fixed dial list entries can be any length. If there is a fixed dial entry for the digits 555, users can call any number that starts with 555.

Turning Fixed Dial On or Off

Find the Feature

 > **Settings** > **Security**
> **Fixed Dial**

Using the Fixed Dial List

You must turn on fixed dialling to open the fixed dial list (see above).

You must enter your SIM PIN2 code to edit fixed dial entries:

Find the Feature

 > **Tools** > **Dialling Services**
> **Fixed Dial**

You create and edit fixed dial entries just like phonebook entries. Fixed dial list entries are stored on your SIM card and do not have **Type**, **Voice Name**, or **Ringer ID** fields.

Service Dialling



You can dial pre-programmed numbers stored on your SIM card, such as taxi companies, restaurants, and hospitals.

Find the Feature

 > **Tools** > **Dialling Services**
> **Service Dial**

Quick Dialling



You can dial pre-programmed numbers stored on your phone. Your phone may come programmed with one or more quick dial numbers, such as the customer service number.

To open and dial numbers on the quick dial list.

Find the Feature

 > **Tools** > **Dialling Services**
> **Quick Dial**

Note: *Your service provider may use a different name for this feature.*

To edit the quick dial list:

Find the Feature

 > **Settings** > **Personalise**
> **Quick Dial**

Using DTMF Tones

You can send numbers to the network as *dual tone multi-frequency* (DTMF) tones during a call. Use DTMF tones to communicate with automated systems that require you to submit a PIN code or credit card number.

Activate DTMF Tones

You can set DTMF tones to be **Long**, **Short**, or **Off**:


Find the Feature

 > **Settings** > **Initial Setup**
> **DTMF**

Send DTMF Tones

During a call, highlight a number in the phonebook or recent call lists, then:

Do This

Press  > **Send Tones**


To

send a number to the network as DTMF tones

Monitoring Phone Use

Viewing and Resetting Call Timers



Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

To view a call timer:

Find the Feature

 > **Recent Calls** > **Call Times**
> *the timer you want*

Select one of the following options:

- | | |
|-----------------------|------------------------------------------------------------------------------------------|
| Last Call | Time spent on the last call dialed or received. You cannot reset this timer. |
| Dialled Calls | Total time spent on dialled calls since the last time you reset this timer. |
| Received Calls | Total time spent on calls received since the last time you reset this timer. |
| All Calls | Total time spent on dialled and received calls since the last time you reset this timer. |
| Lifetime | Total time spent on all calls on this phone. You cannot reset this timer. |

To reset the call timer, press **RESET** () while viewing it.

Using Timers During a Call

You can set a timer to beep at selected intervals during a call, and display different types of information during a call.

Find the Feature

 > **Settings** > **In-Call Setup**
> **In-Call Timer**

Select one of the following options:

- | | |
|-------------|----------------------------------------------------------------------------------------------------|
| Time | Display the approximate elapsed time for the current call. |
| Cost | Display the cost of the current call (if you subscribe to a call cost option or advice of charge). |

Time	Display the approximate elapsed time for the current call.
Total Cost	Display the cost of all calls since the last time you reset the timer (if you subscribe to a call cost option or advice of charge).
Credit Available	Display how much credit you have left (if you subscribe to a call cost option or advice of charge).
Off	No in-call timer display.

Viewing and Resetting Cost Trackers



To view a cost tracker:

Find the Feature

 > **Recent Calls** > **Call Cost**

Press

1 

To

scroll to the cost tracker you want to view

2 **SELECT** ()

view the recorded cost

Select one of the following options:

Cost Tracker	Description
Credit Available	Amount of your credit remaining. For GSM advice-of-charge, this is only available if you set a credit limit. Note: <i>Your phone receives cost information from the advice-of-charge feature or third-party prepaid software.</i>
Expiry Date	Date that the available credit expires (available only with a subscription to a prepaid option).
Last Deposit	Amount of the last deposit (available only with a subscription to a prepaid option).
Last Call	Amount spent on the last call you dialed or received. You cannot reset this cost tracker.
Dialed Calls	Amount spent on calls you dialed since the last time you reset this cost tracker.
Received Calls	Amount spent on calls you received since the last time you reset this cost tracker.
All Calls	Amount spent on all dialed and received calls since the last time you reset this cost tracker. You can reset this value separate from Dialed Calls and Received Calls , so Dialed Calls plus Received Calls may not equal All Calls .

To reset the cost tracker:

Press

1 RESET 

2 OK 

To

reset the cost (if available)

enter your PIN2 code to confirm the reset

Using Hands Free Features

Your phone includes an integrated two-way speakerphone for all hands free applications. You can also purchase an optional Motorola Original™ Easy-Install or Pro-Install Hands Free Kit for your car, or an optional Motorola Original phone headset. These accessories provide alternative ways for you to use your phone without using your hands.



Notes:

- *When a hands free car kit or headset accessory is connected to your phone, the integrated speakerphone is disabled.*
- *The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.*

Automatic Answer

You can set your phone to automatically answer calls after two rings (four seconds) when connected to a car kit or headset

Find the Feature

-  > **Settings**
- > **Car Settings or Headset**
- > **Auto Answer**

Ringer Setting

When you have a headset plugged in, this lets you choose whether you hear phone alerts in the **Speaker Only**, **Headset Only**, or the **Headset and Speaker**.

Find the Feature

 > **Settings** > **Headset**
> **Ringer Options**

Automatic Hands Free

You can set up your phone to automatically route calls to a car kit when it detects a connection.

Find the Feature

 > **Settings** > **Car Settings**
> **Auto Handsfree**

Press

1 

To

scroll to **On** or **Off**

2 **SELECT** 

confirm the setting

Power-Off Delay



When your phone is connected to a car kit, you can set it to stay on for a period of time after you switch off the ignition. This prevents the phone from draining your vehicle battery, but leaves the phone on long enough that you do not have to re-enter your unlock code when making short stops.

Note: *This feature may not work with all car ignition switches.*

Caution: If you select **Continuous**, the phone does not power off when you turn off the ignition. Be careful not to drain your vehicle battery if you select this option.

Find the Feature

 > **Settings** > **Car Settings**
> **Power-Off Delay**



Press	To
1 	scroll to the time delay
2 SELECT 	confirm your selection

Charger Time

When your phone is connected to a car kit, you can set it to charge itself for a specified time period after you switch off the ignition. This helps ensure that the phone battery gets fully charged while the vehicle is parked.


Note: This feature may not work with all car ignition switches.

Find the Feature  > **Settings** > **Car Settings**
> **Charger Time**

Press	To
1 	scroll to the charge time
2 SELECT 	confirm your selection

Using Applications During a Call

During a call, you can easily switch to other phone features or make a new Data, Browser, or Voice Call connection:

Press	To
SWAP 	open a list of options

The list of options includes phone applications, such as **Phonebook** and **Datebook**. It also includes any other active connections you have, such as **Active Data Call**, **Active Voice Call**, or **Active Browser**. To start a new call, select **New Call** (this puts any current call on hold).

Changing Your Active Call Settings

You can view and change the number of call and data/browser connections that your phone allows at one time:

Find the Feature



> **Settings** > **Connection**
> **Active Calls**

The Active Calls list includes

Option	Description
No. of Calls	the number of active connections your phone allows, which you can increase to the number in the Subscription setting.
Subscription	the maximum number of active connections you subscribed to
Network	the maximum number of active connections your network supports

Connecting Your Phone to an External Device

You can connect your phone to a computer or hand-held device using a Bluetooth™ wireless connection, an infrared wireless link, a serial cable, or a USB cable.

Note: *Not all devices are compatible with Bluetooth, infrared, serial cable, or USB cable connections. Check your external device for specifications.*

Setting Up a Cable Connection

Attach a serial cable or Motorola Original USB cable to the phone and external device as follows.

Note: *Check your computer or hand-held device to determine the type of cable you need.*

Attaching a Serial Cable

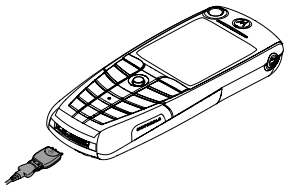 
Use the interchangeable head on the Motorola Multi-Connect Serial Cable to connect a computer, Palm III device, or Palm V device to your phone.

Do This

- 1 Plug the serial cable into the detachable head. Make sure that the Motorola logo on the detachable head and the metal shielding on the serial cable plug are both facing you.

 - 2 With the Motorola logo and the phone both facing you, plug the detachable head into your phone's accessory connector port.

 - 3 Plug the other end of the cable into the serial interface connection on the external device and tighten the screws.
-
-

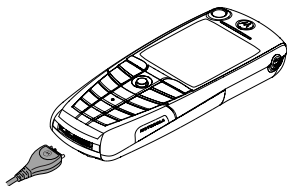 


Note: To save phone power when using a serial cable, plug a charger into the charger slot on the cable head.

Attaching a USB Cable

Do This

- 1 Plug the end of the cable with the Motorola logo into your phone's accessory connector port. Make sure that the logo and the phone are both facing you.



- 2 Plug the other end—the USB connection—into the USB port on the external device.
-
-

Setting Up an Infrared Connection

Establish an infrared wireless data connection with an external device as follows.

Notes:

- *This phone is classified as a Class 1 LED product and is considered safe under reasonable use.*
- *Your phone must be within one foot (30 centimetres) of the other device. Nothing can block the line of sight between the two devices.*
- *You cannot set up an infrared connection when a serial cable is attached to your phone.*

Find the Feature

 > **Settings** > **Connection**
> **IrDA Link**

Press

START 

To

activate the infrared link

If the phone does not find an infrared-capable device, it changes the right soft key () from **STOP** to **START**.

Press

START ()

To

try another connection

To break the infrared data connection, press **STOP** ()

You can also move the device away from the phone, turn off the device, or turn off the phone. If your phone moves away from a connected device while it is still on, it will try to re-connect for 30 seconds after the connection breaks.

Setting Up a Bluetooth Connection

Before connecting your phone to another Bluetooth device, set up the other device as described in its user guide.

For a PC, set up the Bluetooth accessory card, card drivers, and application software. If you want to use Dial-up Networking Services, configure them for the Bluetooth modem as described in the software and modem user guides.

Notes:

- *Your phone must be within 33 feet (10 metres) of the other device. Nothing can block the line of sight between the two devices.*
- *You cannot set up a connection when a serial cable is attached to your phone.*

Connecting a Computer for a Data Call

Prepare your computer to set up the Bluetooth connection, then make your phone available for the connection:

Find the Feature

 > **Settings** > **Connection**
> **Bluetooth Link** > **Setup**
> **Find Me**

You have 60 seconds to start the connection from your computer while your phone is available.

Tip: After the first connection with a device, you do not need to select **Find Me** to re-connect.

Connecting and Disconnecting a Headset

To connect an available Bluetooth headset device:

Find the Feature

 > **Settings** > **Connection**
> **Bluetooth Link** > **Handsfree**
> *a device name*
or
[Look For Devices]

Your phone returns to the idle display, where a Bluetooth status bar icon indicates that you have a connection.

Tip: After the first connection with a headset, you can just open the headset to re-connect.

To disconnect:

Find the Feature

 > **Settings** > **Connection**
> **Bluetooth Link** > **Handsfree**
> *the device name*

Turning Bluetooth On or Off

You can turn your phone's Bluetooth feature on or off:

Find the Feature

 > **Settings** > **Connection**
> **Bluetooth Link** > **Setup**
> **Power** > **On or Off**

Changing Your Phone's Bluetooth Name

You can assign a name to your phone, so that you can recognise it in the Bluetooth lists on other devices:


Find the Feature

 > **Settings** > **Connection**
> **Bluetooth Link** > **Setup**
> **Name**

Press

To

1 keypad keys enter a phone name

2 **OK** () store the new name

Data Calls

A Motorola Original™ data kit with a cable, a Bluetooth™ wireless connection, or an infrared wireless link lets you transfer data between your phone and a computer or other external device. You can:



- use your phone as a modem to connect to the Internet.
- use your phone to make and answer data calls on your computer or hand-held device.

Installing the Software

Install the software from the CD-ROM that comes with your Motorola Original data kit. See the data kit's user guide for more information.

Note: *This software is required to transfer data between your phone and an external device.*

Making a Data Call

Use this feature to transfer data from your computer onto another device, and to synchronise events and phonebook information between your phone, computer, and/or hand-held device.

Connect your phone (see page 63) and do the following:

Do This	To
1 Check the phone	make sure that the phone is connected and powered on
2 Open the application on your computer	place the call through the application (such as dial-up-networking) <i>Note: You cannot dial data numbers through your phone's keypad. You must dial them through your computer.</i>
3 End the transfer on your computer	close the call and connection when the transfer is complete

Receiving a Data Call

You can connect your phone to a computer or hand-held device to receive data.

Use this feature to transfer data to your computer from another device.

Transfer the Data

Connect your phone (see page 63).

Your phone notifies you when the data call arrives, and transfers the call to the connected device. You must use the application running on the connected device to answer the call.

End the Data Connection

When the data transfer is complete:

Do This

End the call from the connected device

To

close the connection

Using Sync

This feature lets you quickly synchronise your events and phonebook entries with an Internet server using a wireless connection.

Creating an Internet Sync Partner

To enter a computer as a Sync partner for your phone:

Find the Feature

 > **Settings** > **Connection**
> **Sync** > **New**

Your phone opens a **Partner Details** list:

Detail	Description
Partner Name	A common name you assign to the computer (such as "Work server")
Server URL	The URL for the server (you can omit "http://")
User Name	Your user name for logging into the server
Password	Your password for logging into the server
(data) Path	The name of the folder, beneath the URL path, where your data is stored

Using an Internet Sync Partner

To start synchronising with a Sync partner:

Find the Feature

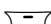
 > **Settings** > **Connection**
> **Sync** > *partner name*

Your phone attempts a Sync connection with the URL, user name, and password you entered for the partner. This might take several minutes, if there are many entries to synchronise.

Sending Files from Your Phone

You can send pictures, sounds, bookmarks, events, and phonebook entries to a connected computer. Open the object you want to send on your phone, then:

Find the Feature

 > **Send** > *sending method*

If you choose IrDA or Bluetooth methods, this creates a wireless link that closes after the entry is sent. To set up a cable connection, see page 63.

Adjusting Network Settings



Your service provider registers your phone to a network. You can view information about the current network, change how your phone searches for a network, specify your preferred networks, and activate alerts that indicate when a call is dropped or network registration changes.

Find the Feature

 > **Settings** > **Network**

Monitoring Battery Charge

To view a detailed battery charge meter:

Find the Feature



> **Settings** > **Phone Status**
> **Battery Meter**

Viewing Phone Specifications

To view your phone's feature specifications:

Find the Feature



> **Settings** > **Phone Status**
> **Other Information**

Personal Organiser Features

Datebook

The datebook is a calendar that lets you schedule and organise events such as appointments and meetings. You can review your schedule of events for the month or by the day, and have your phone play a reminder alarm for specific events.

Note: You must set the correct time and date in order to use the datebook (see your User Guide).

To schedule or review events:

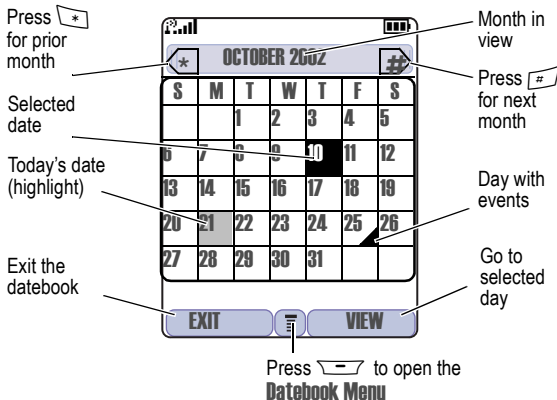 
Find the Feature




> Tools > Datebook

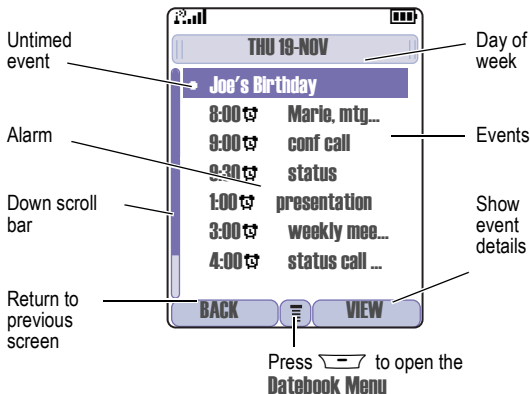 
Viewing by the Month

Triangles next to each day indicate events.




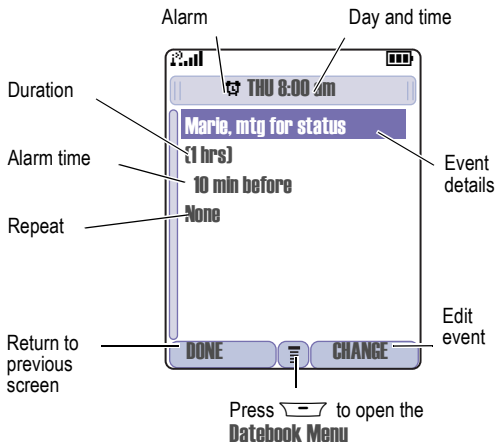 
Viewing by the Day

Select a day in the month view and press **VIEW** () to see the day's events. You can store, edit, view, copy, and delete any event from the day view.



Viewing by the Event

Select an event in the day view and press **VIEW** () to open the detailed event view. You can edit, copy, and delete events from the event view.



Adding a New Event





A title is required for a datebook event. All other information is optional.

Notes:

- You must create an event to use the reminder alarm.
- Your phone must be turned on for the reminder alarm to sound.

Find the Feature





 > **Tools** > **Datebook** > *day*
 > **New** > **Event**

Press	To
1 CHANGE 	select Title
2 keypad keys	enter a title for the event
3 OK 	store the event title
4 	scroll to other fields and enter information as necessary
	You can set start time, duration, date, repeating events, and reminder alarm.
5 DONE 	store the event

Changing Event Information

Find the Feature












 > **Tools** > **Datebook** > *day*
> *event*

Press	To
1 EDIT 	edit the event
2 	scroll to the detail you want to change
3 CHANGE 	edit the information
4 keypad keys	enter the new information
5 DONE 	store the information and return to the day view

Copying an Event

Find the Feature

 > **Tools** > **Datebook**

Press	To
1 	scroll to the day
2 VIEW 	display the day view
3 	scroll to the event to copy
4 	open the Menu
5 	scroll to Copy
6 SELECT 	copy the event
7 YES 	confirm the copy
	Your phone assumes that you want to change the date, and displays the Date field.
8 keypad keys	enter the date information
9 	move to the month, day, and year
10 DONE 	save the copy of the event
11 	scroll to event details and edit the information as necessary
12 DONE 	store the new event and return to the day view

Deleting an Event

Find the Feature

 > **Tools** > **Datebook**

Press








To

1 

scroll to the scheduled event day




2 **VIEW** 

display the day view

Press	To
3 	scroll to the event to delete
4 	open the Menu
5 	scroll to Delete
6 SELECT ()	select Delete For non-repeating events, go to step 7. For repeating events, the phone displays a delete event menu:
a 	scroll to This Event Only or Repeat Events
b SELECT ()	select the event(s) to delete
7 YES ()	confirm the deletion The phone briefly displays a Deleted: message and returns you to the day view.

View and Dismiss an Event Reminder

When you set a reminder alarm for an event, the phone displays an event reminder and sounds a reminder alarm (to set change reminder settings, see page 39).

Press	To
VIEW ()	view the event
or	Press  to scroll through the event details.
EXIT ()	dismiss the reminder

If you have more than one event set up for the same time, the phone displays each event in sequence. As you view and dismiss each event reminder, the next one is displayed.

Change the Datebook Setup

You can change the datebook's daily start time, and set the length of time that events are stored.

Find the Feature

 > **Tools** > **Datebook**
 > **Setup**

Sending an Event

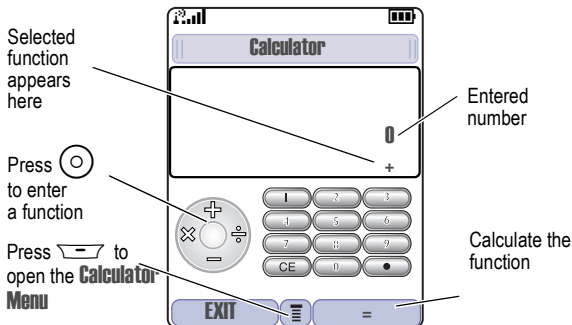 
You can send pictures, sounds, bookmarks, events and phonebook entries to a connected computer. See page 71.


Calculator and Currency Converter

You can use your phone as a calculator and currency converter.

Find the Feature

 > **Tools** > **Calculator**



Press  to open the Calculator Menu functions:

Function	Description
MS	Store the displayed number in memory.
MC	Clear memory.
MR	Recall the value stored in memory.
%	Divide the displayed value by 100.
Convert Currency	Multiply the displayed value by the Exchange Rate you stored.
Exit	Exit the calculator.
Exchange Rate	Store an exchange rate to use with the Convert Currency menu option.

Security

Line Security

If your phone displays **Line Not Secure** while you are on a call, your phone has detected another device monitoring the call. This message does not appear when caller ID, call cost, or other information fills the display.

Locking the SIM Card

Your PIN (Personal Identification Number) code protects the information stored on your SIM card. When the SIM PIN feature is activated, you must enter your SIM card PIN code each time you turn on the phone or insert a SIM card. Contact your service provider for your SIM card PIN code.

Find the Feature

 > **Settings** > **Security**
> **SIM PIN**

Press

1 

To

scroll to **On** or **Off**

2 **SELECT** 

switch protection on or off

3 keypad keys

enter your SIM card PIN code

4 **OK** 

submit your code

Note: You can also activate your **PIN2** code, to protect secure applications such as *Fixed Dial*.

Unblock the SIM Card PIN Code

If you enter an incorrect SIM card PIN code three times in a row, your SIM card is disabled and your phone displays the message

SIM Blocked. You need to enter a PIN unblocking key (PUK) code, which you can obtain from your service provider.

Note: In the following key sequence, each key press must occur within two seconds of the previous keypress.

Caution: If the unblocking attempt is tried unsuccessfully 10 times, the SIM card is permanently disabled and your phone displays the message **SIM Disabled**.

Press

1

To

open the PIN unblocking editor

Your phone prompts you to enter the **PIN Unblock Sequence:**

2 PUK code + **OK** + new PIN code + **OK** + new PIN code + **OK**

unlock the SIM card PIN features

Note: You can open the PIN2 unblocking editor by entering . Use the PUK2 code in place of the PUK code in the above procedure.

Locking and Unlocking Applications

You can lock many phone applications (for example, the phonebook) so that users must enter the unlock code to use them.

Find the Feature

> **Settings** > **Security**
> **Lock Application**

Press





1 keypad keys

To

enter your four-digit unlock code

2 **OK**

open the lock applications menu

Press	To
3 	scroll to the application you want to lock or unlock
4 CHANGE 	select the application
5 	scroll to Locked or Unlocked
6 SELECT 	select Locked or Unlocked

News and Entertainment

Mobile Internet



The Web micro-browser lets you access Web pages and Web-based applications (such as online banking, shopping, and games) on your phone. Contact your service provider to set up access, if necessary.

Note: Your phone may be configured to use a high-speed packet data network connection. This type of connection can be identified by a packet data status indicator at the top of your display. If a connected call indicator is displayed when you start a micro-browser session, your phone is using a standard voice channel connection. Your network connection charges may vary depending on the type of connection used.

Starting a Mobile Internet Session

Find the Feature

 > **WebAccess** > **Browser**

The micro-browser displays the programmed home page.

Press


1 

To

scroll to a bookmark, service, or application






2 **SELECT** ()

select the service

Shortcut: If you open a text message with a Web address (URL) in it, you can go directly to the URL by selecting  > **Go To**.

If you are unable to establish a network connection with the micro-browser, contact your service provider.

Interacting With Web Pages

Do This	To
Press  up or down	scroll through a page
Press 	open the Browser Menu
Press and hold 	store the current Web page as a Web Shortcut
Press  	lock your phone's keypad while downloading a file

The **Browser Menu** can include the following:

Option	Description
Home	Goes to the current Web Sessions home page.
Reload	Reloads the current page.
Go to URL	Lets you enter a Web page address.
Web Shortcuts	Displays Web Shortcuts
Store	Lets you store the current page, or an image, phone number, or Email address from the page.
Send	Lets you send the current Web page address.
History	Displays the pages you have visited, with the most recent on top.
Swap	Lets you switch between active calls.
View URL	Displays the current URL.

Web Page Security

Your phone can provide secure Web pages connections for purchases or other transactions. Your phone uses three types of certificates to provide this security. It uses **Client** certificates to identify itself to Web pages. Your phone downloads **Server** certificates from servers and checks them against the **Root** certificate.

To view certificate details:

Find the Feature

 > **WebAccess** > **Browser**
> **Security**
> *certificate type*

Your phone displays a list of the selected certificates. Select a certificate to view its details.

Note: *Client certificates include a **Remove** option below their details list. Select this option to remove the certificate. A letter next to the client certificate name indicates if it is stored on the phone (P) or a SIM card (C).*




Download Pictures and Sounds

You can download a picture, animation, or sound from a Web page by selecting its link. A picture or animation is displayed when downloading is complete. A sound begins to play when downloading is complete.

Note: *The files that you download or receive as attachments might have a lock that keeps you from forwarding them.*






You can store these files on your phone to use them as screen saver images, wallpaper images, and alert tones.

Storing a Picture or Animation File

Press	To
1 STORE ()	view storage options
2 	scroll to Store Only , Set As Wallpaper , or Set as Screen Saver
3 SELECT ()	select the option

Note: When you set an animation as a wallpaper image, only the first frame of the animation is displayed.

Storing a Sound File

Press	To
1 STORE ()	view storage options
2 	scroll to Store Only or Set As Ring Tone
3 SELECT ()	select the option If you select Store Only , the procedure is complete. If you select Set As Ring Tone , your phone displays Set As Which? , and lists the events for which you can set an alert.
4 	scroll to the event
5 SELECT ()	store the sound and set it as the event alert

Note: Some ring tones vibrate automatically. If you use one of these tones, your phone vibrates even when it is not set to **Vibrate** or **Vibe&Ring**.

Java Applications



You can install and run Java applications on your phone. These applications add new features and services to your phone.

Note: Java applications can use your phone's Assisted Global Positioning Service (AGPS) to tell where you are physically located. To turn AGPS on or off, see your User's Guide.

Download an Application

Find the Feature



WebAccess > Browser

Go to the page that contains the application, then:

Press

1

To

scroll to the application

2 **SELECT**

view the application details

3 **DOWNLOAD**

download the application

You may see one of the following error messages when you download a kJava application. This section describes some common problems and their solutions.

Problem	Resolution
Insufficient Storage or Memory Full	You must delete another Java application before storing the file. See page 90.

Problem	Resolution
Application Already Exists	The same version of this application is already installed. If an older version is installed, the message Different Version Exists appears, and you can update the application.
Failed: Invalid File or Failed: File Corrupt	The application file does not work on your phone. Contact the Web site host for details.

Note: *Some games make your phone vibrate.*

Launch a Java Application

Find the Feature



> **Games & Apps**
> *the application*

Edit Network Connection Settings

Entering the DNS IP Address

Your phone must be set up with a valid domain name service (DNS) IP address before you can run Java applications that require an active network connection. In many cases, your service provider has already entered this address for you. Contact your service provider to obtain the DNS IP address, if necessary.

Find the Feature



> **Settings** > **Java Settings**
> **DNS IP**

Press

To

1 keypad keys

enter the DNS IP address

2 **OK**

save the IP address

Approving a Network Connection

When a Java application tries to establish a network connection, your phone prompts you to approve the connection. To automatically approve connections for Java applications:

Find the Feature

 > **Settings** > **Java Settings**
> **Network Access**

Press

1 

To


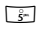



scroll to **Always Ask**,
Ask Once Per App, or **Never Ask**

2 **SELECT** ()

select the highlighted setting

Use Control Keys

Your phone's keys perform the following functions in a Java application.

Key	Function
	Move up, down, left, or right in a game.
	"Fire" your weapon in a game.
	End the application.
	Call a number in the application.
	Open the Java applications menu.

Analyse or Delete a Java Application

Find the Feature




 > **Games & Apps**

Press

1 

To

scroll to the application

Press	To
2 	open the application manager menu
3 	scroll to a menu option
4 SELECT ()	select the option to perform procedures as described in the following list

The application manager menu includes the following options:



Option	Description
View Details	Display the suite name, vendor, version, number of apps, flash usage, and memory requirements.
Delete	Delete the suite.
Show Memory or Hide Memory	Show or hide the application's memory size in the application list view.

View Java Version and Available Memory

To view Java version information, or the amount of phone memory available for Java applications:

Find the Feature

 > **Settings** > **Java Settings**
> **Java System**

Press	To
1 	scroll through information as described in the following list
2 OK ()	close the display

Option	Displays
CLDC Version	The connected limited device configuration version on your phone.
MIDP Version	The mobile information device profile version on your phone.
Data Space	Memory available for application data (such as phonebook entries or game scores).
Program Space	Amount of free memory available for Java applications.
Heap Size	Amount of runtime memory available for Java applications.
Flash Space	Available space for Java applications, including free memory and used memory.

To automatically show an application's memory size in the application list view, see page 90.

Games

You can download Java games to your phone (see page 88). If you get an incoming call, message, alarm, or alert, the game ends automatically.



Note: *Some ring tones vibrate automatically. If you use one of these tones, your phone vibrates even when it is not set to **Vibrate** or **Vibe&Ring**.*

To open a game that is on your phone:





Find the Feature



> **Games & Apps**

Press	To
1 	scroll to the game of your choice
2 SELECT ()	start the game

When the game is over:

Press	To
BACK ( —left) or NO ( —left)	return to the games menu
NEW ( —right) or YES ( —right)	start another session of the game you just played

SIM Applications



You can access information and applications stored on your SIM card.

To access the available applications:




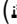


Find the Feature

 > **Tools** > **SIM Applications**

Your SIM card may contain applications that process your outgoing calls, text messages, and other events. Contact your service provider for more details.


Troubleshooting



Check these questions first if you have problems with your phone:

Question	Answer
Is your battery charged? Do you see  in the display?	The battery level indicator should have at least one segment showing (). If it does not, recharge your battery. See your User Guide.
Do you have a valid SIM card inserted in your phone?	If necessary, turn off your phone and make sure that you have inserted a valid SIM card (see your User Guide).
Does the handset have a signal? Do you see  in the display?	The signal strength indicator should have at least one segment showing (). If it does not, move to an area with a stronger signal to use your phone.
Is the earpiece volume too low?	While on a call, press the top of the  key.
Is the other party unable to hear you?	Your phone may be muted. Press UNMUTE () if necessary to unmute the phone. Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.





Question	Answer
Has the phone been damaged, dropped, or got wet?	Dropping your phone, getting it wet, or using a non-Motorola battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
Was a non-Motorola battery charger used?	

The following refer to specific problems:


Problem	Solution
My phone was stolen. To whom should I report this?	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
I forgot my password.	See your User Guide for information about what to do if you forget a code or password.
I pressed the end/power key, but nothing happened.	Be sure to press and hold  (the end/power key) until the display appears and you hear an audible alert (this could take a couple of seconds). If nothing happens, check that the battery is charged (see your User Guide.)

Problem	Solution
<p>The display says: Insert SIM Card or Check SIM Card even though I have inserted my SIM card in the phone.</p>	<p>The SIM card may be incorrectly inserted. Check the SIM card to make sure that it is inserted properly (see your User Guide).</p> <p>Note: <i>Be sure to turn your phone off and then back on after you re-insert the SIM card.</i></p>
<p>The display says: SIM Blocked. How do I unblock my SIM card?</p>	<p>Call your service provider (the company that sends you your monthly wireless service bill) to obtain the PIN unblocking key (PUK) code. See page 81.</p>
<p>The display says: Enter Unlock Code. How do I unlock my phone?</p>	<p>Enter the factory-preset unlock code (1234), or the last four digits of your phone number (see your User Guide). If this fails, call your service provider (the company that sends you your monthly wireless service bill).</p>
<p>My phone asks for an unlock code when I try to open a feature.</p>	<p>The application you want is locked. If you own the phone but do not know the unlock code, see your User Guide.</p>
<p>My phone does not ring.</p>	<p>If you see  or  in the display, then the ringer is turned off. To change the ring style, see your User Guide.</p> <p>Also, the ringer may be set to Silent even though your phone is set to a ring alert profile.</p>

Problem	Solution
My phone rings even though I selected the Silent (or Vibrate) alert profile.	The ringer may be set to play a tone even though your phone is set to a silent alert profile. To change the ring style, see your User Guide.
I tried to place a call and heard an alternating high/low tone.	Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display shows the name of your service provider before making a call.
I cannot make/answer calls.	<p>Make sure that you have a phone signal (see your User Guide). Avoid electrical or radio interference, and obstructions such as bridges, car parks, or tall buildings.</p> <p>Your phone also may have the Call Barring feature turned on. If you know the unlock code, you can change this setting in the security menu ( > Settings > Security).</p> <p>Also, check to be sure your SIM card is installed and working.</p>
My phone has poor reception and drops calls.	Make sure you have a phone signal (see your User Guide). Stay clear of any obstructions such as bridges, car parks, or tall buildings.
The display says: Data Calls Only.	You are in an area where the network does not support voice calls. You can only make data calls until you move to another network.

Problem	Solution
<p>I cannot hear others on my phone.</p>	<p>While on a call, press the volume key on the left side of your phone. Your phone display should show the volume increasing.</p> <p>Also, make sure that your phone's earpiece is not blocked by its carrying case.</p>
<p>I cannot open my inbox.</p>	<p>Before you can use text messages, you must set up the appropriate inbox. See page 8.</p>
<p>How do I see the calls I sent or received?</p>	<p>To see the most recent calls you dialed or received, open the "Recent Calls" lists:</p> <p> > Recent Calls > Received Calls or > Dialed Calls</p>
<p>My phone will not dial voicemail commands, passwords, or other codes.</p>	<p>Your phone sends commands and passwords as DTMF tones. You can set your phone's DTMF tones to be Long, Short, or Off. If you have trouble sending numbers, check your DTMF setting.</p> <p>From the idle display, press:</p> <p> > Settings > Initial Setup > DTMF Press  to scroll to Long or Short. Press SELECT () to select it.</p>

Problem	Solution
What can I do to extend battery life?	Your battery's performance is affected by charge time, feature use, temperature changes, and other factors. For tips on extending your battery life, see your User Guide.
I plugged the data cable into my phone but my phone did not beep. How do I know if the data cable is ready to go?	<p>The beep indicates that you are set up correctly. If you did not hear a beep, make sure that both ends of the data cable are connected—the smaller end to your phone and the larger end to your computer.</p> <p>Finally, your computer may have deactivated the port to save power. Try opening an application that uses the port, like a dial-up application, and your computer will automatically activate the port.</p>
My phone beeped when I attached the data cable, but my data applications don't work.	<p>Some wireless networks may not support data transmission. If you are roaming on an unfamiliar network, this may be the case.</p> <p>Also, remember that data transmission usually requires a subscription. Call your service provider for more information.</p>

Problem	Solution
<p>When sending data with the data cable, why does the computer show a connection rate of 19200 Kbps?</p>	<p>19200 Kbps is the data transfer rate of the connection between your computer and the phone in a standard CSD (Circuit Switch Data) connection. The rate of the connection between your phone and the network is displayed on your phone, and will be either 14400 or 9600 Kbps.</p> <p>A GPRS connection may have a higher data transfer rate.</p>
<p>I can't end my data call by closing the application on my computer. What can I do?</p>	<p>Try pressing  on your phone. Also try disconnecting the cable or turning off the phone. If possible, always close the connection through your computer. These alternative methods may disrupt the application on your computer.</p>
<p>I launched the micro-browser but the display says: Service Not Available.</p>	<p>You may be in an area without service, or you may be connected to a network that does not support Internet access.</p>
<p>I launched the micro-browser but the display says: Data Server Unavailable.</p>	<p>Try again in a few minutes. The servers may be temporarily busy.</p>

Index

A

- accessories
 - connector ports 1
 - optional 60, 68
- alert
 - creating 40
 - reminders 39
 - setting 87
- animation 47
 - screen saver, setting 87
 - storing 86
 - wallpaper, setting 87
- application, locking and unlocking 82
- appointments. See datebook

B

- barring calls 53
- battery
 - car kit charger time 62
 - extending battery life 47, 99
- Bluetooth 63, 66, 68
- browser. See micro-browser

C

- calculator 79
- calendar. See datebook

call

- alert, creating 40
- barring 53
- calling card 25
- costs 58
- timing 56
- video 20, 28
- call barring 53
- call cost information 58
- call diverting 52
- call timers 56
- calling card call 25
- call-light ID 24, 30
- car kit
 - automatic answer 60
 - automatic hands free 61
 - charger time 62
 - power-off delay 61
- computer
 - connecting to phone 63, 68
- conference call 51
- cost trackers 58
- credit information 59
- customer service, calling 55
- customising the menu 45

D

- data call

- connecting to external device 63, 68
- receiving 69
- sending 69
- wireless connection 65, 66
- Data Calls Only 97
- datebook
 - adding an event 75
 - alarm 76
 - changing event information 76
 - copying an event 76
 - day view 73, 74
 - deleting an event 77
 - event view 75
 - reminders 39, 76
- dialling
 - voice dial 27
- display
 - animation 47
 - language 47
- diverting calls 52
- DTMF tones 56, 98

E

- email address, storing in phonebook 23
- end key
 - functions 1
- external device
 - connecting to phone 63, 68

F

- fixed dial
 - defined 54
 - described 54
 - dialling numbers 54
 - editing an entry 28, 54
 - storing an entry 23
 - turning on/off 54
 - using 54
- frequency, changing 71

G

- games 92

H

- hands free mode
 - automatic answer 60
 - automatic call routing 61
 - charger time 62
 - power-off delay 61
- headset
 - automatic answer 60

I

- inbox, text message 8
- indicators
 - packet data 84
 - voice name 22
- infrared connection
 - setting 65

IrDA link 63, 65

J

Java applications 88

K

key

end 1

left soft key 1, 46

menu 1

right soft key 1, 46

send 1

L

language, setting 47

left soft key

customising 46

functions 1

lock

application 82

SIM card 81

M

menu

Browser Menu 85

Calculator Menu 79

customising 45

Datebook Menu 75

features 51

language, setting 47

My Tones Menu 44

Phonebook Menu 22

rearranging features 45

scroll feature 47

Shortcuts 48

Text Msg Menu 21

menu key 1

message

deleting 19

deleting, text 21

download setting 9

inbox setup 8

locking 19

locking, text 21

outbox 17

reading 19

reading, text 21

receipts 17

receiving 18

reminders, text message 18,
39

reminders, voicemail 39

sending 14

status 17

micro-browser

animation 86

Browser Menu 85

defined 84

functions 85

Java applications 88

picture 86

- sound 86
- starting 84
- microphone 1
- my tones 40
- My Tones Menu** 44

N

- 'n' character 25
- network settings 71

O

- 1-touch dial
 - setting preference 36
- outbox 17

P

- packet data 84
- pause character 25
- phone
 - connecting to external device 63, 68
 - credit available 59
 - frequency, changing 71
 - language, setting 47
 - network settings 71
 - wireless connection 65, 66
- phone number
 - sending text message to 14
 - storing in phonebook 23
- phonebook

- capacity, checking 36
- copying entries 34
- deleting an entry 29
- dialling a number 27
- editing an entry 28
- email address 22
- entry name 22
- fields 22
- number type indicator 22
- phone number 22
- primary number, setting 33
- private entries 32
- sorting entries 32
- speed dial number 22, 24
- storing an entry 23
- voice name entry 26
- voice name indicator 22
- picture
 - phonebook entry, storing 24
 - screen saver, setting 87
 - storing 86
 - wallpaper, setting 87
- PIN code
 - activating/deactivating 81
 - defined 81
 - protecting the SIM card 81
 - unblocking 81
- PIN2 code 55, 82
- PUK code 82

Q

- quick dial
 - setting number 55
 - using 55

R

- receipts, text message 17
- reminders
 - datebook 76
 - setting 39
 - text message 18, 39
 - voicemail message 39
- right soft key
 - customising 46
 - functions 1
- ring alert
 - creating 40

S

- screen saver 87
- scroll feature 47
- send key 1
- service dial 55
- short message service. See text message
- shortcuts
 - creating 48
 - standard 48
 - using 49
- SIM applications 93

SIM Blocked message 82

SIM card

- applications 93
 - protecting 81
 - service phone numbers 55
 - SIM Blocked** message 82
 - SIM Disabled** message 82
 - unblocking 81
- ## SIM PIN code
- activating/deactivating 81
 - protecting the SIM card 81
 - unblocking 81
- ## SIM PIN2 code 55, 82
- SMS. See text message
- ## soft keys
- customising 46
 - illustration 1
- ## sound
- setting as alert tone 87
 - storing 86
- ## speed dial
- changing number 24
 - sorting phonebook entries by 32

T

- text message
 - deleting 21
 - inbox setup 8
 - locking 21
 - reading 21

- receiving 18
- reminders 18, 39
- sending 14
- status 17
- Text Msg Menu** 20
- timers 56

U

- unblocking the SIM card 81
- unlock application 82

V

- vibe sync 40
- vibrate alert
 - setting 40
 - turning off 40
- voice dial
 - dialling a number 27
 - recording voice name 26
- voice name
 - defined 26
 - phonebook indicator 22
 - recording 26

W

- wait character 25
- wallpaper 87
- Web pages 84, 85