 
 


## Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola T720i GSM wireless phone.

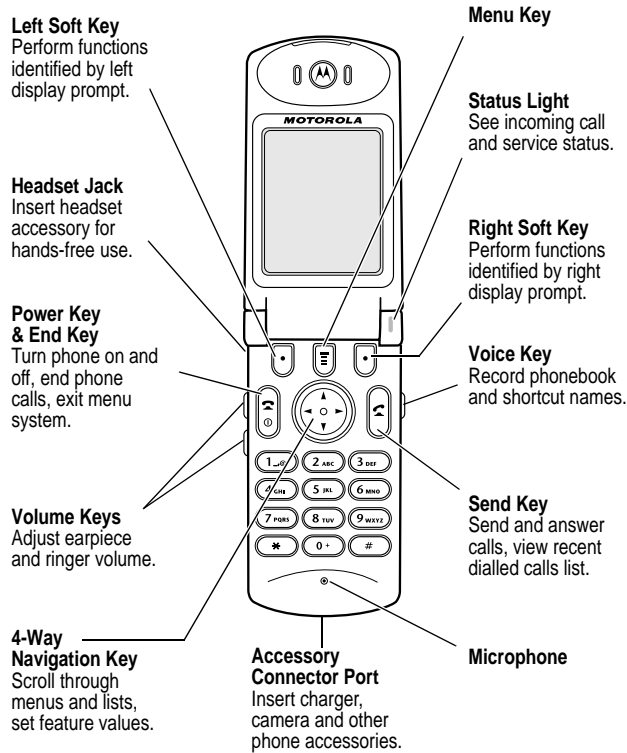

 
 
 
 


MOTOROLA, the Stylised M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. © Reg. U.S. Pat. & Tm. Off. TrueSync, Sidekick, Starfish and the Stylised Starfish Logo are registered trademarks of Starfish Software, Inc., a wholly owned independent subsidiary of Motorola, Inc. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© 2002 Motorola, Inc. All rights reserved.

**Software Copyright Notice**


The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.







## Contents


---
 
<b>Safety and General Information</b> .....	5
<b>Warranty Information</b> .....	12
<b>Getting Started</b> .....	17
What's in the Box? .....	17
About This Guide .....	17
Installing the SIM Card .....	18
Installing the Battery .....	19
Charging the Battery .....	20
Battery Use .....	21
Changing the Convertible Covers .....	22
Attaching the Camera .....	24
Turning Your Phone On .....	24
Adjusting Volume .....	25
Making a Call .....	25
Answering a Call .....	26
Changing the Ringer Alert .....	26
Viewing Your Phone Number .....	26
<b>Learning to Use Your Phone</b> .....	27
Using the Display .....	27
Using Menus .....	30
Entering Text .....	35
Using the Status Light .....	42
Using the External Display .....	43
Locking and Unlocking Your Phone .....	43
Changing a Code, PIN, or Password .....	44
If You Forget a Code, PIN, or Password .....	45
<b>Setting Up Your Phone</b> .....	46
Storing Your Name and Phone Number .....	46
Setting the Time and Date .....	46
Setting a Ring Style .....	46



Setting Answer Options . . . . .	47
Adjusting the Backlight . . . . .	47
Conserving Battery Power . . . . .	48
Monitoring Battery Charge . . . . .	48
Setting a Wallpaper Image . . . . .	48
Setting a Screen Saver Image . . . . .	49
Setting Display Colour . . . . .	50
Zooming In and Out . . . . .	50
<b>Calling Features</b> . . . . .	<b>51</b>
Viewing Your Phone Number . . . . .	51
Changing the Active Line . . . . .	51
Redialling a Number . . . . .	51
Using Caller ID . . . . .	52
Cancelling an Incoming Call . . . . .	53
Turning Off a Call Alert . . . . .	53
Calling an Emergency Number . . . . .	53
Dialling International Numbers . . . . .	54
Viewing Recent Calls . . . . .	54
Returning an Unanswered Call . . . . .	56
Using the Notepad . . . . .	57
Attaching a Number . . . . .	57
Calling With Speed Dial . . . . .	58
Calling With 1-Touch Dial . . . . .	58
Using Voicemail . . . . .	58
Using Call Waiting . . . . .	59
Putting a Call On Hold . . . . .	60
Transferring a Call . . . . .	60
Taking Photos and Sending Picture Messages . . . . .	61
<b>Phone Features</b> . . . . .	<b>65</b>
Main Menu . . . . .	65
Feature Quick Reference . . . . .	67
<b>Specific Absorption Rate data</b> . . . . .	<b>76</b>
<b>Index</b> . . . . .	<b>78</b>

    

 

## ***Safety and General Information***

### **IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION**

#### **READ THIS INFORMATION BEFORE USING YOUR PERSONAL COMMUNICATOR**

The information provided in this document supersedes the general safety information contained in user guides published prior to this date. For information regarding radio use in a hazardous atmosphere please refer to the Factory Mutual (FM) Approval Manual Supplement or Instruction Card, which is included with radio models that offer this capability.

### ***RF Operational Characteristics***

 
 
Your Personal Communicator contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy. The Personal Communicator operates in the frequency range of 900 MHz to 1990 MHz and employs digital modulation techniques.

 
When you communicate with your Personal Communicator, the system handling your call controls the power level at which your personal communicator transmits. The output power level typically may vary over a range from 0.063 watts to 1.58 watts.

### ***Exposure To Radio Frequency Energy***



Your Motorola Personal Communicator is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J





- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1999 Edition
- National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- National Radiological Protection Board of the United Kingdom 1995
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation - Human Exposure) Standard 1999 (applicable to wireless phones only)

  



To assure optimal performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:

### *Portable Personal Communicator Operation and EME Exposure*
  
#### **Antenna Care**

**Use only the supplied or an approved replacement antenna.** Unauthorized antennas, modifications, or attachments could damage the Personal Communicator and may violate FCC and/or other applicable regulations.

**DO NOT hold the antenna when the Personal Communicator is "IN USE".** Holding the antenna affects call quality and may cause



the Personal Communicator to operate at a higher power level than needed.

### ***Phone Operation***

The Personal Communicator is designed to be used with a headset for talking and listening. The Personal Communicator can also be placed inside the holster, then the holster can be clipped onto your belt, pocket, handbag, or other apparel and used with the headset.

### ***Body-worn Operation***

To maintain compliance with FCC RF exposure guidelines, if you wear the Personal Communicator on your body when transmitting, always place the Personal Communicator in a **Motorola supplied or approved clip, holder, holster, case, or body harness**. Use of non-Motorola-approved accessories may exceed FCC RF exposure guidelines. **If you do not use a body-worn accessory, ensure the antenna is at least one inch (2.5 cm) from your body when transmitting.**

### ***Approved Accessories***

 
For a list of approved Motorola accessories, look in the accessory section of this manual.

### ***Electromagnetic Interference/Compatibility***

Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed or otherwise configured for electromagnetic compatibility.

### ***Facilities***

To avoid electromagnetic interference and/or compatibility conflicts, turn off your Personal Communicator in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.



## ***Aircraft***

When instructed to do so, turn off your Personal Communicator when on board an aircraft. Any use of a Personal Communicator must be in accordance with applicable regulations per airline crew instructions.

 
 
## ***Medical Devices***

### **Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation of 6 inches (15 centimetres) be maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, Wireless Technology Research.

Persons with pacemakers should:

- ALWAYS keep the Personal Communicator more than six inches (15 centimetres) from their pacemaker when the Personal Communicator is turned ON.
- not carry the Personal Communicator in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn the Personal Communicator OFF immediately if you have any reason to suspect that interference is taking place.





### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

  If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately





shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## *Safety and General*

### *Use in Vehicles*

Check the laws and regulations on the use of phones in your vehicle. You are advised to always obey them.

When using your Personal Communicator in a vehicle, please:

- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call.

### *Operational Warnings*

 
#### *For Vehicles with an Air Bag*

Do not place the Personal Communicator in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If the Personal Communicator is placed in the air bag deployment area and the air bag inflates, the Personal Communicator may be propelled with great force and cause serious injury to occupants of the vehicle.

#### *Potentially Explosive Atmospheres*

Turn off your Personal Communicator prior to entering any area with a potentially explosive atmosphere, unless it is especially qualified for use in such areas as "Intrinsically Safe" (for example, Factory Mutual, CSA, or UL Approved). Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or



chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

### ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn off your Personal Communicator when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

 
 
 
 
### ***Operational Cautions***

#### ***Antennas***

Do not use the Personal Communicator if it has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

#### ***Batteries***


All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.



### ***European Union Directives Conformance Statement***


Hereby, Motorola declares that this product is in compliance with

 - The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

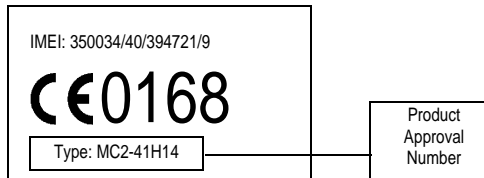

The above gives an example of a typical Product Approval Number.

 You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at [www.motorola.com/rte](http://www.motorola.com/rte) - to find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.



## ***Warranty Information***

---

Motorola guarantees you, the original purchaser, the Personal Communicator and accessories which you have purchased from an authorised Motorola dealer (the "Products"), to be in conformance with the applicable Motorola specifications current at the time of manufacture for a term of [1] year from date of purchase of the Product(s) (Warranty Term).

 
 
 
 
You must inform Motorola of the lack of conformity to the applicable specifications of any of the Products within a period of two (2) months from the date on which you detect a defect in material, workmanship or lack of conformity and in any event within a term not to exceed the Warranty Term, by submitting the Product for service to Motorola. Motorola shall not be bound by Product related statements not directly made by Motorola nor any warranty obligations applicable to the seller.

A list of the Motorola Call Centre numbers is enclosed with this Product.

During the Warranty term, Motorola will, at its discretion and without extra charge, as your exclusive remedy, repair or replace your Product which does not comply with this warranty; or failing this, to reimburse the price of the Product but reduced to take into account the use you have had of the Product since it was delivered. This warranty will expire at the end of the Warranty Term.

This is the complete and exclusive warranty for a Motorola Personal Communicator and accessories and in lieu of all other warranties, terms and conditions, whether express or implied.

Where you purchase the product other than as a consumer, Motorola disclaims all other warranties, terms and conditions express or implied, such as fitness for purpose and satisfactory quality.



In no event shall Motorola be liable for damages nor loss of data in excess of the purchase price nor for any incidental special or consequential damages\* arising out of the use or inability to use the Product, to the full extent such may be disclaimed by law.

This Warranty does not affect any statutory rights that you may have if you are a consumer, such as a warranty of satisfactory quality and fit for the purpose for which products of the same type are normally used under normal use and service, nor any rights against the seller of the Products arising from your purchase and sales contract.


(\*):including without limitation loss of use, loss of time, loss of data, inconvenience, commercial loss, lost profits or savings.

### ***How to get warranty service?***

 In most cases the authorised Motorola dealer which sold and/or installed your Motorola Personal Communicator and original accessories will honour a warranty claim and/or provide warranty service. Alternatively, for further information on how to get warranty service please contact either the customer service department of your service provider or Motorola's call centre at the telephone numbers below for your country.

In order to claim the warranty service you must return the Personal Communicator and/or accessories in question to Motorola please avoid leaving any supplementary items like SIM cards. The Product should also be accompanied by a label with your name, address, and telephone number; name of operator and a description of the problem. In the case of vehicular installation, the vehicle in which the Personal Communicator is installed should be driven to the Authorised Repair Centre, as analysis of any problem may require inspection of the entire vehicular installation.

In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The phone should also clearly display the original compatible electronic serial number



(IMEI) and mechanic serial number [MSN]. Such information is contained with the Product.





### ***Conditions***

    This warranty will not apply if the type or serial numbers on the Product has been altered, deleted, duplicated, removed, or made illegible. Motorola reserves the right to refuse free-of-charge warranty service if the requested documentation can not be presented or if the information is incomplete, illegible or incompatible with the factory records.

Repair, at Motorola's option, may include reflashing of software, the replacement of parts or boards with functionally equivalent, reconditioned or new parts or boards. Replaced parts, accessories, batteries, or boards are warranted for the balance of the original warranty time period. The Warranty Term will not be extended. All original accessories, batteries, parts, and Personal Communicator equipment that have been replaced shall become the property of Motorola. Motorola does not warrant the installation, maintenance or service of the products, accessories, batteries or parts.

Motorola will not be responsible in any way for problems or damage caused by any ancillary equipment not furnished by Motorola which is attached to or used in connection with the Products, or for operation of Motorola equipment with any ancillary equipment and all such equipment is expressly excluded from this warranty.

When the Product is used in conjunction with ancillary or peripheral equipment not supplied by Motorola, Motorola does not warrant the operation of the Product/peripheral combination and Motorola will not honour any warranty claim where the Product is used in such a combination and it is determined by Motorola that there is no fault with the Product. Motorola specifically disclaims any responsibility for any damage, whether or not to Motorola equipment, caused in any way by the use of the Personal Communicator, accessories, software applications and peripherals (specific examples include, but are not limited to: batteries, chargers, adapters, and power









supplies) when such accessories ,software applications and peripherals are not manufactured and supplied by Motorola.

### ***What is not covered by the warranty***

    This warranty is not valid if the defects are due to damage, misuse, tampering, neglect or lack of care and in case of alterations or repair carried out by unauthorised persons.

1. Defects or damage resulting from use of the Product in other than its normal and customary manner.
2. Defects or damage from misuse, access to incompatible sources, accident or neglect.
3. Defects or damage from improper testing, operation, maintenance, installation, adjustment, unauthorised software applications or any alteration or modification of any kind.
4. Breakage or damage to antennas unless caused directly by defects in material or workmanship.
5. Products disassembled or repaired in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim.
6. Defects or damage due to range, coverage, availability, grade of service, or operation of the cellular system by the cellular operator.
7. Defects or damage due to moist, liquid or spills of food.
8. Control unit coil cords in the Product that are stretched or have the modular tab broken.
9. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to customer normal use.
10. Leather cases (which are covered under separate manufacturer's warranties).
11. Products rented on a temporary basis.









12. Periodic maintenance and repair or replacement of parts due to normal wear and tear.

**Note:** *The talk-time, stand-by time and total life cycle of a Motorola rechargeable battery for your Personal Communicator will depend on usage conditions and network configurations. As a consumable product, the specifications indicate that you should be able to obtain optimum performance for your Motorola Personal Communicator within the first six months from date of purchase and up-to (200) charges.*

    *The warranty for Motorola rechargeable batteries becomes void if (i) the batteries are charged other than by Motorola approved battery chargers specified for the charging of the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, (iii) the battery is used in equipment or service other than the cellular telephone equipment for which it is specified.*





## ***Getting Started***

---

### ***What's in the Box?***

Your digital wireless phone typically comes equipped with a battery and a charger. Other accessory options can customise your phone for maximum performance and portability.

### ***About This Guide***

This user guide introduces you to your Motorola wireless phone.

**Note: A reference guide for your phone may also be available that describes your phone's features in more detail.**

To obtain the reference guide for your phone, or another copy of this user guide, see the Motorola Web site at:

<http://hellomoto.com>

### ***Optional Features***



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

### ***Optional Accessories***



This label identifies a feature that requires an optional Motorola Original™ accessory.

 
## Installing the SIM Card

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory.


**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

### Do This


- 1 If necessary, slide down the battery door release latch and lift the door off of the phone.

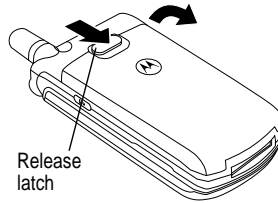

- 2 Slide the SIM card latch up.

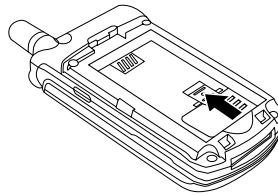 


 - 3 Insert the SIM card into the SIM card tray with the notch in the lower left corner and the gold plate facing down.

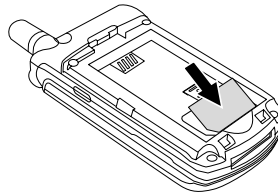

**Do This**

 - 4 Slide the SIM card latch down to lock the SIM card in place.

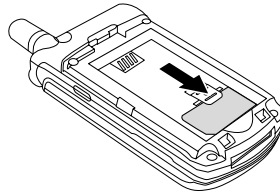

---

***Installing the Battery***

 
You must install and charge the battery to use your phone.



Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.


**Do This**

- 1 Remove the battery from its protective clear plastic case.
- 2 If necessary, slide down the battery door release latch and lift the door off of the phone.

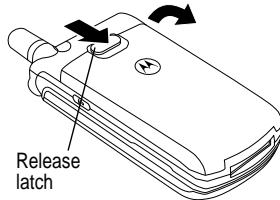


**Do This**

 - 3 Insert the battery, printed arrow first, **under the tab** at the top of the battery compartment and push down.

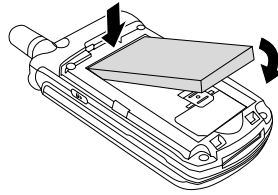

 - 4 Insert the teeth at the bottom of the battery door into the slot at the base of the phone, then push the door down and snap it into place.

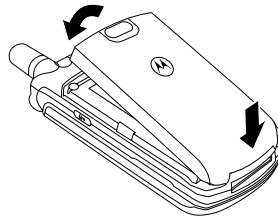


---

### ***Charging the Battery***

 New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery, as indicated by the following instructions. Some batteries perform best after several full charge/discharge cycles.

**Do This**

- 1 Plug the travel charger into your phone with the release tab facing up.

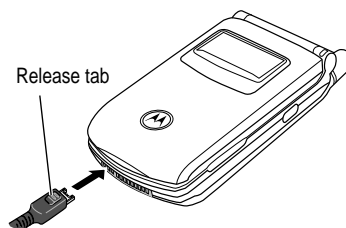

### Do This

- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates that the battery is fully charged (**Charge Complete**), press the release tab and remove the travel charger.

---

*Note:* When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete.

### Battery Use

 
Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; and your voice, data, and other application usage patterns.

### Battery Care

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximise your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.





- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods. Never dispose of batteries in a fire because they may explode.

### ***Extending Battery Life***

 
 
- **Turn off the status light**  
See page 42.
- **Turn off the screen saver**  
See page 49.
- **Minimise keypad-intense functions**  
Such as playing games or writing messages.
- **Turn off the display backlight**  
See page 47.



### ***Changing the Convertible Covers***



  
You can change the flip cover and battery cover on your phone to personalise its appearance. Matching front and back cover sets are available in a variety of colours and designs.



Your phone is designed to be used only with Motorola Original accessories. See your Motorola retailer for these convertible covers.


**To remove a flip cover**

 Insert your fingernail into the slot at the base of the flip cover, then pull up and lift the cover off the phone

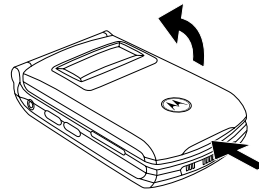

**To attach a flip cover**

 Insert the tabs at the bottom of the new cover into the slots at the base of the phone, then push the cover down and snap it into place.

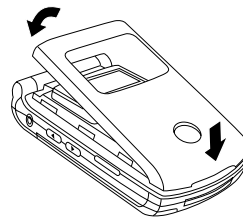


## Attaching the Camera



 
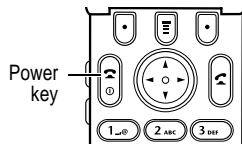 
Insert the optional Motorola Original™ Digital Camera into the accessory connector port at the bottom of your phone as shown.



For instructions on how to take and send photos, see page 61.

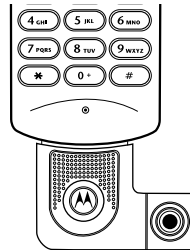

## Turning Your Phone On

  - | Do This  | To                 |
|--|--------------------|
| 1 Open your phone  | expose the keypad  |
| 2 Press and hold  | turn on your phone |




- |   |                      |
|---|----------------------|
| 3 If necessary, enter your SIM card PIN code and press <b>OK</b> (  )      | unlock your SIM card |
| <b>Caution:</b> If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your phone displays <b>SIM Blocked</b> .               |                      |
| 4 If necessary, enter your four-digit unlock code and press <b>OK</b> (  ) | unlock your phone    |



## Adjusting Volume

 Press the up and down volume keys to:

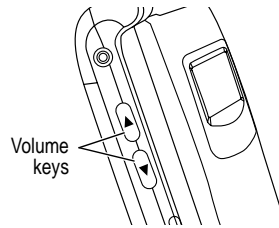

- increase and decrease earpiece volume during a call
- increase and decrease the ringer volume setting when the idle display is visible (flip must be open)



**Tip:** At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.


 

- turn off an incoming call alert


## Making a Call

Press	To
1 keypad keys	dial the phone number
<b>Tip:</b> If you make a mistake, press <b>DELETE</b> (⏮) to delete the last digit, or press and hold <b>DELETE</b> (⏮) to clear all digits.	
2 	make the call
3 	end the call and “hang up” the phone when you are finished

## Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

 
Press	To
1  or ANSWER (  )	answer the call
2 	end the call and "hang up" the phone when you are finished

**Tip:** When the phone flip is active, simply open the phone to answer the call. (To activate, press  > **Settings** > **In-Call Setup** > **Answer Options** > **Open to Answer**)

**Note:** If the phone is locked, you must unlock it to answer the call.

## Changing the Ringer Alert

 Press the down volume key to switch the alert for incoming calls and other events to vibrate, then silent. Press the up volume key to reset your phone to ring alert.

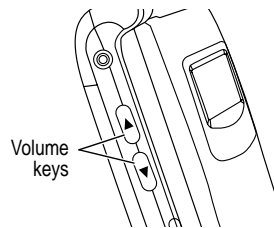

## Viewing Your Phone Number

From the idle display, press  .

 
**Note:** Your phone number must be stored on the SIM card to use this feature (see page 46).

## Learning to Use Your Phone

See page 1 for a basic phone diagram.

### **Using the Display**

The *idle display* (shown below) is the standard display you see when you are *not* on a call or using the menu.

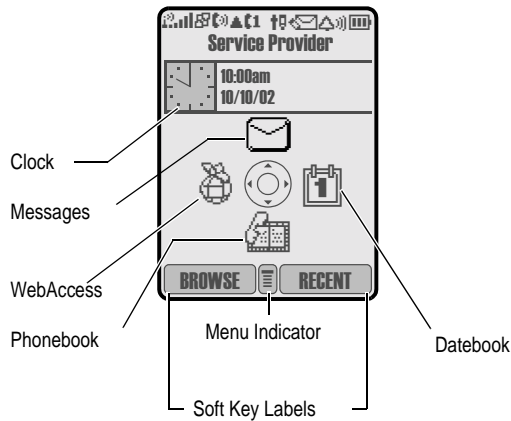


Press the 4-way navigation key (⤵) left, right, up, or down to select one of the four menu feature icons in the idle display.

The menu indicator (☰) in the bottom centre of the display indicates you can press (☰) to go to the main menu to see more features.

Labels at the bottom corners of the display show the current soft key (☰) functions. Press the left or right (☰) key to perform the function indicated by the left or right soft key labels.

 At the top of the display are a number of status indicators.

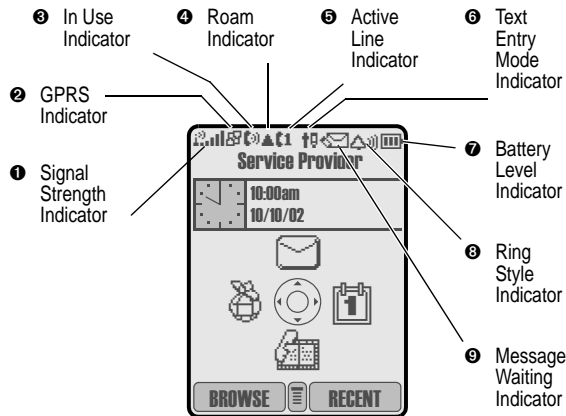

**① Signal Strength Indicator** Vertical bars show the strength of the network connection. You cannot make or receive calls when the (no signal) indicator is displayed.

**② GPRS Indicator** Shows that your phone is using a high-speed GPRS network connection.

**③ In Use Indicator** Shows that a call is in progress.

**④ Roam Indicator** Shows that your phone is seeking or using another network system outside your home network.


**⑤ Active Line Indicator** Shows the current active phone line.





**6 Text Entry Mode Indicator** Appears when you are in a text entry screen, to show the current active text entry mode.


**7 Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when you see **Low Battery** and hear the low battery alert.


**8 Ring Style Indicator** Shows the ring style setting.

 = loud ring

 = soft ring

 = vibrate


 = vibrate and ring

 = silent




**9 Message Waiting Indicator** Appears when you receive a text message.

## Using Menus

 From the idle display, press  to go to the main menu.

### Menu Key

Enter menu system, or open a sub-menu, when  appears in bottom centre of display.


Current selection.

### Left Soft Key

 Perform function shown in lower left corner of display (usually **EXIT** or **BACK**).

### End Key

Exit menu system without making changes, return to idle display.

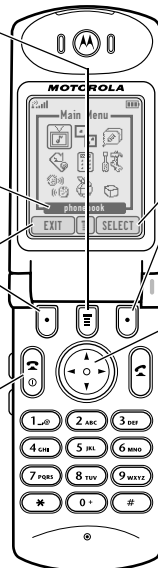

















### Right Soft Key

Perform function shown in lower right corner of display (usually **SELECT** the highlighted menu item).

### 4-Way Navigation Key

Scroll **up** or **down** through menus and lists. Scroll **left** or **right** to cycle through and set value of highlighted menu item. From idle display, press **up**, **down**, **left**, or **right** to select menu feature icon.



 

Press  to highlight a menu feature icon in the main menu. Select  (More) to see additional menu features. The following icons represent features that may appear in the main menu, depending on your service provider and service subscription options.

Menu Icon	Feature	Menu Icon	Feature
	<b>Media Centre</b>		<b>Games &amp; Apps</b>
	<b>Voice Notes</b>		<b>Shortcuts</b>
	<b>Calculator</b>		<b>Settings</b>
	<b>Phonebook</b>		<b>WebAccess</b>
	<b>More</b>		<b>Messages</b>
	<b>Datebook</b>		<b>Recent Calls</b>
	<b>Ring Styles</b>		<b>Services</b>

### Select a Menu Feature


This guide shows you how to select a menu feature as follows, starting from the idle display (see page 27):

#### Find the Feature > More > Phonebook

This example shows that from the idle display, you must press , scroll to and select **More** () from the main menu, then scroll to and select **Phonebook**. Use the 4-way navigation key () to scroll, and the left/right soft keys () to select the functions listed in the bottom left and right corners of the display.

## Select a Feature Option

 Some features require you to select an item from a list:

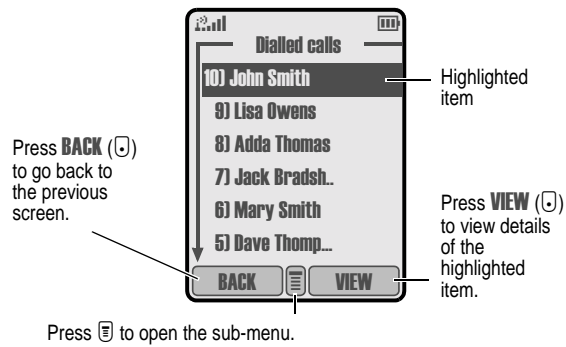


- Press ⬆️ to scroll up or down to highlight the item you want.
- In a numbered list, press a number key to highlight the item.
- In an alphabetised list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.



## Enter Feature Information

 
Some features require you to enter information:

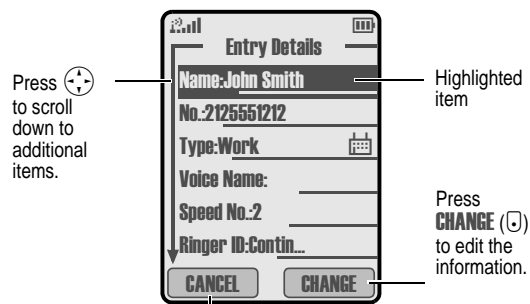

Press **CANCEL** to exit without making changes. **DONE** appears when you enter or edit information.

- Enter numbers or text with the keypad.
- When an item has a list of possible values, press to the left or right to scroll through and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.
- If you enter or edit information and do not want to save your changes, press to exit without saving.

 The message centre lets you compose and send text messages. A *flashing cursor* shows where text will appear:

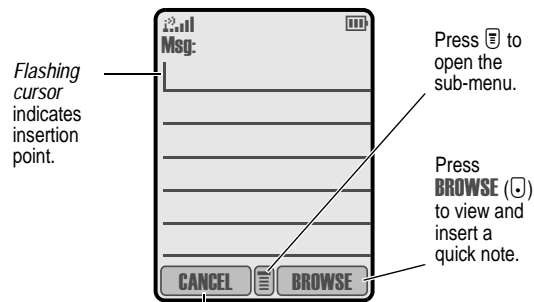


*Flashing cursor* indicates insertion point.

Press **⏏** to open the sub-menu.

Press **BROWSE** (**⏏**) to view and insert a quick note.

Press **CANCEL** (**⏏**) to exit without making changes.

 When you enter text using the standard tap method (see page 35), the flashing cursor changes to a *block cursor*, and the soft key functions change:

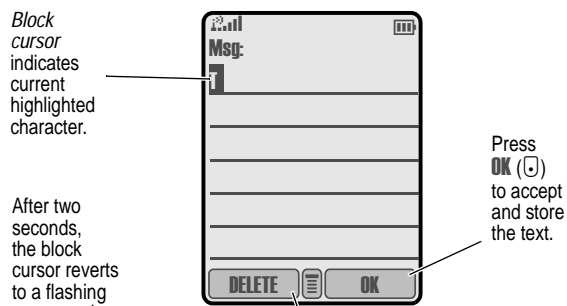

*Block cursor* indicates current highlighted character.

After two seconds, the block cursor reverts to a flashing cursor and moves to the next position.


Press **OK** (**⏏**) to accept and store the text.

Press **DELETE** (**⏏**) to delete the character to the left of the insertion point.

## Entering Text

Multiple text entry methods make it easy for you to enter names, numbers, and messages on your phone.

### Choose a Text Mode


Press  > **Entry Method** from any text entry screen to select a text mode:

 
- ITAP** Let the phone predict each word as you enter it.
- Tap Method** Enter letters, numbers, and symbols by pressing a key one or more times.
- Numeric** Enter numbers only.
- Symbol** Enter symbols only.
- Browse** Browse your phonebook or recent call lists to select a name or number.

*Note: The text mode you select remains active until you change it by selecting another mode.*

### Use Tap Method

This is the standard mode for entering text on your phone.

Press  > **Entry Method** from any text entry screen and select the **Tap Method** menu option.


Press	To
1 A number key one or more times	select a letter, number, or symbol shown in the "Character Chart" on page 37
2 Number keys	enter the remaining characters
3 <b>OK</b> (  )	store the text when you are finished

### General Text Entry Rules

 Press a number key repeatedly to cycle through its characters. See "Character Chart" on page 37.


Press a number key as many times as necessary to enter the desired character at flashing cursor location.

Press and hold a number key to cycle between text entry modes.

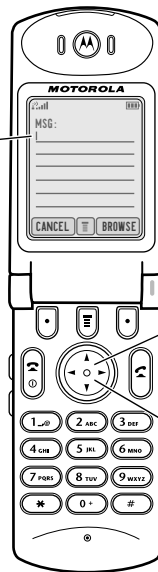

Press **up** or **down** to change letter in block cursor to uppercase or lowercase.

Press **left** or **right** to move flashing cursor to the left or right in text message.

- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- The first character of every sentence is capitalised. (Press  down to force the character to lowercase while it is highlighted by the block cursor.)

### Character Chart


Use this chart as a guide for entering characters with the tap method.

1 [space]	space . 1 ? ! , @ _ & ~ : ; " - ( ) ' ÿ ÿ % £ \$ ¥ ¤ €
2 ABC	a b c 2 ä å á à â ã α ó β ç
3 DEF	d e f 3 δ ë é è ê ε é φ
4 GHI	g h i 4 ï í î ÿ η ή ι ί
5 JKL	j k l 5 κ λ
6 MNOP	m n o 6 ñ ö ø ó ò ô õ μ ν ω ώ
7 PQRS	p q r s 7 π β σ
8 TUV	t u v 8 θ ü ú ù û τ
9 WXYZ	w x y z 9 ξ ψ
0 +	+ - 0 x * / \ [ ] = > < # §

**Note:** This chart may not reflect the exact character set available on your phone.

### Use iTAP™ Software Predictive Text Entry Method

iTAP™ software is a predictive text entry method that lets you enter a word using one keypress per letter.

Press  > **Entry Method** from any text entry screen and select the iTAP menu option.




## Entering Words

### Do This

1 Press a number key once

2 Press number keys (one per letter)

3 Press 

4 Press **SELECT** ()

### To

enter the first letter of the word

The letters associated with the key are shown at the bottom of the display.

 
 
enter the rest of the word

Alternative words and letter combinations are shown at the bottom of the display. The word choices are updated with each keypress.


highlight the word you want

enter the word at the flashing cursor location

A space is automatically inserted after the word.



 
For example, to spell the word “act,” press **2.ABC** **2.ABC** **8.TUV**. The display shows:

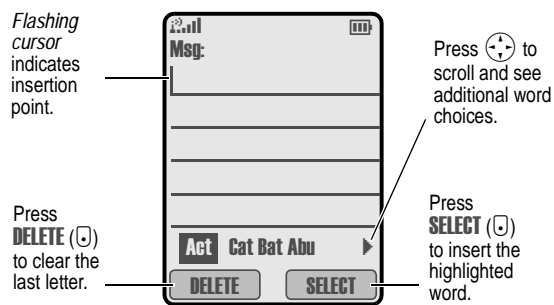

### Entering Novel Words

You may enter a word that the iTAP software does not recognise. If the word is not displayed:

 Do This	To
1 Press <b>DELETE</b> ( <b>⏏</b> ) one or more times	delete letters until you see a letter combination that matches the start of the word
2 Press <b>⬅</b>	highlight the letter or letter combination
3 Press <b>SELECT</b> ( <b>⏏</b> ), then press <b>⬅</b> to the left	shift the text entry cursor to the left and “lock” the selected word portion
4 Continue to enter letters and highlight letter combinations	spell the word



### Entering Punctuation

**Press**

or

**To**

enter punctuation or other characters as shown in the "Character Chart" on page 37

### Using Capitalisation

The first word of a sentence is automatically capitalised, with following words in lowercase.

**Press**

up or down

**To**

change the words to initial character capitalised, all uppercase characters, or all lowercase characters

### Entering Numbers

**Do This**

1 Enter the first digit and then highlight it

**To**

 
 
put the iTAP software in number entry mode

2 Press number keys

add digits to the number

3 Press **SELECT** ()

enter the number at the flashing cursor location





### Deleting Letters and Words

Place the cursor to the right of the text that you want to delete, and then do the following:

Do This	To
Press <b>DELETE</b> (⏏)	delete one letter at a time
Hold <b>DELETE</b> (⏏)	delete the entire message

### Use Symbol Mode

Your phone provides an alternative way to enter symbol characters in a message. Press **☰** > **Entry Method** from any text entry screen and select the **Symbol** menu option.

Do This	To
1 Press a number key one time	display its symbol options at the bottom of the display See "Symbol Chart" on page 41.
2 Press <b>⏏</b> or Press the number key multiple times	highlight the symbol you want
3 Press <b>SELECT</b> (⏏)	enter the symbol at the flashing cursor location

### Symbol Chart

 
Use this chart as a guide for entering characters in symbol mode.

<b>1-9</b>	space . ? ! , @ _ & ~ : ; " - ( ) ' `   % £ \$ ¥ ¤ €
<b>Z ABC</b>	@ _ \

3 <b>NUM</b>	/ : ;
4 <b>CALL</b>	" & '
5 <b>MAIL</b>	( ) [ ] { }
6 <b>MAIL</b>	¿ ¡ ~
7 <b>FNBS</b>	< > =
8 <b>NUM</b>	\$ £ ¥ ¤ €
9 <b>MAIL</b>	# % *
0 <b>NUM</b>	+ - x * / = > < # §

### Using the Status Light

The status light shows when you have an incoming call or message, or when your phone is *roaming* (using a non-home system).

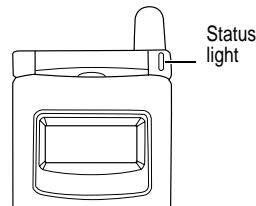

Indication	State
alternating red/green	incoming call
flashing green	in service, home system
flashing yellow	roaming, non-home system
flashing red	no service

You can turn off the status light to increase your phone's *standby time*, the length of time that your phone's battery retains power when the phone is turned on but is not in use.

To turn the status light on or off:

#### Find the Feature

- ☰ > Settings > Initial Setup
- > Status Light

### ***Using the External Display***

When the flip is closed, the external display shows time, date, and phone status information. It also displays messages to notify you of incoming calls and other events. See page 28 for descriptions of the status indicators that may appear in the external display.


### ***Locking and Unlocking Your Phone***

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*

You can make emergency calls on your phone even when it is locked. For more information, see page 53.

### ***Lock Your Phone Manually***

 
**Find the Feature**       > **Settings > Security**  
   > **Phone Lock > Lock Now**

<b>Press</b>	<b>To</b>
<b>1</b> keypad keys	enter your unlock code
<b>2</b> <b>OK</b> (⏏)	lock the phone

### ***Unlock Your Phone***

**Tip:** Your phone's unlock code is originally set to 1234 at the factory. Many service providers reset the unlock code to the last four digits of your phone number.











### ***If You Forget a Code, PIN, or Password***

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:
    
<b>Press</b>	<b>To</b>
<b>1</b> 	go to the unlock code bypass screen
<b>2</b> keypad keys	enter your security code
<b>3</b> <b>OK</b> (  )	submit your security code



## ***Setting Up Your Phone***

---

### ***Storing Your Name and Phone Number***



To store or edit user name and phone number information on your SIM card:

#### **Find the Feature**

 > **Settings > Phone Status**  
> **My Tel. Numbers**

If you do not know your phone number, contact your service provider. See page 26 for how to view your phone number from the idle screen and during a call.

### ***Setting the Time and Date***

You must set the time and date to use the datebook.


#### **Find the Feature**


 > **Settings > Initial Setup**  
> **Time and Date**

 
### ***Setting a Ring Style***

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.


You can select one of five different ring styles:

 = loud ring

 = soft ring

 = vibrate


 
 = vibrate and ring

 = silent

The ring style indicator in the display shows the current ring style (see page 28).

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume.

**Find the Feature**       > **More** > **Ring Styles** > **Style**

<b>Press</b>	<b>To</b>
1 	scroll to the ring style
2 <b>SELECT</b> 	select the ring style

### ***Setting Answer Options***

You can use any of several different methods to answer incoming calls.

**Find the Feature**       > **Settings** > **In-Call Setup**  
> **Answer Options**

Turn the following call answering options on or off:

<b>Multi-Key</b>	answer by pressing any key
<b>Open to Answer</b>	answer by opening the flip

### ***Adjusting the Backlight***


 

 

You can set the amount of time that the display and keypad backlights remain on or turn off backlights to conserve battery power.

**Find the Feature**       > **Settings** > **Initial Setup**  
> **Backlight**








 
Press	To
5 	scroll to <b>Delay</b>
6 <b>CHANGE</b> ( 	set the delay interval
7 	scroll to the inactivity interval that triggers the screen saver
8 <b>SELECT</b> ( 	confirm the delay setting
9 <b>DONE</b> ( 	save screen saver settings

### Setting Display Colour

You can select the colour palette that your phone uses to display indicators, highlights, and soft key labels.

**Find the Feature**       > **Settings > Personalise > Colour Style**

### Zooming In and Out

Press and release , then press and hold  to zoom in and out on the display. Zoom in to increase text size, zoom out to display more information.

You can also zoom in and out from the menu:

**Find the Feature**       > **Settings > Initial Setup > Zoom**

## Calling Features

For basic instructions on how to make and answer calls, see page 25.

### Viewing Your Phone Number

From the idle display, press .

While you are on a call, press > **My Tel. Numbers**.

*Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 46. If you do not know your phone number, contact your service provider*

### Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

*Note: This feature is available only for dual-line enabled SIM cards.*

#### Find the Feature

> **Settings** > **Phone Status**  
> **Active Line**

The active line indicator in the display shows the current active phone line (see page 28).

### Redialling a Number

Press	To
1	view the dialled calls list
2	scroll to the entry you want to call
3	redial the number

## Using Caller ID

### Incoming Calls



*Calling line identification* (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.

Your phone displays the caller's name when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

### Outgoing Calls



You can show or hide your phone number as an ID for the calls that you make.

#### Find the Feature

 > **Settings** > **In-Call Setup**  
> **My Caller ID**

You can override the default caller ID setting when you make a call. While dialling (with digits visible in the display):

#### Press

 > **Hide ID/Show ID**

#### To



hide or show your caller ID for the next call

---

---

### ***Canceling an Incoming Call***

While the phone is ringing or vibrating:

<b>Press</b>	<b>To</b>
 or <b>IGNORE</b> (  )	cancel the incoming call



Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.

### ***Turning Off a Call Alert***


You can turn off your phone's incoming call alert before answering the call.

<b>Press</b>	<b>To</b>
either volume key	turn off the alert

### ***Calling an Emergency Number***

 
Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

**Note:** *Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.*

<b>Press</b>	<b>To</b>
<b>1</b> keypad keys	dial the emergency number
<b>2</b> 	call the emergency number


## Dialling International Numbers

To dial the local international access code:


 

Do This	To
Press and hold 	insert the international access code (+) for the country from which you are calling

## Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialled, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new ones are added.

**Shortcut:** Press  to go directly to the dialled calls list from the idle display.


**Find the Feature**  > **More** > **Recent Calls**

Press	To
1 	scroll to <b>Received Calls</b> or <b>Dialled Calls</b>
2 <b>SELECT</b> 	select the list
3 	scroll to an entry

**Note:** ✓ means the call connected.

**Press**  
4 



**To**  
call the entry's number

**Tip:** Press and hold  for two seconds to send the entry number as DTMF tones. To activate DTMF tones, see page 70.

or

**VIEW** 

view entry details

If no details are available, **STORE**  appears to store the entry in your phonebook. If the entry is already stored, **DELETE**  appears to delete the entry from the list.


or



open the **Last Calls Menu** to perform other procedures as described in the following list


The **Last Calls Menu** includes the following options:

 


Option	Description
<b>Store</b>	Create a phonebook entry with the number in the <b>No.</b> field.
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Hide ID/Show ID</b>	Hide or show your caller ID for the next call.

Option	Description
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the phonebook or recent call lists.
<b>Send Tones</b>	Send the number to the network as DTMF tones.
<b>Talk then Fax</b>	Talk and then send a fax in the same call. See page 72. 

### ***Returning an Unanswered Call***

Your phone keeps a record of your unanswered calls, and displays:





- the  (missed call) indicator
- **X Missed Calls**, where **X** is the number of missed calls

Press	To
<b>1</b> <b>VIEW</b> (  )	see the received calls list
<b>2</b> 	select a call to return
<b>3</b> 	make the call




## Using the Notepad

Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

<b>Find the Feature</b>	 > <b>More</b> > <b>Recent Calls</b> > <b>Notepad</b>
<b>Press</b>	<b>To</b>
	call the number
<b>or</b>	
	open the <b>Dialling Menu</b> to attach a number or insert a special character
<b>or</b>	
<b>STORE</b> 	create a phonebook entry with the number in the <b>No.</b> field



## Attaching a Number

While dialling (with digits visible in the display):

<b>Press</b>	<b>To</b>
 > <b>Attach Number</b>	attach a number from the phonebook or recent call lists

### Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number that identifies the location where the entry is stored in phone memory or on the SIM card. To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
3 	call the entry

### Calling With 1-Touch Dial

To call phonebook entries 1 to 9, just press and hold the one-digit speed dial number for one second.

**Tip:** You must specify which phone number list you want to use with this feature: phone memory phonebook, or SIM card phonebook. See page 68.

### Using Voicemail



You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone.

### Store Your Voicemail Number

Storing your voicemail number in your phone makes it easy for you to listen to new voicemail messages. In many cases, your service provider has already done this for you.

#### Find the Feature

-  > More > Messages
-  > VoiceMail Setup



Press	To
<b>2 SWITCH</b> (□)	switch between calls
or	
<b>LINK</b> (□)	connect the two calls
or	
<b>☰ &gt; End Call On Hold</b>	end the call on hold

---

You must turn on call waiting to use the feature. To turn call waiting on or off:

**Find the Feature**      **☰ > Settings > In-Call Setup > Call Waiting**

### ***Putting a Call On Hold***

Press	To
<b>HOLD</b> (□) (if available) or <b>☰ &gt; Hold</b>	put the call on hold

---

### ***Transferring a Call***





 

You can announce that you are transferring an active call to another party, or you can directly transfer the call.

### ***Announce the Call Transfer***

**Find the Feature**      **☰ > Hold**


Press	To
<b>1</b> keypad keys	dial the number where you are transferring the call
<b>2</b> (◀)	call the number and speak to the person who answers

---

Press	To
3 	open the menu
4 	scroll to <b>Transfer</b>
5 <b>SELECT</b> ( 	select <b>Transfer</b>
6 <b>OK</b> ( 	confirm the transfer.

### ***Do Not Announce the Call Transfer***

**Find the Feature**  > **Transfer**

Press	To
1 keypad keys	dial the number where you are transferring the call
2 	transfer the call

### ***Taking Photos and Sending Picture Messages***



You can take photos with your phone using the optional Motorola Original™ Digital Camera accessory. Use the picture messages application to view and send photos as *Multimedia Messaging Service* (MMS) picture messages with your phone.

**Note:** *These photos are a different format than the pictures your phone uses for wallpaper and screen saver images. You cannot use camera photos as wallpaper or screen saver images, or insert camera photos in text messages.*

## Take Photos


 

 

Attach the camera as described on page 24 and follow these steps:

**Find the Feature**     > **More** > **Picture Msgs** > **Camera**

The image in the camera's viewfinder appears on your phone's display.

*Note: Viewfinder and captured images are scaled to fit your phone's display. The image will have greater resolution when viewed on a PC.*


 
 
Point the viewfinder at the photo subject and do the following:

Press	To
<b>1 CAPTURE</b> (  )	freeze the image in the display
<b>2 KEEP</b> (  )	save the photo as a JPG file on your phone
<b>or</b>	
<b>DISCARD</b> (  )	delete the photo and return to viewfinder mode
If you save the photo, continue to step 3	
<b>3 SEND</b> (  )	open a new MMS picture message with the photo attached
<b>or</b>	
<b>BACK</b> (  )	return to viewfinder mode


### View, Send, Delete, or Rename Photos

 *Note: These photos are a different format than the pictures your phone uses for wallpaper and screen saver images. You cannot use camera photos as wallpaper or screen saver images, or insert camera photos in text messages.*

**Find the Feature**       > **More** > **Picture Msgs** > **Photo Album**


Press	To
1 	scroll to the photo you want
2 <b>SELECT</b> (  )	view the photo
3 <b>BACK</b> (  )	return to picture message main menu

or


<b>MENU</b> (  )	open the <b>Photo Album Menu</b> to perform other procedures as described in the following list
---	---

The **Photo Album Menu** can include the following options:

Option	Description
<b>Send</b>	Open a new MMS picture message with the photo attached.
<b>Rename</b>	Rename the photo.
<b>Delete Photo</b>	Delete the photo.
<b>Delete All</b>	Delete all stored photos.

 

## ***View a Photo Slideshow***

**Find the Feature**     > **More** > **Picture Msgs** > **Slideshow**

Your phone cycles through all stored photos, briefly displaying each.



<b>Press</b>	<b>To</b>
<b>BACK</b> (⏪)	return to the previous photo
<b>NEXT</b> (⏩)	skip to the next photo
<b>RESTART</b> (⏮)	restart the slideshow (only appears with last photo)

## ***Set Photo Capture Size***

You can set your phone to capture images at normal size (320 x 240 pixels, QVGA) or small size (160 x 120 pixels, QQVGA). The MMS standard is small size.

Viewfinder and captured images are scaled to fit your phone's display. The image will have greater resolution when viewed on a PC.

  **Find the Feature**     > **More** > **Picture Msgs** > **Settings**  
> **Photo Size** > *size*





















## Phone Features

### Main Menu

This is the standard main menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available for all users.

-  **Media Centre**
  - Picture Viewer
  - My Tones
-  **Games & Apps**
-  **Picture Msgs**
  - Camera
  - Photo Album
  - Slideshow
  - Settings
-  **Shortcuts**
-  **Calculator**
-  **Settings**  
 (see next page)
-  **Chat**
-  **WebAccess**
  - Browser
  - Web Shortcuts
  - Stored Pages
  - History
  - Goto URL
  - Browser Setup
-  **More**  
 (go to following menu items)
-  **Services**
  - SIM Toolkit
  - Fixed Dial
  - Service Dial
  - Quick Dial
-  **Web Sessions**
-  **Phonebook**
-  **Messages**
  - Create Message
  - Voicemail
  - Text Msgs
  - Email Msgs
  - Browser Alerts
  - Info Services
  - Quick Notes
  - Outbox
  - Drafts
-  **Datebook**
-  **Recent Calls**
  - Received Calls
  - Dialled Calls
  - Notepad
  - Call Times
  - Call Cost
  - Data Times
  - Data Volumes
-  **Ring Styles**
  - Style
  - Style Detail

## Settings Menu

- Personalise**
  - Main Menu
  - Home Keys
  - Colour Style
  - Greeting
  - Banner Graphic
  - Wallpaper
  - Screen Saver
  - Quick Dial
- Call Divert**
  - Voice Calls
  - Fax Calls
  - Data Calls
  - Cancel All
  - Divert Status
- In-Call Setup**
  - In-Call Timer
  - Call Cost Setup
  - My Caller ID
  - Talk and Fax
  - Answer Options
  - Call Waiting
- Phone Status**
  - My Tel. Numbers
  - Credit Info/Available
  - Active Line
  - Battery Meter
  - Other Information
- Security**
  - Phone Lock
  - Lock Application
  - Fixed Dial
  - Call Barring
  - SIM Pin
  - New Passwords
- Initial Setup**
  - Time and Date
  - 1-Touch Dial
  - Auto Redial
  - Backlight
  - Status Light
  - Zoom
  - Scroll
  - Animation
  - Language
  - Battery Save
  - Contrast
  - DTMF
  - Master Reset
  - Master Clear
- Java Tools**
  - Java System
  - Network Access
  - DNS IP
- Network**
- Car Settings**
- Headset**

## Feature Quick Reference

You can do more with your phone than make and receive phone calls! For example, you can store frequently called numbers in the phonebook for easy dialling, organise your meetings and other events in the datebook, browse the Web, download applications, send messages and more.

This chapter provides information to help you locate features on your phone that are not described in this user guide. For more detailed information, see the reference guide.

### Calling Features

Feature	Description
<b>Conference Call</b>	During a call: ☰ > <b>Hold</b> , dial next number, press ☒, press <b>LINK</b> (☒)
<b>Call Divert</b>	Set up or cancel call divert: ☰ > <b>Settings</b> > <b>Call Divert</b>
<b>Call Barring</b>	Restrict outgoing or incoming calls: ☰ > <b>Settings</b> > <b>Security</b> > <b>Call Barring</b>

### Messages

Feature	Description
<b>Send Message</b>	Send a text message: ☰ > <b>More</b> > <b>Messages</b> > <b>New Message</b>
<b>Receive Message</b>	Read a new message that you have received: Press <b>READ</b> (☒)

### Chat

Feature	Description
<b>Start Chat</b>	Start a new chat session: ☰ > <b>Chat</b> ☰ > <b>New Chat</b>
<b>Receive Chat Request</b>	When you receive a chat request: Press <b>ACCEPT</b> (☐) or <b>IGNORE</b> (☐)
<b>End Chat</b>	During a chat session: ☰ > <b>End Chat</b>

### Phonebook

Feature	Description
<b>Create Entry</b>	Create a new phonebook entry: ☰ > <b>More</b> > <b>Phonebook</b> ☰ > <b>New</b> > <b>Phone Number</b> or <b>Email Address</b>
<b>Dial Number</b>	Call a number stored in the phonebook: ☰ > <b>More</b> > <b>Phonebook</b> > <i>entry to call</i>
<b>Voice Dial Number</b>	Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (in two seconds)
<b>1-Touch Dial</b>	Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook: ☰ > <b>Settings</b> > <b>Initial Setup</b> > <b>1-Touch Dial</b>

### Personalising Features




Feature	Description
<b>Event Alert</b>	Change an event alert: [Menu] > <b>More</b> > <b>Ring Styles</b> > <i>Style Detail</i> > <i>event name</i>
<b>Ring Volume</b>	Adjust ringer volume: [Menu] > <b>More</b> > <b>Ring Styles</b> > <i>Style Detail</i> > <b>Ring Volume</b>
<b>Keypad Volume</b>	Adjust keypad keypress volume: [Menu] > <b>More</b> > <b>Ring Styles</b> > <i>Style Detail</i> > <b>Key Volume</b>
<b>My Tones</b>	Compose your own ring tones, manage ring tones that you have composed or downloaded: [Menu] > <b>Media Centre</b> > <b>My Tones</b>
<b>Soft Keys &amp; Menu Icons</b>	Change soft key labels and menu feature icons in the idle display: [Menu] > <b>Settings</b> > <b>Personalise</b> > <b>Home Keys</b>
<b>Shortcuts</b>	Create a shortcut to a menu item: Highlight the menu item, then press and hold [Menu]  Select a shortcut: [Menu] > <b>Shortcuts</b> > <i>shortcut name</i>

### Menu Features







Feature	Description
<b>Language</b>	Set menu language: [Menu] > <b>Settings</b> > <b>Initial Setup</b> > <b>Language</b>

Feature	Description
<b>Master Reset</b>	Reset all options <i>except</i> unlock code, security code, lifetime timer: ☰ > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Reset</b>
<b>Master Clear</b>	Reset all options <i>except</i> unlock code, security code, lifetime timer, clear all user settings and entries <i>except</i> SIM card information: ☰ > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Clear</b>



 

 

### Dialling Features



Feature	Description
<b>Fixed Dial</b>	Turn fixed dialling on or off: ☰ > <b>Settings</b> > <b>Security</b> > <b>Fixed Dial</b> Use the fixed dial list: ☰ > <b>More</b> > <b>Services</b> > <b>Fixed Dial</b> 
<b>Service Dial</b>	Dial service phone numbers: ☰ > <b>More</b> > <b>Services</b> > <b>Service Dial</b> 
<b>Quick Dial</b>	Dial pre-programmed phone numbers: ☰ > <b>More</b> > <b>Services</b> > <b>Quick Dial</b> 
<b>DTMF Tones</b>	Activate DTMF tones: ☰ > <b>Settings</b> > <b>Initial Setup</b> > <b>DTMF</b> Send DTMF tones during a call: ☰ > <b>Dialling Menu</b> > <b>Send Tones</b>

### Call Monitoring




Feature	Description
<b>Call Times</b>	View call timers:  > <b>More</b> > <b>Recent Calls</b> > <b>Call Times</b> 
<b>In-Call Timer</b>	Display time or cost information during a call:  > <b>Settings</b> > <b>In-Call Setup</b> > <b>In-Call Timer</b> 
<b>Call Cost</b>	View call cost trackers:  > <b>More</b> > <b>Recent Calls</b> > <b>Call Cost</b> 

### Handsfree Features

Feature	Description
<b>Speakerphone</b>	Activate a connected external speakerphone during a call: Press <b>SPEAKER</b> (⏮) (if available) or  > <b>Spkrphone On</b> 
<b>Auto Answer</b> (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > <b>Settings</b> > <b>Car Settings</b> or <b>Headset</b> > <b>Auto Answer</b> 
<b>Auto Hands-Free</b> (car kit)	Automatically route calls to a car kit when connected:  > <b>Settings</b> > <b>Car Settings</b> > <b>Auto Handsfree</b> 



Feature	Description
<b>Power-Off Delay</b> (car kit)	Set the phone to stay on for a period of time after the ignition is switched off: Ⓜ > <b>Settings</b> > <b>Car Settings</b> > <b>Power-Off Delay</b> 
<b>Charger Time</b> (car kit)	Charge the phone for a period of time after the ignition is switched off: Ⓜ > <b>Settings</b> > <b>Car Settings</b> > <b>Charger Time</b> 

### *Data and Fax Calls*








Feature	Description
<b>Send Data or Fax</b>	Connect your phone to the device, then place the call through the device application 
<b>Receive Data or Fax</b>	Connect your phone to the device, then answer the call through the device application 
<b>Talk Then Fax</b>	Connect your phone to the device, enter the number, press Ⓜ > <b>Dialing Menu</b> > <b>Talk Then Fax</b> , then press Ⓜ to make the call 



### Network Features

Feature	Description
<b>Network Settings</b>	View network information and adjust network settings:  > <b>Settings</b> > <b>Network</b> 

### Personal Organiser Features

Feature	Description
<b>Add Datebook Event</b>	Add an event to the datebook:  > <b>More</b> > <b>Datebook</b> > <i>day</i>  > <b>New</b>
<b>View Datebook Event</b>	View or edit event details:  > <b>More</b> > <b>Datebook</b> > <i>day</i> > <i>event name</i>
<b>Event Reminder</b>	View event reminder: <b>VIEW</b> (□) Dismiss event reminder <b>EXIT</b> (□)
<b>Set Alarm</b>	Set the alarm clock (from datebook week view or day view):  > <b>More</b> > <b>Datebook</b>  > <b>Alarm Clock</b>
<b>Turn Off Alarm</b>	Turn off alarm: Press <b>EXIT</b> (□) or  Set 8-minute delay: Press <b>DELAY</b> (□)
<b>Calculator</b>	Calculate numbers:  > <b>Calculator</b>



Feature	Description
<b>Currency Converter</b>	Convert currency: [Menu] > <b>Calculator</b> [Menu] > <b>Exchange Rate</b> Enter exchange rate, press <b>OK</b> (□), enter amount, select \$ function

 
### *Security*

Feature	Description
<b>SIM PIN</b>	Lock or unlock the SIM card: [Menu] > <b>Settings</b> > <b>Security</b> > <b>SIM PIN</b> <b>Caution:</b> If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your phone displays <b>SIM Blocked</b> .
<b>Lock Application</b>	Lock phone applications: [Menu] > <b>Settings</b> > <b>Security</b> > <b>Lock Application</b>

### *News and Entertainment*

Feature	Description
<b>Launch Micro-Browser</b>	Start a micro-browser session: [Menu] > <b>WebAccess</b> > <b>Web Browser</b>
<b>Web Sessions</b>	Select or create a Web session: [Menu] > <b>More</b> > <b>Web Sessions</b>
<b>Launch Game or Application</b>	Launch a Java game or application: [Menu] > <b>Games &amp; Apps</b> , highlight the application, press <b>SELECT</b> (□)

Feature	Description
<b>Download Game or Application</b>	Download a Java game or application: [Menu] > <b>WebAccess</b> > <b>Web Browser</b> , highlight the application, press <b>SELECT</b> (⏏), press <b>DOWNLOAD</b> (⏏)
<b>Picture Viewer</b>	Manage pictures and animations: [Menu] > <b>Media Centre</b> > <b>Picture Viewer</b> 
<b>Camera</b>	Adjust light level and light frequency settings for the optional Motorola Original™ Digital Camera accessory: [Menu] > <b>More</b> > <b>Picture Msgs</b> > <b>Settings</b> 







## ***Specific Absorption Rate data***


### **This model phone meets international standards for exposure to radio waves**

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.\* Tests for SAR are conducted in accordance with CENELEC\*\* testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

  
 
 
 
Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions and locations (e.g., at the ear and worn on the body) that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is: 0.93 W/kg.\*\*\*





While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that modifications to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

    - 
- \* The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
  - \*\* CENELEC is a European Union standards body.
  - \*\*\* Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.



## ***Index***

---

### **A**

accessories  
    optional 17  
    standard 17  
active line indicator 28  
alarm clock 73  
alert  
    creating 69  
    defined 46  
    turning off 25, 53  
animation  
    screen saver 49–50  
    viewing 75  
    wallpaper 48–49  
answering a call 26

### **B**

backlight 47  
barring calls 67  
battery  
    car kit charger time 72  
    charging 20–21  
    extending battery life 21–22,  
        42, 47, 48  
    installing 19–20  
    level indicator 21, 28, 29  
    meter 48  
block cursor 34

78 - Index

browse text mode 35

### **C**

calculator 74  
call  
    adding digits after phone  
        number 56  
    alert 25, 53  
    answer options 47  
    answering 26  
    barring 67  
    barring password, changing  
        44  
    cancelling 53  
    costs 71  
    dialled calls list 54–56  
    dialling 25  
    divert 67  
    emergency number 53  
    ending 25, 26  
    hold 60  
    international access code 54  
    making 25  
    received calls list 54–56  
    recent calls 54–56  
    speakerphone 71  
    talk then fax 56  
    timers 71  
    transferring 60–61

unanswered call 56  
waiting 59  
caller ID 52, 55  
calling line identification. *See*  
caller ID  
camera  
attaching 24  
settings 75  
taking photos 61  
car kit  
automatic answer 71  
automatic hands-free 71  
charger time 72  
power-off delay 72  
chat 68  
clock  
illustration 27  
codes  
changing 44  
default 43, 44  
forgetting 45  
colour, display 50  
conference call 67  
convertible covers 22–23  
cursor 34

## D

data call  
receive 72  
send 72  
date, setting 46  
datebook 73

datebook icon 27  
dialled calls list 54–56  
dialling  
fixed numbers 70  
phone number 25  
quick dial numbers 70  
service numbers 70  
display  
backlight 47  
colour 50  
description 28  
idle display 28  
illustration 27  
language 69  
menu icons, personalising  
69  
zooming in/out 50  
divert calls 67  
DTMF tones  
activating 70  
sending 55, 56

## E

earpiece volume, adjusting 25  
emergency number 53  
end key 1, 25, 26, 30  
ending a call 25, 26  
**Enter Unlock Code** message 44, 45  
external display 43

## F

- fax call 56
  - receive 72
  - send 72
- fixed dial 70
- flashing cursor 34
- flip
  - activating 26
  - external display and 43
  - open to answer 47
  - using 24
- 4-way navigation key 1, 30

## G

- games 74
- GPRS indicator 28

## H

- hands-free use
  - automatic answer 71
  - automatic call routing 71
  - charger time 72
  - power-off delay 72
  - speakerphone, activating 71
- headset
  - automatic answer 71
- headset jack 1
- Hide ID** feature 52, 55
- hold a call 60
- home keys, personalising 69

80 - Index

## I

- idle display, defined 28
- in use indicator 28
- incoming call
  - cancelling 53
- Incoming Call** message 52
- indicators
  - active line 28
  - battery level 21, 28, 29
  - GPRS 28
  - in use 28
  - loud ring style 29, 46
  - menu 27
  - message waiting 28, 29
  - missed call 56
  - ring style 28, 29, 46
  - roam 28
  - signal strength 28
  - silent alert 29
  - silent ring style 29, 46
  - soft ring style 29, 46
  - text entry mode 28, 29
  - vibrate and ring style 29, 46
  - vibrate style 29, 46
  - voice message waiting 59
- international access code 54
- iTAP software 37–41

## J

- Java applications 74
- joystick 1, 30



## K

- key
  - end 1, 25, 26, 30
  - 4-way navigation 1, 30
  - left soft key 1, 28, 30, 69
  - menu 1, 30, 31
  - power 1, 24
  - right soft key 1, 28, 30, 69
  - send 1, 25, 26, 54
  - voice 1
  - volume control 1, 25
- keypad
  - answering calls 47
  - backlight 47
  - volume, adjusting 69

## L

- language, setting 69
- left soft key
  - functions 1, 28, 30
  - personalising 69
- lock
  - SIM card 74
- lock phone 43–44
- loud ring style indicator 29, 46
- Low Battery** message 29

## M

- making a call 25
- master clear 70
- master reset 70

## menu

- entering text 33, 34, 35, 41, 42
- icons, changing in idle display 69
- icons, described 27
- language, setting 69
- lists 32
- navigating 30, 31
- using features 32, 34
- menu indicator 27
- menu key 1, 30, 31
- message
  - chat 68
  - picture 61
  - sending 67
- message waiting indicator 28, 29
- messages icon 27
- micro-browser
  - browser setup 74
  - Java applications 74
  - using 74
  - Web sessions 74
- microphone 1
- missed call indicator 56
- Missed Calls** message 56
- MMS, defined 61
- my telephone number 26, 46, 51
- my tones 69

## N

network settings 73  
notepad 57  
number  
    storing your number 46  
    viewing your number 26, 51  
numeric text mode 35

## O

1-touch dial  
    setting preference 68  
    using 58  
optional accessory, defined 17  
optional feature, defined 17

## P

passwords. *See* codes  
phone  
    accessories, standard 17  
    active line indicator 28  
    active phone line, changing  
        51  
    alert 53  
    alert, turning off 25  
    answer options 47  
    clear stored information 70  
    codes 44, 45  
    date, setting 46  
    flip 24, 26  
    keypad, answering calls 47  
    language, setting 69

locking 43–44  
network settings 73  
reset all options 70  
security code 44  
time, setting 46  
turning on/off 24  
unlock code 43, 44, 45  
unlocking 24, 43–44

phone number  
    active line indicator 28  
    active phone line, changing  
        51  
    adding digits after 56  
    attaching two numbers 56,  
        57  
    international access code 54  
    redialling 51  
    storing in phonebook 68  
    storing your number 46  
    viewing your number 26, 51  
phonebook  
    attaching two numbers 56,  
        57  
    dialling a number 68  
    icon 27  
    1-touch dial 58  
    speed dial, using 58  
    storing an entry 68  
    voice dialling 68  
photo 61  
picture  
    screen saver 49–50

viewing 75  
wallpaper 48–49  
picture message 61  
PIN code  
  changing 44  
  entering 74  
PIN2 code  
  changing 44  
power key 1, 24  
predictive text entry 37–41

## Q

quick dial 70

## R

received calls list 54–56  
recent calls 54–56  
redial  
  busy number 51  
reference guide 17  
right soft key  
  functions 1, 28, 30  
  personalising 69  
ring alert  
  turning off 25, 53  
ring style  
  defined 47  
  indicators 29  
  personalising 69  
  setting 46–47  
ring style indicator 28, 29, 46


ring tone, creating 69  
ringer volume, adjusting 25, 69  
roam indicator 28

## S


screen saver 49–50  
security code  
  changing 44  
  default 44  
send key 1, 25, 26, 54  
service dial 70  
shortcuts  
  creating 69  
**Show ID** feature 52, 55  
signal strength indicator 28  
silent alert indicator 29  
silent ring style indicator 29, 46  
**SIM Blocked** message 24, 74  
SIM card  
  defined 18  
  installing 18–19  
  locking 74  
  PIN code entry 24  
  PIN code, changing 44  
  PIN2 code, changing 44  
  precautions 18  
  **SIM Blocked** message 24, 74  
SIM PIN code  
  entering 74  
SIM PIN code, changing 44  
SIM PIN2 code



 changing 44  
soft keys  
  functions 28, 30  
  illustration 1  
  labels 27  
  personalising 69  
soft ring style indicator 29, 46  
speakerphone, activating 71  
speed dial  
  using 58  
standby time  
  defined 42  
status light 1, 42  
symbol text entry 41–42



 **T**  
talk then fax call 56  
tap method text entry 35–37  
telephone number  
  storing your number 46  
  viewing your number 26, 51  
text  
  block cursor 34  
  browse mode 35  
  character chart 37  
  entering from keypad 35,  
  41, 42  
  entry mode, changing 35  
  flashing cursor 34  
  iTAP software predictive text  
  entry 37–41  
  numeric mode 35




symbol chart 41  
symbol mode 41–42  
tap method 35–37  
text entry mode indicator 28,  
29  
text mode, changing 35  
time, setting 46  
timers 71  
transfer a call 60–61  
travel charger, using 20


## U

  unlock code  
  bypassing 45  
  changing 44  
  default 43, 44  
  entering 24, 43, 44  
  forgetting 45  
unlock phone 43–44  
user group 74



## V

vibrate alert  
  turning off 25, 53  
vibrate and ring style  
  indicator 29, 46  
vibrate ring style  
  setting 46–47  
vibrate style  
  indicator 29, 46  
voice dial





      dialling a number 68  
voice key  
    dialling a number 68  
    illustration 1  
voice message waiting  
    indicator 59  
voicemail 58–59  
volume  
    earpiece 25  
    keypad 69  
    ringer 25, 69  
volume keys 1, 25



**W**  
wallpaper 48–49  
Web access icon 27  
Web pages 74  
Web sessions 74

