 


## Welcome

Welcome to the world of Motorola digital wireless communications!  
We are pleased that you have chosen the Motorola V220 GSM wireless phone.

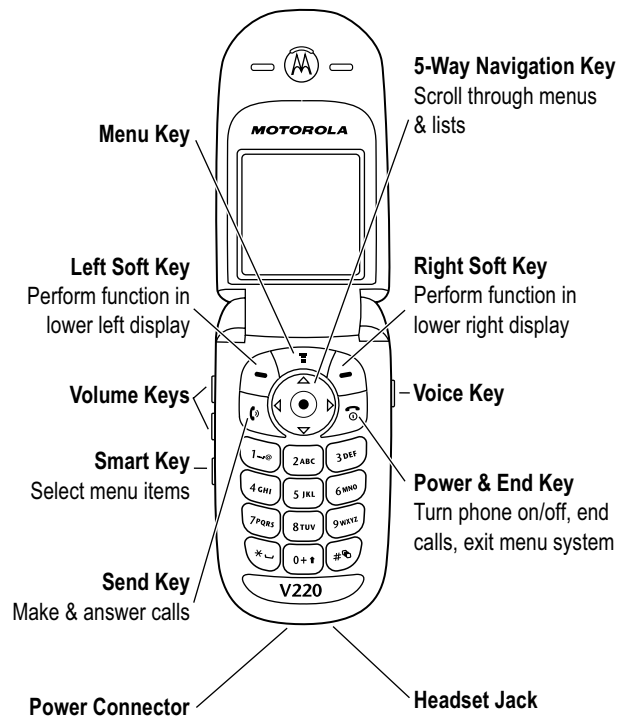



[www.hellomoto.com](http://www.hellomoto.com)

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

 
 
All other product or service names are the property of their respective owners.

© Motorola, Inc., 2003.

 
 
#### **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.



2 - Welcome



## **Contents**

 
 
 
---

<b>Safety and General Information</b> .....	6
<b>Getting Started</b> .....	13
About This Guide .....	13
Installing the SIM Card .....	13
Battery Use .....	14
Installing the Battery .....	16
Charging the Battery .....	17
Turning Your Phone On .....	18
Adjusting Volume .....	18
Making a Call .....	19
Answering a Call .....	19
Viewing Your Phone Number .....	20
<b>Highlight Features</b> .....	21
Taking and Sending a Photo .....	21
Sending a Multimedia Message .....	23
Receiving a Multimedia Message .....	25
Playing Video Clips .....	26
<b>Learning to Use Your Phone</b> .....	27
Using the Display .....	27
Using the 5-Way Navigation Key .....	32
Using Menus .....	33
Entering Text .....	36
Using the Smart Key .....	45
Using the External Display .....	45
Using the Handsfree Speaker .....	46
Changing a Code, PIN, or Password .....	46

Locking and Unlocking Your Phone . . . . .	47
If You Forget a Code, PIN, or Password . . . . .	48
Using the Phonebook . . . . .	49
<b>Setting Up Your Phone . . . . .</b>	<b>51</b>
Storing Your Name and Phone Number . . . . .	51
Setting the Time and Date . . . . .	51
Setting a Ring Style . . . . .	52
Setting Answer Options . . . . .	52
Setting a Wallpaper Image . . . . .	53
Setting a Screen Saver Image . . . . .	54
Setting Display Contrast . . . . .	55
Setting Display Colour . . . . .	55
Adjusting the Backlight . . . . .	55
Setting Display Timeout . . . . .	56
<b>Calling Features . . . . .</b>	<b>57</b>
Changing the Active Line . . . . .	57
Redialling a Number . . . . .	57
Using Automatic Redial . . . . .	58
Using Caller ID . . . . .	58
Cancelling an Incoming Call . . . . .	59
Turning Off a Call Alert . . . . .	59
Calling an Emergency Number . . . . .	59
Dialling International Numbers . . . . .	60
Viewing Recent Calls . . . . .	60
Returning an Unanswered Call . . . . .	62
Using the Notepad . . . . .	62
Attaching a Number . . . . .	63
Calling With Speed Dial . . . . .	63
Calling With 1-Touch Dial . . . . .	63
Using Voicemail . . . . .	64



Using Call Waiting .....65  
 Putting a Call On Hold .....66  
 Transferring a Call .....66  
**Phone Features** ..... 68  
 Menu Map .....68  
 Feature Quick Reference. ....70  
**Specific Absorption Rate Data** .....85  
**Index** .....87





## ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

### ***Exposure To Radio Frequency (RF) Energy***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

 
 
### ***Operational Precautions***

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

### ***External Antenna Care***

Use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorised antennas may result in non-compliance with the local regulatory requirements in your country.



### ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

### ***Body-Worn Operation***

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimetres) from your body when transmitting.

### ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimetres) from your body.

### ***Approved Accessories***

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at [www.Motorola.com](http://www.Motorola.com).

### ***RF Energy Interference/Compatibility***

**Note:** *Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.*

### **Facilities**

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

### **Aircraft**

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

### **Medical Devices**

#### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimetres) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimetres) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

#### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

#### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your GP may be able to assist you in obtaining this information.



### ***Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

### ***Operational Warnings***

#### ***For Vehicles With an Air Bag***

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

#### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as "Intrinsically Safe." Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

***Note:*** *The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.*




 
 
### ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

### ***Batteries***

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, bag, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

### ***Seizures/Blackouts***

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television

or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

### ***Repetitive Motion Injuries***

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

 
- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

### **European Union Directives Conformance Statement**

Hereby, Motorola declares that this product is in compliance with



- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

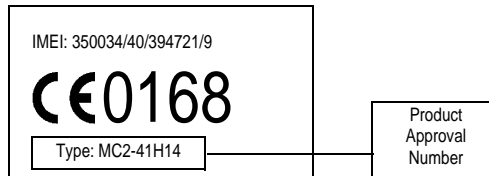

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte) - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site

## ***Getting Started***

---

### ***About This Guide***

This guide describes the basic features of your Motorola wireless phone.

### ***Optional Features***



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

### ***Optional Accessories***

 


This label identifies a feature that requires an optional Motorola Original™ accessory.

### ***Installing the SIM Card***

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory.

**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

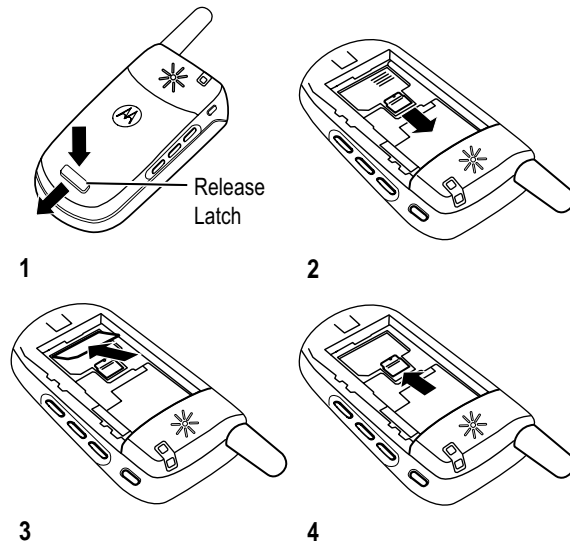

### **Battery Use**

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to your phone's accessory connector; and your voice, data, and other application usage patterns.

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximise your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $45^{\circ}\text{C}$  ( $113^{\circ}\text{F}$ ). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods.

 
**Warning:** Never dispose of batteries in a fire because they may explode.

## Installing the Battery

**Note:** If necessary, remove the battery from its protective clear plastic case.



Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

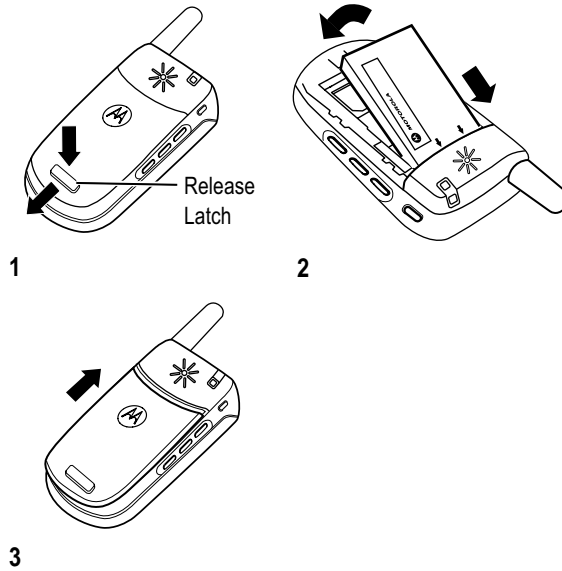

 


## ***Charging the Battery***

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

### **Action**

- 1** Plug the travel charger into the bottom of your phone.

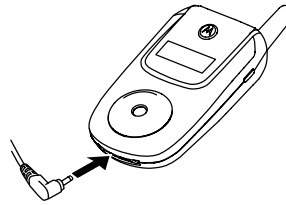


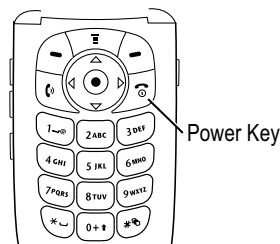 
- 2** Plug the other end of the travel charger into the appropriate electrical outlet.
- 3** When your phone indicates **Charge Complete**, remove the travel charger.


**Tip:** You can safely leave the travel charger connected to your phone after charging is complete. This will not damage the battery.

## Turning Your Phone On


### Action

- 1 Press and hold  for 2 seconds to turn on the phone.



- 2 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.

 
**Caution:** If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked.

- 3 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.

## Adjusting Volume


Press up or down on volume keys to:

- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible

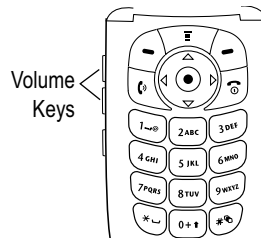




 
**Tip:** At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.

- turn off an incoming call alert

Alternatively the volume can also be accessed by pressing menu  > **Settings** > **Ring Styles**.




### **Making a Call**

<b>Press</b>	<b>To</b>
1 keypad keys	dial the phone number
2 	make the call
3 	end the call and "hang up" the phone when you are finished

Alternatively access the Phonebook by pressing menu  > **Phone Book** > *scroll through to required entry* > **Send** .



### **Answering a Call**


When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

<b>Press</b>	<b>To</b>
1  or <b>ANSWER</b> 	answer the call
2 	end the call and "hang up" the phone when you are finished

 
 


## Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers**.

**Note:** Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 51. If you do not know your phone number, contact your service provider.



## Highlight Features

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlight features.

 
### Taking and Sending a Photo

To activate your phone's camera:

**Find the Feature**  > **Multimedia** > **Camera**

*Note: Camera can also be accessed quickly by pressing the right Soft Key from idle display, depending on local settings.*

The active viewfinder image appears on your display.

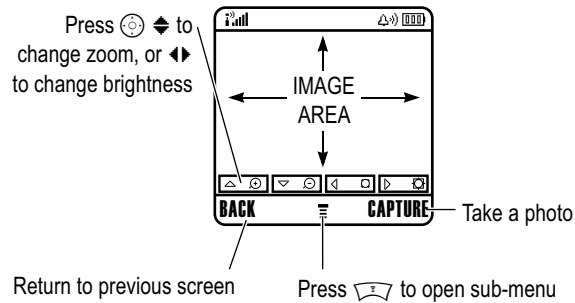


Point the camera lens at the photo subject, then:

- | Press                | To   |
|----------------------|--|
| 1 <b>CAPTURE</b> (⏺) | take a photo   |
| 2 <b>STORE</b> (⏺)   | view storage options<br>If you choose to store the photo, continue to step 3.              |
| <b>or</b>            |  |
| <b>DISCARD</b> (⏺)   | delete the photo and return to the active viewfinder                                       |
| 3 (⏺)                | scroll to <b>Send in Message, Store Only, Apply as Wallpaper, or Apply as Screen Saver</b> |
| 4 <b>SELECT</b> (⏺)  | perform the storage option of your choice  |











Press (⏺) to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:


 




 

 
Option	Description
<b>Go To Pictures</b>	View pictures and photos stored on your phone.
<b>Auto-Timed Capture</b>	Set a timer for the camera to take a photo.
<b>Delete All</b>	Delete all pictures.
<b>Pictures Setup</b>	Open the setup menu to adjust picture settings.
<b>View Free Space</b>	See how much memory remains for storing pictures.

## Sending a Multimedia Message

 A *Multimedia Messaging Service (MMS)* message contains one or more slides with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and/or video clips). You can send the multimedia message to other wireless phone users, and to email addresses.

**Find the Feature**  > **Messages > New Message**  
> **New Multimedia Msg**

Press	To
1 keypad keys	enter slide text
2 	open the <b>MMS Menu</b>
3 	scroll to <b>Insert</b>
4 <b>SELECT</b> (  )	display a list of items you can insert
5 	scroll to <b>Picture, Voice Record, Sound, Video, Quick Note, Contact Info, or MMS Templates</b>
6 <b>SELECT</b> (  )	select the file type
7 	highlight the file you want
8 <b>INSERT</b> (  )	insert the file
	To add another slide to the message, continue.
	To send the message, go to step 14.
9 	open the <b>MMS Menu</b> to insert a new slide
10 	scroll to <b>Insert</b>
11 <b>SELECT</b> (  )	display a list of items you can insert

Press	To
12 	scroll to <b>New Page</b>
13 <b>SELECT</b> 	insert a new slide after the current slide  Repeat steps 1 to 8 to enter contents for the new slide.
14 <b>OK</b> 	store the message
15 	scroll to a <b>Send To</b> option: <ul style="list-style-type: none"> <li>• Highlight <b>(One Time Entry)</b> to enter one or more phone numbers and/or email addresses.</li> <li>• Highlight <b>(New Phonebook Entry)</b> to enter a number/address and add it to the phonebook.</li> <li>• Or highlight an existing phonebook entry.</li> </ul>
16 <b>SELECT</b> 	select <b>(One Time Entry)</b> or <b>(New Phonebook Entry)</b> and enter a number/address
<b>or</b>	
<b>ADD</b> 	add a phonebook entry to the list of recipients
17 <b>DONE</b> 	store the numbers/addresses
18 	scroll to <b>Subject</b>
19 <b>CHANGE</b> 	select <b>Subject</b>
20 keypad keys	enter the subject

 




Press	To
21 <b>OK</b> (↵)	store the subject
22 <b>SEND</b> (↵)	send the message

### ***Receiving a Multimedia Message***



When you receive a multimedia message or letter, your phone displays the  (message waiting) indicator and a **New Message** notification, and sounds an alert.

Press	To
<b>READ</b> (↵)	open the message

Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file or video clip begins playing when its slide is displayed. Use the volume keys to adjust the volume as the sound file or video clip plays.

**Note:** *In a multimedia letter, you may have to highlight an indicator in the text to play a sound file or video clip.*



- Attached files are added to the end of the message. To open the attachment, highlight the file indicator/filename and press **VIEW** (↵) (image file type), **PLAY** (↵) (sound file or video clip), or **OPEN** (↵) (object such as phonebook or datebook entry, or unknown file type).

## Playing Video Clips

 
You can download video clips with the micro-browser, and send and receive video clips in multimedia messages.

To play a video clip stored on your phone:

**Find the Feature**  > **Multimedia > Videos**

<b>Press</b>	<b>To</b>
1 	scroll to the video clip
2 <b>PLAY</b> (  )	start video clip playback

The video clip displays in the video clip playback screen.

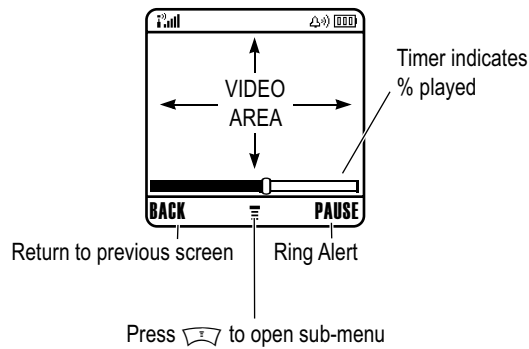 



## ***Learning to Use Your Phone***

See page 1 for a basic phone diagram.

 

### ***Using the Display***

The *home screen* displays when you are *not* on a call or using the menu. You must be in the home screen to dial a phone number.

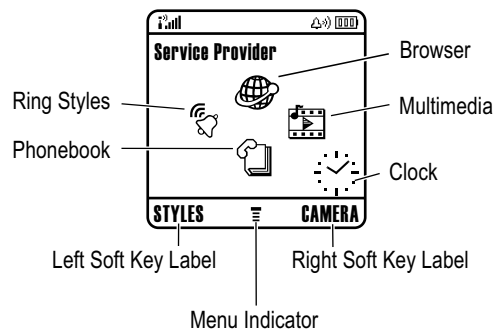

Press the 5-way navigation key (⊙) left, right, up, or down to select one of the menu feature icons. If you select a menu icon by mistake, press  to return to the home screen.

 
**Note:** Your home screen may look different from the display shown above. For example, your service provider may hide the menu feature icons to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide the menu icons, see page 76.

The  (menu) indicator indicates that you can press the menu key () to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (⏪) or right soft key (⏩) to perform the function indicated by the left or right soft key label.

Your phone can display an analogue or digital clock in the home screen (see page 75).

The following status indicators can display:

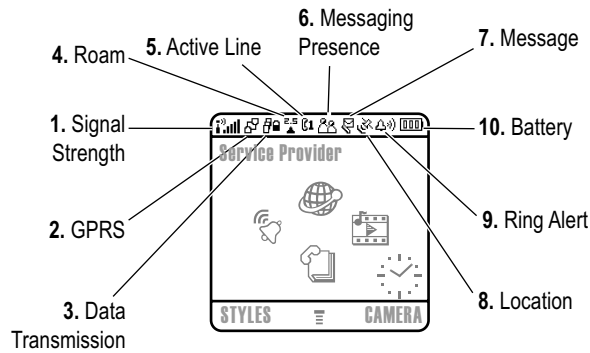


### 1. Signal Strength Indicator

 
Vertical bars show the strength of the network connection. You cannot make or receive calls when the (no signal) indicator or (no transmit) indicator displays.

## 2. GPRS Indicator



 
Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include:

 
 = GPRS PDP context active


 = GPRS packet data available


## 3. Data Transmission Indicator

 
Shows connection and data transmission status. Indicators can include:

 
 = secure packet data transfer

 = insecure packet data transfer

 = secure application connection

 = insecure application connection

 = secure Circuit Switch Data (CSD) call


 = insecure CSD call

## 4. Roam Indicator



Shows when your phone is seeking or using another network outside your home network. Indicators can include:

 = 2.5G home



 = 2.5G roam

 

 
 = 2G home

 = 2G roam

### 5. Active Line Indicator



 



 

Shows  or  to indicate the current active phone line. Other indicators can include:


-  = line 1 active, call divert on
-  = line 2 active, call divert on
-  = alarm activated

### 6. Messaging Presence Indicator



Shows when Instant Messaging (IM) is active. Indicators can include:

-  = IM active
-  = available for IM
-  = busy
-  = invisible to IM
-  = available for phone calls
-  = offline

When a Java application is active, a  (Java midlet) indicator can display in this location.

### 7. Message Indicator



Displays when you receive a new message. Indicators can include:

-  = text message
-  = voicemail message
-  = IM message
-  = active chat session
-  = voicemail and text message



When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size (multimedia message or letter).

### 8. Location Indicator




Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:


 = location on


 = location off

 
### 9. Ring Style Indicator

 
Shows the ring style setting.

 = loud ring

 = soft ring

 = vibrate

 = vibrate and ring

 = silent

 
### 10. Battery Level Indicator

Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.



### ***Using the 5-Way Navigation Key***

Use the 5-way navigation key (⊙) to scroll up, down, left, or right through the menu system, highlight menu items, change feature settings, and play games. Press the centre select button to select a highlighted menu item. The centre select button usually performs the same function as the right soft key (⏏).

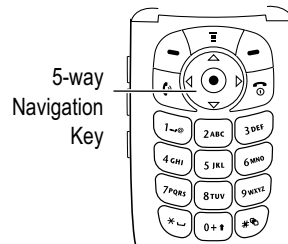














## Using Menus

From the home screen, press  to enter the main menu.






Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.

Icon	Feature	Icon	Feature
	<b>Games &amp; Apps</b>		<b>Multimedia</b>
	<b>Office Tools</b>		<b>Settings</b>
	<b>IM</b>		<b>Web Access</b>
	<b>Phonebook</b>		<b>Recent Calls</b>
	<b>Messages</b>		<b>Chat</b>

### Selecting a Menu Feature

 
To select a menu feature, starting from the home screen:

**Find the Feature**  > **Recent Calls** > **Dialled Calls**

This example shows that from the home screen, you must press , scroll to and select  **Recent Calls** from the main menu, then scroll to and select **Dialled Calls**. Press  to scroll, and the left/right soft keys to select the functions displayed in the bottom left and right corners of the display.

## Selecting a Feature Option

Some features require you to select an option from a list:

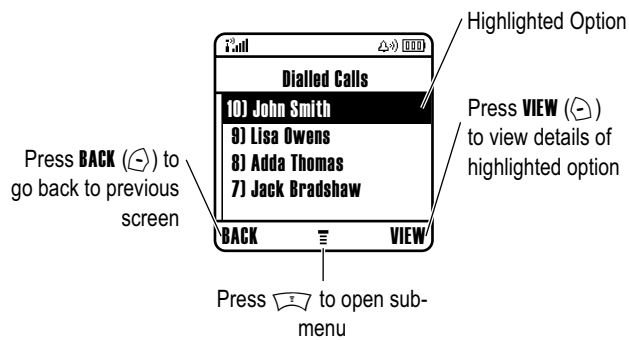

Press (UP/DOWN arrow icon) to scroll up or down to highlight the option you want.

In a numbered list, press a number key to highlight the option.

In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.

When an option has a list of possible values, press (LEFT/RIGHT arrow icon) left or right to scroll through and select a value.

When an option has a list of possible numeric values, press a number key to set the value.

## Entering Text

 
Some features require you to enter information.

Press **DOWN** to scroll down to other options

 
Press **CANCEL** (**ESC**) to exit without making changes. **DONE** displays when you enter or edit information

Highlighted Option

Press **CHANGE** (**ENTER**) or number keys to edit the information

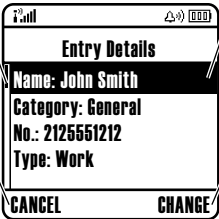

The message centre lets you compose and send text messages. A *Character Counter* indicates how many more characters will fit in the message.

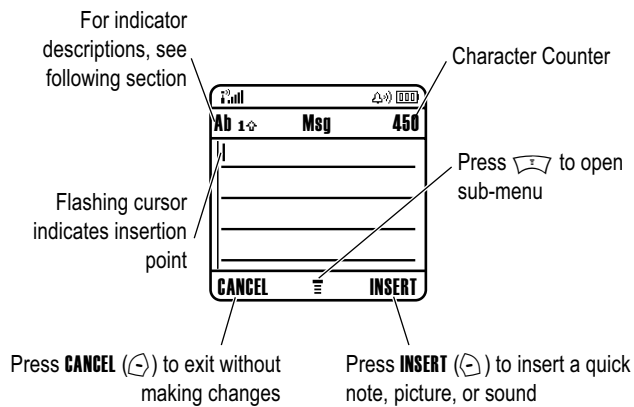

### Choosing a Text Entry Method


Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method (for example, iTAP predictive text or TAP input mode) you select remains active until you select another method.

Press [icon] in any text entry screen to select one of the following entry methods:


- Primary**                      The primary text entry method (see below to set).
- Numeric**                      Enter numbers only (see page 43).

- Symbol** Enter symbols only (see page 44).
- Secondary** The secondary text entry method (see below to set).

Alternatively, you can select a text entry method in any text entry screen by pressing  > **Entry Mode**.


**Tip:** You can switch between text Entry Methods by pressing  whilst in edit mode.


### Setting Up a Text Entry Method

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

- iTAP** Let the phone predict each word as you press keys (see page 42).
- Tap** Enter letters and numbers by pressing a key one or more times.
- Tap Extended** Enter letters, numbers, and symbols by pressing a key one or more times.
- None** Hide the Secondary setting (only available for Secondary Setup).

### Using Capitalisation

Press  in any text entry screen to change text case. The following indicators show capitalisation status:

-  = no capital letters
-  = capitalise next letter only
-  = all capital letters

### Text Entry Method Indicators

When you select the **Primary** or **Secondary** text entry method, the following indicators identify the text entry setting:

Primary	Second.	
1	2	Tap, no capital letters
1†	2†	Tap, capitalise next letter only
1††	2††	Tap, all capital letters
Ⓜ	Ⓜ	iTAP, no capital letters
Ⓜ†	Ⓜ†	iTAP, capitalise next letter only
Ⓜ††	Ⓜ††	iTAP, all capital letters

The following indicators identify Numeric or Symbol entry method:


123 = numeric method @ = symbol method

### Using Tap Method

 
This is the standard method for entering text on your phone.

Tap method cycles through the letters and number of the key you press. Tap Extended method also cycles through additional symbols as shown in the chart on page 41.

Press	To
1 A keypad key one or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters. <b>Tip:</b> Press Ⓜ right to accept a word completion, or Ⓜ to insert a space.
3 <b>OK</b> (↵)	store the text

In a text entry screen, you can press  to switch entry methods. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry method, see page 38.

When you enter text with **Tap** or **Tap Extended** method, the soft key functions change.

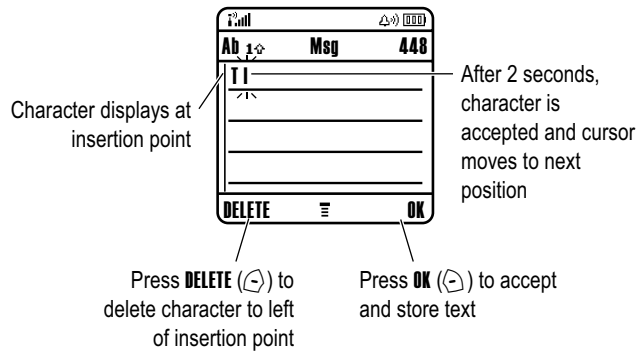

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:


 






 


 



If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.



 
 

### Character Chart

Use this chart as a guide for entering characters with **Tap Extended** method.

	. ? ! , @ ' - _ : ; ( ) & " ~ 1 0 ¿ ¡ % £ \$ ¥ ¤ € + x * / \ [ ] = > < # §
	a b c 2 á à â ã ç æ
	d e f 3 é è ê ë
	g h i 4 í î ï
	j k l 5
	m n o 6 ñ ó ò ô õ ö ø
	p q r s 7
	t u v 8 ú û ü
	w x y z 9
	change text case, for capital letters
	enter a space (hold to enter a return)
	change text entry method (hold for default)

**Note:** This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

 
### Tap Method Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalised. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

## Using iTAP™ Method


iTAP™ software provides a predictive text entry method that lets you enter a word using one keypress per letter. This can be faster than **Tap** method, because your phone combines the keypresses into common words.


 
For example, if you press    , letter combinations that match your keypresses display:

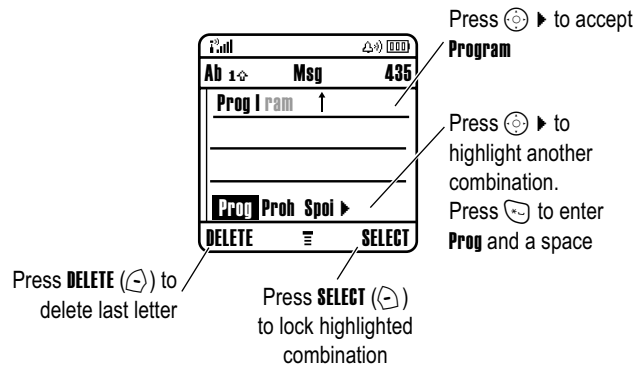

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

## Entering Words

In a text entry screen, you can press  to switch entry methods. An indicator shows which method is active (see page 39). If **iTAP** method is not available as the **Primary** or **Secondary** entry method, see page 38.

<b>Press</b>	<b>To</b>
1 keypad keys (one press per letter)	show possible letter combinations at the bottom of the display
2  left or right	highlight the combination you want
3 <b>SELECT</b> (  )	lock a highlighted combination

You can press keypad keys to add more letters to the end of the combination.

or





enter the highlighted combination when it spells a word

A space is automatically inserted after the word.


If you enter a word your phone does not recognise, the phone stores it to use as one of your word options. When you fill memory space for unrecognised words, your phone deletes the oldest words to add new words.


 
### ***Using Numeric Method***

In a text entry screen, press  to switch entry methods until the <sup>123</sup> (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry method.

### Using Symbol Method

In a text entry screen, press  to switch entry methods until the @ (symbol) indicator displays.

Press	To
1 keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display
2  left or right	highlight the combination you want
3 <b>SELECT</b> (  )	lock a highlighted combination

You can press keypad keys to add more symbols to the end of the combination.




 
 



or


 





enter the highlighted combination

### Symbol Chart

Use this chart as a guide for entering characters with symbol method.

	.?!,@'-'_::;()&"~10¿¡%£\$¥¤€+x*/\[] =><#§
	@_ \ ß
	/:;
	" & '
	()[]{}
	¿ ¡ ~
	< > =
	\$ £ ¥ ¤

	# % *
	+ - x * / = > < # §
	enter a space (hold to enter a return)
	change text entry method (hold for default)

 
**Note:** This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

### Deleting Letters and Words


Place the cursor to the right of the text you want to delete, and then:

#### Action

Press **DELETE** () to delete one letter at a time.

Hold **DELETE** () to delete the entire message.

### Using the Smart Key

The smart key gives you another way to perform many basic phone functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key () .

### Using the External Display

When the flip is closed, the external display shows time and phone status information. It also displays messages to notify you of incoming calls and other events. See page 27 for descriptions of the status indicators that may appear in the external display.

**Note:** You cannot make or receive calls when the phone is closed unless you attach a headset.

### ***Using the Handsfree Speaker***

When you activate your phone's built-in handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** (🔊) to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Spkrphone On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** (🔊) again or turn the phone off.

***Note:** The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.*

### ***Changing a Code, PIN, or Password***

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

**Find the Feature**



> **Settings > Security**  
> **New Passwords**

## ***Locking and Unlocking Your Phone***


You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked (see page 59).

### ***Locking Your Phone Manually***


**Find the Feature**  > **Settings** > **Security**  
> **Phone Lock** > **Lock Now**

<b>Press</b>	<b>To</b>
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	lock the phone

### ***Unlocking Your Phone***

Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.


At the **Enter Unlock Code** prompt:

<b>Press</b>	<b>To</b>
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	unlock your phone

## Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:


 
**Find the Feature**       > **Settings > Security**  
> **Phone Lock > Automatic Lock**  
> **On**

<b>Press</b>	<b>To</b>
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	activate automatic lock

## If You Forget a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

<b>Press</b>	<b>To</b>
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 <b>OK</b> (  )	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.



## ***Using the Phonebook***

This section briefly describes basic phonebook operations. For more information about using the phonebook, see page 73.

### ***Storing a Phone Number***

Enter a phone number in the home screen, then press **STORE** (☞) to create a phonebook entry with that number. Fill in the other fields to complete the entry.

Select **MORE** to store another number (for example, a work number) under the same Name.

### ***Recording a Voice Name***

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (☞). Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name. Press **DONE** (☞) to store the voice name.

**Note:** This option is not available for entries stored on the SIM card.

### ***Storing a Picture for Caller ID***

You can store a picture for a phonebook entry. The picture appears when you receive calls from the entry.





**Note:** This option is not available for entries stored on the SIM card.

When creating a phonebook entry, scroll to **Picture** and press **CHANGE** (☞). Press (☺) to select a picture, and press **SELECT** (☞) to store it for the entry.

### ***Dialling a Number***

Press  > **Phonebook** > entry to call .



**Note:** You can also access the Phonebook from idle display by pressing , depending on local settings.

**Tip:** To quickly highlight entries in your **Phonebook** list: If your entries are sorted by Speed No., press an entry's speed number to highlight it. For example, press   for entry number 15. If your entries are sorted by **Name**, **Voice Name**, or **Email**, enter the first letter of the entry's name to highlight it. For example, press   for the first entry that starts with "K".

### ***Voice Dialling a Number***



Press and release the voice key, and say the entry's name (within 2 seconds).

### ***Sorting Phonebook Entries***

Press  > **Phonebook**, press  > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 74.

### ***Viewing Entries By Category***

Press  > **Phonebook**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 74.

## ***Setting Up Your Phone***

---

### ***Storing Your Name and Phone Number***



To store or edit your name and phone number information on your SIM card:

#### **Find the Feature**



> **Settings > Phone Status  
> My Tel. Numbers**

**Shortcut:** Press from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider.

### ***Setting the Time and Date***

Your phone uses the time and date for the **Datebook**. Your phone can synchronise its time and date with the network:

#### **Find the Feature**



> **Settings > Initial Setup  
> Time and Date > Autoupdate  
> On**

To set the time and date manually, set **Autoupdate** to **Off** and use the **Time** and **Date** options:

#### **Find the Feature**



> **Settings > Initial Setup  
> Time and Date > Time or Date**

## Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 31).

To set a ring style:

**Find the Feature**  > **Settings > Ring Styles > Style**

**Press**

1 

**To**

scroll to the ring style

2 **SELECT** ()

select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Settings > Ring Styles > style Detail**.

## Setting Answer Options





You can use additional, alternative methods to answer an incoming call.

**Multi-Key** answer by pressing any key

**Open to Answer** answer by opening the phone

To activate or deactivate an answer option:







**Find the Feature**  > **Settings > In-Call Setup > Answer Options**

Press	To
1 	scroll to Multi-Key or Open to Answer
2 <b>CHANGE</b> (  )	select the option
3 	scroll to <b>On</b> or <b>Off</b>
4 <b>SELECT</b> (  )	confirm the setting

### Setting a Wallpaper Image

You can set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

**Find the Feature**  > **Settings** > **Personalise**  
> **Wallpaper**

Press	To
1 	scroll to <b>Picture</b>
2 <b>CHANGE</b> (  )	open the picture viewer
3  up or down	scroll to a picture/animation  Scroll to <b>[None]</b> to turn off the wallpaper image.
4 <b>SELECT</b> (  )	select the image
5 	scroll to <b>Layout</b>
6 <b>CHANGE</b> (  )	adjust the image layout

**Press**

7 

**To**

scroll to **Centre**, **Tile**, or **Fit-to-screen**

**Centre** places the image in the centre of the display.

**Tile** fills the display with multiple copies of the image.

**Fit-to-screen** resizes the image, if necessary, to fit the display.

---

8 **SELECT** 

confirm the layout setting

---

9 **BACK** 

save wallpaper settings

### Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the phone is on and no activity is detected for a specified time. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

Turn off the screen saver to extend battery life.

**Find the Feature**

 > **Settings** > **Personalise**  
> **Screen Saver**

**Press**

1 

**To**


scroll to **Picture**

---

2 **CHANGE** 

open the picture viewer

---

3  up or down





 
scroll to a picture/animation

Scroll to **(None)** to turn off the screen saver image.

---

4 **SELECT** 

select the image

<b>Press</b>	<b>To</b>
<b>5</b> 	scroll to Delay
<b>6</b> <b>CHANGE</b> 	set the delay interval
<b>7</b> 	scroll to the inactivity interval that triggers the screen saver
<b>8</b> <b>SELECT</b> 	confirm the delay setting
<b>9</b> <b>BACK</b> 	save screen saver settings

### ***Setting Display Contrast***

**Find the Feature**  > **Settings** > **Initial Setup**  
> **Contrast**

### ***Setting Display Colour***

Select the colour palette that your phone uses to display indicators, highlights, and soft key labels.

**Find the Feature**  > **Settings** > **Personalise**  
> **Colour Style**

### ***Adjusting the Backlight***

Set the amount of time that the display and keypad backlights remain on.

**Find the Feature**  > **Settings** > **Initial Setup**  
> **Backlight**



 
 
 
### ***Setting Display Timeout***

Set the display to turn itself off when no activity is detected for a specified time.

#### **Find the Feature**



> **Settings** > **Initial Setup**  
> **Display Timeout**





## Calling Features

---

For basic instructions on how to make and answer calls, see page 19.

### Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

**Note:** This feature is available only for dual-line-enabled SIM cards.

#### Find the Feature



> **Settings > Phone Status**  
> **Active Line**

The active line indicator in the display shows the currently active phone line (see page 30).

### Redialling a Number

Press	To
1 	view the last 10 dialled calls list
2 	scroll to the entry you want to call
3 	redial the number

## Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

To redial the phone number:

**Press**

or **RETRY** (

**To**

activate automatic redial

Your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

## Using Caller ID

### Incoming Calls



Calling line identification (Caller ID) displays the phone number for incoming calls in your phone's display.

The phone displays the caller's name (and picture, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

### Outgoing Calls




You can show or hide your phone number as an ID for the calls that you make.

**Find the Feature**




> **Settings > In-Call Setup**  
> **My Caller ID**

You can override the default caller ID setting when you make a call. While dialling (with digits visible in the display):

Press	To
 > <b>Hide ID/Show ID</b>	hide or show your caller ID for the next call

### ***Canceling an Incoming Call***

While the phone is ringing or vibrating:

Press	To
<b>IGNORE</b> 	cancel the incoming call



Depending on your phone settings and/or service subscription, the call may be diverted to another number, or the caller may hear a busy signal.

### ***Turning Off a Call Alert***


You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert

 
### ***Calling an Emergency Number***

Your service provider programmes one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.


Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

### Dialling International Numbers






Press and hold  to insert the local international access code (+) for the country from which you are calling.

### Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialled, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

**Shortcut:** Press  from the home screen to view the dialled calls list.

**Find the Feature**  > **Recent Calls**

Press	To
1 	scroll to <b>Received Calls</b> or <b>Dialled Calls</b>
2 <b>SELECT</b> (  )	select the list
3 	scroll to an entry ✓ means the call connected.
4  or	call the entry's number Press and hold  for 2 seconds to send the number as DTMF tones during a call.

**Press**

**VIEW** (⏏)

**or**



**To**

view entry details

open the **Last Calls Menu** to perform various operations on the entry

The **Last Calls Menu** can include the following options:

Option	Description
<b>Store</b>	Create a phonebook entry with the number in the <b>No.</b> field.
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Hide ID/Show ID</b>	Hide or show your caller ID for the next call.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the phonebook or recent calls lists.
<b>Send Tones</b>	Send the number to the network as DTMF tones. This option displays only during a call.
<b>Talk then Fax</b>	Talk and then send a fax in the same call (see page 80).

### Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 <b>VIEW</b> (☞)	see the received calls list
2 (☺)	select a call to return
3 (☎)	make the call

### Using the Notepad


The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

**Find the Feature** (☎) > **Recent Calls** > **Notepad**

Press	To
(☎)	call the number
or	
(☎)	open the <b>Dialling Menu</b> to attach a number or insert a special character
or	
<b>STORE</b> (☞)	create a phonebook entry with the number in the <b>No.</b> field



### ***Attaching a Number***

While dialling (with digits visible in the display):



<b>Press</b>	<b>To</b>
 > <b>Attach Number</b>	attach a number from the phonebook or recent calls lists

### ***Calling With Speed Dial***

Each entry you store in your phonebook is assigned a unique speed dial number.

To see an entry's speed dial number, press  > **Phonebook**, scroll to the entry, press **VIEW** (.

To speed dial a phonebook entry:

<b>Press</b>	<b>To</b>
<b>1</b> keypad keys	enter the speed dial number for the entry you want to call
<b>2</b> 	submit the number
<b>3</b> 	call the entry

### ***Calling With 1-Touch Dial***

To call phonebook entries 1 to 9, press and hold the single-digit speed dial number for one second.

**Tip:** You must specify which phone number list you want to use with this feature: phone memory phonebook or SIM card phonebook (see page 74).

## Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.


Your service provider may include additional information about using this feature.

## Listening to Voicemail Messages

**Find the Feature**  > **Messages** > **Voicemail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

## Receiving a Voicemail Message



When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a **New Voicemail** notification.

Press	To
<b>CALL</b> (  )	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

## Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

**Find the Feature**  > **Messages**  
 > **Voicemail Setup**





Press	To
1 keypad keys	enter your voicemail number
2 <b>OK</b> (↵)	store the number

You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

### Using Call Waiting




When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1 	answer the new call
2 <b>SWITCH</b> (↵)	switch between calls
or	
<b>LINK</b> (↵)	connect the 2 calls
or	
 > <b>End Call On Hold</b>	end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

**Find the Feature**  > **Settings > In-Call Setup > Call Waiting**

## Putting a Call On Hold





<b>Press</b>	<b>To</b>
<b>HOLD</b> (☐) (if available)	put the call on hold
<b>or</b>	
 > <b>Hold</b>	

## Transferring a Call



You can announce that you are transferring an active call to another party, or you can directly transfer the call.

### Announce the Call Transfer

<b>Find the Feature</b>	 > <b>Hold</b>
<b>Press</b>	<b>To</b>
<b>1</b> keypad keys	dial the number where you are transferring the call
<b>2</b> 	call the number and speak to the person who answers
<b>3</b> 	open the menu
<b>4</b> 	scroll to <b>Transfer</b>
<b>5</b> <b>SELECT</b> (☐)	select <b>Transfer</b>
<b>6</b> <b>OK</b> (☐)	confirm the transfer



### ***Do Not Announce the Call Transfer***

 
 
 
**Find the Feature**  > **Transfer**

**Press**  
**1** keypad keys **To** dial the number where you are transferring the call

---

**2**  transfer the call










---



## Phone Features

### Menu Map



 



#### Main Menu





-  **Phonebook**
-  **Recent Calls**
  - Received Calls
  - Dialed Calls
  - Notepad
  - Call Times
  - Call Cost
  - Data Times
  - Data Volumes
-  **Messages**
  - Create Message
  - Message Inbox
  - Voicemail
  - Browser Msgs
  - Info Services
  - Quick Notes
  - Outbox
  - Drafts
  - MMS Templates
-  **Office Tools**
  - SIM Tool Kit Apps \*
  - Calculator
  - Datebook
  - Shortcuts
  - Alarm Clock
  - Chat
  - Dialling Services
    - Fixed Dial
    - Service Dial \*
    - Quick Dial \*
-  **Games & Apps**
-  **Web Access**
  - Browser
  - Web Shortcuts
  - Stored Pages
  - History
  - Go To URL
  - Browser Setup
  - Web Sessions
-  **Multimedia**
  - Themes
  - Camera
  - Pictures
  - Sounds
  - MotoMixer
  - Videos
-  **IM**
  - Log In
  - Offline Convs.
  - Offline Settings
  - Help
-  **Settings**
  - (see next page)

\* optional features

This is the standard main menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available on your phone.

## Settings Menu

-  **Personalise**
  - Home Screen
  - Main Menu
  - Colour Style
  - Greeting
  - Wallpaper
  - Screen Saver
  - Quick Dial
-  **Ring Styles**
  - Style
  - Loud Detail
-  **Call Divert**
  - Voice Calls
  - Fax Calls
  - Data Calls
  - Cancel All
  - Divert Status
-  **In-Call Setup**
  - In-Call Timer
  - Call Cost Setup
  - My Caller ID
  - Talk and Fax
  - Answer Options
  - Call Waiting
-  **Initial Setup**
  - Time and Date
  - 1-Touch Dial
  - Display Timeout
  - Backlight
  - Scroll
  - Language
  - Contrast
  - DTMF
  - Master Reset
  - Master Clear
-  **Phone Status**
  - My Tel. Numbers
  - Credit Info/Available\*
  - Active Line
  - Battery Meter
  - Other Information






-  **Headset**
  - Auto Answer
  - Voice Dial
-  **Car Settings**
  - Auto Answer
  - Auto Handsfree
  - Power-off Delay
  - Charger Time
-  **Network**
  - New Network
  - Network Setup
  - Available Networks
  - My Network List
  - Service Tone
  - Call Drop Tone
-  **Security**
  - Phone Lock
  - Lock Application
  - Fixed Dial
  - Call Barring
  - SIM PIN
  - New Passwords
-  **Java Settings**
  - Java App Loader
  - Java System
  - Delete All Apps
  - App Vibration
  - App Volume
  - App Priority
  - App Backlight

\* optional features




## Feature Quick Reference



 


This section helps you locate features on your phone that are not described in this guide.

### Calling Features

 




Feature	Description
<b>Conference Call</b>	During a call:  > <b>Hold</b> , dial next number, press  , press <b>LINK</b> (  )
<b>Call Diverting</b>	Set up or cancel call diverting:  > <b>Settings</b> > <b>Call Divert</b>
<b>Call Barring</b>	Restrict outgoing or incoming calls:  > <b>Settings</b> > <b>Security</b> > <b>Call Barring</b>

### Messages

Feature	Description
<b>Send Text Message</b>	Send a text message:  > <b>Messages</b> > <b>New Message</b> > <b>New Short Msg</b>
<b>Send Multimedia Message</b>	Send a multimedia message:  > <b>Messages</b> > <b>New Message</b> > <b>New Multimedia Msg</b>
<b>Send Letter</b>	Send a multimedia letter:  > <b>Messages</b> > <b>New Message</b> > <b>New Letter</b>

Feature	Description
<b>Use MMS Template</b>	Open an MMS template with preloaded media:  > <b>Messages</b> > <b>New Message</b> > <b>MMS Templates</b> 
<b>Read Message</b>	Read a new text or multimedia message that you have received:  Press <b>READ</b> (  ) .
<b>Store Message Objects</b>	Go to a multimedia message slide, or highlight an object in a letter, then:  > <b>Store</b> 

### *Instant Messaging*

Feature	Description
<b>Log In</b>	Log in to instant messaging:  > <b>IM</b> > <b>Log In</b> 
<b>Find Others Online</b>	After you log in: Select <b>Contact List</b> to see a list of other users. 
<b>Start Conversation</b>	Start a conversation: From your <b>Contact List</b> , highlight a name in <b>Online Contacts</b> , press <b>SEND IM</b> (  ) . 







Feature	Description
<b>Open Active Conversation</b>	Open a conversation in progress: From your <b>Contact List</b> , highlight a name in <b>Conversations</b> , press <b>VIEW</b> (⏏).
<b>End Conversation</b>	From the conversation display: ⏏ > <b>End Conversation</b>
<b>Log Out</b>	Log out of instant messaging: Select <b>Log Out</b> from the <b>IM Online</b> menu.












### Chat

Feature	Description
<b>Start Chat</b>	Start a new chat session: ⏏ > <b>Chat</b> ⏏ > <b>New Chat</b>
<b>Receive Chat Request</b>	When you receive a chat request: Press <b>ACCEPT</b> (⏏) or <b>IGNORE</b> (⏏).
<b>End Chat</b>	During a chat session: ⏏ > <b>End Chat</b>














## Phonebook

Feature	Description
<b>Create Entry</b>	Create a new phonebook entry: Type in telephone number > <b>Store</b> > <i>enter other details</i>
<b>Create Group Mailing List</b>	Create a group mailing list as a phonebook entry:  > <b>Phonebook</b>  > <b>New</b> > <b>Mailing List</b>
<b>Dial Number</b>	Call a number stored in the phonebook:  > <b>Phonebook</b> , highlight the phonebook entry, press  to call
<b>Voice Dial Number</b>	Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (within 2 seconds).
<b>Set Ringer ID for Entry</b>	Assign a distinctive ringer alert to a phonebook entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>Edit</b> > <b>Ringer ID</b> > <i>ringer name</i> <b>Note:</b> <i>The Ringer ID option is not available for entries stored on the SIM card.</i>


 

Feature	Description
<b>Set Picture ID for Entry</b>	Assign a picture to display when you receive calls from an entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>Edit</b> > <b>Picture</b> > <i>picture</i> <b>Note:</b> The <b>Picture</b> option is not available for entries stored on the SIM card.
<b>Set Category for Entry</b>	Set the category for a phonebook entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>Edit</b> > <b>Category</b> > <i>category name</i> <b>Note:</b> The <b>Category</b> option is not available for entries stored on the SIM card.
<b>Set Category View</b>	Set a phonebook category view:  > <b>Phonebook</b>  > <b>Categories</b> > <i>category view</i>
<b>Sort Phonebook List</b>	Set the order in which phonebook entries are listed:  > <b>Phonebook</b>  > <b>Setup</b> > <b>Sort by</b> > <i>sort order</i>
<b>Set Primary Number</b>	Set the primary number for a phonebook entry with multiple numbers:  > <b>Phonebook</b> , scroll to entry, press  > <b>Set Primary</b> > <i>phone number</i>
<b>1-Touch Dial</b>	Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook:  > <b>Settings</b> > <b>Initial Setup</b> > <b>1-Touch Dial</b>

### Personalising Features








Feature	Description
<b>Ring Style</b>	Change the ring alert for an event:  > <b>Settings</b> > <b>Ring Styles</b> > <i>style Detail</i> > select chosen alerts
<b>Ringer IDs</b>	Activate distinctive ring alerts assigned to phonebook entries:  > <b>Settings</b> > <b>Ring Styles</b> > <i>style Detail</i> > <b>Ringer IDs</b>
<b>Ring Volume</b>	Set ringer volume:  > <b>Settings</b> > <b>Ring Styles</b> > <i>style Detail</i> > <b>Ring Volume</b>
<b>Keypad Volume</b>	Set keypad keypress volume:  > <b>Settings</b> > <b>Ring Styles</b> > <i>style Detail</i> > <b>Key Volume</b>
<b>Clock View</b>	Display an analogue clock or digital time readout in the home screen:  > <b>Settings</b> > <b>Personalise</b> > <b>Home Screen</b> > <b>Clock</b>
<b>Menu View</b>	Display the main menu as graphic icons or as a text-based list:  > <b>Settings</b> > <b>Personalise</b> > <b>Main Menu</b> > <b>View</b>
<b>Main Menu</b>	Reorder your phone's main menu:  > <b>Settings</b> > <b>Personalise</b> > <b>Main Menu</b> > <b>Reorder</b>



Feature	Description
<b>Show or Hide Menu Icons</b>	Show or hide menu feature icons in the home screen:  > <b>Settings &gt; Personalise &gt; Home Screen &gt; Home Keys &gt; Icons</b>
<b>Change Home Screen Keys &amp; Icons</b>	Change soft key labels, smart key function, and menu feature icons in the home screen:  > <b>Settings &gt; Personalise &gt; Home Screen &gt; Home Keys</b>
<b>Shortcuts</b>	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > <b>Office Tools &gt; Shortcuts &gt; shortcut name</b>

**Menu Features**


Feature	Description
<b>Language</b>	Set menu language:  > <b>Settings &gt; Initial Setup &gt; Language</b>
<b>Master Reset</b>	Reset all options except unlock code, security code, and lifetime timer:  > <b>Settings &gt; Initial Setup &gt; Master Reset</b>
<b>Master Clear</b>	Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries except SIM card information:  > <b>Settings &gt; Initial Setup &gt; Master Clear</b>

## Dialling Features





Feature	Description
<b>Fixed Dial</b>	<p>When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.</p> <p>Turn fixed dialling on or off:</p> <p> &gt; <b>Settings</b> &gt; <b>Security</b> &gt; <b>Fixed Dial</b></p> <p>Use the fixed dial list:</p> <p> &gt; <b>Office Tools</b> &gt; <b>Dialling Services</b> &gt; <b>Fixed Dial</b></p> 
<b>Service Dial</b>	<p>Dial service phone numbers:</p> <p> &gt; <b>Office Tools</b> &gt; <b>Dialling Services</b> &gt; <b>Service Dial</b></p> 
<b>Quick Dial</b>	<p>Your service provider may programme your phone with one or more quick dial numbers, such as the customer service number.</p> <p>Dial preprogrammed phone numbers:</p> <p> &gt; <b>Office Tools</b> &gt; <b>Dialling Services</b> &gt; <b>Quick Dial</b></p> 



Feature	Description
<b>DTMF Tones</b>	<p>Activate DTMF tones:</p> <p> &gt; <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>DTMF</b></p> <p>Send DTMF tones during a call:</p> <p>Press number keys.</p> <p>Send stored numbers as DTMF tones during a call:</p> <p>Highlight a number in the phonebook or recent calls lists, then press  &gt; <b>Send Tones</b>.</p>

### **Call Monitoring**

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.









**The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.**



Feature	Description
<b>Call Times</b>	<p>View call timers:</p> <p> &gt; <b>Recent Calls</b> &gt; <b>Call Times</b> </p>
<b>In-Call Timer</b>	<p>Display time or cost information during a call:</p> <p> &gt; <b>Settings</b> &gt; <b>In-Call Setup</b> &gt; <b>In-Call Timer</b> </p>

Feature	Description
<b>Call Cost</b>	View call cost information:  > <b>Recent Calls</b> > <b>Call Cost</b> 

 
 
### Handsfree Features

*Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.*

Feature	Description
<b>Speaker-phone</b>	When in an active call, press <b>SPEAKER</b> (  ). 
<b>Auto Answer</b> (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > <b>Settings</b> > <b>Car Settings</b> or <b>Headset</b> > <b>Auto Answer</b> 
<b>Voice Dial</b> (headset)	Enable voice dial with headset send/end key:  > <b>Settings</b> > <b>Headset</b> > <b>Voice Dial</b> 
<b>Auto Handsfree</b> (car kit)	Automatically route calls to a car kit when connected:  > <b>Settings</b> > <b>Car Settings</b> > <b>Auto Handsfree</b> 



Feature	Description
<b>Power-Off Delay</b> (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:  > <b>Settings</b> > <b>Car Settings</b> > <b>Power-Off Delay</b>
<b>Charger Time</b> (car kit)	Charge the phone for a specified time after the ignition is switched off:  > <b>Settings</b> > <b>Car Settings</b> > <b>Charger Time</b>

### Data and Fax Calls








 
 
 
Feature	Description
<b>Send Data or Fax</b>	Connect your phone to the device, then place the call through the device application.
<b>Receive Data or Fax</b>	Connect your phone to the device, then answer the call through the device application.
<b>Talk Then Fax</b>	Connect your phone to the device, enter the number, then press  > <b>Talk Then Fax</b>  to make the call.







### Network Features



Feature	Description
<b>Network Settings</b>	View network information and adjust network settings:   > <b>Settings</b> > <b>Network</b>

### Personal Organiser Features

Feature	Description
<b>Create Datebook Event</b>	Create a new datebook event:  > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press the centre select button, press  > <b>New</b>
<b>View or Edit Datebook Event</b>	View or edit event details:  > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press the centre select button, press <b>VIEW</b> (  )
<b>Event Reminder</b>	View event reminder: <b>VIEW</b> (  ) Close event reminder: <b>BACK</b> (  )
<b>Set Alarm</b>	Set an alarm:  > <b>Office Tools</b> > <b>Alarm Clock</b>
<b>Turn Off Alarm</b>	Turn off alarm: Press <b>DISABLE</b> (  ) or  . Set 8-minute delay: Press <b>SNOOZE</b> (  ).








Feature	Description
<b>Calculator</b>	Calculate numbers:  > <b>Office Tools</b> > <b>Calculator</b>
<b>Currency Converter</b>	Convert currency:  > <b>Office Tools</b> > <b>Calculator</b>  > <b>Exchange Rate</b> Enter exchange rate, press <b>OK</b> (  ) , enter amount, and select <b>\$</b> in the bottom of the display.





 

### Security

Feature	Description
<b>SIM PIN</b>	Lock or unlock the SIM card:  > <b>Settings</b> > <b>Security</b> > <b>SIM PIN</b> <b>Caution:</b> If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays <b>SIM Blocked</b> .
<b>Lock Application</b>	Lock phone applications:  > <b>Settings</b> > <b>Security</b> > <b>Lock Application</b>

### News and Entertainment

Feature	Description
<b>Launch Micro-Browser</b>	Start a micro-browser session:  > <b>Web Access</b> > <b>Browser</b> 

Feature	Description
<b>Download Objects from Web Page</b>	Download a picture, sound, or phone theme from a Web page: Highlight the file, press <b>SELECT</b> (⏏), press <b>STORE</b> (⏏). 
<b>Web Sessions</b>	Select or create a Web session: ⏏ > <b>Web Access</b> > <b>Web Sessions</b> 
<b>Apply Phone Theme</b>	Apply a grouped set of image and sound files to your phone: ⏏ > <b>Multimedia</b> > <b>Themes</b> > theme 
<b>Download Game or Application (micro-browser)</b>	Download a Java game or application with the micro-browser: ⏏ > <b>Web Access</b> > <b>Browser</b> , highlight the application, press <b>SELECT</b> (⏏), press <b>DOWNLOAD</b> (⏏) 
<b>Download Game or Application (computer)</b>	Download a Java game or application from a computer: Connect your phone to the computer, press ⏏ > <b>Settings</b> > <b>Java Settings</b> > <b>Java App Loader</b> . 
<b>Launch Game or Application</b>	Launch a Java game or application: ⏏ > <b>Games &amp; Apps</b> , highlight the application, press <b>SELECT</b> (⏏) 
<b>Manage Pictures</b>	Manage pictures and animations: ⏏ > <b>Multimedia</b> > <b>Pictures</b> 

Feature	Description
<b>Manage Sounds</b>	Manage ring tones, sounds that you have composed or downloaded:  > <b>Multimedia</b> > <b>Sounds</b>
<b>Manage Video Clips</b>	Manage video clips:  > <b>Multimedia</b> > <b>Videos</b>
<b>Edit Sounds With MotoMixer</b>	Edit MIDI-based sound files that you can use with your phone:  > <b>Multimedia</b> > <b>MotoMixer</b> > <b>[New Mix]</b> or mix file name
<b>Create Ring Tones</b>	Create ring tones that you can use with your phone:  > <b>Multimedia</b> > <b>Sounds</b> > <b>[New iMelody]</b>
<b>Camera</b>	When in camera mode, scroll up and down to zoom in and out (  ) and from right to left to adjust the level of brightness. To change other settings press  > <b>Picture Setup</b> .



 
 
 
## ***Specific Absorption Rate Data***

### **This model phone meets international standards for exposure to radio waves**

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.<sup>1</sup> Tests for SAR are conducted in accordance with CENELEC<sup>2</sup> testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

 
 
 
 
 
Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is: 0.90 W/kg.<sup>3</sup>





While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

- 1 The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
- 2 CENELEC is a European Union standards body.
- 3 Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.



## ***Index***

---

### **A**

accessories 13  
accessory connector port 1  
active line indicator 30  
active line, changing 57  
alarm clock 81  
alert  
    creating 84  
    defined 52  
    setting 18, 52, 75  
    turning off 19, 59  
animation  
    downloading 83  
    screen saver 54  
    viewing 83  
    wallpaper 53  
answering a call 19, 52  
application, locking and  
    unlocking 82  
automatic redial 58

### **B**

backlight 55  
barring calls 70  
battery  
    charging 17

    extending battery life 14, 55  
    installing 16  
    level indicator 31  
browser. *See* micro-browser

### **C**

calculator 82  
call  
    alert, turning off 19, 59  
    answer options 52  
    answering 19  
    barring 70  
    barring password, changing  
        46  
    call waiting 65  
    costs 79  
    dialled calls list 60  
    dialling 19  
    diverting 70  
    emergency number 59  
    ending 19  
    handsfree speaker 46  
    hold 66  
    international access code 60  
    making 19  
    received calls list 60  
    receiving 19

ring style 18, 52, 75  
speakerphone 79  
timers 78  
transferring 66  
unanswered call 62  
Call Failed, Number Busy  
message 58  
call waiting 65  
caller ID 22, 58  
calling line identification. *See*  
caller ID  
camera  
settings 84  
taking a photo 21  
category  
phonebook entry 74  
view 74  
centre select button 32  
character chart 41  
chat 72  
clock  
selecting analogue or digital  
75  
setting 51  
codes  
changing 46  
default 46, 48  
forgetting 48  
colour, setting 55  
conference call 70

contrast, setting 55  
customising the menu 75

## D

data call 80  
date, setting 51  
datebook 81  
dialled calls list 60  
dialling a number 19, 77  
display  
backlight 55  
colour 55  
contrast 55  
description 27  
home screen 27  
language 76  
personalising 76  
timeout 56  
distinctive ringer alert 75  
diverting calls 70  
DTMF tones  
activating 78  
sending 78

## E

earpiece volume 18  
emergency number 59  
end key 1  
ending a call 19



Enter Unlock Code message 47  
external display 45

## F

fax call 80  
5-way navigation key 1, 32  
fixed dial 77

## G

games 83  
GPRS indicator 29  
groove tunes 84

## H

handsfree speaker 46  
headset jack 1  
hold a call 66  
home keys, personalising 76  
home screen  
  defined 27  
  selecting clock view 75

## I

IM 71  
incoming call  
  answering 19  
  diverting 70  
Incoming Call message 58

## indicators

active line 30  
battery level 31  
GPRS 29  
Java midlet 30  
location 31  
message 30  
message waiting 25  
messaging presence 30  
ring style 31  
roam 29  
signal strength 28  
text case 39  
text entry method 30, 39  
transmission 29  
voicemail message 30, 64  
instant messaging. *See* IM  
international access code 60  
iTAP software 42

## J

Java applications 83  
Java midlet indicator 30  
joystick 1

## K

key  
  centre select button 32  
  end 1  
  5-way navigation 1, 32

left soft key 1, 28, 76  
menu 1  
power 1  
right soft key 1, 28, 76  
send 1  
smart 45  
voice 1  
volume control 1, 18  
keypad  
  answering calls 52  
  volume, setting 75

## L

language, setting 76  
left soft key  
  functions 1, 28  
  personalising 76  
line, changing 57  
location indicator 31  
lock  
  application 82  
  phone 47  
  SIM card 82  
Low Battery message 31

## M

making a call 19  
master clear 76  
master reset 76

90 - Index

menu  
  entering text 36  
  icons, changing in home  
    screen 76  
  icons, converting to text 75  
  icons, showing or hiding 76  
  language, setting 76  
  personalising 75  
  rearranging features 75  
  using 33  
  view, changing 75  
menu key 1  
message  
  chat 72  
  MMS template 71  
  MMS, defined 23  
  multimedia letter 70  
  multimedia message 70  
  reading 71  
  text 70, 71  
message indicator 30  
message waiting indicator 25  
messaging presence indicator  
  30  
micro-browser  
  browser setup 83  
  Java applications 83  
  using 82  
  Web sessions 83  
MMS template 71

MMS. *See* message  
MotoMixer 84  
multimedia letter, sending 70  
multimedia message  
    receiving 25  
    sending 23, 70  
multimedia messaging service.  
    *See* message  
my telephone number 20, 51

## N

network settings 81  
notepad 62  
number  
    storing your number 51  
    viewing your number 20  
numbers, entering 43

## O

1-touch dial  
    setting preference 74  
    using 63  
open to answer 52  
optional accessory, defined 13  
optional feature, defined 13

## P

passwords. *See* codes  
phone  
    active line indicator 30

    active line, changing 57  
    alert, turning off 19, 59  
    answer options 52  
    clear stored information 76  
    codes 46  
    date, setting 51  
    keypad, answering calls 52  
    language, setting 76  
    locking 47  
    network settings 81  
    open to answer 19  
    reset all options 76  
    ring style 18, 52, 75  
    security code 46  
    time, setting 51  
    turning on/off 18  
    unlock code 46  
    unlocking 18, 47  
phone number  
    active line indicator 30  
    active line, changing 57  
    attaching 2 numbers 63  
    international access code 60  
    redialling 57  
    storing in phonebook 73  
    storing your number 51  
    viewing your number 20  
phone theme 83  
phonebook  
    attaching 2 numbers 63



category for entry 74  
category view 74  
dialling a number 73  
group mailing list 73  
1-touch dial 63  
picture ID 22, 49, 58, 74  
primary number, setting 74  
ringer ID 73, 75  
sorting entries 50, 74  
speed dial number 63  
storing an entry 73  
voice dialling 73  
photo  
  downloading 83  
  picture ID 22, 58  
  sending 21  
  taking 21  
picture  
  downloading 83  
  screen saver 54  
  viewing 83  
  wallpaper 53  
picture ID 22, 58  
  setting 49, 74  
PIN code  
  changing 46  
  entering 82  
PIN2 code, changing 46

 
 
 
power key 1  
predictive text entry 42  
primary text entry method 37

## Q

quick dial 77

## R

received calls list 60  
recent calls 60  
redial  
  automatic redial 58  
  busy number 57  
right soft key  
  functions 1, 28  
  personalising 76  
ring style indicators 31  
ring style, setting 18, 52, 75  
ring tone  
  creating 84  
  downloading 83  
  editing with MotoMixer 84  
  managing 84  
ringer ID  
  setting 73  
  turning on/off 75  
ringer volume, setting 18, 75  
roam indicator 29



## S

- screen saver 54
- secondary text entry method 37
- security code
  - changing 46
  - default 46
- send key 1
- service dial 77
- shortcuts 76
- signal strength indicator 28
- silent alert, setting 18, 52, 75
- SIM Blocked message 18, 82
- SIM card
  - defined 13
  - installing 13
  - locking 82
  - PIN code entry 18
  - PIN code, changing 46
  - PIN2 code, changing 46
  - precautions 13
  - SIM Blocked message 18, 82
- SIM PIN code
  - changing 46
  - entering 82
- SIM PIN2 code, changing 46
- smart key 45
- soft keys
  - functions 28

- illustration 1
- personalising 76
- sound
  - creating 84
  - downloading 83
  - managing 84
- Speaker On message 46
- speakerphone
  - activating 79
  - automatic answer 79
- speed dial 63
- standby time, increasing 55
- symbol chart 44
- symbols, entering 44

## T

- tap method text entry 39
- telephone number
  - storing your number 51
  - viewing your number 20
- text
  - capitalisation, changing 38
  - character chart 41
  - entering 36
  - entry method, selecting 37
  - entry method, setup 38
  - iTAP software predictive text entry 42
  - numeric method 43
  - symbol chart 44



symbol method 44  
tap method 39  
text case indicator 39  
text entry method  
  selecting 37  
  setup 38  
text entry method indicator 30,  
  39  
theme 83  
time, setting 51  
timers 78  
transfer a call 66  
transmission indicator 29  
travel charger 17

## U

unlock  
  application 82  
  phone 47  
unlock code  
  bypassing 48  
  changing 46  
  default 46, 48  
  entering 18

## V

vibrate alert  
  setting 18, 52, 75  
  turning off 19, 59

video clip  
  downloading 71  
  managing 84  
  playing 26  
voice dial 73, 79  
voice key  
  dialling a number 73  
  illustration 1  
voicemail 64  
voicemail message indicator  
  30, 64  
volume  
  earpiece 18  
  keypad 75  
  ringer 18, 75  
volume keys 1, 18

## W

wallpaper 53  
Web pages 82  
Web sessions 83  
Welcome 1

