

Panasonic

Operating Instructions Part 1
Digital Cellular Phone

A 100
A 101



EB - A 100
EB - A 101
Mobile Phone



*Before operating this equipment please read these instructions
(parts 1 and 2) completely.*

Contents


Getting Started	1	Calendar	41
Fitting and removing the battery	1	New event	41
Fitting and removing the SIM	3	View event.....	42
Charging the battery	3	Key Guard	43
Battery level indicator	4	Messages Menu	44
Low battery power warning	4	Create	45
Your phone — A100	5	Inbox	48
Your phone — A101	6	Outbox.....	49
Key functions	7	Archive	50
Displays	9	User Messages	51
Basic Operations	12	Memory status.....	51
Switching the phone on/off	12	Settings	51
Making a call	12	Cell Broadcast.....	53
Ending a call.....	13	Phone Menu	55
Answering a call	14	Call Service.....	56
In-call operations	15	Call Diverts.....	59
Incoming call while on a call	17	Security	60
DTMF	18	Network.....	63
Text entry	19	Application Menu	64
Menu Display.....	22	Clock	65
Menu Structure	23	Calculator	67
My Phone Menu	24	Currency.....	67
Sounds	25	Melody composer.....	68
Display.....	26	Phone menu.....	69
Language	27	Records Menu	70
Alerts	28	Last dialled/Answered/ Unanswered number.....	70
Profiles	28	Delete all	70
Auto answer	30	Accessories	71
Any key answer	30	How to Identify a Genuine Panasonic Accessory.....	71
Defaults	30	Troubleshooting	72
Games Menu	31	Important Error Messages .	74
Selecting games	31	Glossary of Terms	75
Contacts Menu	34	Index	76
Browse	35		
Create.....	35		
Groups.....	38		
Memory status	39		
My Numbers	39		
Hotkey dial.....	40		
My Contacts	40		

Getting Started

Fitting and removing the battery


Before removing the battery, ensure that the phone is switched off and the charger is disconnected from the phone.

Fitting the battery — A100

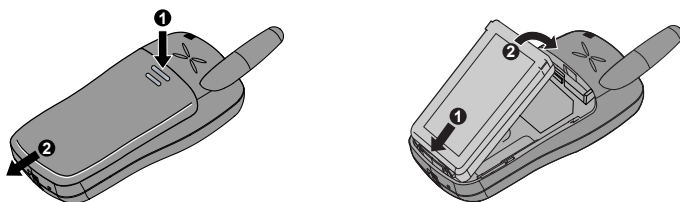


Remove the battery compartment cover. Insert the battery ensuring the 3 gold contacts align with the 3 gold pins in the phone. When replacing the cover, ensure to slide upward to the top of the phone.

Removing the battery — A100

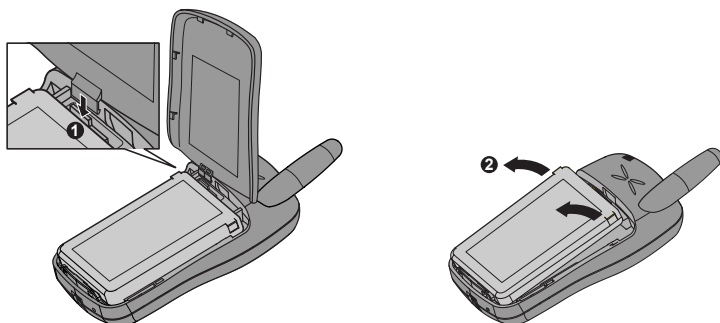


Push and hold the release latch **1** towards the top of the phone using the cover clip, then lift the battery out **2**.

Fitting the battery — A101

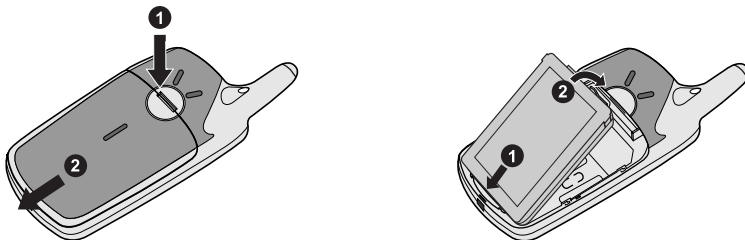

Remove the battery compartment cover. Insert the battery ensuring the 3 gold contacts align with the 3 gold pins in the phone. When replacing the cover, ensure to slide upward to the top of the phone.

Removing the battery — A101

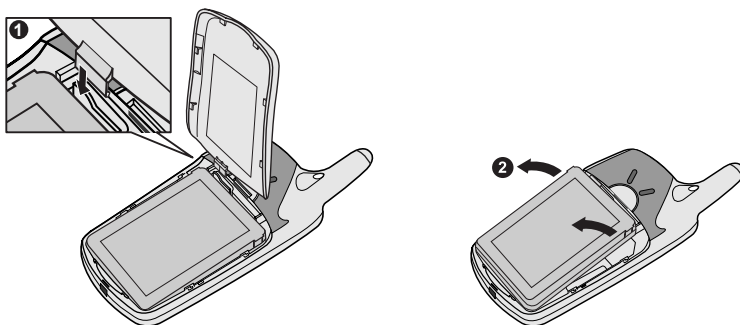


Push and hold the release latch **1** towards the top of the phone using the cover clip, then lift the battery out **2**.

Fitting and removing the SIM


The SIM is located under the battery.

Fitting the SIM — A100

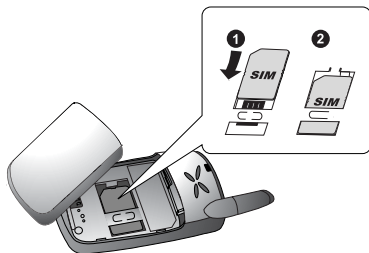


Ensure the gold contacts are facing downwards before sliding the SIM into the SIM holder.

Removing the SIM — A100

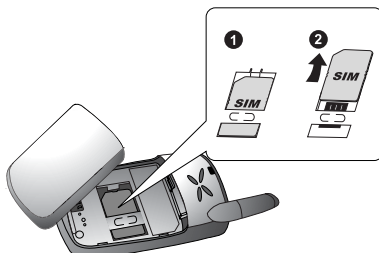


While holding the tab down, slide the SIM out.

Fitting the SIM — A101

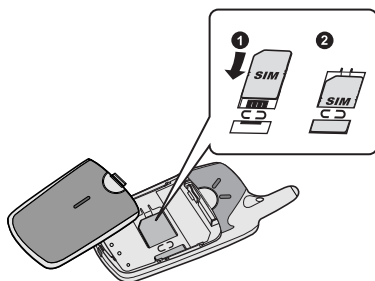

Ensure the gold contacts are facing downwards before sliding the SIM into the SIM holder.

Removing the SIM — A101

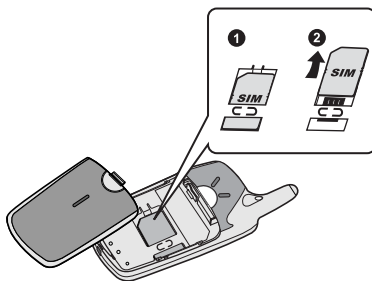

While holding the tab down, slide the SIM out.


Charging the battery

Connecting and disconnecting the Travel Charger

The battery must be fitted in the phone before the charger is connected. Insert the Charging Connector into the socket at the base of the phone before connecting the

charger to the mains outlet. Once connected, the Battery level indicator will start scrolling (see “Battery level indicator” on page 4). It is recommended to charge the battery for a minimum of 4 hours before first use.

NOTE: DO NOT force the connector as this may damage the phone and/or the charger. If the battery has been deeply discharged, it may take several minutes before the Battery level indicator is displayed.

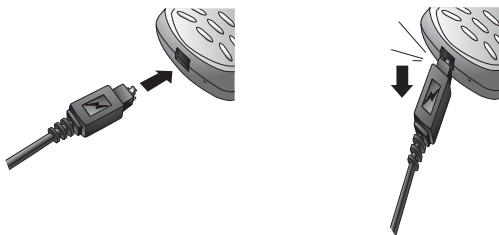

When charging is complete, disconnect the charger from the outlet before removing the plug from the phone.


Battery level indicator

	While charging	Charging complete
Phone on		
Phone off		


Low battery power warning

When the battery power is low, a “Battery is Low” message will be displayed. If this occurs during conversation, finish your call immediately. The power will automatically switch off after the warning tone. Fully recharge the battery. See “Charging the battery” on page 3. (Calls can be made and received while the phone is charging.)



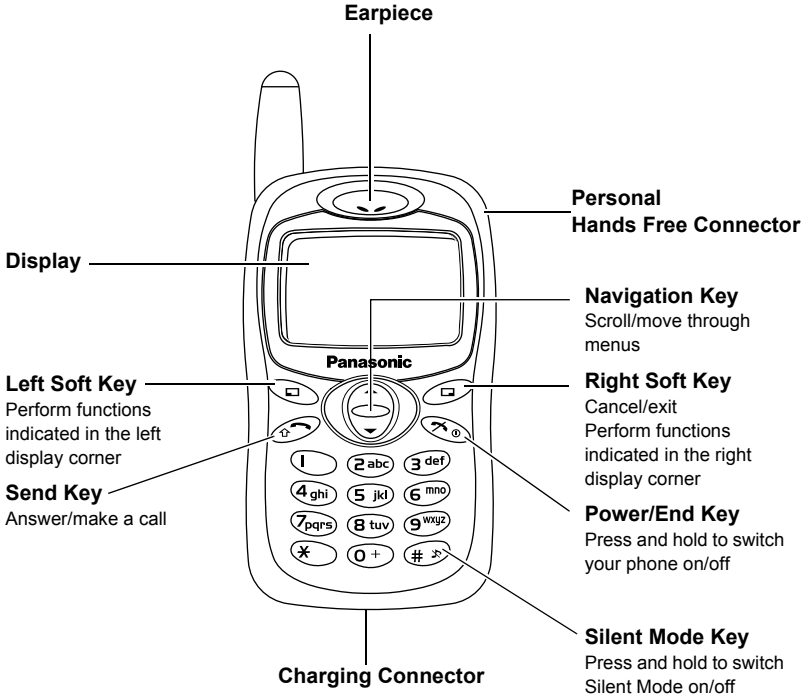



 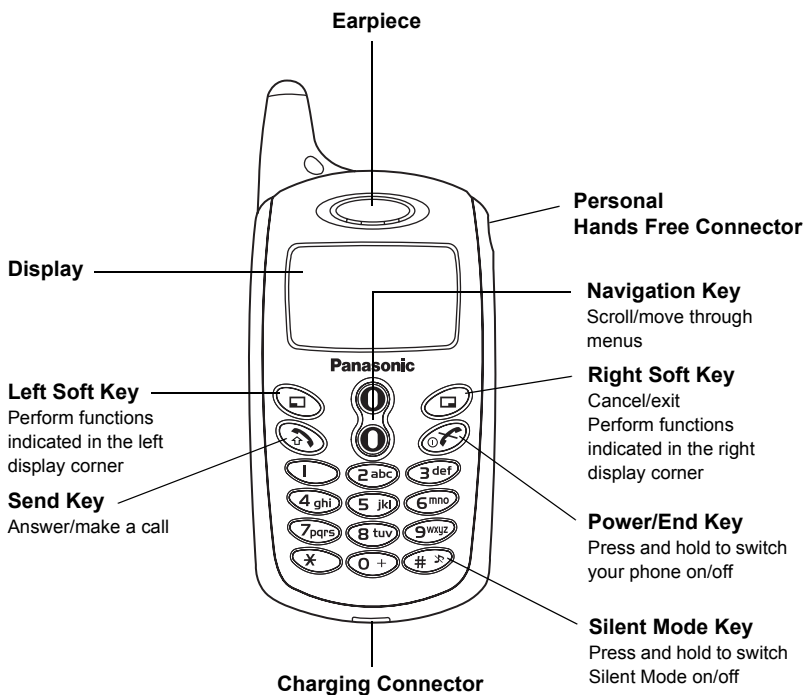









 
 
Your phone — A100



Your phone — A101
















Key functions

A100 Key	A101 Key	Function
		Navigation Key: Scroll or move through menus, text and phone numbers. In idle mode, press to display the “Contacts” menu.
		Left Soft Key: Perform the functions displayed in the lower left corner. In idle mode, press to activate the “Menu” display, or press and hold to activate the “Profiles” menu.
		Right Soft Key/Cancel or Exit Key: Perform the functions displayed in the lower right corner. Mainly used to cancel and return to the previous menu level. In text entry mode, press to delete text. In idle mode, press and hold to activate the “Messages” menu. When receiving a call, press to mute the ringtone.
		Numeric Keys: Enter numbers. Press and hold one of the keys from  to  for Hotkey dialing. Press and hold  to enter a “+” (international access code) or “P” (extension number code). To dial an extension number, dial the phone number first, press and hold  to add a “P”, then enter the extension number. In text entry mode, enter text, numbers and characters.
		Send Key: Make a call or answer a call. In idle mode, press to check the last dialled list. In text entry mode, press to switch between input methods.
		Power/End Key: End/reject a call. During key operation, press to return to the previous display. Press and hold to return to idle mode. In idle mode, press and hold to switch phone on/off.
		Silent Mode Key: In idle mode, press and hold to switch the Silent Mode (Vibrator on/Ring off) on and off. In text entry mode, press to switch T9 smart English input mode on/off, or press and hold to enter symbols.

During a call

Minimal menu options are available during a call by pressing the following key options.

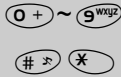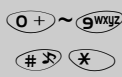A100 Key	A101 Key	Function
		Activate Hands free, Conference call, Call transfer, Contacts list, Messages menu, Call status.
		Swap between two calls. Put the call on hold.
		Increase the volume while on a call.
		Decrease the volume while on a call.
		Display the last dialed records list. Answer another call. If a phone number is entered, hold the active call and call the number.
		Send DTMF. Press and hold  to switch the Hands free speaker on/off

Displays

Idle display



The clock appears on the display one minute after you press the last key.

The clock position changes every minute.




 








NOTE: All screen images in this manual are simulated.

  NOTE: Some services described in this manual are network dependent or may only be available on a subscription basis. Some functions are SIM dependent.














 
 
 
For more information, contact your service provider.

Status icons

The status icons are displayed or animated according to the currently activated functions. The Antenna, Signal and Battery icons are displayed when the handset is switched on and connected to a network. If there is no connection with the network, the Signal icon will not be displayed.

Icon	Meaning
	Antenna and signal strength
	Registered to a non-home network – roaming
	Call Diverts is on
	Key Guard is enabled
	Message area is full
 (Flashing)	Unread message is stored
	Voice mail indicator (voice mail has been received)
	Alarm is set
	All tones or ring volume is off
	Vibrator is on
	Battery charge level
	Low battery



Symbols in the Manual


A100 Symbols	A101 Symbols	Meaning
		Press the Navigation Key in the direction indicated by the arrow
		Press Left Soft Key
		Press Right Soft Key
		Press numeric Keys
		Press Send Key
		Press Power/End Key
		Press Asterisk Key
		Press Silent Mode Key

Symbols used throughout the manual are based on the A100.

Basic Operations

Switching the phone on/off

1. Press and hold  for 2 to 3 seconds
2. The phone starts in idle mode
3. Press and hold  again to switch the power off

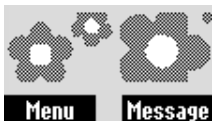


Making a call


Ensure that the signal strength meter shows network coverage is available in the current area.

➤ To make a call, start in idle mode.




Standard dialling

1. Enter the area code and phone number 
➤ The dialled number is displayed
2. When the other party answers, talk into the Microphone




Earpiece Volume:

During a call,  to adjust the earpiece volume

Using the contacts list

 

1.  to enter **Contacts**
2.  required name or phone number 

Last number dialling

1. 
2.  required name or phone number 


International dialling

The international access code (+) and the destination country/region code should be entered, followed by the area code and phone number.

1. Press and hold  until “+” is displayed, then enter the country / region code
2. Enter the area code and phone number 

NOTE: Many countries/regions include an initial “0” in the area code. This should, in most cases, be omitted when dialling international numbers. If you have difficulties making international calls, contact your service provider.

Emergency call

To make an emergency call, the antenna () must be present

When SIM is inserted:

Enter the emergency number 112 

When SIM is not inserted:


Enter the emergency number 112 

OR

 (SOS) > **“Emergency call”**  (Yes)

NOTE: Most countries support the international emergency number 112. If you find the number does not work on your phone, please call your service provider. Emergency calls without a SIM is country or network operator dependent.

Ending a call

To hang up, 

- The duration of the call will be displayed.
- When the “Max cost” is on, the remaining units will be displayed.

For setting the “Max cost”, see “Maximum cost:” on page 58.

Answering a call



OR

If “Any key answer” is on,

From idle mode

press any key except .

(See “Any key answer” on page 30.)

Volume:

From **My Phone**

1. **Sounds >Volume** (Select)
2. Adjust the volume level (OK)

Quick touch silent mode:

To quickly set the ringtone off () and the vibrator on (), press and hold .

To resume, press and hold again.

One click mute on incoming call:

To set the ring tone off,



(Mute)

- If you want to reply to the call, (Reply)
- If you want to reject the call, (Reject).

Reject incoming call:



In-call operations

During a call, the following options are available by pressing  (Menu) or  (Hold)

Hands free/Hand held

You can switch the phone between hands free and hand held.

During a call:







1.  (Menu)
2.  **Hands free / Hand held**  (Select)

Contacts

You can access your Contacts list that is stored in SIM in your phone.

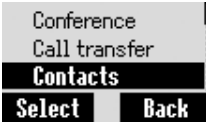During a call:






1.  (Menu)
2.  **Contacts**  (Select)

Messages

You can create, check, or send a message while on a call. See “Messages Menu” on page 44.

During a call:




1.  (Menu)
2.  **Messages**  (Select)


Hold

You can put a call on hold.

During a call:

 (Hold)

To resume:


 (Back)



NOTE: This function is network dependent.

Making a second call

During a call:





1. Enter the second phone number or select a phone number from the Contacts list (see “Contacts” on page 15).
2.  The first call is put on hold

NOTE: This function is network dependent.

Incoming call while on a call

NOTE: Call waiting must be on – see “Call waiting” on page 56
This function is network dependent.




During a call, you may receive another call.

1. To answer another call,  (First call is placed on hold.)
To disconnect another call,  (Reject)
2. During a conversation with a second caller,  (Swap) or  (Menu) and select one of the following options:

Conference

You can make a conference call with up to 5 parties

During a call:




1.  (Menu)
2.  **Conference**  (Select)

NOTE: This function is network dependent.

Call transfer

Call transfer connects the active calling party to the other party on hold, then disconnects your line, leaving the two callers in the conversation.

During a call:

1.  (Menu)
2.  **Call transfer**  (Select)

NOTE: This function is network dependent.

Call status

Call status allows you to disconnect the line or put a call on hold with the active party.

During a call:


1.  (Menu)
2.  **Call status**  (Select)



Swap

When you are connected to two calls, you can switch to the other calls.

During a call:

 (Swap) to change to the other call.

Call held
7036626262

 



Menu

Swap

DTMF



DTMF can be sent during a conversation. These are often used to access voice mail, paging and computerised home banking. For example, you may need to enter a number to remotely access voice mail messages. A phone number may be stored in the Contacts together with a DTMF sequence, allowing the number to be dialled upon recall and the DTMF number to be sent automatically.

Send DTMF during a call:

Enter digits ( ~ ,  or ).

Pause dial

Using pauses allows you to send DTMF automatically.

1. Enter the phone number
2. Press and hold  until a "P" is displayed at the end of the phone number entered
3. Enter DTMF digits after the pause, e.g. enter the number to access voice mail messages
4. 
➤ When the call is connected the DTMF sequence will be sent after 3 seconds.


Text entry

You can use alphanumeric characters to enter details into the Contacts list, to create text, etc.

Key	Text mode		Numeric (0 ~ 9)	
	T9®(T9Abc, T9abc, T9ABC) (Input language: English)	Multi tap (Input mode indicator: Abc, abc or ABC)		
	Space 0. , ? ! + - = : ; ' " ' ; _		0	
	1 / () < > [] { } % ~ € & (1 / () < > [] { } % ~ € &)		1	
	A B C 2 –	(a b c 2 –)	A B C 2 Ä (a b c 2 ä à ç)	2
	D E F 3 –	(d e f 3 –)	D E F 3 É (d e f 3 é è)	3
	G H I 4 –	(g h i 4 –)	G H I 4 (g h i 4 i)	4
	J K L 5 –	(j k l 5 –)	J K L 5 (j k l 5)	5
	M N O 6 –	(m n o 6 –)	M N O 6 Ö Ñ (m n o 6 ö ñ ò)	6
	P Q R S 7 –	(p q r s 7 –)	P Q R S 7 (p q r s 7 ß)	7
	T U V 8 –	(t u v 8 –)	T U V 8 Ü (t u v 8 ü ù)	8
	W X Y Z 9 –	(w x y z 9 –)	W X Y Z 9 Æ Ø Å (w x y z 9 æ ø å)	9
	Shift mode			
	* Γ Δ Θ Λ Ξ Π Σ Φ Ψ Ω		*	
	(Hold) Space # £ \$ ¥ ¢ @ \ \$ ^ _ ↓		#	
	Delete text / (Hold) Delete all characters			


NOTE: Displayed characters in the T9® mode vary depending on the selected input language. Use to toggle T9® On/Off. If the combination of letters typed has produced a word which is not the one you require, press repeatedly until the correct word is displayed. Then continue to the next word. When “–” is reached, press to spell the word you require.

Shift mode change

In text entry mode, you can change mode by pressing and holding .

Multi tap	Tegic
Abc -> abc -> ABC -> 123	T9Abc -> T9abc -> T9ABC -> 123

 Text Input mode change

In text entry mode, to switch T9[®] mode On/Off, press .

Auto capital change


Auto capital affects Abc and T9Abc.

When Input mode is changed to Abc or T9Abc, the first character is input as upper case and subsequent letters as lower case.

When one of the following characters [. (Period) or ! or ?] is input before a space, the next character is input as upper case.







T9[®] Text Input

Using this mode of text input dramatically reduces the required number of key presses.

Press a key once for any letter you require on that key. The desired letter may not be displayed. Continue pressing other keys until the end of a word is reached, then check that the word has been typed correctly before continuing on to the next word. If the combination of letters typed has produced a word which is not the one you require, press  repeatedly until the correct word is displayed. Then continue to the next word.

Example of Text Input in T9® Mode

To type a new message, follow these steps:

1. At the beginning of a new message press and hold  (Clear) to delete previous text, if necessary
2. Press  to change letter case, if necessary
3. Press     “Call” is displayed

Note that the displayed words change as you type. Always type to the end of the word before editing.

T9® Languages can be selected from T9 Input – see “T9 Input” on page 27.

If the word you require is not in the internal dictionary, then it should be entered using the Multi tap (ABC) mode.

Other text modes

Multi tap mode (Abc, abc or ABC):

Each time a key is pressed in quick succession, the next character available on that key is displayed. Releasing the key or pressing another key enters the character displayed. The cursor moves to the next position.

In T9 (Abc) or Multi tap (Abc) mode, the first entered letter in a sentence is in upper case.

Menu Display




NOTE: Menu display contents are dependent on your SIM.

The menu system provides the means for accessing the functions which do not have their own dedicated buttons on the keypad.

From idle mode

1.  (Menu)



The main menu display has 9 menu options
(See “Menu Structure” on page 23.)

2.  required menu  (Select)

OR

press a number next to a menu icon to access a menu option directly.

To go back to the Menu display,

 or  repeatedly until the Menu display returns.

Menu Structure

The 9 main menus are as follows:



My Phone

- Sounds
- Display
- Language
- Alerts
- Profiles
- Auto answer
- Any key answer
- Defaults



Games

- Hit Mouse
- Memory



Contacts

- Browse
- Create
- Groups
- Memory status
- My Numbers
- Hotkey dial
- My Contacts



Calendar



Key Guard



Messages

- Create
- Inbox
- Outbox
- Archive
- User Messages
- Memory status
- Settings
- Cell Broadcast



Phone Menu (or STK)*

- Call Service
- Call Diverts
- Security
- Network



Application

- Clock
- Calculator
- Currency
- Melody composer
(Phone Menu)*



Records

- Last dialled
- Answered
- Unanswered
- Delete all

*STK(SIM Tool Kit) is SIM dependent.

My Phone Menu

My Phone




Sounds	Ringtones 25
	Volume 25
	Key tone 25
	Warning tone 25
Display	Wallpaper 26
	Greeting 26
	Animation 26
	Contrast 27
	Backlight 27
Language	T9 Input 27
	Display Languages 27
Alerts	Ring only 28
	None 28
	Ring & Vibrate 28
	Vibrate only 28
	Ring once 28
Profiles	Normal 28
	Quiet 28
	Outdoor 28
	Headset 28
Auto answer 30
Any key answer 30
Defaults 30

Sounds

Ringtones

You can change the ringtones for specific events such as incoming calls, messages, or alarms. To customise the ringtone, select the event first, then modify the ringtone.

From **My Phone**

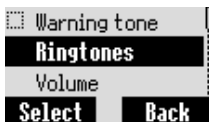

1. **Sounds** (Select)
2. **Ringtones** (Select)
3. **Any call, Group calls, Alarm or Messages** (Select)
4. required ringtone (OK)

Volume

From **My Phone**



1. **Sounds** (Select)
2. **Volume** (Select)
3. Adjust the volume level (OK)

Key tone


From **My Phone**

1. **Sounds** (Select)
2. **Key tone** (On/Off)

Warning tone

The warning tone informs you of low battery.

From **My Phone**

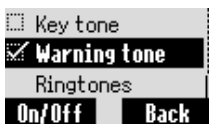

1. **Sounds** (Select)
2. **Warning tone** (On/Off)

Display

Wallpaper

You can change the wallpaper on the idle display. Idle mode can also change to the clock.

From **My Phone**



1. **Display** (Select)
2. **Wallpaper** (Select)
3. required wallpaper (Select)

Greeting

You can create a greeting message that is displayed each time the phone is switched on.

From **My Phone**



1. **Display** (Select)
2. **Greeting** (Edit)
3. Enter the greeting (OK)
4. (On/Off)

Animation

You can change the animation on the display when the phone is powered up.







From **My Phone**

1. **Display** (Select)
2. **Animation** (Select)
3. required animation (Select)

Contrast

You can adjust the contrast of the display.

From **My Phone**

1.  **Display**  (Select)
2.  **Contrast**  (Select)
3.  Adjust the contrast  (OK)



Backlight

You can select the backlight On/Off.

From **My Phone**







1.  **Display**  (Select)
2.  **Backlight**  (On/Off)


Language

T9 Input

When you create a text this function helps to dramatically reduce the number of key presses.

From **My Phone**



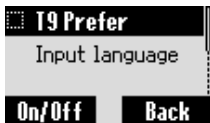



1.  **Language**  (Select)
2.  **T9 Input**  (Select)
3.  required input type  (On/Off)



Display languages

It is possible to change the display language on your phone.


From **My Phone**

1.  **Language**  (Select)
2.  **Display languages**  (Select)
3.  required language  (Select)

Alerts

You can set your phone to ring and/or vibrate when you receive a call or messages.

From **My Phone**

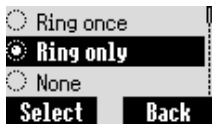

1. ☰ **Alerts** (Select)
2. ☰ required alert (Select)

The following options are available when a call is received:


- **Ring only**
- **None**
- **Ring & Vibrate**
- **Vibrate only**
- **Ring once**

Profiles

Activating a profile

You can switch between four profiles in your phone, each with a distinct combination of alert method, ringtone, etc. Profiles are set up for use in different environments.

From **My Phone**

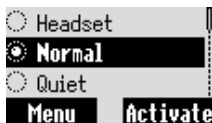

1. ☰ **Profiles** (Select)
2. ☰ required profile (Menu)
3. ☰ **Activate** (Select)

The following options are available:

Normal	Suitable for everyday settings
Quiet	With a ringtone, appropriate for formal occasions
Outdoor	Suitable when in noisy environments
Headset	Appropriate with vibrator when it is difficult to hear the ringtone



Setting a profile

You can customise a profile by changing the ring volume, key tone, warning tone, vibrator, and/or backlight.

Ring volume:


From **My Phone**



1. **Profiles** (Select)
2. required profile (Menu)
3. **Change settings** (Select)
4. **Ring volume** (Select)
5. Adjust the volume level (OK)

Key tone:


From **My Phone**

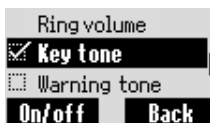

1. **Profiles** (Select)
2. required profile (Menu)
3. **Change settings** (Select)
4. **Key tone** (On/Off)

Warning tone:


From **My Phone**

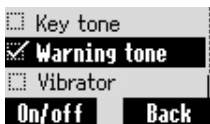

1. **Profiles** (Select)
2. required profile (Menu)
3. **Change settings** (Select)
4. **Warning tone** (On/Off)

Vibrator:

From **My Phone**

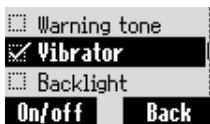

1. **Profiles** (Select)
2. required profile (Menu)
3. **Change settings** (Select)
4. **Vibrator** (On/Off)

Backlight:


From **My Phone**



1. **Profiles** (Select)
2. required profile (Menu)
3. **Change settings** (Select)
4. **Backlight** (On/Off)

Auto answer

Auto answer can be set. To use this function, the personal hands free earpiece needs to be connected to the phone.

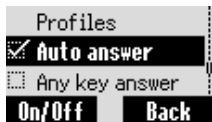


From **My Phone**

Auto answer (On/Off)

Any key answer

Calls can be answered by pressing any key (except).

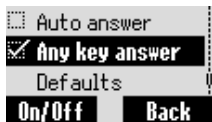

From **My Phone**

Any key answer (On/Off)

Defaults

All personal settings are returned to their factory default settings.

From **My Phone**

1. **Defaults** (Select)
2. **"Restore factory settings?"** (Yes) or (No)

Games Menu

Games



Hit Mouse 31

Memory 33

Selecting games

From **Games** menu

 **Hit Mouse** or **Memory**  (Select).

NOTE: Once the power is switched off, High scores or Best scores may be lost.

Hit Mouse



When you see the mouse, press any button from 1 to 9 as quickly as possible to hit it. Keep in mind that the cat is not your target.

Example: If you press 5, you will hit the object hidden in the 5th hole. This game will end automatically and you will be given a score. This score might be the highest one! Good luck!






Key operation:

Press  ~ .






Starting games:

Select New by pressing  (New).




To change settings:

1.  (Menu)
2.  **Change settings**  (Select)
3.  required setting  (On/Off)




To start the game on a level of your choice:

1.  (Menu)
2.  **Level**  (Select)
3.  required level  (Select)

To see the top score:

1.  (Menu)
2.  **Top score**  (Select)

To see the instructions:

1.  (Menu)
2.  **Instructions**  (Select)



Memory

Match cards to find pairs with as few tries as you can, and make all cards visible. You can press keys 2, 4, 6, and 8 to move the cursor as you wish, and key 5 to select cards. When all cards are visible, you can get a score or maybe top score. Good luck!






Key operation:

Press **2** abc, **4** ghi, **5** jkl, **6** mno, **8** tuv.






Starting Games:

Select New by pressing  (New).




To change settings:

1.  (Menu)
2.  **Change settings**  (Select)
3.  required setting  (On/Off)




To start the game on a level of your choice:

1.  (Menu)
2.  **Level**  (Select)
3.  required level  (Select)

To see the top score:

1.  (Menu)
2.  **Top score**  (Select)

To see the instructions:

1.  (Menu)
2.  **Instructions**  (Select)

Contacts Menu

Contacts



Browse	SIM35 Phone35
Create	SIM 35 Phone 36
Groups	Friends38 Colleagues38 Family38 Others38 VIP38
Memory status39
My Numbers39
Hotkey dial40
My Contacts	SIM40 Phone40

Browse

Viewing the Contacts list in your SIM/Phone

You can search a number in the Contacts list.

From **Contacts**

1. **Browse** > **SIM** or **Phone** (Select)
 2. required contact entry (Menu)
 3. **View** (Select)
- If you press a letter key in step 2, you can jump to the first entry starting with the letter.

Create


Creating a Contacts list in SIM

Phone numbers can be stored in your SIM.

You can store names, phone numbers, location and record numbers in the SIM.

From **Contacts**

1. **Create** (Select)
2. **SIM** (Select)
3. Enter the name
4. Enter the phone number
5. (Save)
6. **“Saved in SIM”** is displayed

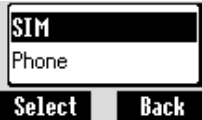

NOTE: The length and amount of data are SIM dependent.

Creating a Contacts list in Phone

You can store name, phone numbers, groups and melodies in your phone.

From **Contacts**

1. **Create** (Select)
 2. **Phone** (Select)
 3. Enter the name > Phone
 4. Enter the phone number > Groups
 5. (Set) required group (Select)
 6. (Set) required melody (Select)
 7. When entries are completed, (Save)
 8. **"Saved in Phone"** is displayed.
- The entries are grouped together and are retained even if you damage your SIM.

Storing a fixed dial number in FDN

The Fixed dial feature allows you to limit your outgoing calls to a certain set of numbers saved in FDN, which is located in your SIM. When this function is on, only the Fixed dial numbers can be dialed, and any attempt to call any other numbers will fail.

To activate this function, you need to set Fixed Dial on. See page 62.

From **Contacts**

1. **Create** (Select)
 2. **SIM** (Select)
 3. Enter the name
 4. Enter the phone number
 5. (Set) **FDN** (Select)
 6. (Save)
 7. Enter PIN2 code > (OK)
 8. **"Saved in SIM"** is displayed.
- To store a Fixed dial number, you need to enter your PIN2 code.










Options

Edit:

You can edit the selected Contacts entry.

From **Contacts**











1.  **Browse > SIM or Phone**  (Select)
2.  required phone number or name  (Menu)
3.  **Edit**  (Select)
4.  (Save)

Delete:

You can delete the selected Contacts entry.

From **Contacts**












1.  **Browse > SIM or Phone**  (Select)
2.  required phone number or name  (Menu)
3.  **Delete**  (Select)
4. **"Delete this contact entry ?"**  (Yes) or  (No)

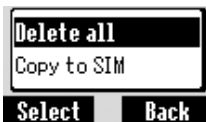Delete all:

You can delete all the Contacts entries.

 From **Contacts**










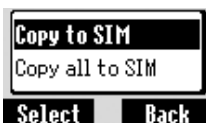

1.  **Browse > SIM or Phone**  (Select)
2.  required phone number or name  (Menu)
3.  **Delete all**  (Select)
4. **"Delete all entries ?"**  (Yes) or  (No)

Copy to Phone/SIM:

You can copy the selected Contacts entry to the phone or your SIM.

From **Contacts**



1.  **Browse > SIM or Phone**  (Select)
2.  required phone number or name  (Menu)
3.  **Copy to Phone/SIM**  (Select)
4. **"Copy entry to Phone/SIM ?"**  (Yes) or  (No)

Copy all to Phone/SIM:

You can copy all the Contacts entries to the phone or SIM.
From **Contacts**



1. ⌂ **Browse > SIM or Phone** (Select)
2. ⌂ required phone number or name (Menu)
3. ⌂ **Copy all to Phone/SIM** (Select)
4. “Copy all entries to Phone/SIM ?” (Yes) or (No)

Search:


You can search for a name in the Contacts list.
From **Contacts**

1. ⌂ **Browse > SIM or Phone** (Select)
2. (Menu)
3. ⌂ **Search** (Select)
4. Enter the first letter of the required name (Select)

Groups

You can categorise the items stored in your phone into 5 groups: Friends, Colleagues, Family, Others and VIP. You can select a particular ringtone for each group to identify the incoming call.

From **Contacts**

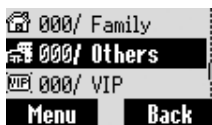


1. ⌂ **Groups** (Select)
2. ⌂ required Group (Menu)

The following options are available :


View	View the Contacts entries in the selected group
Set ringtone	Set the required ringtone
Remove entries	Delete all the Contacts entries in the selected group

If there is no entry stored in the selected group, “**List empty**” is displayed.

The following options are available by pressing  (Menu) after you select an entry from the selected group:

View	View the selected Contacts entry
Edit	Edit the selected Contacts entry
Delete	Delete the selected Contacts entry
Search	Search for a desired item in the selected group by entering the name.

Memory status

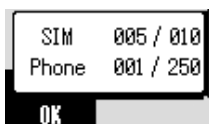

Memory status shows how many locations are available in the Contacts list.

Maximum memory capacity:

- Phone 250 locations
- SIM (SIM dependent)

From **Contacts**









 **Memory status**  (Select)


My Numbers

My Numbers is a handy phonebook where names and phone numbers can be stored and viewed.

From **Contacts**



1.  **My Numbers**  (Select)
2.  required entry  (Menu)
3.  **Edit**  (Select)
4. Enter your phone number 
5. Enter your name  (Save)

The following options are available by pressing  (Menu) when you select the required entry:

View	View the selected My Numbers entry
Edit	Edit the selected My Numbers entry
Delete	Delete the selected My Numbers entry

Hotkey dial

Setting Hotkey dial



You can quickly dial phone numbers stored at locations 001 - 009 in the Contacts list.

From **Contacts**

☰ **Hotkey dial** ☑ (On/Off)

NOTE: This function is SIM dependent.

Making a call by using Hotkey dial

From idle mode

1. Press and hold a numeric key ((1) ~ (9*))
2. Press ☎

My Contacts

You can select SIM or Phone so that the Contacts list directly accessed from idle mode is set to the SIM or Phone Contacts list.

From **Contacts**



1. ☰ **My Contacts** ☑ (Select)
2. ☰ **SIM or Phone** ☑ (Select)

Calendar








 

 



New event

You can organise your Calendar to remind you of a personal event, such as a holiday period or birthday.

You need to set the clock, day and time before entering anything in the Calendar.



From **Calendar**

1.  to select Week or Month format
2. To select a day, press numeric keys 2, 8, 4 and 6 to move the cursor \uparrow , \downarrow , \leftarrow and \rightarrow respectively, to set the desired day.  (Agenda)
3. **<New entry>**  (Select)
4.  (Set) to select a type of event from **Memo** and **Meeting**  (Select)
5.  to enter Description
6.  to enter Start date
7.  to enter Start time
8.  to enter End date
9.  to enter End time  (Save).

Ensure that Calendar settings will not contravene any regulations by switching on automatically when in an aircraft, medical facility, etc. – (see “Operating Instructions Part 2”).

View event



From Calendar

1. to select Week or Month format
2. When Month format is selected:
 Select a day by using the numeric keys (, , 2, 4, 6 and 8) (Agenda)
 When Week format is selected:
 Schedule icon(s) will be shown corresponding to a period of time selected by pressing .
 (Period of time : 4=0:00-3:59, 8=4:00-7:59, 12=8:00-11:59, 16=12:00-15:59, 20=16:00-19:59, 24=20:00-23:59)
 Select a day by using the numeric keys (2,4,6 and 8) (Agenda)
3. required schedule (View)
4. To return to the previous display, (OK)
 To edit (Edit), edit the required information (Save).

<Example>

Agenda:2004/02/10 Start 0:00~End 3:00

Scheduled day

Scheduled time period

Scheduled icon

- 4** = 0:00~ 3:59
- 8** = 4:00~ 7:59
- 12** = 8:00~11:59
- 16** = 12:00~15:59
- 20** = 16:00~19:59
- 24** = 20:00~23:59

* Press to change the schedule icon into different periods of time.

Key Guard

Key Guard



The Key Guard function is used to prevent any keys from being accidentally pressed, e.g. when the phone is being carried.

From **Key Guard**

1. (Yes) or (No)

> When Key Guard is enabled,  appears on the display.

> Emergency calls are still possible.


> When a call is received, Key Guard will be disabled temporarily, and you can answer the call

Guard keypad

Yes

No

NOTE: When making emergency calls with the “Key Guard” enabled, there will be no visual indication that the number is being dialled.

When  appears on the display, (Free) > **“Press ok to free keypad”** (OK) .

Messages Menu

Messages



Create	45
Inbox	48
Outbox	49
Archive	Inbox 50 Outbox 50
User Messages	51
Memory status	51
Settings	Message centre 51 Protocol 52 Validity period 52 Delivery report 52
Cell Broadcast	Topic list 53 Read Messages 53 Languages 54 Auto display 54

Create

Message centre

It is possible to receive, display, edit and/or send text messages of up to 1520 characters in 10 messages (depending on the language), to the network that has a roaming agreement (depending on the recipient's phone options). Before sending a message, you need to enter the Message centre number into Settings.

From **Messages**



1. **Settings** > **Message centre** (Select)
2. Enter the message centre number in the international dial format (see “International dialling” on page 13) (OK)

NOTE: Your network operator may have pre-programmed this number. Do not change this number as it may cause the failure of SMS Messaging.

Creating a message

From Messages



1. **Create** (Select)
2. Create your text message – max. 1520 characters (see “Text entry” on page 19) (Menu)
3. **Send** (Select)
4. Enter the destination phone number (OK)
OR
Recall a number from **Contacts** (Names) >
(required name) (Select) > (OK)

When you create a text, these options are available by pressing (Menu):

Send	Send text as a Short Text message
Save	Save text in the Outbox in your SIM
Save and send	Save text in the Outbox in your SIM and send it
Picture & sound	Add a picture and/or sound to the text. See page 47.
User Messages	Use a short message stored in the phone For editing the User Message, see “User Messages” on page 51.

➤ You can change T9® mode On/Off pressing (#*).

EMS (Enhanced Message Service)

You can add a picture and sound to an SMS.

Picture:

From **Messages**



1. **Create** (Select)
2. Create your text message (Menu)
3. **Picture & sound** (Select)
4. required picture (Select)

Sound

From **Messages**



1. **Create** (Select)
2. Create your text message (Menu)
3. **Picture & sound** (Select)
4. (Sound)
5. required sound (Select)

Inbox


Viewing a received message

When a Short Text Message is received, the message indicator will flash on the display and a user preset audible alert will sound. If you are on a call you will be alerted by the vibrator.

✉ flashes when an unread message is received in the Inbox. When the Inbox is full, ✉ will remain until old messages are deleted.

From Messages

1. ☰ **Inbox** (Select)
2. ☰ required message (Menu)
3. ☰ **View** (Select)

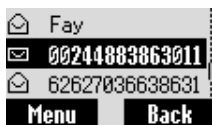

NOTE: If the message indicator is displayed constantly (does not flash), this means that the message area is full, and you need to delete old messages in order to receive new messages.

When reading messages, the following options are available by (Menu):

Delete	Delete a message
Reply	Create an SMS reply
Forward	Forward a message to another phone
Edit	Edit a message and save and/or send it to somebody else
Delete all	Delete all messages in Inbox
Extract Number	Extract numbers in messages and save in Contacts
Move to Archive	Move a message to Archive Inbox

Outbox

Viewing a sent message







A list of sent message is stored in your SIM. You can select a message from the list and view it.


From Messages

Jaques
2004.02.26 11:25
62627036638631

Menu

Back

1.  **Outbox**  (Select)
2.  required message  (Menu)
3.  **View**  (Select)

While you are reading a message, the following options are available by pressing  (Menu):

Delete	Delete a message
Edit	Edit a message and save and/or send it to somebody else
Send	Send an SMS message after entering a recipient number
Delete all	Delete all messages in Outbox
Extract Number	Extract numbers in messages and save in Contacts
Move to Archive	Move a message to Archive Outbox

Archive

Viewing a stored message

To view the list of messages which are stored in Archive.

- **Inbox:** When a message saved in the Inbox is moved into Archive, the message will be saved in the Archive Inbox.
- **Outbox:** When a message saved in the Outbox is moved into Archive, the message will be saved in the Archive Outbox.

From Messages



1. **Archive** (Select)
2. **Inbox** or **Outbox** (Select)
3. required message (Menu)
4. **View** (Select)

When reading a message, the following options are available by (Menu):








Send (Outbox)	Send a message to another phone
Edit	Edit a message and save and/or send it to somebody else
Delete	Delete a message
Forward (Inbox)	Forward a message to another phone
Delete all	Delete all messages in Archive Inbox/Outbox

User Messages

You can edit the preset User Messages, then save them for later use

From **Messages**



1.  **User Messages**  (Select)
2.  required message  (Select)
3. Edit the message  (Menu)
4.  **Save and send** or **Save**  (Select)

NOTE: If the text is wider than the screen display, the text will scroll.

Memory status

Memory status shows how many locations are left to store messages in the Inbox.

From **Messages**



1.  **Memory status**  (Select)

The maximum memory capacity:

- **SIM (SIM dependent – max. 100 locations)**
- **Phone 50 locations**
- **Archive 50 locations**

Settings

Message centre

Before sending any messages, you need to enter your Message centre number. This number is provided by your service provider.

From **Messages**




1.  **Settings**  (Select)
2.  **Message centre**  (Select)
3. Enter your Message centre number

Protocol

The Message centre is able to convert your message to the format specified by the selected protocol.

From **Messages**

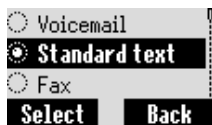


1. **Settings** (Select)
2. **Protocol** (Set)
3. Select required setting from **Standard text, Fax, X.400, Paging, E-mail, ERMES, or Voicemail** (Select)

Validity period

You can set the duration that your message is stored at the Message centre.

From **Messages**

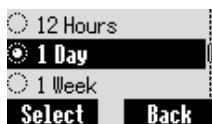

1. **Settings** (Select)
2. **Validity period** (Set)
3. Select required setting from **Maximum, 1 Hour, 12 Hours, 1 Day, or 1 Week** (Select)

Delivery report

You can request a delivery report regarding the status of a sent message.

From **Messages**



1. **Settings** (Select)
2. **Delivery report** (On/Off)

Cell Broadcast


Topic list

You can receive your favourite information regularly from your service provider.

You need to specify the “topic(s)” of information and the language in which you wish to receive this information.

To receive the broadcasts, “Cell Broadcast” must be on.

From **Messages**

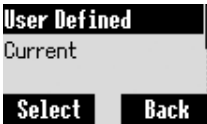

1. **Cell Broadcast > Topic list > Current** (Select)
2. required topic (Menu)
3. **Add or Delete** (Select)

User defined topic

From **Messages**



1. **Cell Broadcast > Topic list > User defined > <New entry>** (Select)
2. Enter msg ID (OK)
3. Enter the name (OK)
4. **Current** (Select)
5. **< Add topic >** (Select)
6. required Topic (Select)

Reading a message

From **Messages**



1. **Cell Broadcast** (Select)
2. **Read Messages** (Select)
3. (Next) to select the required topic

NOTE: This function will depend on your network service operator.

Language

You can set the language of the message you receive.

From **Messages**



1. **Cell Broadcast** (Select)
 2. **Display Languages** (Select)
 3. required language above which you wish to insert a new language
 4. **Insert** (Select)
 5. required language (Select)
- The added language is displayed above the language you selected in step 3.
 - If you wish to add a new language to the end of the list, select "Add to end" in step 4.
 - To resume a language, select "Delete" in step 4.

Auto display

In idle mode, the latest Info Message is displayed on your phone automatically.

From **Messages**



1. **Cell Broadcast** (Select)
2. **Auto display** (On/Off)

Phone Menu

Phone Menu (or STK)*



Call Service

Time/Charges	56
Call waiting	56
Withhold ID	56
Caller's ID	57
Charge settings	57

Call Diverts

All voice calls	59
Not reachable	59
No reply	59
Busy	59
Status check	59
Cancel all	59

Security

Call bar	60
Codes	61
Fixed dial	62
SIM lock	62

Network

Auto network	63
New network	63
Network list	63
Band	63



*STK (SIM Tool Kit) is SIM dependent.

NOTE: If SIM card provides SIM Tool Kit services (STK), this menu will become the STK Menu. You can still access Phone Menu from Application.

Call Service

Viewing time/charges

From **Phone Menu**

1. **Call Service** > **Time/Charges** (Select)
2. **Last call, All voice calls** or **Cost left** (Select)




Last call	Display the duration of last call
All voice calls	Display the total duration for all voice calls
Cost left	If Max cost is on, display the remaining units. For setting the Max cost, see page 58.

Call waiting

If Call waiting is switched on, a second call can be received. Turn this function on before making a multiparty (conference) call.

From **Phone Menu**

1. **Call Service** > **Call waiting** (Select)
2. **Set, Clear** or **Check status** (Select)

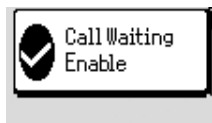


Withhold ID

Withhold ID allows you to prevent showing your name and/or number to the calling party.

From **Phone Menu**

1. **Call Service** (Select)
2. **Withhold ID** (Select)

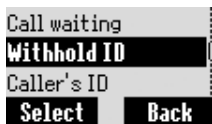


NOTE: When checking the status, the phone must be registered to a network.

Caller's ID

Caller's ID allows you to display the Caller's name and/or number on your display.

From **Phone Menu**

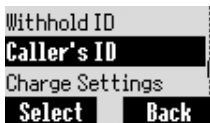

1.  **Call Service**  (Select)
2.  **Caller's ID**  (Select)

NOTE: When checking the status, the phone must be registered to a network.

Charge settings








NOTE: The duration of one unit may vary between peak and off-peak times. Call charges can be calculated accordingly. However, the actual tariffs charged by your service provider may not be reflected in the calculation.

Currency:

Firstly, Personal rate must be entered. This is the cost that the service provider charges for one unit of call time. See "Personal rate:" on page 58.

From **Phone Menu**




1.  **Call Service > Charge settings**  (Select)
2.  **Currency**  (Select)
 > Current setting is displayed
3.  (Set) > Enter PIN2 code  (OK)
4. Enter currency units (max. 3 characters)  (OK)

NOTE: This function is SIM dependent

Personal rate:

From **Phone Menu**

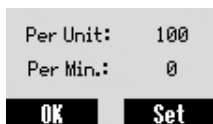

1. **Call Service** > **Charge settings** > **Personal rate**
 (Select)
2. (Set)
3. Enter PIN2 code (OK)
4. Enter your personal rate (OK)

NOTE: When you set the unit price, you are asked to enter your PIN2.

NOTE: This function is SIM dependent

Maximum cost:

You can set the maximum cost of calls allowed.

From **Phone Menu**



1. **Call Service** > **Charge settings** (Select)
2. **Max cost** (Set)
 > Current setting is displayed.
3. (Edit) > Enter PIN2 code (OK)
4. (Set) > **On** (Select)
5. Enter Credit limit > (OK)

NOTE: This function is SIM dependent

Auto display:


In idle mode, the cost of the latest Incoming call is displayed on your phone automatically.

From **Phone Menu**



1. **Call Service** > **Charge settings** (Select)
2. **Auto display** (On/Off)

Call Diverts

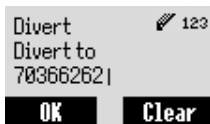

From Phone Menu

1. **Call Diverts** (Select)
2. Select the circumstances to initiate the divert (Select)
3. **Set, Clear, or Check status** (Select)
4. Enter the phone number to divert to
 - Enter the voice mail centre number if you wish incoming voice calls to be diverted to the voice mail centre.
 - When a divert situation is enabled, the divert icon () is displayed.
 - When updating or checking the status of Call Divert, the phone must be registered to a network. ()

All voice calls	Divert all incoming voice calls
Not reachable	When you are not in a coverage area, divert incoming voice calls
No reply	If you do not answer the phone, divert incoming voice calls
Busy	When a call is in progress, divert incoming voice calls
Status check	Check the current Call Diverts status
Cancel all	Cancel all Call Diverts settings


- Voice calls can be diverted to voicemail box or to a number that you specify.

Security

Call bar

Call barring restricts certain outgoing and/or incoming calls using a password supplied by your service provider. When updating/checking the status of Call bar, the phone must be registered to a network.

From **Phone Menu**

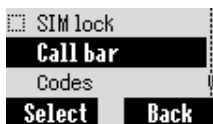

1. **Security > Call bar** (Select)
2. required setting from the table shown below
 (Set) or (Select)
3. required operation from **Set**, **Clear** or **Check status**
 (Select)
4. Enter required password (Select)

All outgoing	All outgoing calls are barred
Outgo int'l.	International outgoing calls are barred
Out. int'l. x home	International outgoing calls except to your home country are barred
All incoming	All incoming calls are barred
When roaming	All international incoming calls when roaming outside the home PLMN are barred
Status check	Call bar status is displayed
Cancel all	Cancel all Call bar settings
Password	Change Call bar password







Codes

Change phonecode:

The Phonecode is used for the SIM lock, which protects the phone from being used with a SIM other than yours.

From **Phone Menu**











1.  **Security > Codes**  (Select)
2.  **Change phonecode**  (Select)
3. Enter a new phonecode  (OK)
4. Enter the new phonecode to verify  (OK)

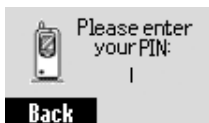PIN control:

The PIN protects your SIM against unauthorised use. If you enable the PIN, every time the phone is switched on you will be prompted to enter the PIN.


From **Phone Menu**







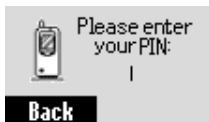


1.  **Security > Codes**  (Select)
2.  **PIN Control**
3. Enter PIN number  (OK)
4.  Set to either enable or disable the PIN  (Set).
5.  (OK)

Changing PIN/PIN2:

From **Phone Menu**




1.  **Security > Codes**  (Select)
2.  **Change PIN or Change PIN2**  (Select)
3. Enter the current code  (OK)
4. Enter the new code  (OK)
5. Enter the new code to verify  (OK)

NOTE: To enter the PUK code for your PIN, enter ****05#**. You will then be prompted to enter the PUK code. Follow the on-screen instructions. To enter the PUK2 code for PIN2, enter ****052#**. You will then be prompted to enter the PUK2 code. Follow the on-screen instructions. If the PUK/PUK2 code is entered incorrectly 10 times, the phone will cease to operate permanently. All information stored in the SIM will be lost and the SIM will need to be replaced. Contact the service provider for more details.

Fixed dial:

The Fixed dial feature allows you to limit your outgoing calls to a certain set of numbers saved in FDN, which is located in your SIM. When this function is on, only the Fixed dial numbers can be dialled, and any attempt to call any other number will fail.

From **Phone Menu**

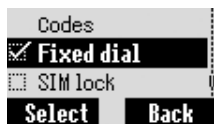

1. **Security** (Select)
2. **Fixed dial** (Select)
3. Enter PIN2 code (OK)
4. (Set)
5. (OK)

- When Fixed dial is on, any manually dialled phone numbers must be the same as the numbers in the Fixed Dial Store, otherwise the call cannot be made.
- A phone number may be stored, edited or deleted. You will be prompted for your PIN2 code.

SIM lock:

Once you enable the SIM lock, you will be prompted to enter your phonecode when you switch on the phone with a different SIM inserted.

From **Phone Menu**



1. **Security** (Select)
2. **SIM lock** (Select)
3. Enter phonecode (OK)
4. (Set) to set the SIM lock on/off
5. (OK)


NOTE: Your phonecode must be 4 to 8 digits. You are advised to write down your phonecode. If the phonecode is entered incorrectly 3 times, the phone will cease to operate permanently.

Network

Setting:

From **Phone Menu**

You can select a network that is available in your current location.

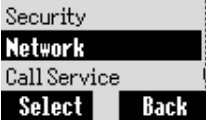

1. **Network** (Select)
2. Select one of the settings below (On/Off) or (Select)

Auto network	Set Auto network on or off.
New network	When Auto Network is on, search an available network automatically. When Auto network is off, you must select a network manually.
Network list	Create and edit a network list according to your preferences.
Band	Choose a network band: 900/1800, 900/1900, 900, 1800, 1900 MHz.

NOTE: This function is SIM dependent

Application Menu

Application



Clock	Settings	65
	Alarm	66
	Power off time	66
Calculator	67
Currency	67
Melody composer	68
(Phone Menu)*	69

Clock

Settings

Time zone:

From **Application**



1. **Clock > Settings > Time zone** (Select)
2. required region (Select)
3. **“Daylight saving?”** (Yes) or (No)
4. **“Set this zone to local”** (OK)
5. **“Success!”** (OK)

Time & date:

From **Application**



1. **Clock > Settings > Time & date** (Select)
2. (Set) to enter the date and the time (OK)

Date format:

You can select the desired display format for the time and date.


From **Application**



1. **Clock > Settings > Date format** (Set)
2. required format (Select)

Time format:

From **Application**

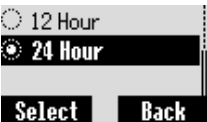

1. **Clock > Settings > Time format** (Set)
2. required format (Select)

Display time:

You can show the time and date on the display in idle mode.

From Application

1. **Clock > Settings** (Select)
2. **Display time** (On/Off)

Alarm:

From Application



1. **Clock > Alarm** (Set)
2. (Set) > Enter the time (24 hour clock) (OK)
3. **Repeat daily, Once or Disabled** (Select)
4. **“Alarm time has been updated!”** (OK)

➤ The alarm set indicator appears on the idle display.

➤ When the set time is reached, the alarm will sound.

If you are on a call, the phone will vibrate without sound.

To stop the alarm:

Press any key or (Off)

OR

(Pause) to pause the alarm and start again after 5 minutes

NOTE: Even if the phone is switched off, when the Alarm is set on, the phone will switch on automatically and start the alarm.

Power off time

The phone can be set to turn itself off automatically at a specified time using the Power off feature.

From Application




1. **Clock > Power off time** (Set)
2. Enter the time (24 hour clock) (OK)
3. **Repeat daily, Once or Disabled** (Select)
4. **“Power off time setting updated!”** (OK)

Calculator

You can use the 4 function calculator (addition, subtraction, multiplication and division) to make simple arithmetic calculations.

From **Application**

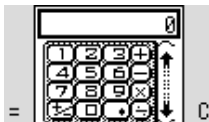

1. **Calculator** (Select)
2. Enter a number (max. 9 digits). It will be displayed on the upper right of the display. If a decimal point is required, press , when a minus sign is needed press .
3. to select the arithmetic operation
4. Enter a number (max. 9 digits). It will be displayed next to the operation symbol.
If is used to select another arithmetical operation to perform, an intermediate calculation will be performed and the result will be displayed.
5. (=) to calculate

Currency

Rate setting

The currency convertor enables you to convert from/to a home currency using a conversion rate that you enter. Before beginning conversions, choose a base currency and enter the conversion rate. The base currency rate is set to 1.

From **Application**



1. **Currency** (Select)
2. **Rate setting** (Select)
3. Enter the conversion rate next to the pencil icon (OK)
4. (Save)
 - > You can change the base currency by pressing .
 - > If a decimal point is required, press .

Rate computing

From **Application**



1. **Currency** (Select)
2. **Rate computing** (Select)
3. Enter the amount of your currency to convert into the other currency (Convert)
 - You can change the base currency by pressing \ominus .
 - If a decimal point is required, press $\# \cdot$

Melody composer

Composing a melody

From **Application**



1. **Melody composer** (Select)
2. required My Music (Select)
3. **Melody edit** (Select)
4. required track (Select)
5. Compose your melody - See the notes chart below
(Menu)
6. **Save** (Select)

Using the following table as a reference, enter notes (from the choice of low, middle and high), rests, and duration of each, to generate your composition. Main Track and Sub Tracks are played together when you play the composed music.

Key	1	2 abc	3 def	4 ghi	5 jkl	6 mno
Func	C	D	E	F	G	A
Key	7 pqrs	8 tuv	9 wxyz	0 +	*	# ·
Func	B	Rep.	Dotted note	Rest	Duration	Low, Low #, Middle, Middle #, High, High #

Play






To play the composed melody before saving:

 (Menu) >  **Play**  (Select)

Tempo



Before you save the composed melody, you can change the tempo, and/or the instrument to play the melody.

To arrange the tempo of the composed melody:

1.  (Menu) >  **Tempo**  (Select)
2.  required tempo  (Select)

Select instrument

You can select the instrument to play the composed melody:

 (Menu) >  **Select instrument**  (Select)

Phone menu

This menu is available under the Application Menu if your SIM card provides STK services.

To use this menu, see “Phone Menu” on page 55.

Records Menu

Records



Last dialled 70

Answered 70

Unanswered 70

Delete all 70

Last dialled/Answered/Unanswered number

Recently dialled phone numbers will be stored in Last dialled. (max. 50)

If an incoming call with Caller's ID is answered, the number will be stored in Answered (max. 50).

If an incoming call with Caller's ID is not answered, the number will be stored in Unanswered (max 20).

From **Records**

1. Choose one menu from **Last dialled**, **Answered** or **Unanswered** (Select)

OR

In idle mode, to view the last dialled numbers directly


2. required phone number (or name) you wish to redial



Delete all

From **Records**

1. **Delete all** (Select)
2. **"Delete all calls?"** (No) or (Yes)

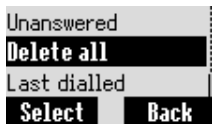


Accessories

Li-Ion Battery (EB-BSA10)



Double your talk time by having a spare battery.

Rapid Charger (EB-CAD55UK)

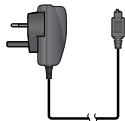

Carry a lightweight portable charger wherever you go to ensure you always have power to talk.

Rapid Charger (EB-CAD55EU)



Carry a lightweight portable charger wherever you go to ensure you always have power to talk.

Personal handsfree (EB-EMG70)



Talk and move while keeping your hands free, by using a personal handsfree. Put the ear piece in your ear and the adaptor in the side of the handset, and talk.


How to Identify a Genuine Panasonic Accessory


Panasonic produces some of the most advanced mobile phones available. So, as you'd expect from this class leader, the range of accessories are second to none. Most genuine Panasonic accessories will have a label showing an "EB-XXX00" model number.

NOTE: Accessories are subject to change without notice.

Troubleshooting

Should any problem persist, contact your dealer.

Problem	Cause	Remedy
Phone will not switch on.		Check that the battery is fully charged and correctly connected to the phone.
Extremely short battery life for a new battery.	The network you are using and the condition of the battery can affect battery life.	
Short battery life for an old battery.	The battery has worn out.	Replace with a new fully charged battery.
The charging indicator does not light, the battery level indicator does not appear and the phone cannot be switched on when charging.	The battery is not attached to the phone, or when the battery has been deeply discharged, the phone will take a short time until the indicator lights.	Leave the phone charging the battery for a few minutes before the indicator lights and your attempt to switch the phone on.
Battery fails to charge.	The battery is not attached to the phone.	Ensure the battery is fitted to the phone prior to commencing charging.
	Battery was connected to the phone after the Fast Travel Charger was switched on.	
	 indicates abnormal charging. Battery is defective or of the wrong type.	Replace with a new battery.
Calls cannot be made.	The phone is locked.	Unlock the phone.
	Outgoing calls are barred.	Disable outgoing call barring or barred dialling.
	The phone is not registered to a network.	Move to a coverage area and operate your phone after it has registered with a network.
Calls cannot be made from Fixed Dial Store.		Check whether your SIM supports Fixed dial. Check if Fixed dial is switched on. Check whether the phone number is stored in Fixed Dial.

 Problem	Cause	Remedy
Calls cannot be received.	The phone is not switched on.	Switch the phone on.
	Incoming calls are barred.	Disable incoming call barring.
	The phone is not registered to a network.	Move to a coverage area and operate your phone after it has registered with a network.
Emergency calls cannot be made.	You are not in a GSM coverage area.	Check that the antenna symbol () is displayed – move to a coverage area and operate your phone when the antenna symbol is displayed.
Phone numbers cannot be recalled from Contacts list.	The phone is locked.	Unlock the phone.
	Phone number has been restricted.	Switch off restriction.

Important Error Messages

These are some of the most important error messages which may be displayed:

New codes not same	When you change your password, you must enter the new password twice to confirm. The two codes you entered are not the same. Enter the same code twice.
Password invalid	The password that you entered is not valid. Enter the correct password.
New PIN not accepted	Your new PIN code was not accepted. Please try again.
New PIN2 not accepted	Your new PIN2 code was not accepted. Please try again.
Incorrect entry!	You entered your PIN or PIN2 code incorrectly. Enter the correctly.
Entries do not match!	When you change your password, you must enter the new password twice to confirm. The two codes you entered are not the same. Enter the same code twice.
Invalid password	The reply message from network when you activate call barring with the incorrect password. Enter the correct password.
SIM service not support	The function you selected is not supported by your service provider. Please contact your service provider.
Insufficient space! Continue?	The SIM storage area is full. If you continue, data may be lost. Please delete old records.
Not enough space! Continue?	The message storage area is full. If you continue, data may be lost. Please delete old records.
Authentication failure	Your SIM card is not registered with your service provider. Please contact your service provider.
Blocked	Your SIM card is blocked. Please contact your service provider.

Glossary of Terms

DTMF	Dual Tone Multi-Frequency tones allow you to communicate with computerised phone systems, voice mailboxes, etc.
FDN	Fixed Dial Number. Used to restrict outgoing calls to a certain set of numbers.
GSM	Global System for Mobile communications. The name given to the advanced digital technology that your phone uses.
Network Operator	The organisation responsible for operating a GSM network.
Password	Used for the control of Call Bar.
PIN	Personal Identification Number used for SIM security. Supplied by your service provider. If the PIN is entered incorrectly 3 times, the PIN will be blocked.
PIN2	Personal Identification Number used for the control of Fixed Dial Store and Call Charge metering. Supplied by your service provider. If the PIN2 is entered incorrectly 3 times, the PIN2 will be blocked.
PLMN	Public Land Mobile Network. A network that provides land mobile telecommunications services.
PUK/PUK2	PIN/PIN2 Unblocking Key. Used to unblock the PIN/PIN2 code. Supplied by your service provider. If the PUK/PUK2 is entered incorrectly 10 times, the PUK/PUK2 will be blocked.
Registration	The act of logging on to a GSM/GPRS network. This is usually performed automatically by your phone.
Roaming	The ability to use your phone on networks other than your home network.
Service Provider	The organisation responsible for providing access to the GSM/GPRS network.
SIM	Subscriber Identity Module. A small smart-card which stores unique subscriber and user-entered information such as Contacts entries and short messages. Supplied by your service provider.
SMS	Short Message Service. A basic mail system used for cellular phones. This service allows sending/receiving of short text messages.

Index

- A**
- Accessories 71
 - Li-Ion Battery 71
 - Personal handsfree 71
 - Rapid Charger 71
- Alarm 66
- Alerts 28
- Animation 26
- Answer 30
 - Any key answer 30
 - Auto answer 30
- Application Menu 64
- Archive 50
- Auto capital change 20
- B**
- Backlight 27
- Battery 1
 - Charging 3
 - Fitting and removing 1
- C**
- Calculator 67
- Calendar 41
 - Create 41
 - View 42
- Call
 - Answering a call 14
 - During a call 8
 - Ending 13
 - Incoming call while on a call 17
 - Making 12
 - Making a second call 16
 - Mute 14
 - Reject 14
- Call bar 60
- Call Diverts 59
- Call Service 56
- Call status 17
- Call transfer 17
- Call waiting 56
- Caller's ID 57
- Cell Broadcast 53
- Charge settings 57
 - Auto display 58
 - Viewing time/charges 56
- Clock 65
 - Date format 65
 - Display time 66
 - Power off time 66
 - Time & date 65
 - Time format 65
 - Time zone 65
- Conference call 17
- Contacts list 35
 - Copy 37
 - Creating in Phone 36
 - Creating in SIM 35
 - Delete 37
 - Edit 37
 - Search 38
 - Viewing 35
- Contacts Menu 34
- Contrast 27
- Currency 67
 - Rate computing 68
 - Rate setting 67
- D**
- Defaults 30
- Dialling 12
 - Last number dialling 12
- Display 26
- Displays 9
- DTMF 18
- E**
- Emergency call 13
- EMS 47

F		My Contacts	40
FDN	36	My Numbers	39
Fixed dial	62	My Phone Menu	24
G		N	
Games Menu	31	Network	63
Glossary of Terms	75	O	
Greeting	26	Outbox	49
Groups	38	P	
H		Phone	12
Hit Mouse	31	Switching on/off	12
Hotkey dial	40	Phone Menu	55, 69
I		PIN control	61
Idle display	9	PIN/PIN2	61
Inbox	48	Profiles	28
In-call operations	15	R	
Hand held	15	Records Menu	70
Hands free	15	Ringtones	25
K		S	
Key functions	7	Security	60
Key Guard	43	Shift mode change	20
Key tone	25	SIM	3
L		Fitting and removing	3
Language	27	SIM lock	62
Display Languages	27	SMS	45
M		Status icons	10
Maximum cost	58	Symbols	11
Melody composer	68	T	
Memory	33	T9® Input	27
Memory status	39, 51	T9® Text Input	20
Menu Display	22	Text entry	19
Menu Structure	23	Text Input mode change	20
Message centre	45	Troubleshooting	72
Messages	44	U	
Creating	46	User Messages	51
Settings	51	V	
Messages Menu	44	Volume	25
Multi tap mode	21		

W

Wallpaper	26
Warning tone	25
Withhold ID	56