 


 **SAGEM**

MY **S-7**

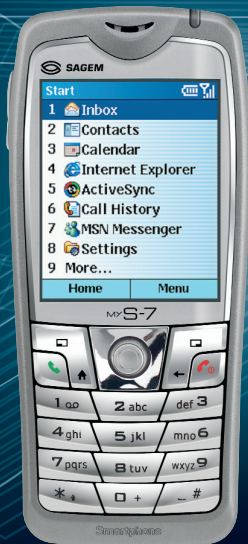

ENGLISH

Welcome

Congratulations on purchasing SAGEM myS-7, a Windows Mobile™ Smartphone.

Your Smartphone is more than a mobile phone. It not only provides the full features of a GPRS mobile phone, but also allows you to take photos, record videos, browse the Internet and WAP/WEB pages, receive and send messages (such as emails, instant messages and MMS multimedia messages), listen to music, play games, and lots more. Whenever you need to communicate, capture images, search for information, send messages or enjoy yourself, the Smartphone can help you get what you want any time any place.

With the Windows Mobile™ for Smartphone operating system, you can always use Microsoft® ActiveSync® to synchronize your personal Microsoft Outlook data between the Smartphone and desktop computer, including Contacts, Calendar, Inbox, and Tasks.

Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Microsoft, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

© 2003 Microsoft Corporation. All rights reserved. Microsoft products are licensed to OEMs by Microsoft Licensing Inc., a wholly owned subsidiary of Microsoft Corporation.

Microsoft, ActiveSync, MSN, Outlook, Windows, the Windows logo, and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

CE/GCF Conformance document

Déclaration CE de Conformité

Fabricant
Manufacturer

Sagem SA

Adresse
Address

Le Ponant de Paris
27 rue Leblanc F-75512 Paris cedex 15 FRANCE

Déclare sous sa responsabilité que le produit
Declares under our sole responsibility that our product

Nom du produit
Product Name

Smartphone, Model: **myS-7** with GSM/DCS/PCS band

est conforme aux exigences des directives européennes suivantes :
conforms to the requirements of the following EEC directives:

Directive CEE 1999/5/CE
(EEC Directive)

Sécurité (Safety)

EN 60950

CEM (EMC)

EN 301 489-1
EN 301 489-7

Réseau (Network)

3GPP TS 51.010-1 v5.2.1 avec GCF-CC v3.12.0 inclus
(3GPP TS 51.010-1 v5.2.1 with GCF-CC v3.12.0 included)

EN 301 511

Santé (Health)

EN 50361, EN 50360

Lieu et date
(Place and date of issue)

Cergy St-Christophe - May 25th, 2004

Signature

P. KLEIN

Preface

About this Manual

This manual is composed of three parts.

- **Part I "System Manual"** tells you how to use the Smartphone, including the basic operations, core programs of Windows Mobile™, and the system settings.
- **Part II "Software Manual"** gives information on the "additional software" (in addition to the core programs of Windows Mobile™), including the add-on programs and games provided by your Smartphone manufacturer.
- **Part III "References"** provides the reference information, such as the product specifications.

◀ NOTE ▶

- When the commands are connected with an arrow (→), select them in that order.
- Some of the features are provided by the wireless mobile network services and not described in details in this manual. Please contact your service provider for further information.
- Depending on the continuing developments of the product, the software supplied with your Smartphone may be changed or updated. If there is any difference between the information in this manual and your product, the operation should be based on the product you have.

Where to Find Information

If you cannot find information in this manual, refer to the following table to acquire the specific information:

For information on	See this source
First time startup	Quick Start Guide
More information on Microsoft ActiveSync	Chapter 7 of this manual ActiveSync Help on your desktop computer
Last-minute updates and detailed technical information	The readme files in the "Microsoft ActiveSync" folder on your desktop computer or the Smartphone Companion CD The Microsoft Web site: www.microsoft.com

Table of Contents

CE/GCF Conformance document	i
Preface	ii
PART I - SYSTEM MANUAL	1
Chapter 1 Getting Started	3
1.1 Hardware Features	4
Front Components	4
Back Components	5
Side Components	6
Top and Bottom Components	6
ActiveSync Cable and USB Cradle	7
1.2 Installing SIM Card and Battery	8
1.3 Charging the Battery	9
1.4 Turning Your Smartphone on and off	11
Turning on	11
Turning off	11
Power Management	11
1.5 Installing ActiveSync	13
1.6 Expanding Your Smartphone	16
Accessories	16
Using the Phone Headset	16
Using a SD/MMC Card	17
Chapter 2 Basic Skills	19
2.1 Navigation Methods	20
Navigation Stick	20
Home Key	20
Back Key	20
Soft Keys	21
Numeric Keypad	21

2.2	Home Screen and Screen Elements	22
	Home Screen	22
	Status Indicators	23
	Start List	24
	Menus	25
	Quick List	26
2.3	Entering Text and Numbers	27
	Entering Numbers in Numeric Mode	29
	Entering Symbols	29
	Miscellaneous Input Tasks	30
2.4	Securing the Smartphone	31
	Locking the Keypad	31
	Locking the Smartphone	32
	Locking the SIM Card	34
Chapter 3	Using the Phone	35
3.1	Making a Call	36
	Making a Call from the Home Screen	36
	Making a Call from Contacts	37
	Making a Call Using a Recently Dialed Number	38
	Making a Call from the Call History List	38
	Making a Call from a Hyperlink Phone Number	39
	Making a Call from Speed Dial	39
3.2	Responding to an Incoming Call	40
	Answering an Incoming Call	40
	Rejecting an Incoming Call	40
3.3	Managing More than One Call	41
	Holding a Call to Take a Second Call	41
	Rejecting the Second Call	41
	Holding a Call to Make a Second Call	41
	Swapping between Calls	42
	Setting up a Conference Call	42
3.4	In-call Options	43
	Adjusting the Phone Volume	43
	Speakerphone	43
	In-call Options	44
3.5	Call History	45
	Viewing Call History	45
	Call History Menu Commands	46

3.6	Speed Dial	47
	Creating a Speed Dial	47
	Editing a Speed Dial	48
	Deleting a Speed Dial	48
	Viewing the Speed Dial List	49
3.7	Voice Mail	50
	Setting up the Voice Mail Phone Number	50
	Checking Your Voice Mail	50
3.8	International Call	51
3.9	Turning off the Radio	52
Chapter 4	Setting up Your Smartphone	53
4.1	Settings (Page 1)	54
	Phone	55
	Sounds	59
	Profiles	61
	Home Screen	62
	About	63
	Accessibility	64
	Beam	64
	Bluetooth	64
4.2	Settings (Page 2)	65
	Certificates	66
	Data Connections	66
	Date and Time	73
	Owner Information	73
	Power Management	74
	Regional Settings	74
	Remove Programs	75
	Security	75
4.3	Settings (Page 3)	76
	Advance Settings	76
Chapter 5	Messaging Features	77
5.1	Understanding Messaging Types and Accounts	78
	Messaging Types	78
	Messaging Accounts	80

5.2	Using E-Mail Messages	83
	Setting up E-Mail Accounts	83
	Creating an E-mail Message	85
	Sending and Receiving E-Mail Messages	88
	Viewing and Responding to E-Mail Messages	88
5.3	Using Text Messages	95
	Creating a Text Message	95
	Sending and Receiving Text Messages	97
	Viewing and Responding to Text Messages	98
5.4	Using Media Messages	101
	Setting up Media Messages Account	101
	Creating a Media Message	103
	Sending and Receiving Media Messages	108
	Viewing and Responding to Media Messages	109
5.5	Working with Message Folders	113
5.6	MSN Messenger	115
	Using MSN Messenger	115
Chapter 6	Contacts, Calendar, and Tasks	119
6.1	Contacts	120
	Viewing Contacts	120
	Creating a New Contact	122
	Deleting a Contact	123
	Finding a Contact	123
	Editing a Contact	123
	Selecting a Ring Tone for a Contact	124
	Copying Phone Numbers from SIM Card to Contacts	124
	Copying Phone Numbers from Contacts to SIM Card	125
	Calling a Contact	125
6.2	Calendar	127
	Creating a New Appointment	127
	Viewing an Appointment	127
	Editing an Appointment	128
	Deleting an Appointment	128
	Viewing Your Schedule	128
	Importing Calendar Information	130
6.3	Tasks	131
	Creating a New Task	131
	Viewing the Task List	132

6.4	Voice Notes	133
	Creating a Voice Note.....	133
	Listening to a Recording.....	133
6.5	Beaming Information	134
	Beaming a Contact or an Appointment.....	134
	Receiving Beamed Information.....	134
Chapter 7	ActiveSync.....	135
7.1	Understanding ActiveSync	136
7.2	Setting up ActiveSync.....	137
	Creating a Partnership.....	137
	Configuring an Exchange Server Connection.....	137
	Changing ActiveSync Settings Later	139
	Creating a Synchronization Schedule.....	140
	Synchronizing Automatically.....	141
7.3	Synchronizing Information	143
	Starting and Stopping Synchronization.....	143
	Synchronization Methods	143
7.4	Deciding Which Information to Synchronize.....	145
	Synchronizing Outlook E-mail.....	145
	Synchronizing Calendar.....	146
	Synchronizing Contacts.....	146
	Synchronizing Tasks.....	146
7.5	ActiveSync Error Messages	147
Chapter 8	Internet, Entertainment, and More.....	149
8.1	Internet Explorer	150
	Browsing the Web.....	150
	Using the Favorites List	151
	Refreshing Web Pages.....	152
	Customizing Pocket Internet Explorer	152
8.2	Media Player.....	154
	Playing Video and Audio Files.....	154
	Using Menu Commands When Playing a File	156
	Using Media Player Favorites.....	157
	Understanding Licenses	157
	Media Player Compatibility	158

8.3	Modem Link	159
	Setting up an Infrared Connection	159
	Setting up a USB Connection	160
8.4	Games	162
	Solitaire	162
	Jawbreaker	163
8.5	Calculator	164

PART II - SOFTWARE MANUAL 165

Chapter 9 Using the Digital Camera 167

9.1	PhoneCamera	168
	Taking Photos	168
	Continuous Shots	170
	Recording Videos	170
	PhoneCamera Settings	172
	Notes on Using PhoneCamera	173
9.2	PhoneViewer	174
	Viewing Photos	174
	Adding a Theme to a Photo	176
	Adding a Memo to a Photo	176
	Renaming a Photo	178
	Adding a Special Effect to a Photo	179
	Slide Show	180
	PhoneViewer Menu Commands	181
9.3	VideoPlayer	182
	Playing Videos	182

Chapter 10 More Programs 185

10.1	Photo ID	186
	Assigning a Photo ID to a Contact	186
	Adding a Contact Using Photo ID	189
	Deleting a Contact	190
	Editing a Contact	191
	Viewing Modes	191
	Managing Contact Groups	193
	Photo ID Settings	195

PART III - REFERENCES	197
Chapter 11 References.....	199
11.1 Care and safety information	200
Safety.....	200
SAR	202
Advice for limiting exposure to radiofrequency (RF) fields	203
11.2 Warranty	204
11.3 Frequently-asked Questions.....	208
11.4 Restoring Factory Default State	209
11.5 Customer Care	210
Chapter 12 EULA Terms.....	211
Index.....	219

PART I - SYSTEM MANUAL

1 Getting Started

This chapter introduces you to the external components of your Smartphone and guides you through the process of setting up your Smartphone for use.

This chapter includes:

1.1	Hardware Features.....	4
1.2	Installing SIM Card and Battery.....	8
1.3	Charging the Battery	9
1.4	Turning Your Smartphone on and off	11
1.5	Installing ActiveSync	13
1.6	Expanding Your Smartphone	16

1.1 Hardware Features

 
Front Components



- | | |
|--|---|
| 1 Earpiece | Serves as the phone earpiece. |
| 2 Status Indicator | |
| Battery Status | Steady orange - The battery is being charged.
Blinking orange/red - The battery is low with the wireless radio on/off. |
| Wireless Radio Status^(*) | Blinking green - The wireless radio is on.
Flashing green and red in turns - You have unread messages. |
| 3 Screen | Displays the Home screen, status icons, active programs and soft key commands. |
| 4 Navigation Stick | Moves up, down, left, or right by pushing the stick toward the corresponding direction.
Selects by pressing. |
| 5 Soft Key | Performs the command shown on the display immediately above the keys. |
| 6 End Key | Turns your Smartphone on or off.
Ends or rejects a call.
Press and hold to display the Quick List. |
| 7 Back Key | Navigates to the previous screen.
Backspaces over one or more characters when you are in a text field. |
| 8 Numeric Keypad | Enters numbers and characters. |
| 9 Home Key | Displays the Home screen. |
| 10 Talk Key | Dials or answers a call.
Press and hold during a call to switch to the speakerphone mode. |

^(*) **Table Note:** Wireless Radio Status indicator does not work when the AC adapter is connected.

Back Components

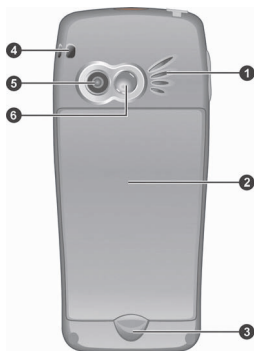


- | | |
|---------------------------|--|
| 1 Speaker | Sends out music, sounds, and voice. |
| 2 Battery | Serves as the internal power source for your Smartphone. You can recharge the battery by connecting to AC power. |
| 3 Battery Lock | Secures the battery in place. |
| 4 Hand String Hole | Hand string attaches to this hole. |
| 5 Camera Lens | Takes photos or records videos. |
| 6 Viewing Mirror | Lets you see your own reflection in the small mirror when taking photos of yourself. |

Side Components



- | | |
|---------------------------|---|
| 1 Volume Control | Adjusts the volume by pressing the upper or lower button.
Press to immediately silence the ring of an incoming call.
Press and hold the upper button to record voice. |
| 2 SD/MMC Card Slot | Accepts an optional SD/MMC card for extended memory capacity or input/output functions. |

 Top and Bottom Components

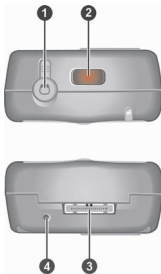


- | | |
|------------------------------|--|
| 1 Headphone Connector | Connects to a pair of stereo headphones or a hands-free phone headset. |
| 2 IR Port | Beams files to other mobile devices. |
| 3 USB connector | Connects to the USB cable. |
| 4 Microphone | Serves as the mouthpiece during a call.
Receives sound and voice to record voice. |

ActiveSync Cable and USB Cradle



 Cradle Front

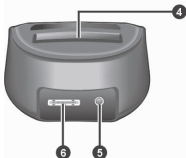

Cradle Back

- | | |
|-------------------------------|---|
| 1 ActiveSync Cable | Connects your Smartphone to a desktop computer. |
| 2 Smartphone Connector | Connects your Smartphone. |
| 3 Charge Indicator | Glows red to indicate that the battery in the battery compartment is being charged. The indicator changes to green when the battery is fully charged. |
| 4 Battery Compartment | Connects an additional battery or the battery removed from your Smartphone for charging. |
| 5 Power Connector | Connects the AC adapter. |
| 6 ActiveSync Connector | Connects the ActiveSync cable. |

1.2 Installing SIM Card and Battery

After applying for an account with a mobile phone service provider, you will be provided a SIM (Subscriber Identification Module) card. This card contains your mobile phone account details, contacts that can be stored and any additional services to which you have subscribed. You must install a SIM card before you can make or receive phone calls or use wireless data services.

1. Insert the SIM card with the contact area facing downward (the angled corner is in the upper-right position). Make sure that the SIM card is slid below the two metal holders.



2. To install the battery, insert the two projecting parts on the battery into the holes in the battery compartment, and then close the battery. You should hear a "click" sound when the battery lock is engaged.



◀ NOTE ▶

- To remove the battery, push the battery lock downward. The battery will pop out slightly for removing.
- Insert and remove the SIM card with care. Do not bend the SIM card or scratch the contact area.

1.3 Charging the Battery

You must fully charge the battery before starting to use your Smartphone for the first time.

1. Attach the converter to the AC adapter.
2. Connect to AC power. You can connect with the USB cradle or without it.

With the USB Cradle

- 1 Slide your Smartphone into the cradle.
- 2 Connect the appropriate end of the AC adapter to the USB cradle.
- 3 Plug the other end of the AC adapter into a wall outlet.

Without the USB Cradle

- 1 Connect the USB adapter to the bottom of your Smartphone.
- 2 Connect the appropriate end of the AC adapter to the USB adapter.
- 3 Plug the other end of the AC adapter into a wall outlet.





- The status indicator on the Smartphone glows orange to indicate that battery charging is in progress. The indicator is off when the battery is fully charged.

◀ NOTE ▶



- When charging the battery for the very first time, you should charge it for at least eight hours.
- A discharged battery can be fully charged after two hours. The charging time may vary under different conditions.
- When a fully discharged battery is being charged, you can turn on the Smartphone only after it connects to the AC power for at least five minutes.
- You can remove the battery and put it in the cradle's battery compartment for charging.
- You may use your Smartphone during charging. When the Smartphone is on, you can check the charging level by selecting **Start** → **Settings** → **Power Management**.

1.4 Turning Your Smartphone on and off


Turning on

1. Press and hold the **End** key . The backlight of the keypad will glow, and your Smartphone will display startup screens and then the Home screen.
2. If the service provider (or you) has set the PIN, you will be prompted to enter the PIN. Enter the PIN and press the  soft key. (For details on PIN, see "Locking the SIM Card" in section 2.4).
3. Your Smartphone starts to search the mobile network and the service provider's name will be displayed on the screen. You can now use your Smartphone.

Turning off

1. Press and hold the **End** key  until the Quick List appears.
2. The first option is **Power off**. Press the Navigation stick or the  soft key to turn off your Smartphone.

Power Management

By default, your Smartphone will automatically turn off the screens and keypad's backlight after being idle for 60 seconds. In addition, your Smartphone may enter the sleep mode, causing the screen to blank, after being idle for a specific period of time. To end the sleep mode, press the **End** key . The screen will restore. (For information on Power Management, see "Power Management" in section 4.2).

◀ NOTE ▶

- The battery's operating time relies on the mobile network status, the way you use your Smartphone and the ambient environment. The power consumption is higher under the following conditions:
 - Your Smartphone has to frequently search mobile network because of weak signals, moving in high speed or being out of the range of the mobile network.
 - You use the vibration function, hands-free solution, alarm, or play games.
 - The backlight is on.
 - The phone's volume is set to maximum.
 - You use the camera.
 - The operating time is shorter in low temperatures.

1.5 Installing ActiveSync

You can use Microsoft® ActiveSync® technology to synchronize the information on your Smartphone with information on your desktop computer and optionally, a server running Microsoft® Exchange® Server with Exchange ActiveSync. When you do this, ActiveSync compares the information on the Smartphone with the information on the desktop computer and Exchange Server, and updates all locations, keeping you up to date with the most recent information. You can even synchronize on a customizable schedule, or as items arrive.

NOTE

- Before the installation, make sure that you have Microsoft Outlook installed on your desktop computer. If you do not have Outlook or your version of Outlook is earlier than the version provided on the Companion CD, install Outlook from the Companion CD.
- If you have an older version of ActiveSync installed on your desktop computer, the installation wizard will inform you. When you choose to continue, the new ActiveSync will replace the existing ActiveSync on your computer.
- Do not connect your Smartphone to your desktop computer before ActiveSync is installed.
- During the New Partnership setup, select "Synchronize with this desktop computer." Do not select "Synchronize with Microsoft Exchange Server and/or this desktop computer" unless you are sure that your company is running Microsoft Exchange Server and Exchange ActiveSync. Contact your network administrator or ISP for detailed information.

Before you can synchronize information with a desktop computer, you must first install ActiveSync on your desktop computer and create a partnership between your Smartphone and your desktop computer. Follow the procedure below:

1. Turn on your desktop computer.
2. Insert the Companion CD into the CD-ROM drive of your desktop computer.
3. Click the arrow on the first screen to enter the main screen and click **Start Here**.
4. In the following screen, click **Install ActiveSync 3.7.1** on the left column.
5. In the following screen, click **Install** to start the installation.

6. If you use Windows XP, select **Open** when the "File Download" window appears on the screen; if you use Windows 2000/Me/98, select **Run this program from its current location** and click **OK**.
7. Follow the on-screen instructions to install ActiveSync.
8. After ActiveSync is installed, you will be prompted to connect your Smartphone to your desktop computer. You can connect with the USB cradle or without it.

With the USB Cradle

- 1 Slide your Smartphone into the cradle.
- 2 Connect the appropriate end of the ActiveSync cable to the USB cradle.
- 3 Connect the other end to a USB port on your desktop computer.

Without the USB Cradle

- 1 Connect the appropriate end of the ActiveSync cable to the bottom of the Smartphone.
- 2 Connect the other end to a USB port on your desktop computer.
- 3 If you want to connect the AC adapter, connect it to the ActiveSync cable.



9. The "Add New Hardware Wizard" should automatically install the USB driver. (If you need to specify the location of the driver, click **Browse** and select the CD-ROM drive containing the Companion CD).
10. Follow the on-screen instructions to establish a partnership and synchronize your Smartphone with your desktop computer.

After synchronizing for the first time, take a look at Calendar, Contacts, and Tasks on the Smartphone. You will notice that your information has been copied to the Smartphone. (For more information on ActiveSync, see Chapter 7).

1.6 Expanding Your Smartphone

◀ NOTE ▶

- The availability of accessories from the Smartphone manufacturer may vary by regions. For the latest information, please contact your local dealer.
- The use of unauthorized accessories will void your Warranty.

 
Accessories

You can expand the capabilities of your Smartphone or facilitate your operation by purchasing accessories designed for your Smartphone. For example, you can use the SD/MMC card and Car Kit.

Using the Phone Headset

The phone headset includes a microphone, an answer button and two earphones, allowing you to talk conveniently using a hands-free solution.

Your Smartphone has an earphone connector on its top. Open the protective cover to plug the phone headset cable.






Using a SD/MMC Card

Your Smartphone has a SD/MMC card slot that accepts a SD (Secure Digital) or MMC (MultiMediaCard) storage card or I/O card.

To insert a SD/MMC card, first open the protective cover. Insert the card with its label facing the front and the connector pointing to the slot of the Smartphone, as shown in the diagram. Then push it into the slot until it clicks into place. You can then close the protective cover.

 To remove a card, first make sure that no application is accessing the card, then slightly push the top edge of the card to release it and pull it out of the slot.

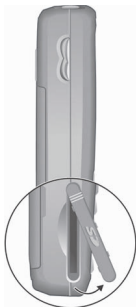**◀ NOTE ▶**

- A storage card is also called as a memory card.
- For more information, please refer to the document of the SD/MMC card.
- Make sure that no foreign objects enter the SD/MMC card slot.
- Keep a SD/MMC card in a well-protected box to avoid dust and humidity when you are not using it.

2 Basic Skills

This chapter familiarizes you with the basic skills of using your Smartphone, such as using the Navigation stick, understanding the Home screen and screen elements, entering text and numbers, and securing your Smartphone.


This chapter includes:

2.1	Navigation Methods.....	20
2.2	Home Screen and Screen Elements	22
2.3	Entering Text and Numbers	27
2.4	Securing the Smartphone.....	31

2.1 Navigation Methods

Your Smartphone has various keys that allow you to move around and select. This is particularly useful for one-hand operation.

 Navigation Stick

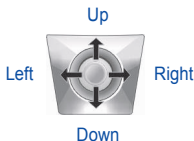

The four-directional navigation stick allows you to:

- Scroll to an item or move the cursor on the screen by pushing the stick toward the corresponding direction.
- Confirm your selection by pressing the stick.

◀ NOTE ▶

- In the procedures in this document, "select" means scrolling to an item and pressing the Navigation stick.

Home Key



The **Home** key takes you to the **Home** screen, the main screen of the Smartphone.

Back Key



The **Back** key navigates to the previous screen.

When you are typing text, the **Back** key moves the cursor back to delete the character in a text field. Pressing and holding the **Back** key deletes multiple characters.

Soft Keys



There are two soft keys on the two sides of your Smartphone, located directly below the display screen. Pressing a soft key performs the command displayed immediately above it on the screen. Soft key commands may change from one screen to the next.

Numeric Keypad

 


You can use numbers to navigate quickly to programs and settings on your Smartphone. Just press the number on the keypad that corresponds to the number shown next to the program or setting you want.

Though commands in a menu are normally not labeled with numbers, you can still use numbers to select menu commands by pressing the number that corresponds to the menu commands in top-down order.

2.2 Home Screen and Screen Elements

Home Screen

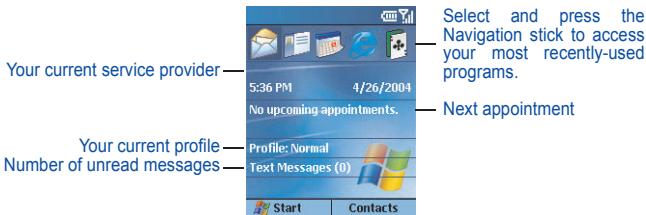

The Home screen is your starting place for most tasks. The screen automatically displays when you turn your Smartphone on or leave it idle. You can navigate to the Home screen at any time by pressing the **Home** key.

The top of the Home screen displays the five programs you have most recently used. It also displays your current service provider, the current time, your next appointment, your current profile, and the number of new messages.















You can open an associated program quickly by using the navigation pad to move around and then pressing the Navigation stick.

To...	Do this...
Open a program	Scroll to the top of the screen, and then select the program by scrolling (right) to its icon and pressing the Navigation stick.
Open Calendar and view your appointments for the day	Scroll to your next appointment and press the Navigation stick. (For information on Calendar, see section 6.2).

To...	Do this...
Open Messaging and read your messages	Scroll to the status area of the messaging account for which you want to read messages and press the Navigation stick. (For information on Messaging, see Chapter 5).
Open Contacts and view your contact list	Select the right soft key (if Contacts appears on the screen). (For information on Contacts, see section 6.1).
Open Profiles and view or change your profile settings	Scroll to your current profile and press the Navigation stick. (For information on Profiles, see section 4.1).

Status Indicators

Status indicators appear at the top of the Smartphone screen. The following table lists common status indicators and their meanings.

Indicator	Meaning	Indicator	Meaning
	New e-mail or text message (SMS)		Battery level
	New voice mail on line 1		Low battery
	New voice mail on line 2		Battery charging
	New voice mail on lines 1 and 2		Signal strength
	New instant message		No signal
1	Line 1		GPRS available
2	Line 2		GPRS in use
	Voice call in progress		Roaming

Indicator	Meaning
	Data call in progress
	Call on hold
	Missed call
	Incoming voice calls are being forwarded to another number



Indicator	Meaning
	Sync error
	Radio off
	Ringer off

Start List

Smartphone includes many pre-installed programs that you can open and start using right away.

On the **Home** screen, press the **Start** soft key. Select a program by scrolling to it and pressing the **Navigation stick**. The **More...** option in the list indicates that you can select **More...** to access the next page of the list.

  Press to access the Start menu.

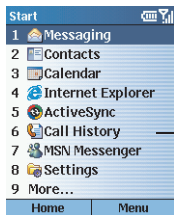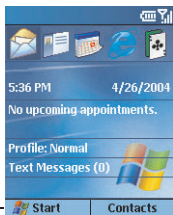

Press the number key to open a program, or select **More...** to go to the next page.

◀ NOTE ▶

- If your SIM card supports the STK (SIM Tool Kit) function, you can also run the program(s) in the SIM card.

Menus





On many screens, the right soft key is the Menu soft key. Pressing Menu displays a list of commands for the current screen. Depending on the menu, selecting a command has one of the following results:

- Performs the command
- Takes you to another screen where you can perform the command
- Displays another menu
- Opens a program


◀ NOTE ▶

- You can choose menu commands quickly by pressing the number on the keypad that corresponds to the number shown next to the command you want; for example, in Start, press **3** to open Calendar.

Quick List

Quick List 	
1	Power off
2	Flight mode
3	Key lock
4	Device lock
5	Normal 
6	Silent
7	Meeting
8	Outdoor
9	More...
Select	Cancel

The Quick List provides a list of commands that you can use to quickly perform common actions, such as turning off the Smartphone, locking the Smartphone, turning off the phone capability, and changing the profile type.

Press and hold the **End** key  until the Quick List appears. Then, press the number to perform the command; or, scroll to an option and then press the Navigation stick or **Select** soft key.

2.3 Entering Text and Numbers

You can enter text and numbers on your Smartphone using the keypad. Your Smartphone supports three input modes for enter text and numbers: ABC (Multipress), T9 and Numeric. The ABC and T9 modes are used for entering text and the Numeric mode is used for entering numbers.

When you select a field that requires text or numeric entry, your Smartphone will automatically default to the appropriate input mode. The status icon on the top-right corner of the screen shows the input mode you are currently using. To change the input modes, press and hold the Asterisk key (*) and select the input mode you want from the pop-up menu. The status icon for the input mode you want is shown on the screen.

The following table shows the complete list of input mode status icons.

Icon	Input mode	Icon	Input mode
abc	Multipress text input mode, lowercase	t9	T9 text input mode, lowercase
ABC	Multipress text input mode, uppercase	T9	T9 text input mode, uppercase
<u>ABC</u>	Multipress text input mode, caps lock	<u>T9</u>	T9 text input mode, caps lock

Entering Text in ABC Mode

To enter a letter in ABC mode, press the number key on which the letter appears. To enter the first letter on the number key, press the key once. To enter the second letter, press the key twice, and so on.

For example:

- To enter the letter "s", press **7777**.
- To enter the word "hat", press **44, 2, 8**.

The letter entered most recently is underlined until you have completed the keypresses for the letter and moved on to the next letter. When you enter letters that are on the same number key, you must pause after entering the first letter and wait until the underline disappears before entering the next letter so that the first letter can be processed. For example:

- To enter the word "cat", press **222**, pause, press **2**, pause, and press **8**.

The pause between keypresses is called the Multipress time out, and you can adjust the length of the pause. (You can adjust the Multipress time out. See "Accessibility" in section 4.1)

Entering Text in T9 Mode

To form a word in T9 mode, press the number keys that contain the letters you want. As you enter letters, T9 analyzes your keypresses and attempts to complete the word.

For example:

- To enter the word "shoe", press **7, 4, 6, 3**.

The following steps provide detailed instructions on using T9 input mode:

1. Press and hold the Asterisk key (*), and select **English** from the pop-up menu. The T9 indicator appears at the top of the display.
2. Enter letters by pressing the keys on which the letters appear. Press a key only once for each letter.
3. Press the Pound key (#) to accept the word and enter a space after it, or push the Navigation up/down to scroll through the available words.
4. If you do not see the correct word, erase the word. Then press and hold the Asterisk key (*), select **ABC** from the pop-up menu to change to Multipress mode, and manually enter the word.

◀ NOTE ▶

- T9 cannot always find the word you want in the T9 dictionary; in these cases, change to ABC mode. After you have entered the word in ABC mode, the word will be added to the T9 dictionary.
- End User is granted no rights of ownership or any other proprietary rights in or to the Documentation and Tegic Product or any other software or technology of Tegic. End User acknowledges that all ownership of and proprietary rights in and to the Documentation and Tegic Product are vested in Tegic. End User shall not modify, reverse engineer, decompile or disassemble the Tegic Product, or otherwise attempt to obtain source code for the Tegic Product. The Documentation and Tegic Product are protected by the copyright laws of the United States and international copyright treaties.

Entering Numbers in Numeric Mode

You can enter numbers by using Numeric mode. If you need to enter a number within a line of text, you can change to Numeric mode (**123**) by pressing and holding the Asterisk key (*), and then selecting **123** from the pop-up menu to enter the number, and then change back to ABC or T9 mode to finish entering the text.

◀ NOTE ▶

- If a field permits a numeric entry only, such as the Work phone field in Contacts, the input mode automatically defaults to Numeric mode.

Entering Symbols

Press and hold the Pound key (#), and select a symbol. Or, press and hold the Asterisk key (*), select **Symbols** from the pop-up menu, and select a symbol.

Miscellaneous Input Tasks

To...	Do this...
Enter a space	In ABC or T9 mode, press the Pound key (#).
Start a new sentence	Press the Navigation stick.
Change between uppercase and lowercase	Press the Asterisk key (*). When you are in text mode, the first letter of a sentence is automatically capitalized.
Lock caps	Press the Asterisk key (*) twice to lock caps. Press the Asterisk key (*) again to return to lowercase.
Enter a number, an asterisk (*), or a pound sign (#)	Change to Numeric mode, and press the corresponding key on the keypad.
Delete characters	Press the Back key to backspace over a single character. Or press and hold the Back key to backspace and delete an entire text field.
Enter the plus sign (+) for international calls	Press and hold the Pound key (#), and select the plus sign.

 
2.4 Securing the Smartphone


You can customize the level of security you want to have on the Smartphone by locking the keypad, the entire Smartphone, or the SIM card.

Locking the Keypad

The keypad lock turns off the keypad functionality. This is a helpful feature if, for example, the Smartphone is turned on and in your pocket, and you want to prevent accidental keypresses.



To lock the keypad:

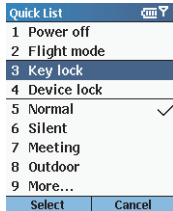

1. Press and hold the **End** key  until the Quick List appears.
2. Press the number **3** or scroll to **Key lock** in the list and press the Navigation stick or **Select** soft key. The left soft key will display **Unlock**, indicating that the keypad is locked.

To unlock the keypad

  On the **Home** screen, press the **Unlock** soft key, and press the Pound key (#).

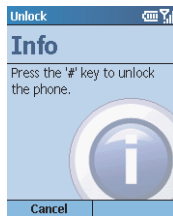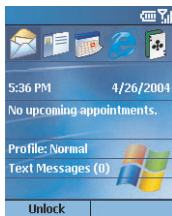


NOTE


- You can still receive calls and make emergency calls when the keypad is locked.

Locking the Smartphone

Locking your Smartphone prevents access to personal data. When you enable this feature, the Smartphone will automatically lock after a specified time of inactivity. A screen will be displayed requiring your Smartphone lock password before access is granted.

 To turn on device lock

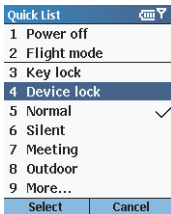

- Press and hold the **End** key  until the Quick List appears. Press the number **4** or scroll to **Device lock** in the list and press the Navigation stick or Select soft key.
- Under **Lock phone after**, push the Navigation stick left/right to select the amount of time the Smartphone is inactive before the Smartphone automatically locks.
- Scroll to **Password**. Enter the password you want to use to access the Smartphone when it is locked. Then, scroll to **Confirm password** and enter the password again.
- Press the **Done** soft key to save your settings.

To lock the Smartphone

After you turn on device lock, your Smartphone will automatically lock after a specified time of inactivity. You can also directly lock your Smartphone by selecting **Device lock** from the Quick List. The left soft key on the screen will display **Unlock** to indicate that your Smartphone is locked.

NOTE

- You can still receive calls and make emergency calls when the Smartphone is locked.

To unlock the Smartphone



When the Smartphone is locked, press the **Unlock** soft key, enter your password, and then press the **Unlock** soft key again.

To turn off the device lock

- On the **Home** screen, press the **Start** soft key, select **Settings** → **Security**.
- Select **Disable phone lock**.
- Enter the password.
- Press the **Done** soft key. The time and password you have set will be cleared.

Locking the SIM Card

Locking the SIM card prevents you and others from using the Smartphone that contains the SIM card until the correct password is entered. To turn on the phone, you have to enter the PIN.

To lock the SIM card and set the PIN

1. On the **Home** screen, press the **Start** soft key, select **Settings** → **Security**.
2. Select **Enable SIM Lock**.
3. Enter the password (SIM card's PIN1), and press **Done** soft key.

Once the PIN is enabled, your Smartphone will ask you to enter the PIN whenever you turn it on.

To unlock the SIM card

1. On the **Home** screen, press the **Start** soft key, select **Settings** → **Security**.
2. Select **Disable SIM Lock**.
3. Enter the password (SIM card's PIN1), and press the **Done** soft key.

To change the PIN

1. On the **Home** screen, press the **Start** soft key, select **Settings** → **Security**.
2. Select **Change SIM Lock**.
3. Enter the original PIN1 code. Scroll to the next field by pushing the Navigation stick down and enter a new password. Then, push the Navigation stick down and enter the new password again.
4. Press the **Done** soft key.

◀ NOTE ▶

- You can still receive calls and make emergency calls when the SIM card is locked.

3 Using the Phone

This chapter explains how to make and receive phone calls, track your calls, and manage your calls and phone numbers more efficiently.

This chapter includes:

3.1	Making a Call	36
3.2	Responding to an Incoming Call	40
3.3	Managing More than One Call	41
3.4	In-call Options	43
3.5	Call History	45
3.6	Speed Dial	47
3.7	Voice Mail	50
3.8	International Call	51
3.9	Turning off the Radio	52

3.1 Making a Call

There are several ways to make a call. You can make a call from the Home screen by directly pressing the numbers. You can also make a call using the numbers existing in your Smartphone such as the numbers you have saved, the calls you dialed or received recently, etc.

 
Making a Call from the Home Screen

On the Home screen, you can call someone by entering a phone number or a contact name using the keypad. As you begin pressing keys, your Smartphone displays the names of any contacts whose name or phone number match your entry. These could be contacts stored in your Call History or Speed Dial list, or on your SIM card. You can then select the name or number to call without having to enter the entire name or number.

1. On the **Home** screen, begin entering phone number or contact name
2. If you see the number or contact name to call, scroll down to select it. If it's a new number you are calling, finish entering the number.

AutoFilter matches number
to a contact

AutoFilter matches number
from Call History

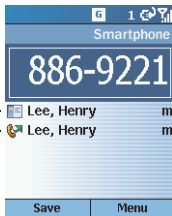

3. Press the **Talk** key .



NOTE

- When you enter and select a contact name, the default phone number is used if there is more than one phone number for the contact.

Making a Call from Contacts

Contacts is a Microsoft program for storing your contacts information in the Smartphone's memory.

You can quickly make a phone call from your contact list or from an open contact. When you make a call from your contact list, the Smartphone dials the contact's default number. You can change the default number at any time so that the Smartphone dials a different number, such as the Home or Mobile number. When you make a call from an open contact, you can select the number to dial.

1. On the **Home** screen, press the **Start** soft key, and select **Contacts**.
2. Scroll to the contact. If you have a long list of contacts, you can enter the first few letters of the contact's name, and the Smartphone will search through the entire contact list and display the name.
3. Press the **Talk** key  to dial the default number of the selected contact. If you are not dialing the default number, change the number by pushing the Navigation stick left/right, and then press the **Talk** key .

◀ NOTE ▶

- When a contact is selected, you can press the Navigation stick to open the Contacts card and select a number from there.
- For detailed information on the Contacts program, see section 6.1.

Making a Call Using a Recently Dialed Number

You can select a name or number from the list of recently dialed phone numbers to call that person again. You can also quickly redial the last number called.

To make a call using a recently dialed number



1. On the Home screen, press the **Talk** key  to display a list of recently dialed phone numbers.
2. Scroll to the name or phone number to call.
3. Press the **Talk** key .


To dial the last number called

On the Home screen, press the **Talk** key  twice.

Making a Call from the Call History List

The Call History list displays calls you made, received, and missed. You can make a call from this list.

 


1. On the Home screen, scroll to the top left corner to select the **Call History** shortcut.
2. Scroll to the name or phone number to call.
3. Press the **Talk** key .

◀ NOTE ▶

- For detailed information on Call History, see section 3.5.

Making a Call from a Hyperlink Phone Number

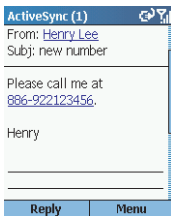

You can quickly dial a phone number from an e-mail or text message that contains a hyperlink phone number. A hyperlink phone number is underlined, in the same manner as a Web site address.

From a message containing a hyperlink phone number, scroll to the phone number and press the **Talk** key .

Making a Call from Speed Dial

Speed Dial enables you to quickly place a call without having to actually enter the number.

On the **Home** screen, press and hold the number on the keypad that you have assigned as a speed dial for a number. If the keypad assignment is two digits, press the first digit and press and hold the second digit.

 
◀ NOTE ▶

- For information on assigning Speed Dial numbers, see section 3.6.

3.2 Responding to an Incoming Call

When you receive a call on your Smartphone, your Smartphone rings. The phone number of the caller, if available, is displayed on the screen.

If the caller is included in your contact list, the contact name will be displayed. If the caller is associated with an image (called "Photo ID"), the image will be displayed.

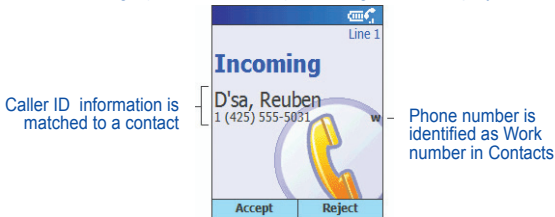

◀ NOTE ▶

- There may be situations where you want to immediately silence the ring of an incoming call. Simply press the Volume control, and then proceed to answer the call.
- You can customize the phone ring. (See "Sounds" in section 4.1)
- You can customize the photo and ring tone. (See section 10.1)

Answering an Incoming Call

Press the **Talk** key  or **Accept** soft key.

Rejecting an Incoming Call

Press the **End** key  or **Reject** soft key.


3.3 Managing More than One Call



During a call, you can make or take a second call while putting the current call on hold. Then, you can choose to swap between the two callers or set up a conference call between all three parties.

NOTE

- You may need to register for the "call waiting" service with your mobile phone service provider and set your Smartphone accordingly.

Holding a Call to Take a Second Call


If there is another incoming call when you are talking on the Smartphone, press the **Talk** key  or **Accept** soft key to place the first call on hold, and answer the second call.

To end the first call and answer the second call, press the **End** key , and then press the **Talk** key  or **Accept** soft key.

Rejecting the Second Call

Press the **Reject** soft key to reject the second call and keep your current call in progress.

Holding a Call to Make a Second Call

When you are talking on the Smartphone, you can press the **Hold** soft key to place the first call on hold and dial a second call. When you have finished the second call, press the **End** key  to go back to the first call.

Swapping between Calls

When you have put a call on hold and made or taken another call as described earlier, you can change between the calls by pressing the **Swap** soft key.

Setting up a Conference Call


When multiple calls are in progress, you can press the **Menu** soft key and select **Conference** to set up a conference call.

3.4 In-call Options

Adjusting the Phone Volume

To adjust the volume during a call, simply press the Volume control on the side of your Smartphone.

Speakerphone

To use the speakerphone function as a hands-free solution, press and hold the **Talk** key . The other party's voice will be magnified and sent out through the speaker. You can then talk without having to hold the Smartphone against your cheek.

◀ NOTE ▶

- When using the speakerphone function, always talk in turns. If you talk when the other party is still talking, the other party cannot hear you clearly.

In-call Options

While a call is in progress, you can press the **Menu** soft key to access menu commands for common tasks. The following table shows the commands available when a call is in progress. Some of these commands are available only when multiple calls are in progress or during a conference call.

In-call Options	Function
End	Disconnects the call.
Hold	Puts the active call on hold.
Unhold	Activates the call on hold.
Swap	Switches between two calls.
Save to Contacts	Creates a contact card for the caller.
Conference	Joins together all existing calls, if you have subscribed to this service.
Private	Breaks one call out of a conference and make it active while the rest of the conference is on hold.
Speakerphone	Increases the volume of the earpiece.
Mute	Mutes the microphone for the active call; the other party will not hear anything you say, but you can still hear the other party.
Unmute	Turns the microphone back on for the active call.

3.5 Call History

Call History displays calls that you have made, received, and missed. Each entry in Call History contains the start time of the call, the duration, the caller's name, if available, and the caller's number. The oldest calls are automatically deleted from the list to make room for the newest calls.

Viewing Call History



On the Home screen, scroll to the top left corner to select the **Call History** shortcut. Or, you can press the Start soft key and select **Call History**.

Call History Menu Commands

In Call History, press the **Menu** soft key to access the command list.

Call History Menu	Function
Find Contact	Opens the contact card of the selected entry in Call History (if the contact is already in the contact list).
E-mail	Opens Messaging so you can send an e-mail message to the selected entry in Call History (if the contact is already in the contact list and contains an e-mail address).
View Timers	Displays detailed information regarding the length of your last call, the total number of calls made and received, calls by type, and a lifetime counter. Call Timers is useful when you want to keep track of your calling patterns, for example to determine what type of calling plan to subscribe to and help you estimate your monthly billing.
Delete	Deletes the selected entry in Call History.
Delete List	Deletes all entries in Call History.
Save to Contacts	Stores the selected entry to Contacts. When you select Save to Contacts , the Select Contact screen appears. In the <New Item> field, press the Navigation stick, scroll to the desired field, and press the Insert soft key to paste the number to the field. Enter the information in the other fields, and press the Done soft key.
Filter	Allows you to separately view Missed Calls , Incoming Calls , or Outgoing Calls .

3.6 Speed Dial

You can create one- or two-digit speed dials. When you press a speed dial, Smartphone automatically dials the associated phone number, opens an e-mail message using the associated address, or goes to the associated Web page. You can create speed dials from 2 to 99. Speed dial 1 is reserved for your voice-mail number, and is automatically configured in your speed dial settings.

NOTE


- You can create a speed dial only for a phone number, e-mail address, or Web page address that is stored in Contacts. You cannot create a speed dial for a contact stored in the SIM card.
- For information on voice mail, see section 3.7.

Creating a Speed Dial

1. On the **Home** screen, press the **Start** soft key and select **Contacts**.
2. Select the desired contact and open the contact card to create a speed dial.
3. Select the phone number, Web page address or e-mail address to create a speed dial.
4. Press the **Menu** soft key, and select **Add Speed Dial**.
5. Under **Keypad assignment**, enter the speed dial number to use.
6. Press the **Done** soft key.

On the **Home** screen, press and hold the number on the keypad that you have assigned as a speed dial for the phone number, e-mail address, or Web page. If the speed dial is two digits, press the first digit, and press and hold the second digit.

Editing a Speed Dial

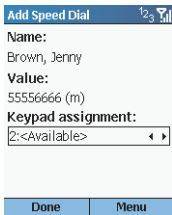

Add Speed Dial 123

Name:
Brown, Jenny

Value:
55556666 (m)

Keypad assignment:
2:<Available>

Done **Menu**

1. On the Home screen, press the **Start** soft key and select **Speed Dial**.
2. Select an entry from the speed dial list.
3. Press the **Edit** soft key, or the **Menu** soft key then select **Edit**.
4. Go to **Keypad assignment**, and push the Navigation stick left/right to select a new speed dial number to use.
5. Press the **Done** soft key.

Deleting a Speed Dial

1. On the **Home** screen, press the **Start** soft key and select **Speed Dial**.
2. Select an entry from the speed dial list.
3. Press the **Menu** soft key and select **Delete**.

◀ NOTE ▶

- When you delete a contact that is stored in Contacts, the speed dial you have set for this contact still exists in the speed dial list. You need to delete the speed dial from Speed Dial as well.

Viewing the Speed Dial List

On the **Home** screen, press the **Start** soft key and select **Speed Dial**.

When you select an entry in the speed dial list, you can press the **Go** soft key or use the **Menu** commands to dial the selected number, open a new e-mail message, go to the Web page, display the contact card, or delete an entry.

◀ NOTE ▶

- To view speed dials only, press the **Menu** soft key and select **Filter** → **Speed Dial**.

3.7 Voice Mail

Voice Mail is a service provided by your service provider. To use this service, you have to apply for it and obtain the phone number used for accessing the voice mail. You can call your voice mailbox by using speed dial 1, which is reserved for your voice-mail number.

Setting up the Voice Mail Phone Number

1. On the **Home** screen, press the **Start** soft key and select **Settings** → **Phone**.
2. Select **Call Options**.
3. Under **Voice mail number**, enter the number for voice mail. This number will be automatically assigned Speed Dial 1.

Checking Your Voice Mail

On the **Home** screen, press and hold the number **1** to call the voice mail of your service provider.

3.8 International Call

To enter an international country code

To make an international call, you must include a country code at the beginning of the dialing sequence for the phone number. The country code appears first, followed by a plus (+) sign, and is separated from the rest of the number sequence. If you are making an international call, press and hold the **0** key until the + sign appears. This operation also applies to Contacts and manual dialing.

To insert a 3-second pause in a dialing sequence

Some international calls require a three-second pause in the dialing sequence for the call to process successfully.

When you are entering the phone number in Contacts, place the cursor where you want to insert a three-second pause, press the **Menu** soft key, and select **Insert Pause**. The letter "p" will appear in the number to show where the three-second pause will occur in the dialing sequence.

To inserting a manually pause in a dialing sequence

There may be phone numbers that require a pause longer than three seconds in the dialing sequence. For these cases, you can pause as long as you want and manually continue the dialing sequence using the **Talk** key.



When you are entering the phone number in Contacts, place the cursor where you want the dialing sequence to pause before proceeding, press the **Menu** soft key, and select **Insert Wait**. The letter "w" will appear in the number to show where the pause will occur in the dialing sequence.

To resume dialing after reaching a manual pause, press the **Talk** key.

3.9 Turning off the Radio

Under some situations (on the airplane, for example), you will need to turn off the wireless radio of your Smartphone. After turning off the radio, you cannot use the phone function of your Smartphone, but you can still use other functions such as camera, Calendar, games, Media Player, etc.

To turn off the radio

1. Press and hold the **End** key  until the Quick List appears.
2. Select **Flight mode**. The status icon changes to  and the message "Flight Mode" appears on the Home screen.

To turn on the radio

1. Press and hold the **End** key  until the Quick List appears.
2. Select **Flight mode off**.

◀ NOTE ▶

- If you need to turn on the radio again after turning it off, please wait for 20 seconds before turning it on.
- When you turn off the radio, it remains off when you next turn on your Smartphone.

4 Setting up Your Smartphone

You can customize the settings on your Smartphone for the way you work. For example, you can change the sounds or use your own sounds for ring tones, use your own image for the Home screen background, set up "call forwarding" and "call waiting" to manage your calls more efficiently, and more. This chapter tells you how to set up your Smartphone.

This chapter includes:


4.1	Settings (Page 1).....	54
4.2	Settings (Page 2).....	65
4.3	Settings (Page 3).....	76

4.1 Settings (Page 1)

On the **Home** screen, press the **Start** soft key and select **Settings** to access Settings, which contains three setting pages.

To help you locate the item you want to set up, the following table shows the setting items and sub items on page 1, and then describe all the items in sequence.

Setting Items (Page 1)

Settings	
1 Phone	
2 Sounds	
3 Profiles	
4 Home Screen	
5 About	
6 Accessibility	
7 Beam	
8 Bluetooth	
9 More...	
Done	

1 Phone	1 Call Barring	3 Profiles	1 Normal
	2 Call Forwarding		2 Silent
	3 Call Options		3 Meeting
	4 Call Waiting		4 Outdoor
	5 Caller ID		5 Automatic
	6 Channels		6 Headset
	7 Fixed Dialing		7 Car
	8 Networks		8 Speakerphone
2 Sounds	Ring tone	4 Home Screen	Home screen layout
	Reminders		Color scheme
	New e-mail		Background image
	New text message	Time out	
	New voice message	5 About	
	New instant message	6 Accessibility	System font size
	New channel message		Multipress time out
	Alarm clock	Confirmation time out	
SIM toolkit message	In-call alert volume		
Exclamation	7 Beam		
Question	8 Bluetooth		
Warnings			
Keypad control			

Phone

You use Phone settings to set options such as call forwarding, call waiting, and caller ID. These settings are related to the services you applied with your service provider.

Call Barring

To block incoming or outgoing calls

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Phone** → **Call Barring**.
2. In **Block incoming calls** or **Block outgoing calls**, scroll to the option you want: **Off**, **When Roaming**, or **All Calls**.
3. Select **Done**. You will not be able to receive or make calls according to the options that you selected.

Call Forwarding

To forward all or selected calls to another number

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Phone** → **Call Forwarding**.
2. Select the condition under which to forward calls as follows:
 - **Unconditional** to forward all calls
 - **No Reply** to forward calls when you do not answer
 - **Busy** to forward calls when your line is busy
 - **Unavailable** to forward calls when your phone is off or out of service range
3. Select **Enable call forwarding**.
4. Enter the phone number to which calls are to be forwarded.
5. Select **Done**.

Call Options

To set up various call options

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Phone** → **Call Options**.
2. The available options are:
 - **An key answer** allows you to press any key to answer an incoming call.
 - **Show SIM contacts** displays SIM contacts when you open Microsoft Contacts.
 - **Voice mail number** allows you to enter your voice-mail phone number.
 - **SMS service center** allows you to enter your SMS service center phone number.
 - **Country code** allows you to specify your country code and area code.
3. Select **Done**.

Call Waiting

To turn call waiting notifications on or off

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Phone** → **Call Waiting**.
2. Select **Provide call waiting notifications**.
3. Select **Done**. When you receive a call while you are already on a call, you will be notified.

Caller ID

To configure caller ID

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Phone** → **Caller ID**.
2. In **Provide my caller ID to**, scroll to the option you want: **Everyone**, **No one**, or **Only my contacts**.
3. Select **Done**. The selected callers will be able to see your name and phone number information when you call them.

Channels

Your service provider may provide add-on services such as cell broadcast. With this service, you can receive a variety of information such as weather forecast, stock, and traffic.

To configure cell broadcast

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Phone** → **Channels**.
2. Select the options you want.
3. Select **Done**.

Fixed Dialing

To limit calls to specific area codes or phone numbers

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Phone** → **Fixed Dialing**.
2. Select **Enable fixed dialing**.
3. Select **Menu** and then **Edit Numbers**.
4. Select **Menu** and then **Add**.
5. Enter the phone number or area code to which to restrict calling and select **Done**.
6. Repeat steps 4 and 5 to add more numbers as necessary. You will be able to make and receive calls only to and from the numbers or area codes specified.

Networks

To select networks

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Phone** → **Networks**.
2. In **Network selection**, scroll to the option you want: **Manual** or **Automatic**.
3. If you selected **Manual**, select **Menu** and then **Select a Network**. Select the network and select **Done**. The Smartphone will use the selected network.
If you selected **Automatic**, select **Menu** and then **Preferred Networks**. Select the networks to use and select **Done**. The Smartphone will automatically use the preferred networks.

To add a network

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Phone** → **Networks**.
2. Select **Menu** and then **Preferred Networks**.
3. Select **Menu** and then **Add**.
4. Select the network you want to add.
5. Select **Select** and then **Done**.

To create a custom network

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Phone** → **Networks**.
2. Select **Menu** and then **Preferred Networks**.
3. Select **Menu** and then **Add Custom**.
4. Enter your network code. Valid network codes are five or six digits and numeric.
5. Select **Done**.

Sounds

You can use Sounds settings to customize the sounds for ring tones, notifications, reminders, and other events. You can also turn the tones that you hear when pressing number keys on or off, and specify the type of tone your Smartphone sends over the network.

Specifying the Sound for an Event

To specify the sound for an event

You can specify the sound to use for an event or elect not to use a sound. You can select one of the sounds included with your Smartphone, or you can add your own sound to use.

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Sounds**.
2. Scroll to the event for which to specify a sound.
3. Scroll left/right to select a sound; or, press the Navigation stick to select from the full list. When you select a sound, the sound plays. To play it again, select **Menu** and then **Play**. Select **None** if you don't want to hear a sound for the event.

To add your own sound

1. Connect your Smartphone to your desktop computer using a USB connection.
2. On your desktop computer, copy the sound file you want. The file format must be .wav, .mid, .wma, or .mp3.
3. In ActiveSync on your desktop computer, click **Explore** and then double-click **My Smartphone**.
4. Do one of the following:
 - To save the sound on your phone, double-click **Storage**, double-click **Application data**, double-click **Sounds**, and then paste the sound file into the Sounds folder.
 - To save the sound on your storage card, double-click **Storage Card**, double-click **My Documents**, and then paste the sound file into the **My Documents** folder.

You can now specify this sound for a ring tone, notification, or reminder on your Smartphone, as described earlier. For ring tones, you can use sounds in either .wav, mid, or .wma , or mp3 file format.

To delete a sound

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Sounds**.
2. Select **Menu** and then **Delete Sounds**.
3. Select the sound to delete.
4. Select **Yes**.

◀ NOTE ▶

- You can use sounds in the .wma file format as ring tones only; you cannot use .wma files for notifications or reminders.
- You can only delete sounds that you added. You cannot delete sounds included with the Smartphone.

Changing Tones

The Smartphone generates tones that represent the numbers you press on the keypad. It sends these tones over the network to communicate with other devices, such as answering machines and voice mail systems. At the same time, it plays the tones so that you can hear them.

If you want, you can turn off the tones that you can hear or else change them to clicks. When you do this, the phone still sends tones across the network, and they are audible to devices or people on the other end of the line.

 
To change or turn off tones

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Sounds**.
2. In **Keypad control**, scroll to the option you want—**Tone**, **Click**, or **None**.
3. Select **Done**.

To turn on tones

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Sounds**.
2. In **Keypad control**, scroll to **Click**.
3. Select **Done**.

Profiles

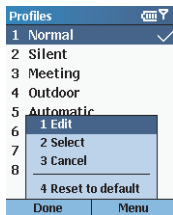

You can use Profiles settings to change how the Smartphone notifies you of events such as incoming calls, approaching appointments, or arriving messages.

The Smartphone includes eight profiles. You can use the profiles as-is, or you can edit and rename them to suit your needs. For each profile, you can choose the ring type and volume, the alarm type and volume, the notification type and volume, and the system sound volume.


You can quickly select the profile suited to your current situation. For example, when you are attending a meeting, you can choose the Meeting profile, which silences the ring of your phone and

provides visual notifications only. When you are waiting for an important call, you can choose the Outdoor profile, which makes your phone ring loudly.

The following table describes the profiles that are included with the Smartphone. The default profile is the Normal profile.

Profile Name	Auto-answer Time	Ring Type	Ring Volume	Alarm Type	Alarm Volume	Notification Type	Notification Volume	System Sound Volume
Normal	--	Ring	3	Increasing	3	Play sound	3	3
Silent	--	Vibrate	Off	Vibrate	Off	Vibrate	Off	Off
Meeting	--	Vibrate	1	Play sound	1	Play sound	1	Off
Outdoor	--	Ring	Loud	Increasing	Loud	Play sound	Loud	Loud
Automatic	Toggles between Normal and Meeting, based on your calendar.							
Headset	When you connect the hands-free phone headset, your Smartphone will automatically use this profile.							
	Never	Ring	3	Increasing	3	Play sound	3	3
Car	When you connect the car kit, your Smartphone will automatically use this profile.							
	Never	Ring	4	Increasing	4	Play sound	4	4
Speakerphone	When you use the speakerphone function, your Smartphone will automatically use this profile.							
	--	Ring	Loud	Increasing	Loud	Play sound	Loud	Loud

To change the current profile

Press and hold the **End** key  until the Quick List appears. The list on the first screen contains four modes: **Normal**, **Silent**, **Meeting** and **Outdoor**. If you want to select from other modes, go to the next screen to select a mode.

To editing a profile

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Profile**.
2. Scroll to the profile to edit.
3. Select **Menu** and then **Edit**.
4. Modify the settings and select **Done**.

◀ NOTE ▶

- To cancel without saving changes, select **Cancel**.
- To revert to the default profile settings, select **Menu** and then **Reset to Default**.

Home Screen

You can use Home Screen settings to change the Home screen layout, the color scheme, the background image, and the time delay before the Home screen appears when the Smartphone is idle.

To change the Home screen appearance

You can change the Home screen layout, color scheme, and background image to any of the available options instead of using the default settings.

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Home**.
2. In Home **screen layout**, **Color scheme**, and **Background image**, scroll to the options you want.
3. Select **Done**. The image appears behind the text on the Home screen.

To add your own background image

1. Connect your Smartphone to your desktop computer using a USB connection.
2. On your desktop computer, copy the image file you want. The file format must be .gif, .jpg, or .bmp. For best results, use images with a 176 x 200 screen resolution to fit on the screen.
3. In ActiveSync on your desktop computer, click **Explore** and then double-click **My Smartphone**.
4. Double-click **Storage**, double-click **Application data**, double-click **Home**.
5. Paste the image file into the Home folder.

You can then use this image for your Home screen, as described earlier.

To specify the idle time before the Home screen appears

1. On the Home screen, press the **Start** soft key, and select **Settings → Home**.
2. In **Time out**, scroll to the amount of time for the Smartphone to be idle before the Home screen automatically appears.
3. Select **Done**.

About

The About screen displays information about the Smartphone's operating system, including version numbers and copyright information, and the available storage space, memory, etc.

On the Home screen, press the **Start** soft key, and select **Settings → About** to view the About screen.

Accessibility

You can use Accessibility settings to configure the system font size, multipress time out, confirmation time out, and in-call alert volume.

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Accessibility**.
2. Select the options you want, as follows:
 - **System font size** to set the size of the font on your screen.
 - **Multipress time out** to set the length of time between keypresses when entering text in Multipress mode.
 - **Confirmation time out** to set the delay before an unconfirmed action times out.
 - **In-call alert volume** to set the volume of sounds that play when you are on a call.
3. Select **Done**.

Beam

If you want to receive infrared beams from other devices, you must turn on the option to receive incoming beams.

On the Home screen, press the **Start** soft key, and select **Settings** → **Beam**. Select **Receive incoming beams**. The Smartphone receives all incoming beams from other devices until you clear this option.


Bluetooth

Your Smartphone does not have an internal Bluetooth chipset, by the way Bluetooth support is disable.

4.2 Settings (Page 2)

To help you locate the item you want to set up, the following table shows the setting items and sub items on page 2, and then describe all the items in sequence.

Setting Items (Page 2)

Settings 			
1 Certificates		1 Certificates	1 Personal
2 Data Connections			2 Root
3 Date and Time		2 Data Connections	Internet connection
4 Owner Information			Work connection
5 Power Management			Wap connection
6 Regional Settings			Secure WAP connection
7 Remove Programs			MMS Connection
8 Security		3 Date and Time	Time zone
9 More...			Date
Done			Time
			Alarm
			Alarm time
		4 Owner Information	Name
			Telephone number
			E-mail address
			Notes
		5 Power Management	Main battery
			Backlight time out
			Display time out
		6 Regional Settings	Language
			Locale
			Short data style
			Long date style
			Time format
			Positive number
			Negative number
			Positive currency
			Negative currency
		7 Remove Programs	
		8 Security	1 Enable Phone Lock
			2 Disable SIM Lock
			3 Change PIN
			4 Change PIN2

Certificates

On your Smartphone you can add and delete public key certificates. These certificates help establish your identity when you log on to a secure network, such as a corporate network. Certificates also help establish the identity of other computers, such as servers, with which you connect. This helps prevent unauthorized users from accessing your device and its information.

You can store two types of certificates on your phone: personal certificates that establish your identity, and root certificates that establish the identity of servers with which you connect. Your device may include a set of preinstalled certificates.

To view and delete certificates

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Certificates**.
2. To view the list of personal certificates, select **Personal**.
3. Do any of the followings:
 - To view the details about a certificate, select it in the list.
 - To view the list of root certificates, select **Root**.
 - To delete a certificate, scroll to it in the list, select **Menu**, and then select **Delete**.

Data Connections

You can use Data Connections settings to create dial-up, Virtual Private Network (VPN), GPRS, and proxy connections so that you can connect to the Internet or your corporate network. By using a data connection, you can browse the Web/WAP, download e-mail, send/receive media messages (MMS), chat by using MSN[®] Messenger, or synchronize remotely with an Exchange Server. Check with your service provider to see if a data connection has already been set up for you, and if over-the-air configuration is supported.

Working with GPRS Connections

GPRS is a high-speed transmission through the mobile phone network, which features "always on".

If you subscribe to GPRS (General Packet Radio Services), you can set up a GPRS connection to gain access to your corporate network, the Internet, or the WAP network. You can also send/receive media messages via a GPRS connection. This is faster than a dial-up connection. The available services depend on your subscription details. Such services are charged.

◀ NOTE ▶

- You can also use your Smartphone as a GPRS modem for a desktop computer (See section 8.3 for more information).



To create a GPRS connection

Your Smartphone may come with customized GPRS connection settings for you to select. In addition, when you subscribe the GPRS service, your service provider may have already set up a GPRS connection for you. If you want to manually create a GPRS connection, follow this procedure:

1. Obtain the following information from your service provider: the APN (Access Point Node) name and DNS (Domain Name Servers) name (if required).
2. On the Home screen, press the **Start** soft key, and select **Settings** → **Data Connections**.
3. Press the **Menu** soft key and select **Edit Connections**.
4. Select **GPRS Connections**.
5. Press the **Menu** soft key and select **Add**.
6. Enter the requested information as follows:
 - In **Description**, enter a name for the connection.
 - In **Connects to**, scroll to the type of network (Internet, work, WAP network, or MMS) to which you will connect via this new connection.
 - In **Access point**, enter the information provided by your service provider or system administrator.
 - In **User name**, enter your user name for the GPRS network.
 - In **Password**, enter your password.

- In **Primary DNS**, enter the primary domain naming system (DNS) address, as provided by your network administrator.
 - In **Secondary DNS**, enter the secondary DNS address, as provided by your system administrator.
 - In **IP address**, enter the Internet Protocol (IP) address, as provided by your system administrator.
7. Press the **Done** soft key.

To select the GPRS connection for Internet, work, WAP connection, and MMS connection

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Data Connections**.
2. In the respective connection settings (**Internet connection**, **Work connection**, **WAP connection**, **Secure WAP connection**, and **MMS Connection**), select the GPRS you want to use.
3. Select **Done**. When you open a program that requires a GPRS connection, the Smartphone uses the connection you have selected. The  icon indicates that GPRS is being used; you can press the **End** key  to stop the GPRS connection.

Working with Dial-up Connections

You can create a dial-up connection to connect remotely to the Internet, a Wireless Application Protocol (WAP) network, or your corporate network. Then, when you open a program that is configured to use this connection, the Smartphone uses it to automatically connect to the network. For example, you can create an Internet connection and then configure Pocket Internet Explorer to use it. Then, when you start Internet Explorer and browse to a Web page on the Internet, the Smartphone automatically connects to the Internet by using your Internet connection.

To create a dial-up connection

Your Smartphone comes with customized dial-up connection settings for you to select. If you want to manually set up a connection, follow this procedure:

1. Obtain the following information from your ISP: the number to dial up, the Domain name, the user name and password.
2. On the Home screen, press the **Start** soft key, and select **Settings** → **Data Connections**.
3. Press the **Menu** soft key and select **Edit Connections**.
4. Select **Dial-up Connections**.
5. Press the **Menu** soft key and select **Add**.
6. Enter the requested information as follows:
 - In **Description**, enter a name for the connection.
 - In **Connects to**, scroll to the network.
 - In **Phone number**, enter the phone number you use to dial the network.
 - In **User name**, enter your network user name.
 - In **Password**, enter your password.
 - In **Domain**, enter the domain name, if required.
7. Press the **Done** soft key.

◀ NOTE ▶

- If you subscribe to GPRS, you can set up a GPRS connection to access your corporate network or the Internet, which is faster than a dial-up connection. For instructions, see "Working with GPRS Connections."

Working with VPN Connection

If your company has set up a virtual private network (VPN), you can create a VPN connection to gain access to your corporate network over an Internet connection.

To create a VPN connection

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Data Connections**.
2. Select **Menu** and then **Edit Connections**.
3. Select VPN Connections.
4. Press the **Menu** soft key and select **Add**.
5. Enter the requested information as follows:
 - In **Description**, enter a name for the connection.
 - In **VPN type**, scroll to the type of VPN.
 - In **Server**, enter the VPN server name.
 - In **Connects from**, scroll to the type of network from which you will connect to the VPN (typically **The Internet**).
 - In **Connects to**, scroll to the type of network to which you will connect (typically **My Corporate Network**).
 - In **User name**, enter your user name for the VPN.
 - In **Password**, enter your password.
 - In **Domain**, enter the domain name, if required.
 - If you selected **IPSec** in **VPN type**, In **IPSec authentication**, select the type of authentication: **Pre-Shared Key** or **Certificate**.
 - If you selected **Pre-Shared Key** in **IPSec authentication**, in **IPSec Pre-shared key**, enter the key.
6. Select **Done**.

Working with Proxy Connections

You can use a proxy connection to gain access to the Internet over an existing connection to your corporate network.

To create a proxy connection

Your Smartphone comes with customized proxy connection settings for you to select. If you want to manually set up a connection, follow this procedure:

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Data Connections**.
2. Select **Menu** and then **Edit Connections**.
3. Select **Proxy Connections**.
4. Select **Menu** and then **Add**.
5. Enter the requested information as follows:
 - In **Description**, enter a name for the connection.
 - In **Connects from**, scroll to the type of network from which you will connect.
 - In **Connects to**, scroll to the type of network to which you will connect.
 - In **Proxy (name:port)** enter the proxy server name and port number in the form: *server name:port number*.
 - In **Type**, scroll to the type of proxy connection to create.
 - In **User name**, enter your user name for the network to which you will connect.
 - In **Password**, enter your password.

Editing or Deleting a Connection

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Data Connections**.
2. Select **Menu** and then **Edit Connections**.
3. Select **xxx Connections** (where *xxx* means the type of connection) and scroll to the connection to edit or delete.

4. To edit the connection, select **Menu** and then **Edit**. Change any information and select **Done**.

To delete the connection, select **Menu** and then **Delete**. Select **Yes**.

Adding a URL Exception

Some URLs for Web pages on your company intranet may use periods, for example: intranet.companyname.com. To view these pages in Pocket Internet Explorer, you must create a URL exception. Otherwise, the pages will not display. (You do not need to create URL exceptions for Internet URLs).

To add a URL exception

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Data Connections**.
2. Select **Menu** and then **Work URL Exceptions**.
3. Select **Menu** and then **Add**.
4. In **URL Pattern**, enter the URL and select **Done**. Separate multiple URLs with a semicolon (;).

To edit or delete a URL exception

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Data Connections**.
2. Select **Menu** and then **Work URL Exceptions**.
3. Select the URL to edit or delete.
4. To edit the URL, change any information and select **Done**.
5. To delete the connection, select **Menu** and then **Delete**. Select **Yes**.

Date and Time

You can use Date and Time settings to change the local time zone and the current date and time, and to set the alarm.

To set the date and time

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Data and Time**.
2. In **Time Zone**, scroll to your time zone.
3. In **Date**, scroll to the month, date, or year and edit the information.
4. In **Time**, scroll to a number and edit it.
5. Select **Done**.

To set the alarm

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Data and Time**.
2. In **Alarm**, scroll to **Off** or **On** to turn the alarm off or on.
3. In **Alarm time**, specify the time for the alarm to go off.
4. Select **Done**.

Owner Information

You can use Owner Information settings to record personal information, such as your name, phone number, and e-mail address. This is helpful, for example, in the event that you lose your Smartphone, so that you can be contacted if it is found.

On the Home screen, press the **Start** soft key, and select **Settings** → **Owner Information** to access the Owner Information setting items.

Power Management

You can use Power Management to configure settings that prolong battery life, such as shortening the amount of time before the backlight and display turn off when the Smartphone is idle. You can also check the battery level.

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Power Management**.
2. **Main battery** displays the amount of battery life remaining.
3. In **Backlight time out**, scroll to the amount of time for the Smartphone to be idle before the backlight turns off.
4. In **Display time out**, scroll to the number of minutes for the Smartphone to be idle before the display turns off.
5. Select **Done**.

Regional Settings

You can use Regional Settings to change the language, date, and time style, as well as number and currency formatting options.

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Regional Settings**.
2. In **Language**, scroll to the language to use when entering information.
3. In **Locale**, scroll to your locale. This changes the remaining settings appropriately for your locale.
4. Configure other settings in the same manner.
5. Select **Done**.

◀ NOTE ▶

- After changing the language, you must turn your device off and on for the change to take effect.

Remove Programs

You can use Remove Programs to remove programs installed on the Smartphone, with the exception of core programs that came with the Smartphone, for example, Contacts, Calendar, and Internet Explorer.

◀ NOTE ▶

■ Be careful when you remove programs.

1. On the Home screen, press the **Start** soft key, and select **Settings** → **Remove Programs**.
2. Scroll to the program you want to remove and then press the Navigation stick. You can also press the **Menu** soft key to select **Remove**.
3. Press the **Yes** soft key to remove the program.

Security

 
Security settings are used to enable phone lock and SIM lock. (For details, see section 2.4).

On the Home screen, press the **Start** soft key, and select **Settings** → **Security** to access the Security setting items.

4.3 Settings (Page 3)

To help you locate the item you want to set up, the following table shows the setting items and sub items on page 3, and then describe all the items in sequence.

Setting Items (Page 3)

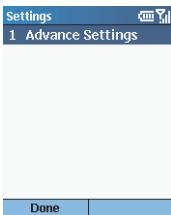

1 Advance Settings	Brightness setting
	Keypad LED on
	Only End key wakeup

Advance Settings

On the Home screen, press the **Start** soft key, and select **Settings** → **Advance Settings** to access the Advance Settings items.

- To adjust brightness setting, scroll left/right to adjust the sliding bar.
- To enable or disable the keypad light, check or uncheck the **Keypad LED on** box.
- To specify the **End** key as the key for waking up the Smartphone from sleep mode, check the **Only End key wakeup** box. If the box is unchecked, you can press any key to wake up the Smartphone.

5 Messaging Features

You can use your Smartphone to send and receive e-mail, text messages, media messages, and instant messages. This chapter describes how to work with messages on your Smartphone.

◀ NOTE ▶

- Not all service plans include sending text or media messages. If you are not sure what your service plan supports, ask your mobile phone service provider.

This chapter includes:

5.1	Understanding Messaging Types and Accounts	78
5.2	Using E-Mail Messages.....	83
5.3	Using Text Messages	95
5.4	Using Media Messages	101
5.5	Working with Message Folders	113
5.6	MSN Messenger.....	115

5.1 Understanding Messaging Types and Accounts

Your Smartphone supports e-mail messaging, text messaging (SMS), media messaging (MMS), and instant messaging. You can work with e-mail, text messages, and media messages from Messaging. You can use instant messaging features from MSN Messenger. Configuring and using these features is described later in this chapter.

Messaging Types

E-Mail Messaging

You can send and receive e-mail messages in three ways:

- By synchronizing your Outlook E-mail Inbox folder with Microsoft® Outlook® on your desktop computer or your Microsoft® Exchange server.
- By connecting to a POP3 or IMAP4 e-mail server to send and receive Internet e-mail messages.
- Use Pocket Internet Explorer to view Web-based e-mail.

Text Messaging (SMS)

You can send and receive text messages up to 160 characters in size. If a text message is longer, it is automatically sent in chunks as several small text messages, and is then unified as one text message after all of the small text messages have been received.

The advantages of text messages include the following:

- Text messages are sent instantly.
- Text messages can be sent or received at any time, including during a voice or data call.
- Most mobile phones support text messages, so most recipients can read text messages that you send.

NOTE

- You cannot synchronize text messages with your desktop computer, and you cannot use text messages to send or receive attachments or voice notes.

Media Messaging (MMS)

Media messages are composed of one or more pages, and each page can contain up to one picture, text region, and sound. In a multi-page message, each page is displayed for five seconds before automatically advancing to the next page. Thus, when the recipient opens your media message, the experience is similar to watching a simple slideshow.

The advantages of media messages include the following:

- Media messages essentially "play" the picture or sound you attach to the message, so the recipient does not have to download the file(s) first.
- Media messages can be sent or received any time your phone is turned on and not in a voice or data call.

Instant Messaging

You can use MSN® Messenger on the Smartphone to send and receive instant messages. MSN Messenger on the Smartphone provides the same chat environment as MSN Messenger on your desktop computer. For example, you can chat with a single MSN Messenger contact, or with several contacts at once. You can switch between active chats, block contacts, and configure display settings, such as your name and current status (Away, Online, and so on).

 
Messaging Accounts

Different types of messages are created and stored in different messaging accounts. Your Smartphone already includes three accounts: **Media Messages**, **Text Messages**, and **Outlook E-Mail**.

You can use up to eight different messaging accounts with the Smartphone. For example, you may want to set up an account to send and receive e-mail messages by using Internet e-mail. (See "Setting up E-Mail Accounts" in section 5.2).

Opening an Account

To view the list of accounts

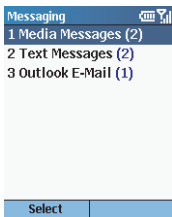

On the Home screen, press the **Start** soft key and select **Messaging**.

The list of accounts displays with the number of unread messages in the Inbox of each account shown in parentheses.

You can open an account by selecting it in the list.

 
To quickly move between accounts

If you have an account open, you can quickly switch to another account by scrolling right or left. Or, you can select **Menu** and then **Switch Accounts**.

Working with Accounts

To change account options

1. On the Home screen, press the **Start** soft key and select **Messaging**.
2. Select any account.
3. Select **Menu** and then **Options**.
4. Select the type of options to change. The table below describes the six options.

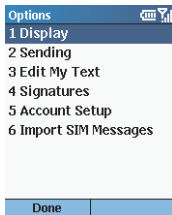5. Change the options and select **Done**.

Messaging Option	Description
Display	Specifies how the message list is displayed. Check Show date and time in the message list if you want the option. In Sort messages by , select Date received , Subject , or Sender for the sorting type and select Descending or Ascending for the sorting order.
Sending	Specifies the options when sending a message. Check Include copy of original message when replying to e-mail if you want the option. Check Save copies of sent items if you want the copies of sent items to be saved in the Sent Items folder of your e-mail and media messaging accounts. Check Use Unicode when necessary if you want the option.
Edit My Text	Changes the predefined text to the words or phrases that you frequently use in your messages. To edit the text, scroll to the text to edit, enter the new text, and press the Done soft key.

Messaging Option	Description
Signatures	<p>Specifies a signature to be automatically inserted into e-mail and text messages that you send.</p> <p>In Select an account, select Outlook E-Mail or Text Messages. Check Use signature with this account.</p> <p>To insert a signature in every message you send, select Include when replying and forwarding. Otherwise, a signature is inserted only in new messages.</p> <p>Replace the text in the Signature box with a signature to insert, and select Done. The signature is inserted into messages that you send from this account.</p> <p>NOTE: To stop inserting a signature in messages, repeat the above procedure, but clear Use signature with this account check box.</p>
Account Setup	<p>Sets up your own account(s).</p> <p>To add an account, see "Setting up E-Mail Accounts" in section 5.2. To edit or delete an account, see descriptions below.</p>
Import SIM Messages	<p>Imports text messages (SMS) from your SIM card to the Inbox folder of your Text Messaging account. (See "Importing Text Messages" in section 5.3 for more information).</p>

To delete or edit an account

1. On the Home screen, press the **Start** soft key and select **Messaging**.
2. Select any account.
3. Press the **Menu** soft key → **Options**.
4. Select **Account Setup**.
5. Scroll to the account to delete or edit.
6. Press the **Menu** soft key → **Delete** or **Edit**.

NOTE

- You can only delete the accounts you added.
- You cannot edit **Text Messages** and **Outlook E-Mail** accounts.
- For detailed information on editing the **Media Messages** account, see section 5.4.

5.2 Using E-Mail Messages

Setting up E-Mail Accounts

Setting up Outlook Synchronization

Your Smartphone includes an **Outlook E-Mail** account. You can synchronize this account with Outlook on your desktop computer or Exchange Server. When you do this, messages in the Outlook E-mail Outbox on the Smartphone are sent, and messages you have received in Outlook are copied to the Outlook E-mail account folders on your Smartphone. Only those folders that are marked for synchronization on your Smartphone are synchronized in this manner.

Setting up the Smartphone for synchronization is described in "Synchronizing Information" in section 7.3. Specifying which ActiveSync folders to synchronize is described in "Mark a folder for synchronization" in this chapter.

◀ NOTE ▶

- To synchronize remotely, you must also configure a data connection, as described in "Data Connections" in section 4.2.

Setting up an Internet E-Mail Account

Another way to send and receive e-mail messages is by using Internet e-mail. To do this, you must:

- Have an Internet e-mail account.
- Configure a data connection on the Smartphone for connecting to the Internet. (For more information, see "Data Connections" in section 4.2).
- Set up an Internet e-mail account in Messaging.

To set up an Internet e-mail account, you need to know which type of e-mail server hosts your mailbox: IMAP4 or POP3. You also need to know the name of your incoming and outgoing e-mail servers. If you are not sure, ask your service provider or network administrator. In addition, you need to know your e-mail user name and password, and if required, your domain name.

To set up Internet E-mail

1. On the Home screen, press the **Start** soft key and select **Messaging**.
2. Select any account.
3. Press the **Menu** soft key and select **Options**.
4. Select **Account Setup**, press the **Menu** soft key and select **New**.
5. In **Your name**, enter your display name for e-mail messages.
6. In **E-mail address**, enter the e-mail address for this account.
7. Select **Attempt to obtain e-mail settings from the Internet** if you want to set up your account automatically. Select **Next**. If your account could not be set up automatically or you want to set it up manually, select **Next** and continue with step 7.
8. In **User name**, enter your user name. This is usually the first part of your e-mail address, which appears before the "at" sign (@).
9. In **Password**, enter your password.
10. In **Domain**, enter the domain name, if required.
11. To save your password, so that you do not need to enter it each time you connect to your e-mail server, select **Save password**.
12. Select **Next**.
13. In **Server type**, scroll to select the type of e-mail server that hosts your mailbox, POP3 or IMAP4, and select **Next**.
14. In **Account name**, enter a name for this account. You must use a different name for each account that you set up.
15. In **Network**, scroll to the type of network that your e-mail server runs on and select **Next**.

16. Enter information about your e-mail servers. If you are not sure what to enter, ask your network administrator.
17. Select the security options if necessary and select **Next**.
18. Select message download options and select **Next**.
19. Select a connection option, select **Next**, and then select **Finish**.

⚠ CAUTION ⚠

- If you save your password and then lose your Smartphone, someone finding your Smartphone might be able to gain access to your e-mail.

Creating an E-mail Message

1. You can create an e-mail message from Messaging. You can also create an e-mail message from a contact card if it contains the e-mail address you want.

From Messaging

 
- 1 On the **Home** screen, select **Start** and then **Messaging**.
- 2 Select the e-mail **account** to use.
- 3 Select **New**.
- 4 In **To**, enter the recipient e-mail address(es). If you have included the e-mail address in a contact card, press the Navigation stick or select **Menu** → **Insert Contact** to insert an e-mail address without entering it.

From a Contact Card

- 1 On the **Home** screen, select **Start** and then **Contacts**.
- 2 Select the contact you want from the list to open the contact card.
- 3 Select the e-mail address you want and press the Navigation stick.
- 4 Select the e-mail **account** to use.

◀ NOTE ▶

- To insert punctuation such as the “at” sign (@), a period (.), or a semicolon (;), repeatedly press the **1** key in Multipress mode until the punctuation appears or press and hold the **#** key to view a list of symbols that you can enter as text.
 - Insert a semicolon (;) between multiple recipients.
2. If necessary, in **Cc** and/or **Bcc**, enter the e-mail or media message addresses of persons to receive a copy.
 3. In **Subj**, enter a subject.
 4. Scroll down to enter your e-mail message. (For information about entering text on the Smartphone, see section 2.3).

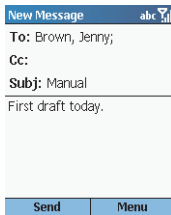

When composing your message, you can also:

- Insert predefined text by selecting **Menu** → **Insert Text**. Scroll to the text to insert into your message and press the **Insert** soft key. (See "Working with Accounts" in section 5.1 for information on editing predefined text).
- Insert a signature automatically. (See "Working with Accounts" in section 5.1 for information).
- Insert a voice recording as described later.

◀ NOTE ▶

- To cancel a message, select **Menu** and then **Cancel Compose**.
 - To save a draft of a message that you are composing to finish and send later, press the **Menu** soft key and select **Postpone Message**. To finish the draft, open the account and select **Menu** → **Folders**. Select **Drafts** and then the draft to open. Press the **Edit** soft key to continue.
5. Select **Send**. The e-mail message is stored in Outbox and sent to recipients the next time you synchronize or connect to your email server and send and receive mail.

Inserting a Voice Recording in an E-Mail Message

Inserting a voice recording is useful when you want to verbally explain information that is contained in the message.

1. When composing your e-mail message, press the **Menu** soft key and select **Insert Recording**.
2. The **Voice Memo** appears on the screen. Press the **Record** soft key and start speaking into the Smartphone microphone.
3. When finished speaking, press the **Stop** soft key.
4. Press the **Done** soft key to insert the recording into your message.

◀ NOTE ▶

- You can send only one voice recording in an e-mail message. If you create a second voice recording in an e-mail message, it replaces the first recording.

Sending and Receiving E-Mail Messages

You can send and receive e-mail messages as follows:

- By connecting to your desktop computer or Exchange Server and synchronizing the Outlook E-mail Inbox folder on your Smartphone with Outlook, as described in "Synchronizing Information" in section 7.3.
- By using the **Send/Receive** menu command from an Internet e-mail account, as described next.

To send and receive Internet e-mail messages

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select the Internet email account for which you want to send and receive messages.
3. Select **Menu** and then **Send/Receive**. The Smartphone connects to your Internet e-mail server and sends and receives your messages.

◀ NOTE ▶

- To stop this process, select **Menu** and then **Stop Send/Receive**.
- Before you can send and receive e-mail messages, the Smartphone must be properly configured, as described earlier in "Setting up Internet e-mail."
- You must take additional steps to receive large messages and attachments, as described later in "Working with large messages and attachments."

 
Viewing and Responding to E-Mail Messages

When you receive an e-mail message, the Smartphone plays a sound and displays an envelope icon at the top of the screen. By default, the Home screen also displays the number of unopened e-mail messages. To quickly view new messages, select the message notification area on the Home screen.

Opening an E-Mail Message

Received messages are stored in the Inbox folder of the appropriate account. They are displayed in the Inbox message list.

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select an e-mail account. The Inbox message list displays your received messages. By default, messages are displayed in the order received.

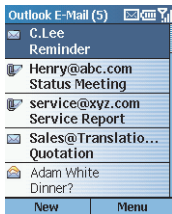

3. Select the message to open.
4. To return to the message list, press the **Back** key.

NOTE

- To open the next message in the list from within an open message, scroll right; to open the previous message in the list, scroll left.
- You can change the order in which messages are displayed and show the date and time that messages were sent. (See "Working with Accounts" in section 5.1 for information).
- To create a contact card for the sender, select **Menu** and then **Save to Contacts**.

Working with E-Mail Messages

Using Messaging menu commands, you can quickly reply to, forward, and delete messages.

To specify the language for reading a message

1. From an open message, select **Menu** and then **Options**.
2. In **E-mail message language**, scroll to the language.
3. Select **Done**. The message is displayed using the appropriate characters for the selected language.

To reply to a message

1. From an open message, select **Menu**.
From the message list, select **Menu** → **Reply**.
2. Select **Reply** or **Reply All**.
3. Enter a message in the message area.
4. Select **Send**. The message is stored in Outbox and sent to recipients the next time you synchronize or connect to your e-mail server.

To forward a message

1. From an open message, select **Menu** → **Forward**.
From the message list, select **Menu** → **Reply** → **Forward**.
2. In **To**, enter the recipient e-mail address(es). Insert a semicolon (;) between multiple recipient s.
3. Optionally, you can enter an introductory message by scrolling to the message area, pressing the **Navigation stick** to insert a blank line, and entering your text.
4. Select **Send**. E-mail messages are stored in Outbox and sent to recipients the next time you synchronize or connect to your email server and send and receive mail.

To delete a message

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select an e-mail account.
3. Scroll to the message to delete.
4. Select **Menu** and then **Delete**. For the Outlook E-mail account, the message is also deleted from Outlook on your desktop computer or Exchange Server the next time you synchronize.

NOTE

- If the folder you select has a subfolder, messages within the subfolder will not be deleted. Repeat these steps for each subfolder.

To mark a message as Read or Unread

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select an e-mail account.
3. Scroll to the message to mark.
4. Select **Menu**.
5. Select **Mark as Read** or **Mark as Unread**. The message display is changed to reflect its new status: normal text for read messages and bold text for unread messages. When you synchronize or send and receive e-mail, the message is displayed as Read or Unread in all locations.

Working with Large Messages and Attachments

When you receive large e-mail messages and attachments, the Smartphone downloads only a portion of them. You can view the partial message or attachment and decide if you want to download the rest of it.




When you synchronize your Outlook E-mail account with your desktop computer or Exchange Server, the Smartphone downloads the first 0.5 KB of each new e-mail message by default. When you connect to an Internet e-mail server, it downloads the amount (in KB) of each new message that you specified when you set up the account. The message size includes its attachments. The original messages and attachments remain on the server or your desktop computer.

In the message list, messages with an attachment display an envelope icon with a paperclip. Within a message, attachments are displayed as a list of hyperlinks at the bottom of the message, and are preceded by an attachment icon. The hyperlink includes the file name and size of the attachment.

◀ NOTE ▶

- For information about changing Outlook e-mail synchronization settings, see Chapter 7. For information about changing Internet e-mail settings, see "Setting up an Internet E-Mail Account" in section 5.2 earlier in this chapter.
- On messages received from a POP3 e-mail server, the attachment size is omitted.

The attachment icon has the following three states:

- Not downloaded 
- Marked for download 
- Downloaded 

To download a complete e-mail message

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select an e-mail account.
3. Scroll to the message to download.
4. Select **Menu** and then **Mark for Download**. The complete message is retrieved the next time you synchronize or connect to your e-mail server and send and receive e-mail.

To download an attachment

In an open message with an attachment to download, select the attachment. The attachment is downloaded the next time you synchronize or connect to your e-mail server and send and receive e-mail.

◀ NOTE ▶

- If there are multiple attachments in the message, all attachments are downloaded.

To view an attachment

In an open message containing a downloaded attachment, select the attachment.

◀ NOTE ▶

- You can view attachments only for file types that are supported by the Smartphone.

To delete an attachment

1. In an open message containing a downloaded attachment, scroll to the attachment.
2. Select **Menu** and then **Delete**. This deletes attachments on the Smartphone only.


◀ CAUTION ▶

- This deletes all of the attachments to this message, not only the selected attachment.

Accepting Meeting Requests

You can receive and respond to Outlook meeting requests on your Smartphone in a similar manner as you do in Outlook on your desktop computer.

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select an e-mail account.

3. Select the meeting request (preceded by the  icon) and then respond to it as follows:
 - To accept the meeting request and insert the meeting into your calendar, press the **Menu** soft key → **Accept**.
 - To decline the meeting request, press the **Menu** soft key → **Decline**.
 - To tentatively accept the meeting request and insert a tentative meeting into your calendar, press the **Menu** soft key → **Tentative**.Your response is sent back to the meeting organizer the next time that you synchronize.

◀ NOTE ▶

- For more information on synchronizing, see Chapter 7.

5.3 Using Text Messages

You can start creating a new text message (SMS) from Messaging. You can also create a new text message from Contacts.

◀ NOTE ▶

- Not all service plans include sending text messages. If you are not sure what your service plan supports, ask your service provider.

Creating a Text Message

1. You can create a text message from Messaging. You can also create a text message from a contact card if it contains the text message number you want.

From Messaging

- 1 On the **Home** screen, select **Start** and then **Messaging**.
- 2 Select **Text Message**.
- 3 Select **New**.
- 4 In **To**, enter the recipient text message number(s). If you have included the number in a contact card, press the Navigation stick or select **Menu** → **Insert Contact** to insert a number without entering it.

 
From a Contact Card

- 1 On the **Home** screen, select **Start** and then **Contacts**.
- 2 Select the contact you want from the list to open the contact card.
- 3 Select the text message number and press the Navigation stick.

◀ NOTE ▶

- Insert a semicolon (;) between multiple recipients.

2. Enter your text message. (For information about entering text on the Smartphone, see section 2.3).

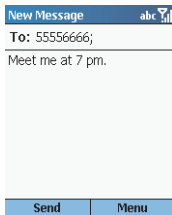

When composing your message, you can also:

- Insert predefined text by selecting **Menu** → **Insert Text**. Scroll to the text to insert into your message and press the **Insert** soft key. (See "Working with Accounts" in section 5.1 for information on editing predefined text).
- Insert a signature automatically. (See "Working with Accounts" in section 5.1 for information).

◀ NOTE ▶

- Before sending the message, you can request a delivery receipt as described later.
- To cancel a message, select **Menu** and then **Cancel Compose**.
- To save a draft of a message that you are composing to finish and send later, press the **Menu** soft key and select **Postpone Message**. To finish the draft, open the account and select **Menu** → **Folders**. Select **Drafts** and then the draft to open. Press the **Edit** soft key to continue.

3. Select **Send**. The text message is sent immediately.

Requesting a Delivery Receipt

You can request a delivery receipt for a text message. When you do this, you receive a confirmation that your message was delivered to the recipient.

1. Before sending a text message, select **Menu**, and then **Message Options**.
2. Select **Request message delivery notification**.
3. Select **Done**. When your message is delivered, you receive a receipt on the Smartphone.

Sending and Receiving Text Messages

The Smartphone immediately sends text messages when you select **Send** on the **New Message** screen. The Smartphone automatically receives text messages whenever it is turned on.

Importing Text Messages

In addition to receiving text messages wirelessly, you can import them from your SIM card.

1. On the Home screen, press the **Start** soft key and select **Messaging**.
2. Press the **Text Messages**.
3. Select **Menu** and then **Options**.
4. Select **Import SIM Messages**.
5. Press the **Done** soft key. The text messages are copied from the SIM card to the Inbox of the Text Messages account.

◀ NOTE ▶

- You cannot export text messages from your Smartphone to a SIM card.
- Text messages are not removed from the SIM card after they are imported to the Inbox of the Text Messages account.

 
Viewing and Responding to Text Messages

When you receive a text message, the Smartphone plays a sound and displays an envelope icon at the top of the screen. By default, the Home screen also displays the number of unopened text messages. To quickly view new messages, select the message notification area on the Home screen.

Opening a Text Message

Received messages are stored in the Inbox folder of the appropriate account. They are displayed in the Inbox message list.

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select **Text Messages**. The Inbox message list displays your received messages. By default, messages are displayed in the order received.
3. Select the message to open.

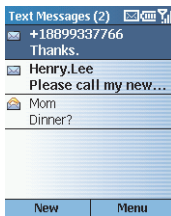

4. To return to the message list, press the **Back** key.

NOTE

- To open the next message in the list from within an open message, scroll right; to open the previous message in the list, scroll left.
- You can change the order in which messages are displayed and show the date and time that messages were sent. (See "Working with Accounts" in section 5.1 for information).
- To create a contact card for the sender, select **Menu** and then **Save to Contacts**.

Working with Text Messages

Using Messaging menu commands, you can quickly reply to, forward, and delete messages.

To reply to a message

1. From an open message, select **Menu**.
From the message list, select **Menu** → **Reply**.
2. Select **Reply** or **Reply All**.
3. Enter a message in the message area.
4. Select **Send**. The message is sent immediately.

To forward a message

1. From an open message, select **Menu** → **Forward**.
From the message list, select **Menu** → **Reply** → **Forward**.
2. In **To**, enter the recipient phone number(s) to send a text message. Insert a semicolon (;) between multiple recipients.
3. Optionally, you can enter an introductory message by scrolling to the message area, pressing the **Navigation stick** to insert a blank line, and entering your text.
4. Select **Send**. The message is sent immediately.

To delete a message

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select **Text Message**.
3. Scroll to the message to delete.
4. Select **Menu** and then **Delete**.

To mark a message as Read or Unread

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select **Text Message**.
3. Scroll to the message to mark.
4. Select **Menu**.
5. Select **Mark as Read** or **Mark as Unread**. The message display is changed to reflect its new status: normal text for read messages and bold text for unread messages.

5.4 Using Media Messages

Setting up Media Messages Account

Your Smartphone has a **Media Messaging** account. To use this account, you must:

- Subscribe to the GPRS and MMS services with your service provider.
- Configure a GPRS connection on the Smartphone for connecting to the MMS network. (For more information, see "Data Connections" in section 4.2).
- Set up the MMS server connection in Messaging if it has not already been set up by your service provider.

To add a new MMS server connection

When you subscribe to the MMS service with your service provider, your service provider will normally set up the connection for you. If you need to manually set up the connection, follow this procedure:

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select any account.
3. Select **Menu** → **Options**.
4. Select **Account Setup** → **Media Messages**.
5. Select **Menu** → **Edit Connections**.
6. Select **Menu** → **Add**.
7. Enter the server information provided by your service provider.
8. Select **Done**.
9. In **Server** of the Account Settings screen, select the connection you just added.
10. Select **Done**. When you send or receive media messages, your Smartphone is connected to this server.

To edit or delete a MMS connection

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select any account.
3. Select **Menu** → **Options**.
4. Select **Account Setup** → **Media Messages**.
5. Select **Menu** → **Edit Connections**.
6. Select the connection server you want to edit or delete.
7. To edit the connection, select **Menu** → **Edit**. Make necessary modifications and select **Done**.

To delete the connection, select **Menu** → **Delete**.

To configure MMS operation

By default, the Smartphone automatically send media messages with the size less than 100 KB when you select **Send**. The Smartphone automatically receives media messages of all types (Personal, Informational, and Advertisement).

You can change the way media messages are sent and received:

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select any account.
3. Select **Menu** → **Options**.
4. Select **Account Setup** → **Media Messages**.
5. In **Send/receive**, select **Automatically** or **Manually**. (See "Sending and Receiving Media Messages" later).
6. In **Outgoing message size**, select **Less than 30KB**, **Less than 100KB**, or **All**.
7. In **Allowed messages**, check the type of message you want to receive.
8. Select **Done**.

Creating a Media Message

A media message (MMS) is composed of one or more pages, and each page can contain up to one picture, text region and sound.

To add your own picture and sound files

You can insert sound files of the following formats in your media messages: Midi (.mid). Copy your sound files to the Storage\Application data\Sounds folder or Storage\My Documents folder of your Smartphone. They will appear in your selection list when you are inserting sound.

You can insert picture files of the following formats in your media message: JPG, GIF, aGIF, and wBMP. Copy your picture files to the Storage\My Documents folder of your Smartphone. They will appear in your selection list when you are inserting a picture.

If your picture or sound file is in a storage card, you can insert it by first specifying the storage card as your source of files.

◀ NOTE ▶

- When composing your message, you can also immediately take a photo and insert it as your picture.

To create a media message

1. On the **Home** screen, select **Start** and then **Messaging**.

◀ NOTE ▶

- You can also create a media message from other programs:
 - From a contact card if it contains the e-mail address you want. (If you are sending to a phone number, you cannot create the message from a contact card).
 - From Phone Viewer. (See section 9.2 for information).

2. Select **Media Messages**.
3. Select **New**.

- In **To**, enter the recipient media message address(es). It can be either a phone number or an e-mail address. If you have included the address or number in a contact card, press the Navigation stick or select **Menu** → **Add Recipient** to insert an address or number without entering it.


◀ NOTE ▶

- Insert a semicolon (;) between multiple recipients.

- If necessary, in **Cc** and/or **Bcc**, enter the media message addresses of persons to receive a copy.
- In **Subj**, enter a subject.




- To insert a picture, scroll to the picture area of the message and press the **Navigation** stick. Or, in the body of the message, select **Menu** → **Insert** → **Picture**. If your picture is in a storage card, select **Menu** → **Browse** → **Storage Card** after inserting the card. The picture thumbnails appear on the screen. Select the picture you want to insert.

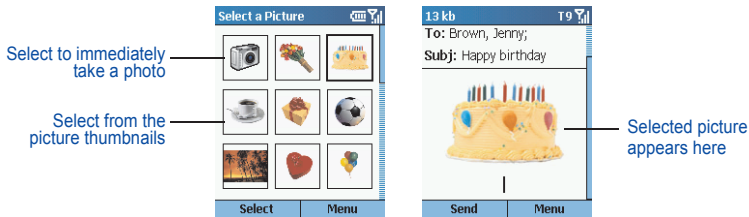 

If you want to immediately take a photo to be inserted as your picture, select the camera icon (the first thumbnail). Frame your target in the viewing window and press the **Shutter** soft key to take the photo. Press the **Save** soft key and the picture is automatically inserted. (For detailed information on taking a photo, see section 9.1).

 
- To insert text, scroll to the text area (below the picture area) and enter your text. Or, in the body of the message, select **Menu** → **Insert** → **Text** and enter your text.

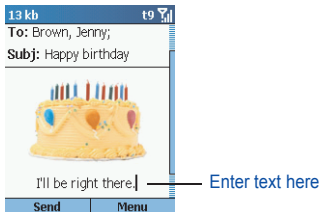

You can insert predefined text by selecting **Menu** → **Insert Text**. Scroll to the text to insert into your message and press the **Insert** soft key. (See "Working with Accounts" in section 5.1 for information on editing predefined text).

- To insert sound, select **Menu** → **Insert** → **Sound**. If your sound is in a storage card, select **Menu** → **Browse** → **Storage Card** after inserting the card.

 Select the sound you want to insert. The sound appears as an attachment in the message.

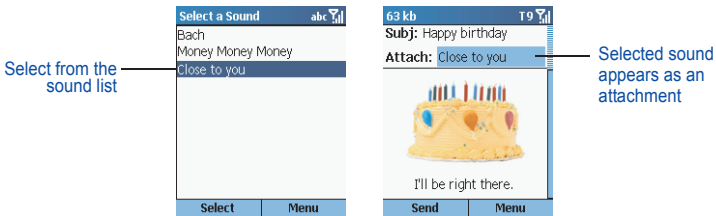

- To add a page to the media message, select **Menu** → **Pages** → **Add Page**.
- To change the background color of all the pages in your message, select **Menu** → **Background Color** and select the color you want.
- To preview a message, select **Menu** → **Preview**.

NOTE

- The top left corner of your media message screen indicates the current size of your message.
- To remove a picture or sound from the message, select the object, select **Menu**, and then **Remove Object**.
- To cancel a message, select **Menu** and then **Cancel Compose**.
- To save a draft of a message that you are composing to finish and send later, press the **Menu** soft key and select **Postpone Message**. To finish the draft, open the account and select **Menu** → **Folders**. Select **Drafts** and then the draft to open. Press the **Edit** soft key to continue.
- Before sending the message, you can specify message options as described later.

13. Select **Send**. The message is sent immediately in automatic mode (default).

Specifying Message Options

You can specify message options such as priority, message type, validity period, delivery report, and read receipt.

1. When composing a media message, select **Menu** → **Message Options**.
2. In **Priority**, select **Low**, **Normal**, or **High**.
3. In **Message type**, select **Personal**, **Advertisement**, or **Informational**.
4. In **Validity period**, select the time limit for reserving the message in the Outbox folder when in manual mode. The available options are **Maximum**, **12 Hours**, **1 Day**, **1 Week**, and **1Month**.
5. Check **Delivery report** if you want to receive a confirmation when your message has been delivered to the recipient.
6. Check **Read receipt** if you want to receive a confirmation when your message has been read by the recipient.
7. Select **Done**.

Sending and Receiving Media Messages

There are two modes of sending and receiving media messages: automatically and manually.

- **Automatic mode**

In automatic mode, media messages are sent immediately when you select **Send** on the New Message screen.

Messages are received automatically. An exception to this is when an application that uses a wireless data connection is in use. For example, if Pocket Internet Explorer is downloading a Web page, it will prevent a media message from being downloaded automatically.

- **Manual mode**

In manual mode, when you select **Send** on the New Message screen, media messages are moved to Outbox and will be sent the next time you select **Send/Receive**.

When there is an incoming media message, you will receive a notification with instructions on how to download the media message.

◀ NOTE ▶

- Media messages cannot be sent or received during a phone call if you are in manual mode.

To change settings for sending and receiving media messages

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select **Media Messages**.
3. Select **Menu** and then **Options**.
4. Select **Account Setup**, and then **Media Messages**.
5. Under **Send/receive**, select **Automatically** or **Manually**.
6. Select **Done**.

To manually send and receive media messages

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select **Media Messaging**.
3. Select **Menu** and then **Send/Receive**. The Smartphone sends and receives your media messages.

Viewing and Responding to Media Messages

NOTE

- Depending on the service that you subscribe to, you may not be able to send and receive media messages to users using a different mobile phone network.
- Check with your service provider for the size limit of sending/receiving media messages.

 
When you receive a media message, the Smartphone plays a sound and displays an envelope icon at the top of the screen. By default, the Home screen also displays the number of unopened media messages. To quickly view new messages, select the message notification area on the Home screen.

Opening a Media Message

Received messages are stored in the Inbox folder of the appropriate account. They are displayed in the Inbox message list.

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select **Media Message**. The Inbox message list displays your received messages. By default, messages are displayed in the order received.
3. Select the message to open.

Each page of the media is displayed for five seconds before automatically advancing to the next page. You Smartphone can display JPG, GIF, aGIF, and wBMP pictures, play midi and wave sounds.

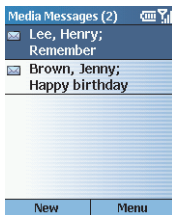

- To return to the message list, press the **Back** key.

◀ NOTE ▶

- You can change the order in which messages are displayed and show the date and time that messages were sent. (See "Working with Accounts" in section 5.1 for information).
- To open the next message in the list from within an open message, scroll right; to open the previous message in the list, scroll left.
- To create a contact card for the sender, select **Menu** and then **Save to Contacts**.

Working with Media Messages

Using Messaging menu commands, you can quickly reply to, forward, and delete messages.

To save media from a media message

To save a single picture or sound, from an open message, select the item and then select **Save**. To save all media in the message, select **Menu** and then **Save All**.

◀ NOTE ▶

- Media are saved in \Storage\My Documents on the Smartphone. If you want to save media to a storage card, first insert the card and then select **Menu** → **Browse** → **Storage Card**.

To reply to a media message

1. From an open message, select **Menu**.
From the message list, select **Menu** → **Reply**.
2. Select **Reply** or **Reply All**.
3. Enter a message in the message area.
4. Select **Send**.

To forward a media message

1. From an open message, select **Menu** → **Forward**.
From the message list, select **Menu** → **Reply** → **Forward**.
2. In **To**, enter the recipient media message address(es). Insert a semicolon (;) between multiple addresses or numbers.
3. Select **Send**.

To delete a message

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select **Media Messages**.
3. Scroll to the message to delete.
4. Select **Menu** and then **Delete**.

To delete all media messages

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select **Media Messages**.
3. Select **Menu** and then **Folders**.
4. Select **Menu** and then **Show All Folders**.
5. Scroll to the folder with the media messages you want to delete.
6. Select **Menu** and then **Clear Media Messages**.

To mark a media message as Read or Unread

1. On the **Home** screen, select **Start** and then **Messaging**.
2. Select **Media Messaging**.
3. Scroll to the message to mark.
4. Select **Menu**.
5. Select **Mark as Read** or **Mark as Unread**. The message display is changed to reflect its new status: normal text for read messages and bold text for unread messages.

5.5 Working with Message Folders

Each messaging account has a set of folders in which the Smartphone stores messages for that account. The default folders are:

- **Deleted Items** contains messages that you delete until you empty this folder.
- **Drafts** contains messages that you save before sending.
- **Inbox** contains messages that you receive.
- **Outbox** For the Outlook E-mail account, contains sent e-mail messages until you synchronize. For other e-mail accounts, contains sent e-mail messages until you connect to your e-mail server. Text messages are sent immediately over the network and appear in your Text Messages Outbox folder only for a few seconds. Media messages are sent immediately while in automatic mode. For more information about sending media messages, see "Sending and Receiving Text Messages" earlier in this chapter.
- **Sent Items** contains copies of messages that you send.

If you want, you can move a message to a different folder within the same account.

When you synchronize or send and receive e-mail, the Smartphone synchronizes any additional e-mail folders that you have created in Outlook on your desktop computer or on your e-mail server. It also synchronizes the messages contained in those folders, if the folders are marked for synchronization.

To view the message folder contents

1. On the Home screen, press the **Start** soft key and select **Messaging**.
2. Select an account.
3. Press the **Menu** soft key and select **Folders**.
4. Select the folder to view. To view all Outlook E-mail folders, even those not marked to synchronize, select **Menu** and then **Show All Folders**.
5. To return to the message list view of the Inbox folder, select **Menu**, **Folders**, and then **Inbox**.

To mark a folder for synchronization

1. Synchronize Inbox with your desktop computer. This creates the same ActiveSync Inbox folders on your Smartphone as in Outlook on your desktop computer.
2. On the Home screen, press the **Start** soft key and select **Messaging**.
3. Select **Outlook E-Mail** → **Menu** → **Folders**.
4. Press the **Menu** soft key and select **Sync Folders**.
5. Scroll to a folder to synchronize.
6. Press the **Show** soft key and then the **Done** soft key. The next time you synchronize, the folder(s) that you marked on your Smartphone are synchronized with the corresponding folders in Outlook on your desktop computer.

To move a message to a different folder

1. On the Home screen, press the **Start** soft key and select **Messaging**.
2. Select an account.
3. Scroll to the message to move.
4. Press the **Menu** soft key and select **Move**.
5. Select the folder into which to move the message.

◀ N O T E ▶

- You can move an open message in the same manner, by selecting **Menu** and then **Move**.

To empty the Deleted Items folder

1. On the Home screen, press the **Start** soft key and select **Messaging**.
2. Select an account.
3. Select **Menu** → **Folders** → **Deleted Items**.
4. Press the **Menu** soft key and select **Empty Folder**.

5.6 MSN Messenger

You can use MSN[®] Messenger on your Smartphone to send and receive instant messages. MSN Messenger on your Smartphone provides the same chat environment as MSN Messenger on your desktop computer. Features of this environment include:

- Sending and receiving instant messages
- Seeing the status of others in your MSN Messenger contacts list, or changing your own status (for example, available, busy, or out to lunch)
- Inviting other people to a chat
- Blocking contacts from seeing your status or sending you messages

Using MSN Messenger

Before you can use MSN Messenger, you must take steps to set it up. First, you need either a Microsoft .NET Passport account or a Hotmail account. To set up a Microsoft .NET Passport account, go to: <http://www.passport.com>. Once you have this account, you need to create a connection on your Smartphone, such as a modem or wireless connection that allows you to connect to the Internet. (For more information on creating connections, see "Data Connections" in section 4.2).

Signing in and Signing out

You can sign in to MSN Messenger using your Hotmail credentials or your .NET Passport. Once you sign in, you can create contacts and exchange instant messages with them. This is called "chatting." Contacts must have a Hotmail or .NET Passport account and must have MSN Messenger installed.

1. On the Home screen, press the **Start** soft key, and select **MSN Messenger**.
2. Press the **Sign In** soft key.
3. Enter your sign-in name (Example: name_123@hotmail.com) and password, and then press the **Sign In** soft key.
4. To sign out, press the **Menu** soft key and select **Sign out**.

◀ NOTE ▶

- Signing out closes your data connection. Be sure to sign out when finished using MSN Messenger or your connection will remain open. This might result in additional charges from your service provider.

Sending an Instant Message

1. Sign in to MSN Messenger.
2. Scroll to the contact with whom you want to chat.
3. Press the **Menu** soft key and select **Send Message**.
4. Enter your message. (For information on entering text, see section 2.3). To quickly add common messages, press the **Menu** soft key, select **My Text**, and then select the text to use.
5. Press the **Send** soft key. This starts a chat with the contact.

Available Options When Using MSN Messenger

To...	Do this...
Add an MSN Messenger contact	In the Messenger contact list, press the Menu soft key, select Add Contact , and then follow the directions on the screen.
Delete an MSN Messenger contact	In the Messenger contact list, select the contact's name, press the Menu soft key, and select Delete Contact .
Invite a contact to an ongoing chat	Press the Menu soft key, select Invite , and then select a contact.
Change between chats	Press the Menu soft key, select Chats , and then select the contact to begin chatting.
Return to the contact list	Press the Menu soft key and select My Contacts .
End a chat	Press the Menu soft key and select End Chat .
See who is already chatting	Press the Menu soft key and select Chats .
Block or unblock an MSN Messenger contact	In the Messenger contact list, select the contact's name, press the Menu soft key, and select Block or Unblock .
Change your status	In the Messenger contact list, select your name. Select a status description, such as Away .
Change your display name	In the Messenger contact list, press the Menu soft key, select Options → Passport Account . In My display name , enter your name as you want it to display in the contact lists of your contacts. NOTE: You must sign in to MSN Messenger to change your display name.

6 Contacts, Calendar, and Tasks

This chapter introduces features on your Smartphone that help you manage and keep track of contacts, appointments, and schedule, and maintain a "things to do" list. This chapter also explains how to send and receive contact and appointment information between your Smartphone and another mobile device or a desktop computer (beaming data) by using infrared.

This chapter includes:

6.1	Contacts	120
6.2	Calendar	127
6.3	Tasks	131
6.4	Voice Notes	133
6.5	Beaming Information	134

6.1 Contacts

You can think of Contacts as an address book, where you store information about people and businesses with whom you communicate. You can specify a special ring tone for the Smartphone to use when the contact calls. You can use Contacts to dial phone numbers and compose e-mail and SMS messages directly from a contact card.

NOTE

- On your Smartphone, there can be two kinds of independent contact lists. One is stored in the Smartphone's memory by Microsoft Contacts; the other is stored in the SIM card.
- Your Smartphone needs time to read the data stored in the SIM card. Therefore, it may take 1 ~ 2 minutes for data refreshing to finish after the **Home** screen displays when the Smartphone turns on or the SIM card unlocks.


Viewing Contacts

Contact List

Contacts	
Brown, Jenny	m
Lake, Mary	h
Lee, Henry	w
Lobo	m
Mom	m
White, Adam	m
Dad	
Julia	
New	Menu

On the Home screen, press the **Start** soft key and select **Contacts** to access the contact list. If the right soft key is **Contacts**, you can press the soft key to access the contact list.

The contact list displays the names of your contacts alphabetically. Beside each name in the contact list is an abbreviation for the default communication method, such as the person's work phone number (w) or home phone number (h). If the contact information includes a work phone number, your Smartphone automatically set it as the default number.

If there are phone numbers stored in your SIM card, the entries will be displayed at the end of the list, with a SIM card icon  following the name.

The following table shows the possible abbreviations in the contact list and their meanings.

Abbreviation	Meaning	Abbreviation	Meaning
w	Work phone	rdo	Radio phone
w2	Second work phone	e	E-mail address
h	Home phone	e2	Second e-mail address
h2	Second home phone	e3	Third e-mail address
m	Mobile phone	txt	Text message number
pgr	Pager	web	Web page
car	Car phone		

Contact Cards

When you scroll to a contact and press the Navigation stick, a contact card appears and displays all of the information that you have entered for the contact, such as the name of the person or business, phone numbers, e-mail addresses, and more.

Number in bold denotes default number

Contact	
Lake, Mary	
456214	• h — Work number
55556666	m — Mobile number
mary@abc.com	e — E-mail address
55556666	txt — SMS message number
<div style="display: flex; justify-content: space-between;"> Edit Menu </div>	

From a contact card, press the **Menu** soft key to access the following commands:

Contact Card Menu	Description
Add Speed Dial	Enables you to create a shortcut to a selected phone number or e-mail address. (See section 3.6 for more information).
Send Text Message	Sends a text message to a selected phone number or e-mail address. (See section 5.4 for more information).
Save to SIM	Saves a selected phone number to the SIM card.
Set as Default	Makes the selected phone number or e-mail address the default communication method for the contact.
Beam Contact	Sends the contact card to another mobile device or a desktop computer using infrared.
Delete	Removes the contact card from the contact list.
Edit	Enables you to modify information in the contact card.

Creating a New Contact

1. On the **Home** screen, press the **Start** soft key and select **Contacts**. If the right soft key on the **Home** screen is **Contacts**, you can also press the soft key.
2. Do one of the following:
 - To save the contact to your Smartphone as a regular contact, press the **New** soft key. You can also press the **Menu** soft key and select **New Contact**
 - To save the contact to your SIM card as a SIM contact, press the **Menu** soft key and select **New SIM Contact**.
3. Enter the information for the new contact.
4. When completed, press the **Done** soft key.

NOTE

- Unlike regular contact cards, you can store only one phone number for each SIM contact.
- When you create a new contact on your Smartphone, you can synchronize Contacts with your desktop computer or a server to keep your contact information up-to-date in all locations.

Deleting a Contact

1. On the **Home** screen, press the **Start** soft key and select **Contacts**. If the right soft key on the **Home** screen is **Contacts**, you can also press the soft key.
2. Scroll to the contact to delete.
3. Press the **Menu** soft key and select **Delete**.
4. Press the **Yes** soft key.

Finding a Contact

1. On the **Home** screen, press the **Start** soft key and select **Contacts**. If the right soft key on the **Home** screen is **Contacts**, you can also press the soft key.
2. Entering the name to search is a convenient method to find a contact. When you press the number key to enter the letters, the matched contact will appear on the screen. If you have set up the contact category, you can filter the contacts by pressing the **Menu** soft key, and selecting **Filter**, then **Business**, **Miscellaneous** or **Personal**.

◀ NOTE ▶

- While in the contact list, you can scroll up/down to a contact, but you cannot scroll left/right to go to the previous/next page.

Editing a Contact

When you open a contact card, press the **Edit** soft key to edit the contact's information. When the editing is completed, press the **Done** soft key.

Selecting a Ring Tone for a Contact

You can select different ring tones for different contacts to easily identify the callers.

1. On the **Home** screen, press the **Start** soft key and select **Contacts**. If the right soft key on the **Home** screen is **Contacts**, you can also press the soft key.
2. Select the contact for which to select a ring tone.
3. Press the **Edit** soft key.
4. Scroll to **Custom ring tone**, and push the Navigation stick left/right to select a ring tone. You can also select from a full list by pressing the Navigation stick.
5. Press the **Done** soft key.

Copying Phone Numbers from SIM Card to Contacts


1. On the **Home** screen, press the **Start** soft key and select **Contacts**. If the right soft key on the **Home** screen is **Contacts**, you can also press the soft key.
2. Scroll to the SIM card contact and press the Navigation stick to open the contact card.
3. Press the **Menu** soft key and select **Save to Contacts**. The contact list appears on the screen with **New Item** highlighted. Press the **Select** soft key.
4. Scroll to the field to place your number (e.g. business phone, mobile phone, or home phone). Press the **Insert** soft key to paste the number in the field.
5. Enter the information into the other fields as necessary.
6. Press the **Done** soft key, then the **Back** key to return to the contact list.

Copying Phone Numbers from Contacts to SIM Card

1. On the **Home** screen, press the **Start** soft key and select **Contacts**. If the right soft key on the **Home** screen is **Contacts**, you can also press the soft key.
2. Scroll to the SIM card contact and press the Navigation stick to open the contact card.
3. Scroll to the phone number you want to copy.
4. Press the **Menu** soft key and select **Save to SIM**. The **SIM Contact** screen appears.
5. If necessary, modify the name of the contact.
6. Press the **Done** soft key, then the **Back** key to return to the contact list.

Calling a Contact


Using the Default Number

1. On the **Home** screen, press the **Start** soft key and select **Contacts**. If the right soft key on the **Home** screen is **Contacts**, you can also press the soft key.
2. Select the contact to call.
3. Press the **Talk** key .

◀ NOTE ▶

- If you have a long list of contacts and you don't see the contact you want to call on the first screen, enter the first few letters of the contact's name. The Smartphone will search through the entire contact list and display the name.


Using a Number Other Than the Default Number

1. On the **Home** screen, press the **Start** soft key and select **Contacts**. If the right soft key on the **Home** screen is **Contacts**, you can also press the soft key.
2. Select the contact to call, and change the abbreviation for the number by pushing the Navigation stick left/right.
3. Press the **Talk** key .

◀ NOTE ▶

- Selecting another abbreviation changes the default number of this contact.

Calling a Contact from a Contact Card

When you open a contact card, select the phone number you want and press the **Talk** key  to dial the number.

Sending a Message from a Contact Card

When you open a contact card, select the e-mail address or text phone number you want and press the Navigation stick to open Messaging for entering your message.

6.2 Calendar

Calendar is the scheduling program on your Smartphone, where you can create and view appointments and view your calendar by day, week, or month. When you create and edit appointments in Calendar, your changes are reflected in Outlook on your desktop computer when you synchronize.

Creating a New Appointment

New

Subject:
See dentist

Start date:
5/6/2004

Start time:
7:00 PM

End date:
5/6/2004

Done **Cancel**

1. On the **Home** screen, press the **Start** soft key and select **Calendar**.
2. Press the **Menu** soft key and select **New**.
3. Enter information in the fields displayed. (For information on entering text, see section 2.3).
4. To set a reminder for the appointment, under **Reminder**, select the amount of time before the appointment that you want the reminder to appear.
5. When completed, press the **Done** soft key.

NOTE

- When you create a new appointment on your Smartphone, you can synchronize Calendar with your desktop computer or a server to keep your schedule information up-to-date in all locations.

Viewing an Appointment

1. On the **Home** screen, press the **Start** soft key and select **Calendar**.
2. Scroll to the appointment to open and press the Navigation stick. The screen displays the appointment details.

Editing an Appointment

1. On the **Home** screen, press the **Start** soft key and select **Calendar**.
2. Select the appointment to edit.
3. Press the **Edit** soft key.
4. Make the changes, and press the **Done** soft key.

 
Deleting an Appointment

1. On the **Home** screen, press the **Start** soft key and select **Calendar**.
2. Scroll to the appointment to delete, press the **Menu** soft key, and select **Delete**.

Viewing Your Schedule

You can view your schedule using three different views: Agenda, Week, and Month.

Agenda View

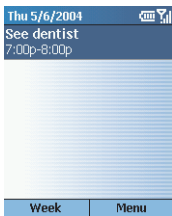

The Agenda View in Calendar is the default view for calendar information. To change to Agenda View from another view, press the **Menu** soft key and select **Agenda View**.

This view displays meetings and appointments scheduled for the current day. The appointments are shown in chronological order according to start time. All-day appointments are shown as a single line at the top of the Agenda view. Up to three all-day events will be displayed.

To look at your agenda for previous or approaching dates, push the Navigation stick left/right.

To view your agenda for a specific date, press the **Menu** soft key and select **Go to Date**. Enter the date you want to view, and press the **Done** soft key.

Week View

May 2004 - Wk 19					
M	T	W	T	F	
03	04	05	06	07	
9:00					
10:00					
11:00	█				█
12 P					
1:00			□		
2:00			█	█	
3:00					
4:00					
5:00					
Month			Menu		

To view appointments for the week, press the **Menu** soft key and select **Week View**.

The Week view shows your schedule for the specified week. This view allows you to get a quick indication of your free and busy time, and allows you to create an appointment at a selected time easily.

The Week view displays the hours from 9:00 A.M. to 5:00 P.M. in one-hour increments by default on the left side of the screen. You can scroll up or down to show the hours before or after those displayed.

NOTE

- If you scroll up/down and leave Week view, the hours last shown will be displayed the next time you return to Week view.
- To change settings for Week View, press the **Menu** soft key and select **Options**.

Month View

May 2004						
S	M	T	W	T	F	S
25	26	27	28	29	30	1
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31	1	2	3	4	5
Agenda			Menu			

 
To view your schedule for the month, press the **Menu** soft key and select **Month View**.

The Month view provides an overview of your monthly schedule with arrow indicators for morning and afternoon appointments. The arrows pointing upward represent morning appointments, and the arrows pointing downward represent afternoon appointments. An all-day event is indicated by a box inside the calendar day.

Importing Calendar Information

You can import calendar information from another calendar program if it uses the iCal or vCal format. The calendar information can be imported from attachments in e-mail messages, links in Microsoft® Pocket Internet Explorer, or by infrared.

6.3 Tasks

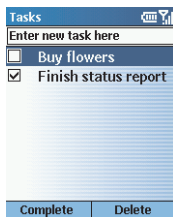

A task is a personal or work-related project, assignment, or errand to track through completion. A task can occur once or repeatedly. A recurring task can repeat at regular intervals or repeat based on the date you mark the task complete. For example, you might want to pay a bill on the last Friday of every month, or get a haircut when one month has passed since your last haircut.

Creating a New Task

1. On the **Home** screen, press the **Start** soft key and select **Tasks**.
2. Scroll to the **Enter new task here** field and enter the task. (The input mode is automatically switched to T9. For information on entering text, see section 2.3).
3. When completed, press the Navigation stick.

NOTE

- When you create a new task on your Smartphone, you can synchronize tasks with your desktop computer to keep your Tasks list up-to-date in both locations.
- If you create a new task with a reminder on your desktop computer, you can synchronize tasks with your Smartphone to hear the reminder on your Smartphone.

Viewing the Task List

On the **Home** screen, press the **Start** soft key and select **Tasks** to view the task list.

The following table lists the available functions from the task list:

To...	Do this...
Mark a task as complete	Scroll to the task and press the Complete soft key. A check mark appears to indicate that the task is completed.
Change a completed task to incomplete	Scroll to the task and press the Activate soft key. The check mark disappears to indicate that the task is not completed.
Delete a task from the task list	Scroll to the task and press the Delete soft key.

◀ NOTE ▶

- If you synchronize tasks with your desktop computer, completed tasks are removed from your Smartphone during synchronization. They are then displayed in gray with a strikethrough on your desktop computer.

6.4 Voice Notes

Voice Notes are used to create short voice recordings.

NOTE

- Your Smartphone does not support recording during a call.

Creating a Voice Note

- Do one of the following to open Voice Note:
 - Press and hold the Volume Up key.
 - On the Home screen, press the **Start** soft key and select **Voice Notes**.
- Hold the Smartphone microphone near your mouth.
- Press the **Record** soft key to begin recording your voice note.
- Press the **Stop** soft key to stop recording your voice note.
- The voice note is recorded and appears in the All Notes list of Voice Notes. The voice notes are named consecutively (Recording 1, Recording 2, and so on).

NOTE

- To rename a recording, press the **Menu** soft key and select **Rename**.

Listening to a Recording

- Do one of the following to open Voice Note:
 - Press and hold the Volume Up key.
 - On the Home screen, press the **Start** soft key and select **Voice Notes**.
- Scroll to the recording you want to listen to.
- Press the Navigation stick. Or, press the **Menu** soft key and select **Play**.

6.5 Beaming Information

You can use the infrared port on your Smartphone to send and receive (beam) calendar appointments and contact cards between your Smartphone and another mobile device or a desktop computer that has an infrared port and supports VCards and VCal.

Beaming a Contact or an Appointment

1. Open the Contacts or Calendar program.
2. If you want to beam a contact's information, scroll to the contact in the contact list. If you want to beam an appointment, scroll to the appointment and press the Navigation stick.
3. Press the **Menu** soft key, and select **Beam Contact** or **Beam Appointment**.
4. Align the infrared ports so that they are unobstructed and within close range (5 ~ 30 cm) of each other.
5. Press the **Beam** soft key to start transmitting. Status information will then be displayed, indicating the name of the device your Smartphone is beaming to, and whether the beaming process is pending, done, or has failed.

Receiving Beamed Information

1. On the **Home** screen, press the **Start** soft key and select **Settings** → **Beam**.
2. Select **Receive incoming beams** and press the **Done** soft key.
3. Align the infrared ports so that they are unobstructed and within close range of each other.
4. Your Smartphone will search the device sending information. Press the **Yes** soft key to start receiving information.

◀ NOTE ▶

- Once you select **Receive incoming beams**, your device automatically receives beams until you clear this check box.
- Your Smartphone can receive beamed files of any type, but you may need to copy some files to your desktop computer for viewing.

7 ActiveSync

This chapter introduces the basic features of Microsoft® ActiveSync® technology. It describes how to use ActiveSync for synchronizing information on your Smartphone with your desktop computer and/or a server running Microsoft® Exchange® Server.

For detailed information about using ActiveSync, see ActiveSync Help on your desktop computer.

This chapter includes:

7.1	Understanding ActiveSync	136
7.2	Setting up ActiveSync	137
7.3	Synchronizing Information	143
7.4	Deciding Which Information to Synchronize.....	145
7.5	ActiveSync Error Messages	147

7.1 Understanding ActiveSync

ActiveSync synchronizes information stored on your Smartphone with Microsoft® Outlook® information on your desktop computer or Microsoft Exchange Server. It also allows you to share files between your Smartphone and your desktop computer.

When you synchronize, ActiveSync compares the information on your Smartphone with the information on your desktop computer and/or Exchange Server and updates all locations with the most recent information.

With ActiveSync, you can:

- Synchronize Outlook e-mail, Contacts, Calendar, and Tasks information on your Smartphone with your desktop computer.
- Synchronize Outlook e-mail, Contacts, and Calendar on your Smartphone with the Outlook information on a server running Microsoft Exchange Server so that you have the latest information, even when your desktop computer is turned off. You can synchronize with an Exchange server if your company or service provider is running Microsoft Exchange Server with Exchange ActiveSync. You can synchronize Tasks information with your desktop computer, but not with a server.
- Copy (rather than synchronize) files between your Smartphone and your desktop computer.
- Synchronize on a schedule to control when synchronization occurs.
- Select which types of information are synchronized and specify how much information is synchronized. For example, you can choose how many weeks of past appointments to synchronize.

7.2 Setting up ActiveSync

Creating a Partnership

NOTE

- For information on installing ActiveSync, see section 1.5.

As soon as ActiveSync installation completes, the New Partnership Wizard automatically starts. This wizard helps you set up a partnership between your Smartphone and your desktop computer or with an Exchange server.

When you create a partnership, you specify your synchronization settings; for example, the type of information to synchronize, whether or not to synchronize with both your desktop computer and an Exchange server. Once a partnership is set up, ActiveSync on your desktop computer recognizes your Smartphone when you connect it, and automatically applies the synchronization settings you specified.

When you finish using the wizard, the first synchronization begins automatically. When synchronization completes, you will notice that the information from your desktop computer or Microsoft Exchange Server that you selected now appears on your Smartphone.

Configuring an Exchange Server Connection

You can use the New Partnership Wizard when you are first setting up a partnership with a desktop computer to synchronize with an Exchange server. If you did not set up the Smartphone to synchronize with an Exchange server when you set up your partnership, this section describes how to configure wireless synchronization with an Exchange server on your Smartphone.

If at some later time you want to synchronize with a server when the Smartphone is connected to the desktop computer, you must then configure ActiveSync on the desktop computer as described in "Synchronize with a server" in ActiveSync Help on the desktop computer.

You can edit the connection later to stop synchronizing a particular type of information or to change how much information is synchronized. All of these settings can also be configured using ActiveSync on the desktop computer when the Smartphone is connected to the desktop computer by a USB or infrared connection.

To configure an Exchange server connection

1. Obtain the following Exchange Server information from your service provider or system administrator:
 - The name of the server and the server domain name.
 - Your Exchange user name and password to synchronize with an Exchange server.
2. If your Smartphone is connected to your desktop computer, disconnect it.
3. On the **Home** screen, select **Start**.
4. Select **ActiveSync**.
5. Select **Menu** and then **Options**.
6. Select **Server Settings**.
7. Select **Connection**.
8. In **User name**, enter your Microsoft Exchange user name.
9. In **Password**, enter your Microsoft Exchange password.
10. In **Domain**, enter the name of the domain of your Exchange server (if required).
11. If you want the Smartphone to save your password so that you need not enter it when connecting, select **Save password**.
12. If configuring a **Server Name**, enter name of your Exchange server.
13. Select **Done**.

Changing ActiveSync Settings Later

To change ActiveSync settings for synchronizing with a desktop computer

If you want to change ActiveSync settings for synchronizing with a desktop computer, use ActiveSync on the desktop computer. For more information, see "Modifying the Amount of Information Synchronized" in ActiveSync Help on the desktop computer.

To change ActiveSync settings for synchronizing with your Exchange server

1. On the Smartphone **Home** screen, select **Start**.
2. Select **ActiveSync**.
3. Select **Menu** and then **Options**.
4. Select **Server Settings**.
5. Select the synchronization settings to edit: **Calendar**, **Contacts**, or **Inbox**.
6. Do one of the following:
 - To start synchronizing **Calendar**, **Contacts**, or **Inbox** information, select **Sync [Information Type] with a server** on the appropriate synchronization settings page.
 - To stop synchronizing **Calendar**, **Contacts**, or **Inbox** information, clear the **Sync [Information Type] with a server** check box on the appropriate synchronization settings page.
 - Change the amount of information to be synchronized.
7. Select **Done**.

NOTE

- Before you change synchronization settings, disconnect the device from your desktop computer.

Creating a Synchronization Schedule

To create a synchronization schedule with your desktop computer

To set up a synchronization schedule with your desktop computer, you must use ActiveSync on the desktop computer. For instructions, see "Change desktop synchronization schedule" in ActiveSync Help on the desktop computer.

To create a synchronization schedule with an Exchange server

To set up a synchronization schedule with an Exchange server, you must use ActiveSync on your Smartphone. You can schedule synchronization of your device on two separate schedules. Use the peak times schedule to synchronize during working hours or other times you experience higher mail volumes. Use the off-peak schedule to synchronize during times when you experience lower mail volumes. When you are roaming, you can synchronize manually to reduce roaming charges, or you can synchronize using the mobile schedules.

1. On the Smartphone Home screen, select **Start**.
2. Select **ActiveSync**.
3. Select **Menu** and then **Options**.
4. Select **Mobile Schedule**.
 - Select how often to synchronize in the **Peak time sync** list.
 - Select how often to synchronize in the **Off-peak time sync** list.
 - Select whether or not to synchronize on a schedule in the **Roaming sync** list.
 - Select **Sync outgoing items as they are sent** to synchronize every time you send e-mail.
5. Select **Done**.

◀ NOTE ▶

- To edit schedule settings, your Smartphone must be disconnected from your desktop computer.
- If you create a schedule for synchronizing while connected to a desktop computer as well as a schedule for synchronizing remotely (wirelessly), the Smartphone synchronizes according to both schedules.

Synchronizing Automatically

With ActiveSync you can schedule automatic synchronization between your device and a server every time an item arrives or is changed at the server. Your device is informed of that event and synchronizes automatically to retrieve those items, making your device always up-to-date. You must synchronize your device at least once (such as after creating a partnership) before you can see and change the settings for synchronization as items arrive.

NOTE

- You can synchronize as items arrive only if your company or service provider is running Microsoft Exchange Server with Exchange ActiveSync.

To set up a schedule to synchronize automatically

1. On the Smartphone Home screen, select **Start**.
2. Select **ActiveSync**.
3. Select **Menu** and then **Options**.
4. Select **Mobile Schedule**.
5. Set **Peak time sync** and/or **Off-peak time sync** to **As items arrive**.
6. Select **Done**.

To set up the device address

1. On the Smartphone Home screen, select **Start**.
2. Select **ActiveSync**.
3. Select **Menu** and then **Options**.
4. Select **Server Settings**.
5. Select **Connection**.

6. Do one of the following:
 - Scroll to **Text Message Address** and enter the address that identifies your device on the network. This is the same address that other Internet users use to send text messages to your device.
 - If your company has instructed you to use a pre-defined service provider profile, scroll to **Service Provider**, and select the service provider name. Then, enter your device phone number, if necessary, in **Device Phone Number**. If you do not want to use the provider profile, under **Address device using**, select **Other**. Then enter the text message address for your device in **Text Message Address**.
7. Select **Done** twice.

◀ NOTE ▶

- To edit settings on the Smartphone, disconnect it from your desktop computer.

7.3 Synchronizing Information

Starting and Stopping Synchronization



Once you have set up ActiveSync, you can synchronize information at any time by using ActiveSync on the Smartphone.

1. On the Home screen, select **Start**.
2. Select **ActiveSync**.
3. To start synchronization, select **Sync**.
4. To stop synchronizing, select **Stop**.

Synchronization Methods

In addition to the USB connection already described in section 1.5, you have other options for synchronizing your information. You can use:

- Infrared connection
- Remote synchronization

Synchronizing by Using an Infrared Connection

You can connect your Smartphone to another mobile device or your desktop computer by using an infrared connection. This method is ideal for changing quickly between multiple devices because there are no cables or adapters to connect.

For more information about synchronizing by using an infrared connection or other connection types, see ActiveSync Help on your desktop computer.

Configuring Remote Synchronization

You can synchronize remotely with your desktop computer, or with an Exchange server. Remote synchronization is when your device is synchronizing over a wireless connection instead of using a direct local connection to a desktop computer. Synchronizing remotely with your desktop computer may depend on your network configuration. For example, you may need to set up a virtual private network (VPN) connection to your network.

To synchronize remotely you must configure your Smartphone as described in the following procedure. You will also need to set up a connection. For information about setting up a connection, see "Data Connections" in section 4.2. Then you will be ready to synchronize your information.

To configure remote synchronization with a desktop computer

1. On the Home screen, select **Start**.
2. Select **ActiveSync**.
3. Select **Menu** and then **Options**.
4. Select **PC Settings**.
5. In **Use**, scroll to the computer name.
6. Select or clear **Use mobile schedule to sync with this PC**.
7. Select or clear **Sync with this PC during manual sync**.
8. Select **Done** twice.

◀ NOTE ▶

- To synchronize remotely with a desktop computer, the desktop computer must be turned on.

7.4 Deciding Which Information to Synchronize

By default, ActiveSync does not automatically synchronize all types of Outlook information. You can use ActiveSync options to turn synchronization for specific information types on and off. Items that you synchronize with Microsoft Exchange Server cannot also be synchronized with Outlook on a desktop computer.

Synchronizing Outlook E-mail

When you select Inbox for synchronization in ActiveSync, e-mail messages are synchronized as part of the general synchronization process. During synchronization, the following events occur:

- Messages are copied from the Outlook Inbox folder on your desktop computer, or from Microsoft Exchange Server, to the Inbox folder of the Outlook E-mail account on your Smartphone.
- By default, when synchronizing your Outlook E-mail account with your desktop computer or Microsoft Exchange Server, you receive only messages from the last three days and the first 500 bytes of each new message.
- The messages on your Smartphone and on your desktop computer are linked. When you delete a message on your Smartphone, it is deleted from your desktop computer the next time you synchronize, and vice versa.
- Messages in subfolders of other Outlook e-mail folders are synchronized only if the folders have been selected for synchronization in your Outlook E-mail account on your Smartphone.

◀ NOTE ▶

- Text messages are not received in Messaging through synchronization. Instead, they are sent to your Smartphone by way of your service provider.

Synchronizing Calendar

Calendar items stored on your Smartphone can be synchronized with calendar items stored on your desktop computer or on a Microsoft Exchange server. By default, Calendar items from the last two weeks are synchronized.

Calendar items created on your Smartphone are copied to your desktop computer and/or server during synchronization, and vice versa. Similarly, Calendar items that are deleted from your Smartphone are deleted from your desktop computer and/or server during synchronization, and vice versa.

Synchronizing Contacts

Contacts stored on your Smartphone can be synchronized with contacts stored on your desktop computer or on a Microsoft Exchange server. By default, all of your contacts are synchronized.

Contacts created on your Smartphone are copied to your desktop computer and/or server during synchronization, and vice versa. Similarly, contacts that are deleted from your Smartphone are deleted from your desktop computer and/or server during synchronization, and vice versa.

Synchronizing Tasks

Tasks stored on your Smartphone can be synchronized with tasks stored on your desktop computer. Task synchronization is automatically selected in ActiveSync. By default, all of your incomplete tasks are synchronized.

Tasks created on your Smartphone are copied to your desktop computer during synchronization, and vice versa. Similarly, tasks that are deleted from your Smartphone are deleted from your desktop computer during synchronization, and vice versa.

◀ NOTE ▶

- Tasks can be synchronized only with your desktop computer; they cannot be synchronized with a server running Microsoft Exchange Server.

7.5 ActiveSync Error Messages

If your information cannot be successfully synchronized, you will see an error message on your Smartphone. To help troubleshoot the problem, you can view more information about the error.

When an error message is displayed, scroll to it and press the Navigation stick to view information about the ActiveSync error.

◀ NOTE ▶

- Some errors interfere with automatic synchronization. If you suspect that a scheduled synchronization has not occurred, you should attempt to manually synchronize your information. Successfully completing manual synchronization resets automatic synchronization. For more information, see “Synchronizing Information” in ActiveSync Help on your desktop computer.

8 Internet, Entertainment, and More

This chapter explains how to browse the Web using Microsoft® Pocket Internet Explorer, play audio and video files using Microsoft® Windows Media® Player, set up a modem link, play Solitaire, and use Calculator.

This chapter includes:

8.1	Internet Explorer	150
8.2	Media Player	154
8.3	Modem Link	159
8.4	Games	162
8.5	Calculator	164

8.1 Internet Explorer

Using Pocket Internet Explorer, you can browse the Web on your Smartphone. Pocket Internet Explorer on your Smartphone supports HTML (Hypertext Markup Language), cHTML (compact Hypertext Markup Language), and WAP (Wireless Application Protocol). It also supports JavaScript, ActiveX controls, and CSS (cascading style sheets). The browser supports images and sounds, but it does not support frames on a Web page.

With Pocket Internet Explorer, the Favorites list is displayed as the main screen instead of a home page, so you can easily go to your favorite Web sites. You can add your own favorites to this list for Web sites you frequently visit. You can view your Favorites list from any Web page by selecting **Favorites**.

Browsing the Web

◀ NOTE ▶

- Make sure that you have set up the Smartphone's connection. (See "Data Connections" in section 4.2)

On the Home screen, press the **Start** soft key and select **Internet Explorer** to open Internet Explorer.

After opening Internet Explorer, you can:

To...	Do this...
View a favorite	Select a favorite to view and press the Go soft key.
Go to a link	Select a link. You can scroll vertically or horizontally to see all available links.
Go to a Web page	Press the Menu soft key and select Address Bar . Enter the Web address and press the Go soft key.
Return to a Web page you visited in the same session	On a Web page, press the Back key repeatedly until the page appears.
View a list of recently-visited Web pages	Press the Menu soft key and select Address Bar . Scroll to View History and press the Go soft key.

To...	Do this...
Go to a Web page on the History list	Press the Menu soft key and select Address Bar . Scroll to View History and press the Go soft key. Scroll to the Web page address and press the Go soft key.
Disconnect from the Internet	Press the End key.

NOTE

- While you are connected to the Internet, you can change between Pocket Internet Explorer and other programs on your Smartphone by pressing the **Home** key and navigating to the program you want. This does not close your Internet connection. To return to the Web page you were viewing, press the **Back** key.

Using the Favorites List

If you see a Web page you want to visit another time, mark it as a favorite. The next time you want to visit that Web page, you can select it from your Favorites list.

To add a web page to your Favorites list

Edit abc

Name:
SAGEM homepage

Address (URL):

Folder:
Favorites ◀ ▶

- Press the **Menu** soft key and select **Add Favorite**.
- If you are already in the Web page you want, the name and URL will appear on the screen. If you are manually entering the information, enter the name and URL in the input fields.
- Press the **Add** soft key.

To create, delete and edit a folder in Favorites

In Favorites, you can create, delete and edit a folder using the **Menu** commands.

Refreshing Web Pages

The Smartphone caches the Web pages that you view and stores them until the cache is full. It then replaces the oldest pages with new pages. If you go to a page that is cached on your Smartphone, you see the stored version unless you refresh the page to see the latest version. Press the **Menu** soft key and select **Refresh** to see the latest Web content for that page.

Customizing Pocket Internet Explorer

You can customize Web browsing options, change the network to connect to, and make more memory available on your Smartphone by clearing stored cookies and Web pages.

In Internet Explorer, press the **Menu** soft key and select **Options**. You can set up the following options:

Pocket Internet Explorer Options	Sub Item	Description
General	Show pictures	To display graphics on Web pages
	Play sounds	To play sounds on Web pages
	Warn when changing to an unsecure page	To warn when moving from a secure to a non-secure Web page
	Allow cookies	To allow Web sites to download cookies to your Smartphone
	Language	To select the alphabet to use
Connections	Automatically detect settings	To automatically detect network settings
	Select network	To select the network to which Internet Explorer should connect if you did not select Automatically detect settings .

Pocket Internet Explorer Options	Sub Item	Description
Memory	Temporary Files	To clear Web pages from the cache. (When you do this, you will no longer be able to view these cached Web pages offline. You will need to connect to the Internet and go to the page. This downloads a new file to the cache, so you can again view the page offline).
	Cookies	To clear stored cookies. This deletes personal information about you that is stored for use by various Web sites.
	History	To clear History files.

8.2 Media Player

 


Using Microsoft® Windows Media® Player, you can play Windows Media Audio (WMA) files, Windows Media Video (WMV) files, and MP3 audio files on your Smartphone. You can also copy digital music and video directly from your desktop computer to your Smartphone by using either Windows Media Player or Microsoft® ActiveSync® technology.

For more information about copying files by using Windows Media Player, see the topics on copying files to a portable device in Windows Media Player Help on your desktop computer. For more information about copying files by using ActiveSync, see "Copying and Moving Files" in ActiveSync Help on your desktop computer.

Windows Media Player is easy to use; the controls are similar to the buttons on a compact disc player. You can play audio or video files, skip to another song or video, and increase or decrease the volume.

Playing Video and Audio Files

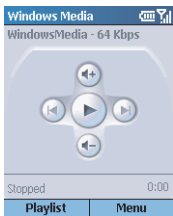

1. On the Home screen, press the **Start** soft key and select **Windows Media**. You will see the **Local Content** screen. If you are operating in Playback mode, press the **Playlist** soft key to go to **Local Content** screen.
2. If you have copied the files to the \Storage\My Documents folder of your Smartphone, you will see a list of the files on the screen. Select the file you want and press the **Play** soft key to start playing.
3. You can do the following when playing a file.

To...	Do this...
Play or pause the playback of the current file	Press the Navigation stick.
Skip to the beginning of the current file	Push the Navigation stick left.
Skip to the beginning of the previous file on the current playlist	Push the Navigation stick left twice quickly.
Skip to the next file on the current playlist	Push the Navigation stick right.
Adjust the volume	Use the Volume control or push the Navigation stick up or down to increase or decrease the volume.
Play a streaming media file on a network	Press the Menu soft key and select Open URL . Enter the Web URL and press the Play soft key.
Play files randomly	Press the Menu soft key and select Settings . Select Shuffle and press the Done soft key.
Play files repeatedly	Press the Menu soft key and select Settings . Select Repeat and press the Done soft key.
Stop playback while using another program	Press the Menu soft key and select Settings . Select Background play and press the Done soft key.

Using Menu Commands When Playing a File



When you are playing a file, you can use the menu commands to start and pause playback, skip to the next or previous file, display information about a file, change volume and playback settings, or add files to your Favorites.

Press the **Menu** soft key to access the menu commands. The following table lists the menu commands and their functions that are available when you play a file.

Menu When Playing a File	Function
Play/Stop	Plays or stops the playback of the current file.
Next	Skips to the next file on the current playlist. This command is not available if the last file is the current selection.
Previous	Skips to the beginning of the current file on the current playlist. If no file is playing, this command skips to the previous file on the current playlist.
Open URL	Plays a streaming media file on a network (for example, content streamed from an Internet radio station).
Properties	Displays information about the file that is playing.
Settings	Displays the Settings options, which enable you to adjust the volume and various playback options.
Add to Favorites	Adds the streaming media file that is playing to the Favorites playlist.

Using Media Player Favorites

You can play your favorite streaming media file on the Internet and add it to Favorites. The next time you want to listen to the file, you can select it from Favorites.

To add a streaming media file to Favorites

1. On the Home screen, press the **Start** soft key and select **Windows Media**.
2. Press the **Menu** soft key and select **Open URL**.
3. Enter the Web page address and press the **Play** soft key.
4. Press the **Menu** soft key and select **Add to Favorites**.

To play a Favorite

1. On the Home screen, press the **Start** soft key and select **Windows Media**.
2. On the **Local Content** screen, press the **Menu** soft key and select **Favorites**.
3. Scroll to the file to play and press the **Play** soft key.

To delete a Favorite

1. On the Home screen, press the **Start** soft key and select **Windows Media**.
2. On the **Local Content** screen, press the **Menu** soft key and select **Favorites**.
3. Scroll to the file to delete, press the **Menu** soft key, and select **Delete**.

Understanding Licenses

Some digital media content from the Internet, CD tracks, and videos have associated licenses that protect them from being unlawfully distributed or shared.

Licenses are managed and created using digital rights management (DRM), which is the technology for securing content and managing the rights for its access. Some licenses prevent you from playing content that is copied to your Smartphone.

◀ NOTE ▶

- To ensure that the license is copied with the content, use the **Portable Device** (or **Copy to CD or Device**) feature in Windows Media Player 7.0 or later on your desktop computer to copy content to your Smartphone. For more information about copying content to your Smartphone and other portable devices, see the Windows Media Player Help on your desktop computer.

Media Player Compatibility

Supported File Formats

Media Player supports the following types of file formats

- Windows Media format (*.asf, *.asx, *.wax, *.wm, *.wma, *.wmv, *.wmx, *.wvx)
- Moving Picture Experts Group (MPEG) format (*.mp3)

Supported Audio and Video Codecs

Media Player can play files that have been compressed by using any of the following audio and video codecs.

Audio codecs

- Microsoft Windows Media Audio codec version 2.0, 7, and 8
- Microsoft Windows Media Audio 9 and Windows Media Audio 9 Voice codecs (the Windows Media Audio 9 Professional and Windows Media Audio 9 Lossless codecs are not supported)
- Fraunhofer IIS-A MPEG-1 Audio Layer-3 (MP3) codec

Video codecs

- Microsoft Windows Media Video codec version 7 and 8
- Microsoft Windows Media Video 9 and Windows Media Video 9 Image codecs (the Windows Media Video 9 Screen codec is not supported)
- Microsoft MPEG-4 video codec version 3.0
- ISO MPEG-4 video codec version 1.0

8.3 Modem Link

Using Modem Link, you can use your Smartphone as an external modem for another device or computer by using an infrared or USB connection.

◀ NOTE ▶

- Your Smartphone does not support the COM connection.

Setting up an Infrared Connection

1. Make sure that your Smartphone is not connected to another device.
2. On the **Home** screen, press the **Start** soft key and select **Accessories** → **Modem Link**.
3. Press the **OK** soft key on the message that appears.
4. Under **Connection**, select **IrCOMM**.
5. Press the **Menu** soft key and select **Activate**.
6. Align the Smartphone's IR port to the device.
7. To deactivate the Modem link, press the **Menu** soft key and select **Deactivate**.

Setting up a USB Connection

◀ NOTE ▶



- When using the USB connection as the modem link, your Smartphone supports Windows 2000/XP only.
- Before using your Smartphone as a USB modem, clear **Allow USB connection with this desktop computer** in **Connection Settings** of ActiveSync on your desktop computer to close the ActiveSync connection. To use the ActiveSync connection again, you need to select **Allow USB connection with this desktop computer**.

 
1. Make sure that you have set up the Smartphone's connection. (See "Data Connections" in section 4.2).
2. Make sure that your Smartphone is not connected to another device.
3. On the **Home** screen, press the **Start** soft key and select **Accessories → Modem Link**.
4. Press the **OK** soft key on the message that appears.
5. Under **Connection**, select **USB**.
6. Press the **Menu** soft key and select **Activate**. Notice not to press any key to leave the current screen.
7. Connect your Smartphone to the desktop computer, and insert the Companion CD into the CD-ROM drive of the desktop computer.
8. The installation of the USB driver will start automatically. If needed, browse for the USB driver on the Companion CD.
9. Open the Device Manager on the desktop computer by clicking **Start → Control Panel → System → Hardware** (for Windows 2000/XP/2003) → **Device Manager**.
10. Open the **Modem** item, right-click on **USB Modem**, and select **Properties**.
11. Open the **Advanced** page, enter **+CGDCONT=1, "IP", "APN",0,0,0** (APN value is given by your service provider, for example APN=orange or APN=websfr) under **Extra initialization commands**, and click **OK**.

◀ NOTE ▶

- Depending on your service provider, the string for you to enter may not be "APN". To make sure of the correct string to enter, on the **Home** screen press the **Start** soft key → **Settings** → **Data Connections** → the **Menu** soft key → **Edit Connections** → **GPRS Connections** → select your GPRS connection → the **Menu** soft key → **Edit** → **Access point**.
12. On your desktop computer, create a dial-up connection using your Smartphone as the modem, enter ***99#** for the phone number and user name; you do not need to set up the password.

◀ NOTE ▶

- For information on creating a dial-up connection on the desktop computer, see the documents that came with the operating system.
 - You are advised to set the baud rate to at least **115200**.
13. Click **Dial** on your dial-up connection screen. The  icon appears on the task bar after the successful dial-up connection.
14. To end the connection, right-click on the  icon on the desktop computer and select **Disconnect**. Or, press the right soft key on the Smartphone → **Deactivate**.


**◀ NOTE ▶**

- Failing to deactivate the modem link when you are finished using it might result in problems with using ActiveSync in the same session.
- Disconnecting the ActiveSync cable will not completely stop the modem connection on the Smartphone. You have to press the **Menu** soft key → **Deactivate**.

8.4 Games


Solitaire

 The object of Solitaire is to use all the cards in the deck to build up the four suit stacks in ascending order, beginning with the aces. You win the game when all cards are on the suit stacks.

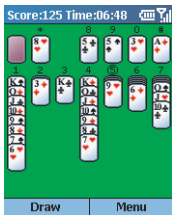

1. On the Home screen, press the **Start** soft key and select **Games** → **Solitaire**.
2. To start a new game of Solitaire, press the **Menu** soft key and select **New Game**.
3. Press the number or character above the card stack displaying the card you want to move, and then press the number or character above the card stack to which you want to move the card.
Pushing the Navigation stick up will move a card to one of the four card stacks on the upper right corner of the screen if it belongs there. For example, if you have an ace displayed in one of the seven stacks, press the number above the ace, and then push the Navigation stick up.
4. Move any aces on the seven stacks to the four card spaces at the top of the screen, and then make any other available plays.
5. When you have made all available plays, press the **Draw** soft key to turn over cards. The card that is face up on the deck is always available for play.

 Jawbreaker

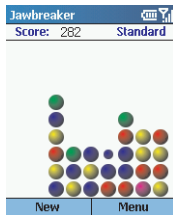

1. On the Home screen, press the **Start** soft key and select **Games** → **Jawbreaker**.
2. To start a new game of Jawbreaker, press the **New** soft key.
3. The ball being selected will flash. To eliminate two (or more) adjacent balls of the same color, scroll to select and press the Navigation stick. The screen will display the score for eliminating the selected balls. Press the Navigation stick again to eliminate them.
To undo the elimination, press the **Menu** soft key and select **Undo**. You can only undo once.
4. The game is over when all adjacent balls of the same color are eliminated. The screen will then display the score.

 
Press the **Menu** soft key and select **Statistics** to view the number of games you have played, the average score, the highest score, and the big burst for a single elimination. You can press the **Reset** soft key to reset the statistics.

Press the **Menu** soft key and select **Options** to change the settings for playing sounds, game style and the color of the balls (breakers).

8.5 Calculator

You can use Calculator to perform any of the standard operations for which you would normally use a handheld calculator. Calculator performs basic arithmetic, such as addition, subtraction, multiplication, and division.

To enter numbers and perform calculations:

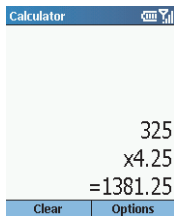

1. On the Home screen, press **Start** soft key and select **Accessories** → **Calculator**.
 2. Use the keypad to enter numbers and perform calculations. Press the Asterisk (*) key to enter a decimal point.
 3. To enter the mathematical symbols:
 - Press the Pound (#) key to cycle through the available mathematical symbols: the plus sign (+), the minus sign (-), the multiplication sign (x), and the division sign (/).
 - You can also use the menu commands to display the available mathematical symbols.
- You can also use the navigation pad to display the available mathematical symbols. Push the Navigation stick upward for the plus sign (+), downward for the minus sign (-), left for the division sign (/), and right for the multiplication sign (x).
 4. If you enter the wrong number, press the **Back** key to clear the last digit entered in a multiple-digit entry. Note that the divisor cannot be 0.
 5. When you entered the calculation, press the Navigation stick to obtain the answer. Or, you can obtain the answer using the **Equals** of the menu commands.
 6. To clear the current calculation and start a calculation again, press the **Clear** soft key.

PART II - SOFTWARE MANUAL

9 Using the Digital Camera

Your Smartphone features a built-in VGA camera. You can take photos or record videos and then directly view these photos or videos on your Smartphone. What's more, you can immediately share with others your photos and videos through the mobile network service.

This chapter includes:

9.1	PhoneCamera	168
9.2	PhoneViewer	174
9.3	VideoPlayer	183

9.1 PhoneCamera

The Phone Camera program is your tool for taking photos and recording videos on your Smartphone.

Taking Photos

1. If you want to save your photos in a storage card, insert the card.
2. On the Home screen, press the **Start** soft key and select **Phone Camera**.
3. By default, the camera is in Take Photo mode. If you are currently in Record Video mode, press the **Menu** soft key and select **Take Photo** to change the mode.
4. Frame your target in the viewing window. You can rotate your Smartphone if necessary.
5. If you need to adjust the brightness or zoom in/out, follow this method:
 - Push the Navigation stick up/down to adjust the brightness of the image (only when the **Brightness** item in Settings is set to **Manual**).



- push the Navigation stick left/right to zoom in/out (only when the **Picture Resolution** item in Settings is set to **176x144**).



A sliding bar appears at the bottom of the screen to indicate the adjustable range. It disappears after three seconds of inactivity.

6. When you are ready to take the photo, press the Navigation stick.
7. The left soft key on the screen will display **Save**. Press the left soft key or the Navigation stick to save the photo. If you do not respond in five seconds, the program will automatically save it.

The photo is saved as a .jpg file in the storage card (if inserted) or in the memory of your Smartphone.


8. To immediately view the saved photo, press the **Viewer** soft key to open Phone Viewer. (For details on Phone Viewer, see section 9.2).

 
◀ NOTE ▶

- After shooting, you can press the **Send** soft key to create a new MMS message containing the new photo.
- If you do not want to save the photo after shooting, press the **Back** key within 5 seconds.
- To configure the camera settings, press the **Menu** soft key and select **Settings**. (For more information, see "PhoneCamera Settings" in section 9.1 later in this chapter).

Continuous Shots

Your camera features continuous shots. You can take a total of nine continuous shots at the set interval (0.5 second by default).

1. While in the Take Photo mode, press the **Menu** soft key and select **Continuous**. The  icon appears on the top left corner of the screen to indicate that the Continuous mode is in use.
2. Follow steps 4 to 6 as described in the previous section to take the photo. The Smartphone will take nine continuous shots and then display the photos on the screen.
3. Press the **Save** soft key to save the nine photos or **Cancel** soft key to abandon the photos.

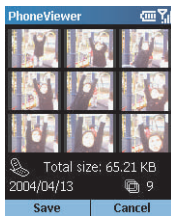

Recording Videos

1. If you want to save your videos in a storage card, insert the card.
2. On the Home screen, press the **Start** soft key and select **PhoneCamera**.
3. By default, the camera is in the Take Photo mode. Press the **Menu** soft key and select **Record Video** to change to Record Video mode.
4. Frame your target in the viewing window. You can rotate your Smartphone if necessary.

5. If you need to adjust the brightness or zoom in/out, follow this method:
 - Push the Navigation stick up/down to adjust the brightness of the image (only when the **Brightness** item in Settings is set to **Manual**).
 - Push the Navigation stick left/right to zoom in/out.
 - A sliding bar appears at the bottom of the screen to indicate the adjustable range. It disappears after three seconds of inactivity.
6. When you are ready to record the video, press the Navigation stick to start recording. To stop the recording, press the Navigation stick again.



7. The left soft key on the screen will display **Save**. Press the left soft key or the Navigation stick to save the video. If you do not respond in five seconds, the program will automatically save it.
The video is saved as a .3gp file in the storage card (if inserted) or in the memory of your Smartphone.
8. To immediately watch the saved video, press the **Player** soft key to open Video Player. (For details on Video Player, see section 9.3).

NOTE

- When saving the video in your Smartphone, the maximum recording time allowed is 15 seconds; when saving in a storage card, you can keep on recording until the card runs out of space.
- After recording, you can press the **Cancel** soft key in five seconds to abandon.

PhoneCamera Settings

To configure Phone Camera, press the **Menu** soft key and select **Settings** on the Phone Camera main screen. While in the Settings menu, scroll up/down to an item. To select an option for the item, scroll left/right or press the Navigation stick to select from a submenu.

PhoneCamera Settings	Description
Timer	Sets the time lag between releasing the shutter and shooting the photo. This is helpful for avoiding blurring caused by vibration of your Smartphone when you press a key. The options are 0–10 seconds (default is 0). For example, if you set the timer to 3 , when you press the key to shoot, the timer will start to count down and you should keep the Smartphone steady until the time is up and the photo is shot.
Mode	Default setting is Normal Mode . When in a dark place, select Twilight Mode for better result.
Picture Resolution	Sets the resolution (pixels) of the photo. The options are 176x144 (default), 320x240 and 640x480 . The image resolution for videos is 176x144.
Video Quality	Sets the video quality to High Quality or Normal Quality .
Storage Media	Selects the storage location for the photos and videos to Storage or SDMMC Disk . Photos are stored in the \Storage\My Documents folder of your Smartphone or \PhotoAlbum folder of the storage card. Videos are stored in the \Storage\My Documents folder of your Smartphone or \MovieAlbum folder of the storage card.
Brightness	Sets the brightness control to Manual (default) or Auto .
Flicker Control	When you use the camera indoors, you can select 50 Hz or 60 Hz to match the local flicker frequency of the fluorescent lamp.
Continues Interval	Sets the time interval (second) for taking continuous photos. The options are 0.5 s (default), 0.75 s and 1 s .

Notes on Using PhoneCamera

- To use PhoneCamera, your Smartphone must have enough memory. If the memory is inefficient, a warning message will appear on the screen. To solve the problem, you can free the memory by:
 - Deleting files you no longer need
 - Stopping all other programs
 - Turn off and then on the Smartphone
- If you press the Volume Control button while in PhoneCamera, the program will be closed.

 
9.2 PhoneViewer

The Phone Viewer program allows you to view pictures in .jpg and .bmp formats, display a slideshow of all the pictures, and edit the pictures.

Viewing Photos

Thumbnail View


1. On the Home screen, press the **Start** soft key and select **Phone Viewer**.
2. If a storage card is inserted, the program will display the files in the card. Otherwise, it will display the .jpg and .bmp files in the Storage/My Documents folder and its subfolders of your Smartphone. One screen displays a total of nine thumbnails.

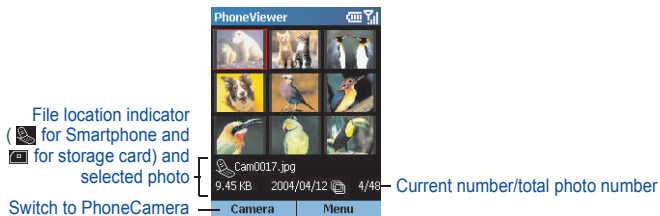

3. When you scroll to a photo, you can do any of the followings:
 - Press the Navigation stick to view the photo in full screen.
 - Use the **Menu** soft key to perform various tasks such as sending and editing. (See later instructions).



Full Screen View

When you open a photo in the thumbnail view, the photo displays in full screen.

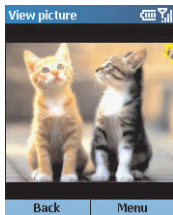 

After opening a photo in full screen, you can:

  
- Press the **Back** soft key to return to the thumbnail view.
- Use the **Menu** soft key to perform various tasks such as sending and editing. (See later instructions).
- Push the Navigation stick up/down to switch to the previous/next photo in full screen.
- Push the Navigation stick left/right to zoom in or out on the photo (25% ~ 200%).
- If you zoom in on the photo, you can move the focus by selecting **Menu** → **Move** and then push the Navigation stick to move. Press the Navigation stick to go back to the previous screen.

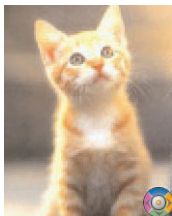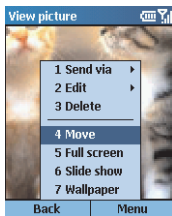

Adding a Theme to a Photo

You can add a theme to your photo to make it fancier. Phone Viewer provides 12 themes for you to select.

 1. In full screen view or thumbnail view, press the **Menu** soft key and select **Edit** → **Add Theme** to add a theme to the selected photo.

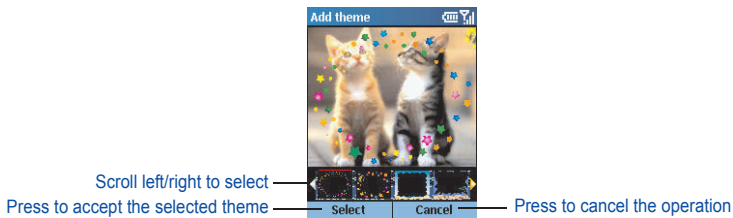

2. Scroll left/right to select a theme and press the **Select** soft key or the Navigation stick.
3. Press the **Save** soft key. The photo with a theme will be saved as a new photo in the album.

Adding a Memo to a Photo

You can add a text and/or voice notes to a photo.

 
1. In full screen view or thumbnail view, press the **Menu** soft key and select **Memo** to add a memo to the selected photo.
2. To add a text note, type the text in the text field at the bottom of the screen. You can type for up to 100 characters. Or, you can press the Navigation stick to change to full screen mode and type or read the text. Press the **Done** soft key to save the text and return to the previous screen.



3. To add a voice note, press the **Menu** soft key and select **Record** to start recording voice. Press the **Stop** soft key or the Navigation stick to stop. You can add only one voice recording to a photo, meaning a second recording will replace the old one.



4. Press the **OK** soft key. In the thumbnail view, you will see text and voice note indicators.

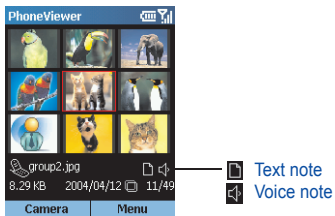

When you select **Memo** from the menu commands next time, you will see the text note. To play the recording, press the **Menu** soft key and select **Play**.

For your Smartphone to play the voice note automatically when you open the photo next time, in the thumbnail view, press the **Menu** soft key, select **Settings**, select **Play audio**, and then press **OK** soft key.

◀ NOTE ▶

- To delete the text note of a selected photo, erase all characters in the text input field with the **Back** key. To delete the voice note of a selected photo, press the **Menu** soft key and select **Delete**.

Renaming a Photo

1. In full screen view or thumbnail view, press the **Menu** soft key and select **Edit** → **Rename** to rename the current selected photo.
2. Enter the new name in the text field.
3. Press the **Save** soft key.



Adding a Special Effect to a Photo

1. In full screen view or thumbnail view, press the **Menu** soft key and select **Edit** → **Effect** to apply an effect to the selected photo.
2. Scroll left/right to select an effect such as grayscale, negative, duotone, and rotate.
3. Press the **Save** soft key to save the changed photo as a new file.



Slide Show

You can display a slide show of your photos.

1. Open PhoneViewer. If you want to specify the location of the photos, press the **Menu** soft key and select **Select Folder**.
2. To change the default settings of the slide show, press the **Menu** soft key and select **Settings**. You can customize the following options. When completed, press the **OK** soft key.
 - **Time setting** sets the interval between displaying one photo and the next one. The options range from **1** to **9** seconds (default is **2**).
 - **Slide show view** is **Best Fit** (default) or **Full Screen**.
 - **Slide show sequence** is **Forward** (default) or **Backward**.
 - **Play audio** sets if the voice notes (if added to the photos) are played during the slide show.

When completed, press the **OK** soft key.

3. To start the slide show, press the **Menu** soft key and select **Slide show**.
4. All photos will be displayed one after another in the way as specified above until you press the **OK** soft key to stop.

PhoneViewer Menu Commands

Either in the thumbnail view or full screen view, press the **Menu** soft key to access the menu commands as described below:

Thumbnail View Menu	Full Screen View Menu	Description
Send via	Send via	Sends the selected photo via MMS or infrared.
Edit	Edit	Edits the selected photo. The available commands are Add theme , Memo , Rename and Effect (See the previous sections for instructions).
Select Folder	-	Specifies the location of the photos: <ul style="list-style-type: none"> • My Smartphone displays the photos stored in the Storage\My Documents folder of your Smartphone. • Storage Card displays the photos stored in the storage card, if inserted.
Delete	Delete	Deletes the selected photo.
-	Move	Activates the Move function (available only when you have zoomed in on the photo).
-	Full screen	Displays only the photo on the screen (no top title bar and bottom soft key commands). To end the full screen display, press the Back key or Navigation stick.
Slide show	Slide show	Displays a slideshow of the photos (as described in "Slide Show")
Wallpaper	Wallpaper	Sets the selected photo as wallpaper of the Home screen.
Settings	-	The first item sets the total number of photos displayed in the thumbnail view. The options are 6 , 9 (default), and 12 . The remaining items configure the settings for a slideshow (as described in "Slide Show" earlier).
Exit	-	Closes the program.

 
9.3 VideoPlayer

Video Player allows you to play the videos (.3gp format) you have recorded using Phone Camera.

Playing Videos

Thumbnail View

1. On the Home screen, press the **Start** soft key and select **Video Player**.
2. If a storage card is inserted, the program will display the videos in the card; otherwise, it will display the videos in the Storage\My Documents folder and its subfolders of your Smartphone. One screen displays a total of nine thumbnails.

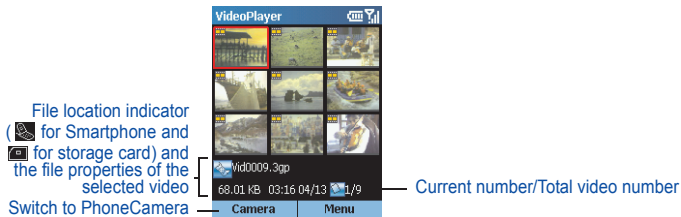

3. To play a video, scroll to select and then press the Navigation stick to watch the video in full screen.

Full Screen View

When you open a video in the thumbnail view, the video plays in full screen.

During the playback, the progress bar appears at the bottom of the screen to indicate the elapsed time (mm:ss). Press the Navigation stick to pause, and press the button again to resume.

After opening a video, you can press the **Menu** soft key to control the playback such as pause, stop, or delete. Press the **Back** soft key to return to the thumbnail view.



Return to the thumbnail view

VideoPlayer Menu Commands

In the thumbnail view, press the **Menu** soft key to access the menu commands as described below:

VideoPlayer Menu	Description
Play	Plays the selected video in full screen.
Delete	Deletes the selected video.
Rename	Renames the selected video.
Select Folder	Specifies the location of the videos: <ul style="list-style-type: none">• My Device displays the photos stored in the Storage\My Documents folder of your Smartphone.• Storage Card displays the photos stored in the storage card, if inserted.
Settings	Sets the total number of videos displayed in the thumbnail view. The options are 6 , 9 (default), and 12 .
Exit	Closes the program.

10 More Programs

In addition to Microsoft core programs, several programs are built into your Smartphone so you can take full advantage of your Smartphone.

Three camera-related programs are described in the previous chapter. This chapter describes the remaining programs.

This chapter includes:

10.1 Photo ID	186
---------------------	-----

10.1 Photo ID

Use Photo ID to assign photos to your contacts. When a contact calls you, his/her photo appears on the screen.

You can also use Photo ID to manage the phone book stored in your Smartphone and in your SIM card. For example, you can add, delete, or edit a contact, and make a call from here.

On the Home screen, press the **Start** soft key and select **Photo ID** to open Photo ID. By default, the program will load the phone book of the SIM card and the Smartphone's Contacts. After the loading finishes, the contact list (Photo ID main screen) is displayed in the alphabetic order of contact names.

◀ NOTE ▶

- On your Smartphone, there can be two kinds of independent contact lists. One is stored in the Smartphone's memory; the other is stored in the SIM card.
- You can use both Contacts and Photo ID to load the contact information stored in the Smartphone's memory and SIM card. You can use either program to add or delete data; the changes you make will be valid in both programs.
- For information on using Contacts, see section 6.1.
- To refresh the contact data, press the **Menu** soft key on the Photo ID main screen and select **Refresh**.

Assigning a Photo ID to a Contact

Your Smartphone provides several photo templates for you to use. You can also have a unique photo ready by:

- Taking a photo using your Smartphone's camera
- Copy the image file to the Storage\My Documents folder of the Smartphone via ActiveSync, infrared, or Internet

NOTE

- The photo must be a .jpg file of 176x144 resolution for the Photo ID function to work.
- The photo ID will not appear if the caller disables his caller ID feature on his phone.

 
To assign a photo to a contact

1. On the Home screen, press the **Start** soft key and select **Photo ID**.

The contact list appears on the screen. Default photo IDs are assigned to all contacts unless you change the settings.



2. Scroll to the desired contact entry.
3. To assign a photo for the contact, do one of the following:
 - To select from the existing photos, press the **Menu** soft key, and select **Edit** → **Assign Photo**. Scroll to select the desired photo.

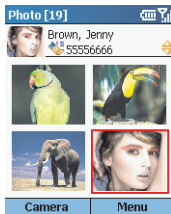


- If you want to immediately take a photo to be assigned to the selected contact, press the **Camera** soft key. Frame your target in the viewing window, and press the **Shutter** soft key to take the photo. Press the **Save** soft key.


◀ NOTE ▶

- You can also assign a photo after opening the contact card. (See “Editing a Contact” in section 10.1” in this chapter).
 - For detailed information on taking a photo, see section 9.1.
4. After selecting a photo, the Frame screen appears. Scroll to select the desired flashing frames or the normal photo without a frame. You can also press the **Preview** soft key to preview the photo with the selected frame.

 
The photo you assigned for the contact now appears on the Photo ID main screen.

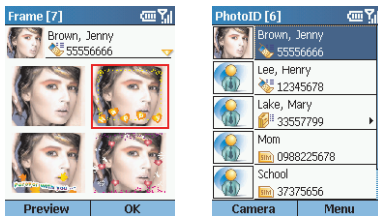

Adding a Contact Using Photo ID

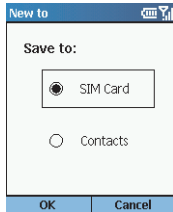 

 1. On the Home screen, press the **Start** soft key and select **Photo ID**.
2. On the Photo ID main screen, press the **Menu** soft key and select **Edit → New**.
3. Scroll to **SIM Card** or **Contacts** as the location to save this contact, and press the **OK** soft key.
4. In **Photo**, scroll left/right to select a photo or press the Navigation stick to select from the full list.
5. Enter related information and phone numbers in the other input fields.

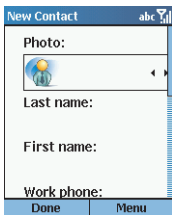

6. If you are adding a contact to **Contacts**, in **Custom ring tone**, scroll left/right to select a ring tone or press the Navigation stick to select from the full list.
7. If you want to assign the contact to a group, in **Group**, scroll left/right to select a contact group or press the Navigation stick to select from the full list.
8. If you are adding a contact to **Contacts**, you can press the **Menu** soft key and select **Edit More** to enter more information. Then press the **Done** soft key.
9. Press the **Done** soft key. The contact is now in your contact list.

 
Deleting a Contact

1. On the Home screen, press the **Start** soft key and select **Photo ID**.
2. On the Photo ID main screen, scroll to a contact to delete.
3. Press the **Menu** soft key and select **Edit → Delete**.

◀ NOTE ▶

- If you already open the contact card of the contact, press the **Menu** soft key and select **Delete**.
4. Press the **OK** soft key.

Editing a Contact

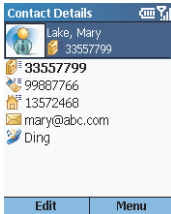

1. On the Home screen, press the **Start** soft key and select **Photo ID**.
2. Scroll to the contact to edit and press the Navigation stick to open the contact card.
3. Scroll to the entry that you want to edit.
4. Press the **Edit** soft key; or, press the **Menu** soft key and select **Edit**.
5. Make the changes and press the **Done** soft key.

Viewing Modes



Photo ID provides four viewing modes for you to view the contact information.

To change the viewing mode, press the **Menu** soft key on the Photo ID main screen and select **View Mode**, then your desired mode.

 
All Contacts [Detail]





By default, the screen displays the All Contacts [Detail] mode when you open Photo ID.

In this mode, the left column of the screen displays the default or assigned photos, and the right column the names and phone numbers of the contacts. If the contact is stored in the SIM card, the phone number is preceded by the  icon. If the contact is stored in your Smartphone, the phone number is preceded by the photo indicator such as .

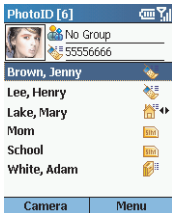All Contacts [List]



In this mode, the top of the screen displays the information of the selected contact. The middle of the screen displays the contact list with names and locations. If the contact is stored in the SIM card, the phone number is preceded by the  icon. If the contact is stored in your Smartphone, the phone number is preceded by the photo indicator such as .

 
Group Only [Detail]



In this mode, the screen displays the list of contact groups. (For information on groups, see the next section).

The left column of the screen displays the photos of the contact groups, and the right column the group name, number of contacts in the group and ring tone.

Group Only [List]

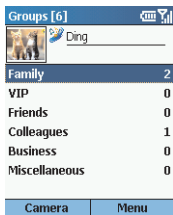

In this mode, the top of the screen displays the information of the selected contact group. The middle of the screen displays the contact group list with group names and number of contacts in the group.

Managing Contact Groups

You can assign your contacts to different contact groups for efficient management. By default, Photo ID provides six contact groups, including Family, VIP, Friends, Colleagues, Business and Miscellaneous.

Assigning Group Members

You can assign a contact group when adding or editing a contact. You can also assign group members by the following procedure:

1. On the Photo ID main screen, press the **Menu** soft key and select **Manage Group**.
2. In the contact group list, scroll to the group to assign members.
3. Press the **Menu** soft key and select **Assign Members**.
4. Select the contacts as the members of the selected group and press the **Done** soft key.

Assigning a Group Photo

1. On the Photo ID main screen, press the **Menu** soft key and select **Manage Group**.
2. In the contact group list, scroll to the group to assign a photo.
3. Press the **Menu** soft key and select **Assign Photo**.
4. To assign a photo, follow the same procedures for assigning a photo to a contact as described previously.
5. Press the **OK** soft key. The photo you assign for the selected group is now on the screen.

When a contact in the group calls you and this contact does not have a personal photo assigned, the photo assigned to the group appears on the screen.

Assigning a Group Ring Tone

1. On the Photo ID main screen, press the **Menu** soft key and select **Manage Group**.
2. In the contact group list, scroll to the group to assign a ring tone.
3. Press the **Menu** soft key and select **Ring Tone**.
4. Scroll to the ring tone you want and press the **Done** soft key.

When a contact in the group calls you and this contact does not have a personal ring tone assigned, the ring tone assigned to the group plays.

◀ NOTE ▶

- Custom ring tone does not work for SIM card contacts.

Adding a Group

1. On the Photo ID main screen, press the **Menu** soft key and select **Manage Group**.
2. Press the **New** soft key.
3. Enter the name of the new contact group.

4. Press the **OK** soft key. The new group has been added to the bottom of the group list.

◀ NOTE ▶

- To rename a group, press the **Menu** soft key and select **Rename**.

Deleting a Group

1. On the Photo ID main screen, press the **Menu** soft key and select **Manage Group**.
2. In the contact group list, scroll to the group to delete.
3. Press the **Menu** soft key and select **Delete**.
4. Press the **OK** soft key to delete the selected group.

Photo ID Settings

To configure Photo ID, on the Photo ID main screen, press the **Menu** soft key and select **Settings**.

Photo ID Settings	Description
Load from	Sets the location of data to be loaded. The options are SIM card & Contacts (default), SIM card , and Contacts .
Define left key function	Defines the function of the left soft key in Photo ID. The options are New , Assign Photo , and Camera (default).
Show photo for incoming call	Uncheck the box if you want to use the default Microsoft incoming call screen instead of Photo ID.

PART III - REFERENCES

11 References

This chapter provides the reference information.

This chapter includes:

11.1	Care and safety information	200
11.2	Warranty	204
11.3	Frequently-asked Questions	208
11.4	Restoring Factory Default State	209
11.5	Customer Care	210

11.1 Care and safety information

Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited. Use of your Smartphone is subject to safety measures designed to protect users and their environment.

Do not use your Smartphone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your Smartphone to extreme temperatures lower than - 10°C and higher than + 55°C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your Smartphone automatically protects the batteries in extreme temperatures.

Do not leave your Smartphone within the reach of small children (certain removable parts may be accidentally ingested).

Do not delete files in the Windows folder of the Smartphone. Doing so may cause malfunction.

Electrical safety

Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

Aircraft safety

When travelling by plane, you will need to switch your Smartphone off when so instructed by the cabin crew or the warning signs.

Using a Smartphone may be dangerous to the operation of the aircraft and may disrupt the phone network.

Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

Explosive materials

Please comply with warning signs at petrol station asking you to switch your Smartphone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

Electronic equipment

To avoid the risk of demagnetisation, do not let electronic devices close to your Smartphone for a long time.

Electronic medical equipment

Your Smartphone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the Smartphone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

Hospitals

Always make sure that your Smartphone is switched off in hospitals when so instructed by warning signs or by medical staff.

Road safety

In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

Guidelines for Using the AC Adapter

- Use only the AC adapter (PHIHONG, PSC05R-050) supplied with your Smartphone. Use of another type of AC adapter will result in malfunction and/or danger.
- This product is intended to be supplied by a LISTED Power Unit marked with "LPS", "Limited Power Source" and output rated + 5 V dc / 1 A.
- Do not use the adapter in a high moisture environment. Never touch the adapter when your hands or feet are wet.
- Allow adequate ventilation around the adapter. Avoid locations with restricted airflow.
- Connect the adapter to a proper power source. The voltage and grounding requirements are found on the product case and/or packaging.
- Do not use the adapter if the cord becomes damaged.
- Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

SAR

This Smartphone complies with European requirements governing exposure to radio waves. Your Smartphone is a transmitter/receiver. It has been designed and manufactured to comply with radiofrequency energy exposure limits recommended by the Council of the European Union and the ICNIRP for the entire population. These limits were established by independent scientific agencies on the basis of in-depth and regular evaluations of scientific studies. The limits include a large safety margin that is intended to guarantee the safety of all, irrespective of age or state of health.

The exposure standard for phones uses a unit of measure called the SAR, or Specific Absorption Rate. The SAR limit recommended by the Council of the European Union and the ICNIRP is 2 W/kg ⁽¹⁾. Tests were conducted on a standardised usage position basis, with the phone transmitting at its maximum level certified in all its frequency bands. Although the standardised measurement is done at maximum power, the real SAR of the Smartphone in use is generally very far below the maximum value.

The Smartphone was designed to operate at the power level strictly necessary to ensure communication with the network. In general, the closer you are to a base station, the lower the power at which the Smartphone will transmit.

Validation of conformity with European directive 1999/5 (directive R&TTE) is a pre-requisite for introducing any model of phone onto the market. Protection of health and the safety of the public and the user are a vital requirement of this directive. This model's maximum SAR value measured at the compliance test for use at the ear was 0.59 W/kg. Although differences may exist from one phone to the other and depending on position, all comply with European regulations.

(1) *The SAR limit for phones used by the general public is 2 watts/kilogram (2 W/kg) on average for 10 g of tissue. This value includes a large safety margin to increase protection and to take account of the variations in measurements. The SAR information may vary in different parts of the world, depending on declared national requirements and the frequency bands used by the network.*

Advice for limiting exposure to radiofrequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's' RF exposure by limiting the length of calls, or using "hands-free" devices to keep Smartphone away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.

11.2 Warranty

You must always use your phone for the purpose for which it was designed, under normal operating conditions. SAGEM SA declines all responsibility for any use outside of the scope of its designed purpose and for any consequences of this use.

The software program developed by SAGEM remains the exclusive property of SAGEM SA. It is therefore highly prohibited to modify, translate, de-compile or disassemble this software program or any part thereof.

Usage precautions

Your phone allows you to download ring tones, icons and animated screensavers. Some of these items may contain data that may cause malfunctions of your phone or data losses (virus for example).

For this reason, SAGEM SA rejects all responsibility concerning (1) the reception of downloaded data or losses of the said data, (2) the impact on the operation of the phone and (3) damages resulting from receiving the said downloaded data or loss of said data. In addition, SAGEM SA states that a failure caused by receiving downloaded data that do not comply with the specifications set by SAGEM SA is excluded from the warranty. Consequently, the diagnosis and repair of a phone infected by the said downloaded data will be at the expense of the customer.

Any content that you download to your phone may be protected by copyright belonging to third parties and consequently you may not have the right to use this content or its use may be restricted. Consequently it is up to you to ensure that you have permission, such as under the terms of a license agreement, to use any content that you download. Furthermore, SAGEM SA does not guarantee the accuracy nor the quality of any content that you download. You alone are responsible for the content that you download to your mobile phone and how you use it. SAGEM SA cannot be held responsible for this content nor for its use.

It is your responsibility to ensure compliance, at your own expense, with the laws and regulations applicable in the country where you use your phone.

Warranty conditions

Whenever you wish to make use of the warranty, please contact your vendor and present him with the purchasing paperwork that he gave you.

If a fault occurs, he will advise you.

1.

The new phone (excluding consumables), including new accessories bundled with the phone, are guaranteed by SAGEM SA, parts and labour (apart from travel) against any manufacturing fault for a period of twelve (12) months with effect from the sale of the phone to the customer, on presentation of the paperwork stating the purchase date of the phone.

Phones that have been repaired or replaced as standard during the warranty period stated above are guaranteed (parts and labour) until the later of these two dates:

Expiry of the guarantee period of twelve (12) months stated above or three (3) months with effect from the date of support provided by SAGEM SA.

Your legal rights under the terms of applicable national law as well as your rights in relation to your retailer, as set out in the sales contract, remain applicable and are not in any way affected by this guarantee.

In any disputes, the phone is covered by the legal warranty against the consequences of faults or hidden defects in compliance with articles 1641 and subsequent of the French civil code.

2.

All faulty Smartphone under warranty will be replaced or repaired free of charge at SAGEM SA's option (with the exclusion of repair of any other damage), once it has been specified that the work required for the application of the warranty will be done in a workshop and that the return costs (transport and insurance) of the Smartphone to the address to be indicated to it by the SAGEM SA after-sales service, whose phone number will appear on the delivery note, will be charged to the customer.

Subject to essential legal provisions, SAGEM SA does not accept any warranty, explicit or implicit, other than the warranty provided expressly in this chapter, nor shall SAGEM SA accept responsibility for any immaterial and/or indirect damages (such as loss of orders, loss of profit or any other financial or commercial damage) under the warranty or not.

3.

The acceptance of a Smartphone under warranty demands that a purchase document that is legible and without modification, stating vendor's name and address, date and place of purchase, type of phone and IMEI, are attached to the warranty, and that the information on the Smartphone identification label is legible and that this label or any other seal has not been tampered with.

The warranty applies in normal conditions of use.

Prior to sending the Smartphone for repair, it is the customer's responsibility to backup at his expense the customized data stored in the Smartphone (phonebook, settings, wallpapers). A list of backup facilities can be provided by SAGEM SA on request. The responsibility of SAGEM SA cannot be invoked if damage occurs to customer files, programs or data. The information or operating elements and the contents of files will not be re-installed in any case in the event of loss.

SAGEM SA may decide, at its option, to repair the Smartphone with new or reconditioned parts, replace the Smartphone with a new Smartphone or, in any dispute, a Smartphone in good working condition. During its work SAGEM SA reserves the facility to make, where necessary, any technical modifications to the Smartphone where these modifications do not adversely affect its initial purpose.

Faulty parts to be replaced during a repair under warranty will become the property of SAGEM SA.

The Smartphone repair and standstill time during the warranty period may not lead to an extension of the warranty period as stated in article 1 above, provided no other vital provisions have been agreed.

The application of the warranty is subject to the full payment of the sums due for the Smartphone when the request for support is made.

4.

The following are excluded from the warranty:

Breakdowns or malfunctions due to non-compliance with the installation and use instructions, to an external cause of the Smartphone (shock, lightning, fire, vandalism, malice, water damage of any type, contact with various liquids or any harmful agent, unsuitable electric current...), to modifications of the Smartphone made without the written consent of SAGEM SA, to a servicing fault, as described in the documentation supplied with the Smartphone, to lack of supervision or care, to poor environmental conditions of the Smartphone (especially temperature and hygrometry, effects of variations in electric voltage, interference from the mains network or earth) or even due to a repair, a call-out (opening or trying to open the Smartphone) or to servicing done by personnel not approved by SAGEM SA.

Damage resulting from inadequate packaging and/or poor packing of the Smartphone sent back to SAGEM SA.

Normal wear and tear of the Smartphone and accessories.

Communication problems linked with a poor environment, especially:

Problems accessing and/or logging onto the Internet, such as breakdowns of the access network, the failure of the subscriber's or his correspondent's line, transmission fault (poor geographic coverage by radio transmitters, interference, disturbance, failure or poor quality of phone lines...), a fault inherent to the local network (cabling, file server, user phone) and/or transmission network fault (interference, disturbance, failure or poor quality of the network...).

Change of parameters of the cellular network made after the Smartphone was sold.

Supply of new software versions.

Current servicing work: delivery of consumables, installation or replacement of these consumables...

Call-outs for phone or software modified or added without the written consent of SAGEM SA.

Faults or disruptions resulting from the use of products or accessories not compatible with the Smartphone.

Smartphone returned to SAGEM SA without having complied with the return procedure specific to the Smartphone covered by this warranty.

The opening or closing of a SIM operator key and call-outs resulting in the non-operation of the Smartphone resulting from the opening or closing of SIM operator key done without the agreement of the original operator.

5.

In the cases of warranty exclusion and of expiry of the warranty period, SAGEM SA shall draw up an estimate to be given to the customer for acceptance before any call-out. The repair and carriage costs (there and back) given in the accepted estimate will be charged to the customer.

These provisions are valid unless a special written agreement has been made with the customer. If one of the provisions turns out to infringe a legally essential rule that consumers could have the benefit of under the national legislation, this provision will not be applied, but all other provisions will remain valid.

11.3 Frequently-asked Questions

Problem	Solution
Power doesn't turn on.	<ul style="list-style-type: none">• The remaining battery power may be too low to start up your Smartphone.• If you use the external AC power, make sure that the AC adapter is firmly and correctly connected.• Remove the battery and replace it. Then turn on the Smartphone again.
Cannot make a call.	<ul style="list-style-type: none">• Make sure that the phone function is turned on.• Make sure that you are within the range of the mobile phone network service.• Make sure that the keypad lock is disabled.• Make sure that you dial the correct number.
No ring tone	<ul style="list-style-type: none">• Check the sound volume.• Make sure that your Smartphone is not muted.
Poor signal quality	<ul style="list-style-type: none">• If you are inside a building, move near a window or go outside.• If you are in a reinforced structure, such as an elevator or parking garage, wait until you are outside to try your call.
Memory Problems	<ul style="list-style-type: none">• If a warning message of insufficient memory appears, try to remove programs you no longer need.• If the running programs are occupying large memory, reset the Smartphone.

11.4 Restoring Factory Default State

NOTE



- You are recommended to ask your local dealer for service. Avoid restoring factory default state by yourself.

In some cases, you may need to restore your Smartphone to the factory default state by clearing the memory (RAM) from your Smartphone. For example, you should clear the memory:

- When your Smartphone cannot be turned on.
- When you forget your password.
- When you want to remove the add-on software.
- When you wish to return, dispose of, or sell your Smartphone.

Clearing the memory means all data you have entered in RAM, including all files, system settings and additional programs you have installed, will be erased.

Follow this procedure to clear the memory from your Smartphone:

1. To keep the data stored in your Smartphone, back up your data to your desktop computer using ActiveSync, and restore it after the memory is cleared.
2. Connect the AC adapter, and disconnect all other cables.
3. Make sure that your Smartphone is turned off.
4. Press and hold the Volume control. When holding it, press and hold the **End** key  for four seconds to turn on your Smartphone, and then let go of the **End** key .
5. After the Smartphone vibrates twice, you can let go of the Volume control.
6. Your Smartphone will turn on after about two minutes.
7. Re-install the add-on software, if necessary.
8. Restore your backup, if necessary.

11.5 Customer Care

France	0 892 701 799 (0,34 €/mn)
United Kingdom	0870 24 05 613
Germany	01805 843 850
Spain	91 375 3376
Italy	800 800 485
Poland	0801 801 101
Netherlands	020 65 45 724
Belgium	02 62 77 016
Austria	01 36 02 77 16 64
Switzerland	02 25 67 53 99
Ireland	1 890 924 061
Portugal	21 316 41 35
Sweden	08 519 923 21
Denmark	0 82 33 28 52
Czech Republic	855 555 600

Customer Care e-mail address: support.mobiles@sagem.com

Web sites: www.sagem.com/mobiles
www.planetsagem.com
www.sagem-online.com

12 EULA Terms

- You have acquired a device ("DEVICE") that includes software licensed by SAGEM SA from an affiliate of Microsoft Corporation ("MS"), for use in connection with wireless network services provided under separate agreement between you and a wireless telecommunications provider ("Mobile Operator"). Those installed software products of MS origin, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.
- IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT SAGEM SA FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. **ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).**
- SOFTWARE includes software already installed on the DEVICE ("DEVICE Software") and MS software contained on the CD-ROM disk ("Companion CD").

GRANT OF SOFTWARE LICENSE. This EULA grants you the following license:

DEVICE Software. You may use the DEVICE Software as installed on the DEVICE. All or certain portions of the DEVICE Software may be inoperable if you do not have and maintain a service account with an appropriate Mobile Operator, or if the Mobile Operator's network facilities are not operating or configured to operate with the DEVICE software.

COMPANION CD. Additional software for your personal computer is included with your DEVICE, and you may install and use the Microsoft® ActiveSync® 3.7 component on one (1) or more computers to exchange information with one (1) or more computing devices that contain a compatible version of the Microsoft® Smartphone 2003 Software. For other software component(s) contained in the Companion CD, you may install and use such components only in accordance with the terms of the printed or online end user license agreement(s) provided with such component(s). In the absence of an end user license agreement for particular component(s) of the Companion CD, you may install and use only one (1) copy of such component(s) on the DEVICE or a single computer with which you use the DEVICE.

Microsoft® Outlook® 2002. If Microsoft Outlook 2002 is included with your Device, the following terms apply to your use of Microsoft Outlook 2002: (i) regardless of the information contained in "Software Installation and Use" section of the online EULA you may install one (1) copy of Microsoft Outlook 2002 on one (1) computer to use, exchange data, share data, access and interact with the DEVICE, and (ii) the EULA for Microsoft Outlook 2002 is between the Company and the end user - not between the PC manufacturer and end user.

DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS.

- **Limitations on Reverse Engineering, Decompilation and Disassembly.** You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
- **Single DEVICE.** The DEVICE Software is licensed with the DEVICE as a single integrated product. The DEVICE Software installed in read only memory ("ROM") of the DEVICE may only be used as part of the DEVICE.
- **Single EULA.** The package for the DEVICE may contain multiple versions of this EULA, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple versions of the EULA, you are licensed to use only one (1) copy of the DEVICE Software.
- **NOTICE REGARDING THE MPEG-4 VISUAL STANDARD.** The SOFTWARE may include MPEG-4 visual decoding technology. MPEG LA, L.L.C. requires the following notice:

USE OF THIS SOFTWARE IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (B) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.

If you have questions regarding this Notice, please contact MPEG LA, L.L.C., 250 Steele Street, Suite 300, Denver, Colorado 80206; Telephone 303 331.1880; FAX 303 331.1879

- **Rental.** You may not rent or lease the SOFTWARE.

- **Software Transfer.** You may not permanently transfer any of your rights under this EULA with regard to the DEVICE Software or Companion CD, except as permitted by the applicable Mobile Operator. In the event that the Mobile Operator permits such transfer, you may permanently transfer all of your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades, this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.
- **Termination.** Without prejudice to any other rights, SAGEM SA or MS may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.
- **Security Updates.** The SOFTWARE may include digital rights management technology. If SOFTWARE does contain digital rights management technology, content providers are using the digital rights management technology ("Microsoft DRM") contained in the SOFTWARE to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. Owners of such Secure Content ("Secure Content Owners") may, from time to time, request MS, Microsoft Corporation or their subsidiaries to provide security related updates to the Microsoft DRM components of the SOFTWARE ("Security Updates") that may affect your ability to copy, display and/or play Secure Content through Microsoft software or third party applications that utilize Microsoft DRM. You therefore agree that, if you elect to download a license from the Internet which enables your use of Secure Content, MS, Microsoft Corporation or their subsidiaries may, in conjunction with such license, also download onto your DEVICE such Security Updates that a Secure Content Owner has requested that MS, Microsoft Corporation or their subsidiaries distribute. MS, Microsoft Corporation or their subsidiaries will not retrieve any personally identifiable information, or any other information, from your DEVICE by downloading such Security Updates.
- **Consent to Use of Data.** You agree that MS, Microsoft Corporation and their affiliates may collect and use technical information gathered in any manner as part of product support services related to the SOFTWARE. MS, Microsoft Corporation and their affiliates may use this information solely to improve their products or to provide customized services or technologies to you. MS, Microsoft Corporation and their affiliates may disclose this information to others, but not in a form that personally identifies you.

- **Internet Gaming/Update Features.** If the SOFTWARE provides, and you choose to utilize, the Internet gaming or update features within the SOFTWARE, it is necessary to use certain computer system, hardware, and software information to implement the features. By using these features, you explicitly authorize MS, Microsoft Corporation and/or their designated agent to use this information solely to improve their products or to provide customized services or technologies to you. MS or Microsoft Corporation may disclose this information to others, but not in a form that personally identifies you.
- **Internet-Based Services Components.** The SOFTWARE may contain components that enable and facilitate the use of certain Internet-based services. You acknowledge and agree that MS, Microsoft Corporation or their affiliates may automatically check the version of the SOFTWARE and/or its components that you are utilizing and may provide upgrades or supplements to the SOFTWARE that may be automatically downloaded to your Device.
- **Links to Third Party Sites.** The SOFTWARE may provide you with the ability to link to third party sites through the use of the SOFTWARE. The third party sites are not under the control of MS, Microsoft Corporation or their affiliates. Neither MS nor Microsoft Corporation nor their affiliates are responsible for (i) the contents of any third party sites, any links contained in third party sites, or any changes or updates to third party sites, or (ii) webcasting or any other form of transmission received from any third party sites. If the SOFTWARE provides links to third party sites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party site by MS, Microsoft Corporation or their affiliates.
- **Additional Software/Services.** The SOFTWARE may permit SAGEM SA, MS, Microsoft Corporation or their affiliates to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").
 - If SAGEM SA provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.

- If MS, Microsoft Corporation or their affiliates make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that the MS, Microsoft Corporation or affiliate entity providing the Supplemental Component(s) shall be the licensor of the Supplemental Component(s).
- SAGEM SA, MS, Microsoft Corporation and their affiliates reserve the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

UPGRADES AND RECOVERY MEDIA.

- **DEVICE Software.** If the DEVICE Software is provided by SAGEM SA separate from the DEVICE on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labeled "For Upgrade Purposes Only", you may install one copy of such DEVICE Software onto the DEVICE as a replacement copy for the existing DEVICE Software and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade DEVICE Software.
- **COMPANION CD.** If any Companion CD component(s) is provided by SAGEM SA separate from the DEVICE on CD ROM disk(s) or via web download or other means, and labeled "For Upgrade Purposes Only" , you may (i) install and use one copy of such component(s) on the computer(s) you use to exchange data with the DEVICE as a replacement copy for the existing Companion CD component(s).

COPYRIGHT. All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and "applets," incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by MS or its suppliers (including Microsoft Corporation). You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by MS and its suppliers (including Microsoft Corporation).

EXPORT RESTRICTIONS. You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments. For additional information, see <http://www.microsoft.com/exporting/>.

PRODUCT SUPPORT. Product support for the SOFTWARE is not provided by MS, its parent corporation, Microsoft Corporation, or their affiliates or subsidiaries. For product support, please refer to SAGEM SA support number provided in the documentation for the DEVICE. Should you have any questions concerning this EULA, or if you desire to contact SAGEM SA for any other reason, please refer to the address provided in the documentation for the DEVICE.

NO LIABILITY FOR CERTAIN DAMAGES. EXCEPT AS PROHIBITED BY LAW, MS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

FOR APPLICABLE LIMITED WARRANTIES AND SPECIAL PROVISIONS PERTAINING TO YOUR PARTICULAR JURISDICTION, PLEASE REFER TO YOUR WARRANTY BOOKLET INCLUDED WITH THIS PACKAGE OR PROVIDED WITH THE SOFTWARE PRINTED MATERIALS.

Index

A

- About
 - Setting, p. 63
- Accessibility
 - Setting, p. 64
- Accessories, p. 16
- ActiveSync
 - Installing, p. 13
- Alarm setting, p. 73
- Answering a call, p. 40
 - Second call, p. 41
- Appointment See Calendar
- Audio
 - Playing files, p. 154

B

- Back key, p. 4, p. 20
- Backlight time-out, p. 74
- Battery, p. 5
 - Installing, p. 8
- Beam
 - Setting, p. 64
- Beaming information, p. 134

C

- Calculator, p. 164
- Calendar, p. 127
 - Agenda view, p. 128
 - Deleting appointment, p. 128
 - Editing appointment, p. 128

- Importing, p. 130
 - Month view, p. 129
 - New appointment, p. 127
 - Viewing appointment, p. 127
 - Week view, p. 129
- Call Barring settings, p. 55
- Call Forwarding settings, p. 55
- Call History, p. 45
- Call Options settings, p. 56
- Call Waiting settings, p. 56
- Caller ID settings, p. 56
- Certificate, p. 66
- Channels settings, p. 57
- Charging, p. 9
- Conference, call, p. 44
- Connecting
 - To desktop computer, p. 14
- Connection
 - Dial-up, p. 69
 - GPRS, p. 66
 - Proxy, p. 71
 - VPN, p. 70
- Contact card
 - Sending message, p. 85, p. 95
- Contacts, p. 120
 - Calling, p. 125
 - Card, p. 121
 - Deleting, p. 123
 - Editing, p. 123
 - Finding, p. 123
 - List, p. 120
 - New contact, p. 122
 - Sending message, p. 126

- Converter, p. 9
Currency
 Format, p. 74
- D**
- Data connection
 Setting, p. 66
- Date
 Format, p. 74
 Setting, p. 73
- Device lock, p. 32
Dial-up connection, p. 68
DRM, p. 157
- E**
- Earpiece, p. 4
E-mail
 Downloading attachment, p. 93
 Downloading complete message, p. 91
 Inserting voice recording, p. 87
- End key, p. 4
End, call, p. 44
- F**
- Favorites
 Internet Explorer, p. 151
 Media Player, p. 157
- Fixed Dialing settings, p. 57
- G**
- Game
 Jawbreaker, p. 163
 Solitaire, p. 162
- GPRS connection, p. 66
- H**
- Headphone
 Connector, p. 6
Headset
 Hands-free, p. 16
Hold, call, p. 44
Home key, p. 4, p. 20
Home screen, p. 22
 Setting, p. 62
- I**
- Inbox
 New message, p. 95
- Incoming call
 Rejecting, p. 40
 Rejecting the second call, p. 41
- Input
 Number, p. 29
 Symbol, p. 29
- Internet
 Connection, p. 66
- Internet Explorer
 Customizing, p. 152
- IR port, p. 6
 Beaming information, p. 134
- IR See IR port
- K**
- Keypad
 Locking, p. 31
 Unlocking, p. 32
- L**
- Language setting, p. 74

-
- License, p. 157
 - Locking
 - Device, p. 32
 - Keypad, p. 31
 - SIM card, p. 34
- M**
- Making a call
 - Conference, p. 42
 - Contacts, p. 37
 - Dialing, p. 36
 - Second call, p. 41
 - Speed Dial, p. 39
 - Swapping, p. 42
 - Troubleshooting, p. 208
 - Media Player
 - Compatibility, p. 158
 - Favorites, p. 157
 - Memory
 - Problem, p. 208
 - Menu, p. 25
 - MMC card, p. 17
 - MMC card See Storage card
 - Mobile phone, p. 35
 - Modem link, p. 159
 - Infrared, p. 159
 - USB, p. 160
 - MP3 files, p. 154
 - MSN Messenger, p. 115
 - Mute, call, p. 44
- N**
- Navigation stick, p. 4, p. 20
 - Network settings, p. 58
- Number
 - Format, p. 74
 - Numeric keypad, p. 4, p. 21
- O**
- Owner information
 - Setting, p. 73
- P**
- Password, p. 209
 - Phone, p. 35
 - Setting, p. 54, p. 55
 - Settings, p. 65
 - Phone headset, p. 16
 - PhoneCamera, p. 168
 - Continues, p. 170
 - Continues interval, p. 172
 - Recording videos, p. 170
 - Taking photos, p. 168
 - Timer, p. 172
 - Twilight mode, p. 172
 - PhoneViewer, p. 174
 - PhonoViewer
 - Adding notes, p. 176
 - PhotoID
 - Adding a contact, p. 189
 - PIN, p. 34
 - Power Management, p. 11
 - Power management
 - Setting, p. 74
 - Private, call, p. 44
 - Profile
 - Changing, p. 62
 - Editing, p. 62
-

-
- Setting, p. 61
 - Program
 - Removing, p. 75
 - Proxy, p. 71
- Q**
- Quick List, p. 26
- R**
- Recording
 - Voice note, p. 133
 - Region
 - Setting, p. 74
 - Removing program, p. 75
 - Restoring factory default state, p. 209
 - Ring tone
 - Setting, p. 59
 - Troubleshooting, p. 208
- S**
- Screen, p. 4
 - Backlight time-out, p. 74
 - SD card
 - Inserting, p. 17
 - SD card See Storage card
 - Security
 - Setting, p. 75
 - Security settings, p. 31
 - Settings, p. 54, p. 65
 - SIM card
 - Importing SMS, p. 97
 - Inserting, p. 8
 - Lockings, p. 34
 - PIN, p. 34
- Importing from SIM card, p. 97
 - Receiving, p. 97
- Soft key, p. 4, p. 21
 - Sound
 - Setting, p. 59
 - Speakerphone, p. 43
 - Speakerphone, call, p. 44
 - speed dial, p. 47
 - Start list, p. 24
 - Status indicator, p. 23
 - STK, p. 25
 - Storage card
 - Slot, p. 6
 - Using, p. 17
 - Streaming media file
 - Playing, p. 155
 - To Favorites, p. 157
 - Swap, call, p. 44
- T**
- T9 mode, p. 28
 - Talk key, p. 4
 - Tasks, p. 131
 - New task, p. 131
 - Viewing, p. 132
 - Time
 - Setting, p. 73
 - Turning off, p. 11
 - Turning on, p. 11
 - Troubleshooting, p. 208
- U**
- Unlocking
 - Keypad, p. 32
 - USB connector, p. 6
-

V

- VideoPlayer, p. 182
- Voice mail, p. 50
 - Checking, p. 50
 - Phone number, p. 50
- Voice Notes, p. 133
- Voice recording
 - In e-mail, p. 87
- Volume control, p. 6
- VPN, p. 70

W

Windows Media Player See Media Player

Component	Specification
CPU	Intel PXA 262 200 MHz
Operating System	Windows Mobile™ Smartphone 2003 Second Edition
Memory	<ul style="list-style-type: none"> • 32 MB ROM (The available space for the end user is approximately 15 MB. The available space depends on the programs installed). • 32 MB SDRAM
Display	2.2-inch Transflective color LCD display, 65 K color, 176 x 220 resolution, with backlight
AC Adapter	100 ~ 240 V, 1A
Battery	1050 mAH
Standby Time	100 hours
Talk Time	Up to 3 to 4 hours
WAN Function	<ul style="list-style-type: none"> • GSM900, DCS1800, PCS1900 • GPRS class B device, GPRS class 10 (4+1; 3+2) • SMS/MMS over GPRS
I/O Function	<ul style="list-style-type: none"> • Microphone • Speaker • USB 1.1 slave (for ActiveSync) • IrDA (SIR 1.2, 115.2 kbps) • SD/MMC card slot
Camera	Fixed CMOS camera, 300 K pixel, VGA
Dimension (W x H x L)	49.5 x 20.8 x 109.8 mm
Weight	120 g

◀ NOTE ▶

- The specifications are subject to change without notice.
- The standby and talk time may vary according to different situations.



SAGEM SA

Mobile Phones Division

Tel. +33 1 40 70 88 44 - Fax +33 1 40 70 66 40 - www.sagem.com
Le Ponant de Paris - 27, rue Leblanc - 75512 PARIS CEDEX 15 - FRANCE
SAGEM SA - Société anonyme à directoire et conseil de surveillance
capital : 36 405 229 € - 562 082 909 RCS PARIS