 


## CE Conformance Document

### Déclaration CE de Conformité

<b>Fabricant</b> <i>Manufacturer</i>	Sagem SA
<b>Adresse</b> <i>Address</i>	Le Ponant de Paris 27 rue Leblanc F-75112 Paris Cedex 15 FRANCE
Declares under our sole responsibility that our product	
<b>Nom du produit</b> <i>Product Name</i>	Triple-band GSM/DCS/PCS myX-7 H2003R3
est conforme aux exigences des directives européennes suivantes: <i>conforms to the requirements of the following EEC directives:</i>	
EEC Directive 1999/5/CE	
<b>Sécurité (Safety)</b>	EN 60950
<b>CEM (EMC)</b>	EN 301 489-1 EN 301 489-7
<b>Basse tension (Low voltage directive)</b>	73/23/CEE
<b>Réseau (Network)</b>	Requirements GT01 v 4.7.0 TBR 19 Edition 5 TBR 20 Edition 3 TBR 31 Edition 2 TBR 32 Edition 2 GCF-CC V3.11.1 EN 301 511 V7.0.1
<b>Santé (Health)</b>	EN 50361, EN 50360
<b>Place and date of issue</b>	Caigy St-Christophe - January 8 <sup>th</sup> , 2004
<b>Signature</b>	

## FCC Conformance Document

 
---

FCC Part 24  
Network                      NAPRD03.ver 2.9.1  
Health                         Draft IEEE Std 1528-200x

### Exposure to Radio Frequency Signals

- Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out frequency (RF) signals.
- In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:  
ANSI C95.1 (1992)\*  
NCPR Report 86 (1986)\*  
ICNIRP (1996)\*  
(\* ) American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission and Non-Ionizing Radiation Protection.
- Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).
- The design of your phone complies with the FCC guidelines (and those standards).
- For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

## Menus

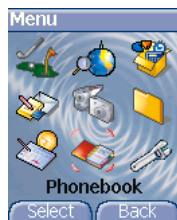

### Games

### WAP

### Applications

- Delete all
- ToDo
- Calculator
- Converter
- Alarm
- Timer
- Settings
- About

### Messages

- Compose
- Inbox
- Outbox
- Drafts
- Options
- Memory
- Local info.
- Call Voice Mail

### Camera

- Photo Camera
- Video Camera

### Multimedia

- Mes Videos
- Mes Pictures
- Mes Sounds
- Memory

### Organiser

- Calendar menu
- See month
- See week
- See today
- See date

### Phonebook

- Contacts menu

### Settings

- Sounds
- Display
- Camera
- Languages
- Calls
- Security
- Networks
- Others
- Short cuts
- Date/Time
- Connectivity
- Menu Hot-line

## Contents

---

<b>Page 3</b>	<b>MENUS</b>
<b>Page 9</b>	<b>YOUR PHONE PACKAGE - ACCESSORIES</b>
<b>Page 10</b>	<b>DESCRIPTION</b> Programmable keys and Short cut keys Strap attachment
<b>Page 12</b>	<b>NAVIGATION PRINCIPLES</b>
<b>Page 13</b>	<b>INITIAL SCREEN</b>
<b>Page 14</b>	<b>ACTIVATING YOUR PHONE</b> Information on the SIM card Installing the SIM card and the battery
<b>Page 16</b>	<b>USING YOUR PHONE</b> Don't obstruct the antenna with your fingers Increase the efficiency of your phone Charging the battery
<b>Page 18</b>	<b>PHONEBOOK</b> Using the phonebook Contacts menu Options from a contact saved Sending a vCard Receiving a vCard
<b>Page 25</b>	<b>MESSAGES</b> Compose SMS Compose MMS Receiving messages

## Contents

---

Inbox  
Outbox  
Drafts  
Sending options  
Memory  
Local information  
Calling voicemail

**Page 36**

**CAMERA**  
Take and send a photo  
Take a video

**Page 39**

**MULTIMEDIA**  
My videos  
My Pictures  
    Edit a photo  
My Sounds  
Memory

**Page 43**

**WAP**  
The WAP Menu  
Configuring WAP parameters  
WAP Logging on  
Downloading sounds and images  
WAP Logging off  
GPRS

**Page 48**

**GAMES**

## Contents

---

Page 49

### APPLICATIONS

- Services
- ToDo
  - ToDo menu
  - ToDo actions menu
- Sending a vCal
- Receiving a vCal
- Exchange of data with a PC
- Calculator
- Converter
- Alarm
- Timer

Page 56

### ORGANISER

- Calendar menu
- Sending a vCal
- Receiving a vCal

Page 58

### SETTINGS

- Sounds
  - Volume and ring tone
  - Vibrate
  - Silent mode
  - Beeps
  - Recorder
- Display
  - Wallpaper
  - Screensaver
  - Operator logo
- Camera

## Contents

---

- Languages
- Calls
  - Call forward
  - View last calls
  - Counters
  - Display number
  - Call waiting
  - Automatic redial
  - Blacklist
  - Voicemail
  - ALS
- Security
  - Keypad locking
  - PIN number
  - PIN2 number
  - Phone code
  - Confidentiality
  - Operator
  - Call barring
  - Fixed dialling
  - Cost
- Networks
- Others
  - Car kit
  - Energy saving
- Short cuts
- Date / Time
  - Set Date/Time
  - Automatic update

## Contents

---

 
	Display
	Time zone
	Summer time
	Connectivity
	IrDA
	Serial Speed
	Menu Hot-line
<b>Page 81</b>	<b>CARE AND SAFETY INFORMATION</b>
	Safety
	SAR
	Advice for limiting exposure to radiofrequency (RF) fields
<b>Page 83</b>	<b>WARRANTY</b>
<b>Page 86</b>	<b>TROUBLESHOOTING</b>
<b>Page 90</b>	<b>INDEX</b>



## Your phone package

When you open the box, check that all items are present:

- 1 - Phone
- 2 - Charger
- 3 - Battery
- 4 - User guide
- 5 - CD  
(depending on model)

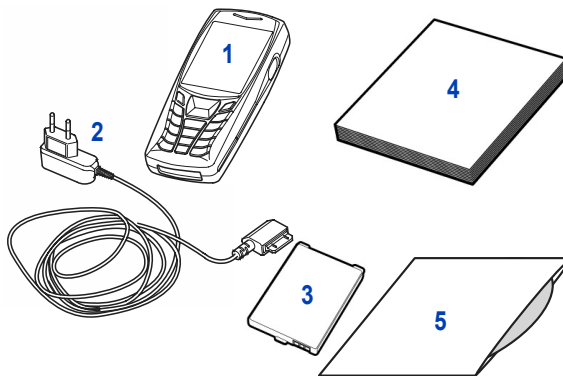

## Accessories

You can also find (as an option) or order the following accessories:

- Hands-free kit (\*)
- Additional battery
- Additional charger (\*)
- USB cable (with associated drivers) and serial cable to connect your phone to a PC
- Cigar lighter charger (\*)
- Colored covers











(\*) These accessories are identical to the ones provided for the earlier 3000 series MYX-2, MYX-5 and MYX-6.

## Description

### Programmable keys and Short cut keys

 


Microphone


-  **Hold down:** Switches the phone off  
**Press briefly:** Start phone  
*In a call context:* Reject a call - hang up  
*In menus:* Return to initial screen.
-  *In call context:* Call - receiving a call - hands-free mode
-  **Right programmable key:** (Function available depending on model)  
*In initial screen:* Access to certain functions (shortcuts)  
*In menus:* Cancel (or return) as indicated on the screen  
*During call:* Increase volume
-  **Left programmable key:** (Function available depending on model)  
*In initial screen:* Access to certain functions (shortcuts)  
*In menus:* Validate, choose as shown on the screen  
*During call:* Reduce volume
-  Previous choice / increase value / up
-  Next choice / reduce value / down
-  Up input field / move left
-  Down input field / move right
-  **Hold down:** *In initial screen:* Silent mode  
**Press briefly + validate** (key) activate or deactivate keypad locking  
*In call reception mode:* Short press stops ring tone  
*In ring tone setting mode:* Activate / deactivate ring tone  
Upper case/Lower case
-  **Zoom mode** (see **Messages** and **WAP** menus)

**WARNING:** do not use the phone in hands-free mode near to your ear, or you may suffer hearing loss.

## Description


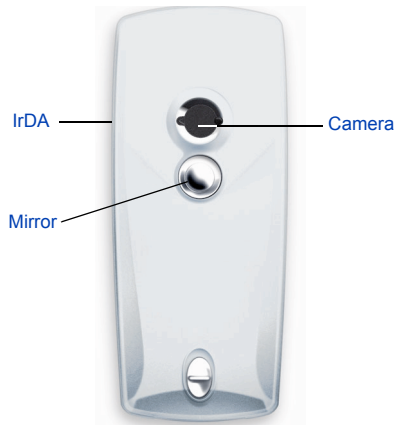


## Strap attachment

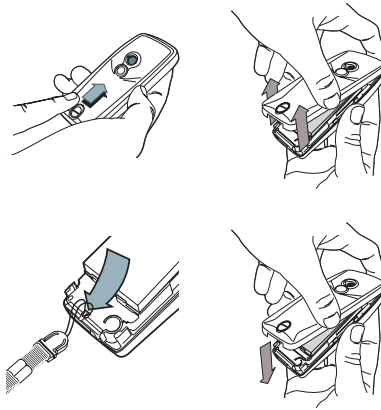 



  
Put the strap through the hook inside and at the bottom of the phone. Pull the strap to lock it into place.
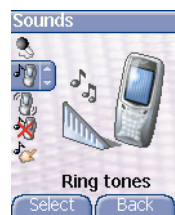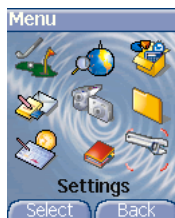
## Navigation principles





 
*These basic principles bring a great intuitiveness to your phone.*

**Validate** by pressing the  key.  
**Cancel** by pressing the  key.


The thumbnails at the bottom of the screen refer to the  keys.


In the menus, a title bar reminds you of the previous level.

The  navigation keys are used to navigate from one menu to another within the same menu structure.


From the home page, pressing the  or  keys displays the icons of the main menus.

The  key is used to go from a menu to a sub-menu.

The  key is used to go from a sub-menu to a menu.

The  key (press briefly) is used to go back to the initial screen (current function is abandoned).

## Initial screen

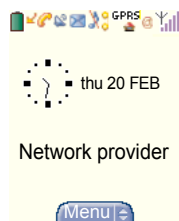 

The initial screen contains the following information:

### 1 - The title bar icons:

- Battery
- Calls forwarded
- Call (establishing the call)
- Call (hands free)
- Message (reception of a message, message memory full)
- FAX communication
- DATA communication
- Silent mode
- Message in answering machine
- WAP (@) communication
- GPRS
- Home zone
- Roaming
- Keypad locking
- Protected WAP logon
- Protected WAP logon icon with certificate
- Signal strength level (5 bars).

### 2 - Date and time, in digital or analog mode

### 3 - Network provider

### 4 - Thumbnail centred on bottom line:

the main « Menu » thumbnail shows that the menu can be accessed via the or keys.

 
*The following information may also be displayed:*

*« 1 message received »; or « 1 call ».*

*They can be deleted by pressing key briefly.*

## Activating your phone

### Information on the SIM card



To use your phone, you need a card called SIM card. It contains personal information that you cannot modify:

Secret codes (PIN(s): Personal Identification Numbers), these codes allow you to protect access to your SIM card and phone.

Phonebook,

Messages,

How special services work.

Your phone is compatible with the SIM 3V cards.


#### WARNING

 This card must be handled and stored with care in order not to be damaged. If you should lose your SIM card, contact your network provider or your SMC (Services Marketing Company) immediately.

Please keep your SIM card out of reach of young children.

## Activating your phone

### Installing the SIM card and the battery

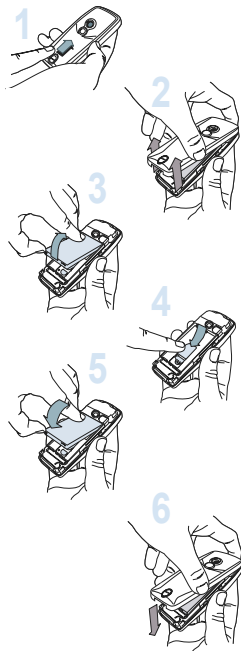

The SIM card is inserted under the phone's battery. Ensure that the phone is switched off and the charger disconnected.

- 1 Turn the phone back and push lock button upwards.
- 2 Remove the back cover by lifting bottom end first.
- 3 Take out battery if already installed.
- 4 Slide the SIM card, with cut corner as shown on the phone, into the card holder with fold face down.
- 5 Place the battery by positioning first the top of it, as shown on the battery.
- 6 Replace the back cover, clicking in first the upper part then the lower and pushing the back catch downwards into the lock position.

## Using your phone

### Don't obstruct the antenna with your fingers



The antenna is integrated in your phone, under the back cover at the top. Avoid putting your fingers on this area when the phone is switched ON. If your fingers obstruct the antenna, the phone may have to operate with a higher power level than usual; decreasing its efficiency quickly. It could also affect the quality of your communications.

#### Non ionising radiation

To obtain maximum satisfaction from your phone, use it in a vertical position. Your personal safety can only be improved by doing so.

 
### Increase the efficiency of your phone

- Don't press the keys when not necessary: each keypress activates the backlight, and uses much power.
- Don't activate too often the screensaver: a starting time too high increases the power consumption.
- Don't obstruct the antenna with your fingers.



## Using your phone

### Charging the battery

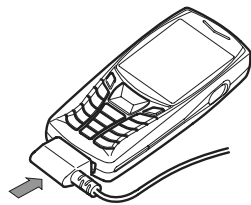

Your phone is powered by a rechargeable battery. A new battery must be charged for 4 hours at least before being used for the first time. It reaches its optimum capacity after a few cycles of use.

When your battery has been discharged, the phone displays the state (empty battery icon flashes). In this case recharge your battery for at least 15 minutes before making any calls in order not to be cut off in the middle of a call.

#### To recharge the battery:

Connect the charger to a socket.

Plug the end of the cable into the bottom connector of the phone.

The phone is then charging up. The battery icon is scrolling up and down to indicate that it is charging. When the battery is fully charged, the charging stops on its own. Disconnect the cable.

When charging, the battery may warm up, this phenomenon is normal.

#### WARNING

There is danger of explosion if the battery is placed in an incorrectly way or if it is exposed to fire.

Do not short circuit it.

The battery does not have any part that you can change.

Do not try to open the battery casing.

Use only the appropriate chargers and batteries as shown in the phone manufacturer's catalogue.

The use of other types of chargers or batteries may be dangerous or invalidate the warranty.

Used batteries must be disposed of in the appropriate places.

We advise you to take the battery out if you plan not to use the phone for extended periods.

You are strongly advised not to connect your phone to the charger if it doesn't contain a battery.

## Phonebook

 


*The phonebook allows you to store numbers that you call regularly. These numbers can be stored in the SIM card or in the phone. Your phone has a vCard phonebook, and the following fields can be stored in the phone memory exclusively for each contact: last name, first name, number 1, email, number 2, number 3, call group, company, comment, photo.*


*The fields preceded with a star are mandatory.*

*The storage capacity will depend on the SIM card. Please contact your network provider to get that information.*

### Using the phonebook

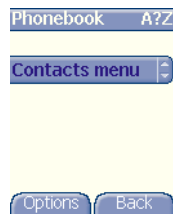

In the initial screen, press the ▼ key to access the main menus. The first menu proposed is **Phonebook**.

Press the  key corresponding to the validation key to enter the menu.


The list of your correspondents appears. By default, the cursor is positioned on the first name in alphabetical order.

If you are using your phone and SIM card for the first time, the phonebook list will be empty, only the **Contacts menu** function will be available.


## Phonebook


 
### Contacts menu

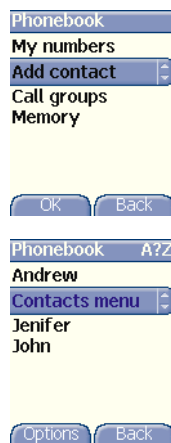

#### Add contact

Select **Add contact** and press the  key to enter the menu.

Choose the location where you wish to enter the contact (SIM card, phone or fixed dialling memory – Fixed dialling is available depending on PIN number 2 options of your SIM card) and enter the contact information and validate after each entry.

 
 
The information needed to store a contact in the phone is first name, last name, one phone number or an email address.

All other fields are not mandatory. If you do not want to fill them, select **Save** to save the contact created.

**Note:** If you want to store a contact in a call group, the ring tone, when the contact is calling, is the one defined by default in the call group.

To modify the ring tone, select **Phonebook**, **Contacts menu**, **Call Groups**, select the call group, **Options** then **Modify**. Modify the ring tone and validate.

## Phonebook

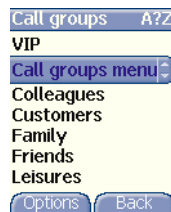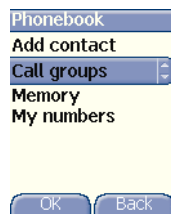

### Call groups

6 default call groups have already been created. You can create others. You have the facility to group your contacts into call groups. It is possible to allocate characteristics to each group (icon, ring tone, vibrate mode).

#### Creating new groups:

Do same as above to get the **Contacts menu** and validate.

Press **▼** key to position the cursor on **Call groups** and validate.

By default, the cursor is automatically placed on **Call groups menu**, validate.

Choose one of the options given: Create group or Memory available.

#### Creating a group

By default, the cursor is placed on **Create group**, validate.

Enter the name and validate.

 
Choose the **icon**, the **ring tone** and **vibrate mode** that you want to allocate to this group (validate after each step).

#### Memory

Select **Memory** and validate.

The screen displays the number of locations available for new groups.

## Phonebook

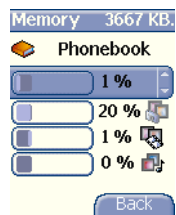

### Memory

Select **Memory** and validate. Select SIM or Phone and validate.

The screen displays the locations used on the SIM Card and in the phone itself. The screen displays the amount of memory used. The memory capacity is shared between the phonebook and the photo, pictures, organiser, etc. features. If you lack memory, check if you can free some space from another function.

### My numbers

 
You can create the entries corresponding to your own numbers in order to consult them when necessary.

Select **My numbers** and validate. Enter the different details and validate.


## Phonebook



### Options from a contact saved

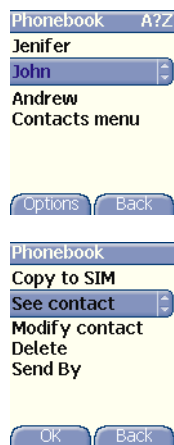


#### See contact



Select a contact from the list using the ▼ ▲ keys. Then press the  key. By directly pressing one character, the phone will display the first contact saved in the phonebook, starting with it.

The first menu proposed is **See contact**. Validate.

Details of the contact appears (name, phone number, call group, and some other details).

Further screens display the other details of the contact:

Press the  key to view the 3 phone numbers the email address, company and comment for this contact.


Press the  key from any of these screens to call this contact. Press the  key to go back to the phonebook.

The memory number of the contact (for example 21) allows you to call him directly typing from the initial screen this number followed by \* (example : 21\*).


Different icons inform you of the position in the phonebook where the contact is stored:

 contact stored in the SIM card

 contact stored in the phone

 if the Fixed dialling option is activated, only those contacts may be called. See **PIN number 2** and **Fixed Dialling in Security Menu** for more details about this activation.
 
## Phonebook

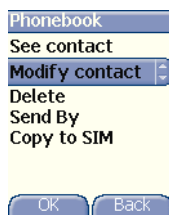

### Modify contact

Select the contact desired and validate.

Select **Modify contact** and validate.

Modify what you want and validate then select **Save** once the modifications completed.

### Copy to SIM / Copy to phone

This allows you to copy your phonebook entries from one memory to the other. Only the name, first phone number and the call group will be copied.

Select **Copy to SIM** or **Copy to phone** and validate.


### Delete

 
Select **Delete** and validate.

Validate deletion of entry.

### Call

Select **Call**. Press the  key to start the call.

*You can also select the party to be called from the phonebook, and press the  key to make the call.*

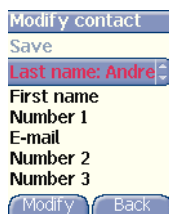

## Phonebook

---



### Sending a vCard

*It is possible to send a vCard from each contact stored in the phonebook.*

vCards can be sent to another phone supporting vCard.



On a contact in the phonebook, please select the **Send by** option menu item (SMS, MMS or IrDA).

If the vCard is sent successfully, an information message is displayed.

vCards can be sent as an attachment to an SMS or MMS message. See **Compose MMS** on page 28.

### Receiving a vCard

When a vCard is received enclosed to an SMS or MMS message, the message « You have received 1 message » is displayed.

Open the MMS from the inbox. Go to **Options** by pressing the  key, and select **Extract**; select the vCard among the list of objects attached to this MMS, and add this contact to the phonebook by pressing the  key. A message is displayed to confirm the action.



## Messages

 


From this menu, you are able to send SMS and MMS. MMS is a Multimedia Message Service, which allows you to enclose audio files, images and other rich content to your messages; these messages can even be composed of several slides. MMS are differently invoiced than SMS are. Please contact your network provider to get more information on their cost.

This menu has been compiled in collaboration with magic4™.

magic4™

### Compose SMS

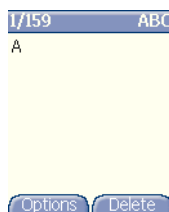

On the **Messages** menu, please select the **Compose** menu and validate. Choose the **SMS** option.

*The language used is the one selected on the display of the phone (if the language selected is not compatible with the Easy Message T9™, the English language will be automatically selected).*

When typing a text, a counter showing the number of characters deducted is displayed at the top of the screen (depending on model). This counter is not displayed if an icon or sound is inserted into the SMS.

When the text has been entered, the **options** key can also be used to access the functions offered:

**Save** is used to save a draft in memory

**Send** is used to send the message by entering the correspondent's number

**T9 options** (see page 26)

**Editor mode** (see page 27)

**Send options** is used to indicate the message format, the period of validity, or to activate/deactivate a reply

**Cancel** is used to delete all text entered

**Activate/deactivate zoom** is used to modify size of characters

**Formatting** is used to enrich a text

**Insert** to insert an image or sound into your message (see page 28).

## Messages



*The Easy Message T9™ mode helps you to easily write your short messages.*



### Using T9 Mode

Press once the key corresponding to the letter chosen and make the word by continuing to press the keys corresponding to the various letters without paying attention to the display: the word is highlighted.

If you agree on the word proposed on the screen, press the **0** key to validate it, and go on writing the next word.

However, the same sequence of keys pressed can correspond to several words, existing on the dictionary. If the word that appears is not the word you expected, press the  key indicating  to scroll through the words corresponding to this key sequence.

Once you agree on the word proposed on the screen, press the **0** key to validate it, add a space and go on writing the next word.

If the word you are expected is not proposed, please add characters until you get the message **Add the word?** Press **Yes** and validate if the word displayed suits you or modify this word before adding it in the dictionary.









## Messages

In the input screen, the  key is used to access other input options.



### Input modes







When composing a message:  
The navigation keys assume the following functions:

-  **key:**  
Last word
-  **key:**  
Next word
-  **key:**  
Previous line
-  **key:**  
Next line
-  **key:**  
Deletes last letter
-  **key:**  
Message options
-  **key (long press):**  
Zoom mode (changes size of characters)
-  **key (short press):**  
Access to symbol table



**Editor mode:** The **ABC mode** is used to write words that do not exist in the dictionary. To get a particular character, please press the corresponding key several times: the characters will scroll down on your screen. **Mode 123** is used to add numbers.

**Insert mode** is used to add symbols, animations, call group icons and tunes. Images and sounds can be of two types: pre-defined or customized. Pre-defined images and sounds are smaller, especially suited to exchanging messages.

#### Upper case

A short press of the    key will display the next letter in upper case. Two short presses on the    key allow you to switch to upper case editing mode for the whole message.

#### Punctuation characters

Punctuation characters are obtained thanks to key **1** (except in **123** mode), or with the help of **Insert** mode (fast access by briefly pressing the   key).

 
#### Accented characters

Accented characters are generated automatically in T9 mode. In ABC mode accented characters are available by pressing the key supporting the non-accented character in succession.

## Messages



### Compose MMS

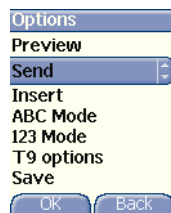

On the **Messages** menu, please choose the **Compose** menu and validate. Select the **MMS** option.

When the text has been entered in the **body** screen, the **options** key can also be used to access the functions offered:

The functions offered are:

**Slide** to compose a slideshow of the multimedia objects.

**Send Send**, Send and receive all, send later.

*Warning: some message sendings may fail if the message contents is too big.*

**Insert** to insert multimedia objects such as images, videos, animations and sounds into your message.

**Editor Mode** to edit and format the text.

**T9 options** (see page 26).

**Preview** to see a presentation of the multimedia objects.

When you choose to send your message, the different options are the following:

 
**Subject:** please write the subject of your MMS.

**To:** this option allows you to select the receiver.

**Cc:** this option allows you to select the receiver(s) in copy.

**Bcc:** this option allows you to select the receiver(s) not visible by the receivers in copy.

**Send options:** there are different options such as: **Priority:** allows you to assign a priority level to the message. **Request delivery:** allows you to select the reception of a request delivery.

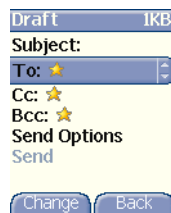

## Messages

---



### Compose MMS

#### Saving your message

You can save your message as a draft by selecting « Save » from the options, when editing the Subject or the Body. You will be able to edit it later from the **Draft** menu.

#### Sending MMS messages

Once the MMS are sent, you have the option to save them in your Outbox.

It is recommended not saving them automatically: too many messages saved will quickly fill up the available memory and no further messages will be received.

**Note:** It is possible that the voice message format (.amr) is not supported by some PC. See your PC provider.

#### Receiving MMS messages

Three options are offered to retrieve your MMS: automatic, semi-automatic and manual options.

The « automatic retrieval » is automatically programmed in the phone.

If you are using the network of another network provider, you will get a message informing you that an MMS has been received.

The « semi-automatic retrieval » gives you different options to retrieve the message.

If you only want to read it once using your own network, please select « Manual Retrieval ».

## Messages

---



### Receiving messages

When you receive a message, the phone will play the ring tone that you have selected, and the message icon  will come on the screen of your phone.

If you do not read the messages, this icon remains displayed on the screen. When it flashes, the memory is full.

Receiving icons, backgrounds or tunes can take several seconds. An icon is blinking when the download of your message is in progress.

Note that you have three different possibilities for receiving MMS: automatically, semi-automatically or manually; if « manual mode » is activated, then you will receive only a notification in your Inbox, meaning that a MMS is available on the MMS Server; select this notification, and read it when you want to retrieve the MMS from the server.

For more details about automatic and retrieval modes, see « Sending options » on page 33.

 
Please contact your network provider to get more information on icons, backgrounds or tunes downloading.

## Messages


*Received messages are stored in the SIM card or in the phone until you choose to delete them.*



### Inbox

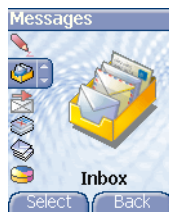

On the **Messages** menu, please choose the **Inbox** menu and **Select**.

Each message shows the presence of any attachments, the time and date the message was received and its size. Icons are used to describe the type of message (Multimedia , Remote , SMS .

Messages are listed in chronological order, the latest one being displayed first.

The quantity of Not Read and Not Retrieved messages is shown. Not Retrieved and Not Read messages are shown in bold.

Select a message and press the  key. Choose one of the options given.

Enclosures (pictures or sounds), which you receive, can be saved in order to be used later on (stored...).

You can consult them in the corresponding menus (WAP bookmarks in **WAP**, ring tones in **Sounds**, wallpapers in **Display**, and icons in **Call groups**).

## Messages



### Outbox


*The Outbox is used to store all your sent and waiting messages.*



Too many messages saved will quickly fill up the available memory and no further messages will be received.

On the **Messages** menu, please choose the **Outbox** menu and **Select**.

 
For each message, its characteristics (shown with an icon) and the time (or date) of sending are displayed on the screen.

Select a message and press the  key.


Choose one of the options given: Delete sent, Read, Modify, Forward, Delete, Delete all.

### Drafts

*When you store a composed message, it is stored among the drafts.*

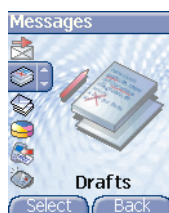

On the **Messages** menu, please choose the **Drafts** menu and **Select**.

Select a message and press the  key. If you do not delete this message, it will remain as a draft and can be re-used even if you have already sent it.

Choose one of the options given: Delete all, Visualise, Modify, Details, Delete.





## Messages


  
### Sending options

Several sending options are offered.

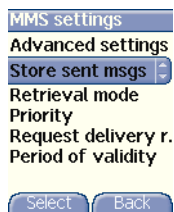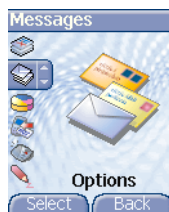

On the **Messages** menu, please choose **Options** and **Select**.  
Choose one of the options given: SMS or MMS.

The sending options which are proposed are: message centre number, store sent message, reply given, period of validity (during that period, the network provider will try to send the message), message format.

The proposed options are:

- **MMS server:** to select another MMS provider, or set the parameters of a new MMS provider.
- **Store sent messages:** (it is highly recommended that you keep this function deactivated, in order to avoid a full memory),
- **Retrieval mode:** if you are in a poor coverage area, it may be more convenient to choose the manual retrieval mode which gives you the retrieve later option.
- **Priority:** selection of a priority to send a message.
- **Delivery report:** request of a delivery report when sending a message.
- **Send delivery report:** sending a delivery report when receiving a message.
- **MMS reject:** if you want to deactivate the reception of any MMS in your phone.

## Messages

---



### Memory

*You may know the memory available for saving messages.*



On the **Messages** menu, please select the **Memory** option and **Select**.  
Choose one of the options given: SMS or MMS.

The SMS screen displays the memory available either on the SIM card or on the phone.

The MMS screen displays how much memory is used in Kbytes.

### Local information

*This menu is used to activate reception of local information broadcast by the network.*



*You can choose whether you want to receive this information or not (please contact your network provider).*

On the **Messages** menu, please select the **Local info.** menu and **Select**.

## Messages

---



### Calling voicemail

*This function allows you to call your voicemail.*



On the **Messages** menu, please select the **Call Voice Mail** option and **Select**.

 
**Note:** if your voicemail number has not been entered yet, you must enter it in the menu **Settings/Calls/Voicemail**.

## Camera



*This menu allows you to take photos or videos and use them for different purposes. For instance, you can send them to another phone or an Internet address, store them, use them as wallpapers or screen savers...*

### Take and send a photo

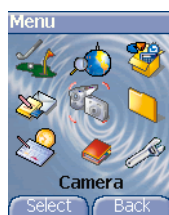

Before taking a picture, some features need to be set. See the **Settings/Camera** menu.

Open the shutter at the back of your phone.

Click on the camera button on the initial screen,

or

select the **Camera** menu. Choose the **Photo Camera** option and press **OK**.

The camera is now on. Look into your phone display and position your subject. Move your phone to position your photo.

To activate one of the four available zoom levels, use the **▼ ▲** keys.

You can set the photo layout (landscape or portrait) using the **►** key.

You can set the luminosity using the **◀** key:

: to avoid backlighting, : outdoor, : low luminosity.

Press **Take**, the photo is taken and stays on the phone display.

*Warning: if you press the **◀** key, you will go back to the previous screen and lose the photo you have just taken.*

Briefly press the **◀** key to save your photo. You may have to choose the photo format, depending on your settings.

If there is not enough memory to save the photo, a warning message appears, prompting you to confirm whether you want to go on.



## Camera

---



Once taken, the photo appears on the phone display. The name is made up with a number.

**Note:** using the camera during a call may disturb the call quality.

The **Options** menu appears, giving you the option to choose between:

- **New photo:** allows you to take a new photo,
- **Modify the name:** allows you to modify the name of a photo,
- **Send:** allows you to send the photo by MMS (see the **Message** menu).
- **Editor:** various options to modify a photo (see chapter **Multimedia**, part **Edit a photo**).

Select one of the options with the ▼ ▲ keys and validate.

**NB:** photos that have been taken can be saved onto a PC through a cable or IrDA using the MPAS (My Pictures And Sounds) utility which can be downloaded from [www.planetsagem.com](http://www.planetsagem.com).

## Camera

---



### Take a video

Open the shutter at the back of your phone.  
Select the **Camera** menu. Choose the **Video Camera** option and press **OK**.

Press the left key (**Record**) to record then press again the left key (**Stop**) when you want to stop recording.

Note: the phone automatically stops recording when the maximum size available is reached.

Press **Options**:

- you can display the video: select **Play**,
- then you can save it: select **Save**. Modify the name if you want and press **OK**.

**Warning:**

A message informs you that the storing and the compression of the video are in progress. It will take a few seconds.

During this time, you have two choices:

- either you select **Cancel**, the compression is interrupted and when you display the video later, the phone will resume the compression.
- or you select **Hide**, the compression is not interrupted and you can use your phone but some functions are not available (taking a video or photo, sending a MMS).

See chapter **Multimedia/My videos** for the options on a video saved.

**Note:** the videos are saved in the phone with a .3gp format.

## Multimedia

*This menu gives you easy access to your favourite photos, videos, pictures and sounds.*



### My videos

*This menu gives you access to your videos.*



From the **Multimedia** menu, please select the **My Videos** menu and the **Select** label (left key).

The names of the videos stored in memory are displayed on the screen. Please use the **▼ ▲** keys to select one of them.

Once you have selected a video, press **Play**.

The video is now displayed. After a few seconds an **Options** menu button appears at the bottom of the screen. Press the **Options** button.

Select one of the options in the list with the **▼ ▲** keys and press **OK**.

- **Send by:** to send the video by MMS or IrDA (see **Messages** chapter). Thanks to My Pictures And Sounds (MPAS) software available from [www.planetsagem.com](http://www.planetsagem.com), you can import videos (.3gp format) or export videos (MPAS converts .3gp format into mpeg4 format readable on PC).

- **Delete:** to delete the video.
- **Rename:** to modify the name of the video.
- **Play:** to display the video again.
- **Properties:** properties of the video selected.

**Video Menu:** allows you to delete all the videos saved or to take a new video.

## Multimedia

---




### My Pictures

*This menu gives you access to your pictures.*



On the **Multimedia** menu, please select the **My Pictures** menu and **Select**.

The pictures stored are displayed on the screen. Please, use the ▼ ▲ keys to select one of them.

Once you have selected a picture, press the  key to validate the **Options** menu.

Select one of the options in the list with the ▼ ▲ keys and validate.

- **Use as:** allows you to use the picture as a wallpaper or screen saver,.
- **Delete:** allows you to delete a picture,
- **Delete all:** allows you to delete all pictures,
- **Rename:** allows you to rename a picture,
- **Send by:** makes it possible to transmit a picture (NB: you may not send any copyrighted picture).

You can import or export pictures to or from a computer using My Pictures And Sounds (MPAS), available from [www.planetsagem.com](http://www.planetsagem.com).

- **Editor:** allows you to retouch the photo.



## Multimedia

---



### Edit a photo

On the **Multimedia** menu, please select the **My Photos** menu and **Select**. Select a photo and the **Edit** option, the **Photo editor** menu appears.

Select one of the edit functions with the **▼ ▲** keys and validate:

- **Sepia**: allows you to change colors into sepia,
- **Zoom**: allows you to magnify certain parts of your photo,
- **Adjustment**: allows you to improve contrast,
- **Emboss**: allows you to modify a photo with an embossed grey tint,
- **Negative**: allows you to change a photo into negative,
- **Grey Scale**: allows you to change color into black and white,
- **Add mark**: allows you to add special characters or drawings to your photo,
- **Add frame**: allows you to surround your photo with a frame,
- **Contrast**: allows you to increase or decrease the contrast of your photo,
- **Sharpen**: allows you to sharpen a photo,
- **Blur**: allows you to add blur to a photo.

## Multimedia

---



### My Sounds

*This menu gives you access to your sounds.*



To access your sounds, use the same procedure as for your pictures (see the **My Pictures** menu).

You can import or export sounds to or from a computer using My Pictures And Sounds (MPAS), available from [www.planetsagem.com](http://www.planetsagem.com).

### Memory

*This menu indicates the memory size used by the different features of your phone.*



On the **Multimedia** menu, please select the **Memory** menu and **Select**. Use the **▼ ▲** keys to select the different features using memory. You can see the memory capacity used by each individual feature.

## WAP



*WAP (Wireless Application Protocol): a protocol that translates the Internet language into WML language that can be read by a phone. The WAP function allows you to log onto certain Internet sites. You can log onto sites that allow you to download tunes, icons or animated screensavers to your phone.*

### The WAP Menu

The WAP navigator is under licence:



RSA Data Security

The WAP navigator is the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of the software that makes up the navigator.

You can activate the magnifying glass to increase the size of the characters by holding down the # ? key.

The **Services** menu, a dropdown menu, can be accessed at all times when navigating through WAP pages pressing the **↵** key.

Consult the Services Menu using the **↵** key. It contains the following sub menus:

**Welcome:** logs onto the home page.

(carries the name of your access provider)

**Bookmarks:** is used to save in a phonebook the names and addresses of Internet sites in order to make the access easy.

You can receive bookmarks from messages and add them to this list (see chapter on SMS).

You can also send messages by SMS: select a bookmark, press the **↵** key (**Options**), then select **Send by message**.

**Go to URL:** this menu allows you to input an Internet address directly.

**Inbox:** this menu allows you to check the messages sent by the Internet site.

**Save items:** is used to save a WAP site items.

**Snapshots:** takes a snapshot of the currently displayed page.

**History:** backward and forward navigation of the pages displayed are kept in memory.

**Reload:** refreshes the current page.

**Reset cache:** clears the stored information on previous connections.

## WAP



**Advanced...:** choose one of the following advanced settings

- Settings
- Show URL
- Disconnect
- Circuit prompt (if user wants to confirm each logon)
- Security (is used to access information on making WAP connections secure).

**About...:** information on the browser.

**Exit:** returns to the phone's home page.

### Configuring WAP parameters

Select the **Advanced...** menu, then the **Settings** menu.  
Choose from the proposed sub-menus:

**Connection settings** is used to select or modify your access provider's logon parameters or configure the parameters of other access providers.

*The active access service is preceded with a star.*

#### **Configuration of WAP and GPRS parameters:**

All information to be entered in the parameters are provided by your operator or access provider.

- Choose the access service, then press **Options**.
- Enter the title and validate.
- Enter Internet address of home page and validate.

- Enter parameters of preferred connections:

**GSM if not GPRS** (by default): the logon to WAP services uses the GPRS as a priority. However, in the event of unavailability of the GPRS network, the GSM network is used to establish the link.

**GPRS:** the logon to WAP services uses the GPRS network exclusively.

**GSM:** the logon to WAP services uses the GSM network exclusively.

## WAP




The **GSM parameters** to be entered are:

- Login
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- Dial-up number
- Mode (digital, analog or automatic)

*In automatic mode access can be gained to the operator's network by a digital link and an analog link to a different network (in roaming).*

The **GPRS parameters** to be entered are:

- Login
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- APN: if no APN has been defined, press the  key (**Options**) then the APN menu. Select or add an APN.

Once all the settings have been entered, you can activate the chosen access provider. Select him from the list. Validate your choice.

**Linger timer** is used to choose the time after which the call is automatically disconnected if you have forgotten to log off from a service.


## WAP

---



### WAP Logging on

*The connection to a WAP service on the GPRS network is not cut if an incoming call is received. You can answer the call.*

Using the **Welcome** menu, you can log onto your access provider's WAP site by pressing the  key.

If you are logging onto the GSM network, the @ symbol flashes, the metering of the cost of the call starts as soon as it stops flashing.

### Downloading sounds and images

Some WAP sites allow you to download tunes, icons or animated screensavers. Once downloaded, they are stored in your phone's memory. You can then save them in your phone (same operation as used for downloading using messages).

### WAP Logging off

To log off, press the  key. The logoff happens automatically after a few seconds of inactivity if you forget to log off. This period is defined by the linger time setting.

## WAP



## GPRS

A flashing icon indicates that the phone is logging onto a GPRS network. A non-flashing icon indicates that the GPRS network is available; if the icon is dark, it indicates that the phone is logged onto the GPRS network: see page 44 for the attachment options.

This icon is not displayed if the GPRS network is not available or if the SIM card inserted in your phone does not include the GPRS service. It may also disappear when accessing WAP services if the connection uses the GSM network instead of the GPRS network.

## Games

---



*The games being designed by Java™, many compatible games can be downloaded in your phone.*



With the **Games** menu you can use the two games already installed (depending on model) and install others. For that, display the MoreGames menu: it gives access to the WAP portal from which you can download games connecting on internet sites.

**Settings/Connection menu:** this menu allows you to save sites addresses from which you can download games.

**Delete all menu:** deletes all the games you have downloaded.

**gameloft**



## Applications



The Java™ function allows you to download applications and utilities in your phone.

Downloading is done through the WAP function.

 
Please go to the **Applications** menu to use the applications already installed or install others.

### Services

This item may not be present on your phone's menu, as it depends on your SIM.

### ToDo

#### ToDo menu

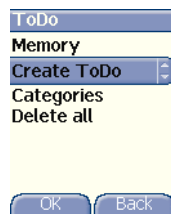

This menu allows you to add ToDo's, access category-based Todo management and delete all the ToDo's.

On the **Applications** menu, please select the **ToDo** menu and confirm your choice.


Select one of the actions in the list with the ▼ ▲ keys and validate.

- **Memory**: allows you to view the memory used by the different functions of your ToDo.
- **Categories**: allows you to see the different ToDo categories, assign a specific ring tone to each individual ToDo, know the number of ToDo's in each category and see them.
- **Delete all**: allows you to delete all the ToDo's from your ToDo.
- **Create ToDo**: allows you to add ToDo of the text or voice type. Select one type of ToDo and validate. Fill in the different items. Save the ToDo.

## Applications


 
### ToDo actions menu

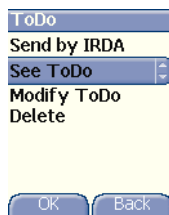

*This menu allows you to do all the actions possible on any ToDo.*

On the **Applications** menu, please select the **ToDo** menu, choose a specific ToDo in the list and validate.

Select one of the actions in the list with the ▼ ▲ keys and validate.

- **Delete**: allows you to delete the ToDo.
- **See ToDo**: allows you to see the ToDo.
- **Modify ToDo**: allows you to modify the ToDo properties.
- **Send by IrDA**: allows you to send the Vcalendar corresponding to the task by IrDA.

### Sending a vCal

*You can send a vCal from each Todo task. Yet, this function is available only on certain models of phone.*

You can send vCals to another phone using MMS or IrDA depending on your phone and the recipient's phone.

On the task list (Todo main menu), please select **a task** and in the Todo task actions menu list select **Send**.

Then choose between MMS or IrDA for the type of sending and confirm.

When sending MMS, please select your contact information (phone number or Email address) before confirming.

If you receive a call while you are sending a vCal, the call will have precedence.

## Applications

---



### Receiving a vCal

The vCal receipt mode differs with the type of delivery:

- By MMS, you receive a message you have to open to extract the vCal. You cannot add the event to your diary until you have saved it.
- By IrDA or serial link, you receive a message and when the download is completed, a message appears on your phone display, asking you what you want to do with the vCal (save it, delete it...).

You can assign a different beep to each Todo task.

You can also assign a different ring tone to each Todo task category.

## Applications

---



### Exchange of data with a PC

Working from a PC, you can save/edit contacts, events and tasks stored in your phone.

To do this, you will need:

- either to connect your phone to the PC by means of a suitable data cable (serial or USB),
- or to use the infrared function on your phone (please refer to the **Connectivity** paragraph in the **Settings** Chapter).

Next, you will have to install the Wellphone software supplied with your phone or available from <http://www.wellphone.com>. This software will also enable you to save your contacts, events and tasks by means of copy/paste.

Working from a PC, you can save/edit photos, ring tones and videos not copyrighted stored in your phone.

To do this, you will need:

- either to connect your phone to the PC by means of a suitable data cable (serial or USB),
- or to use the infrared function on your phone (please refer to the **Connectivity** paragraph in the **Settings** Chapter).

Next, you will have to install the "My Pictures and Sounds" software (available from [www.planetsagem.com](http://www.planetsagem.com) site).

 
**Remark:** If a call comes in during an exchange of data with your PC, the link will be interrupted and will have to be manually re-started.

## Applications



### Calculator

*This menu allows you to use your phone as a calculator.*

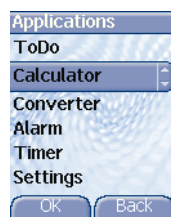

On the **Applications** menu, please select the **Calculator** menu and **Select**.

You can use the calculator thanks to the following keys:

- ▲ **Up key:** Add
- ▼ **Down key:** Subtract
- ▶ **Right key:** Multiply
- ◀ **Left key:** Divide
- ⏎ **Left programmable key:** Equals or convert
- ⏎ **Right programmable key:** Delete
- \* **key or #:** Decimal point.


*If no calculations are being run, the  key allows you to use the value in the **converter** directly.*

## Applications


 
### Converter

*This menu allows you to convert one currency to another.*

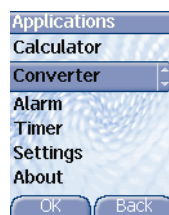

On the **Applications** menu, please select the **Converter** menu and **Select**.

Enter a value and press the ▲ key to convert from one currency to another, or the ▼ key to convert back.

The  key allows you to use the following options:

#### **Rapid exchange**

If the Rapid exchange is activated, the converter will work in the initial screen by entering the desired numbers and pressing the ▲ ▼ keys to convert.

#### **Exchange rate**

Enter the exchange rate corresponding to the chosen currency.

#### **Currency**

Enter the two types of currency to be converted.

#### **Go to calculator**

This option allows you to use immediately the value converted in the **calculator**.

 
## Applications

*The alarm works even when the phone is switched off.*



### Alarm

*This menu allows you to set and activate the alarm.*

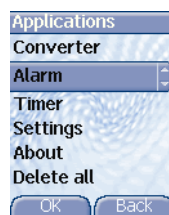


On the **Applications** menu, please select the **Alarm** menu and **Select. Activate** or **Deactivate** the alarm and validate.

Set the wake-up time by entering the numbers directly or using the ▼ ▲ keys and validate.

 *The alarm icon appears on the initial screen.*

### Timer

 *This menu is used to set and activate the timer.*

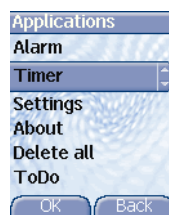

On the **Applications** menu, please select the **Timer** menu and **Select. Activate** or **Deactivate** the alarm and validate.

Set the duration (hours/minutes) by entering the numbers directly or using the ▼ ▲ keys and validate.

 *The alarm icon appears on the initial screen.*

## Organiser



 
*This menu gives you access to your diary and get to a day, week, month or specific date. It lets you add events, access the global actions for all the events and manage them by event category.*

### Calendar menu



Select one of the functions in the list with the ▼ ▲ keys and validate.

- **See date:** allows you to access events at a specific date.
- **See today:** allows you to access the events for the current day and the actions possible on any event (see, modify, delete and send).
- **See week:** allows you to access events on a week-by-week basis.
- **See month:** allows you to access events on a month-by-month basis.
- **Calendar menu:** see below.

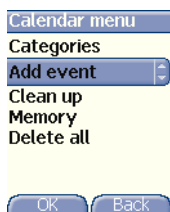

*This menu lets you add events, manage events by category, see the available memory and delete all the events.*

Select one of the functions in the list with the ▼ ▲ keys and validate.

- **Categories:** allows you to see the different event categories, assign a specific ring tone to each individual category, know the number of events in each category and see them.
- **Memory:** allows you to view the memory capacity used by the different functions of your diary.
- **Clean-up:** allows you to schedule the deletion of events that took place more than one day, week or month ago.
- **Delete all :** allows you to delete all the events from your diary.
- **Add events:** allows you to add events according to their categories. Select one type of event and validate. Fill in the different items. Save the event.



## Organiser

---



### Sending a vCal

*You can send a vCal from each diary event. Yet, this function is available only on certain models of phone.*

You can send vCals to another phone using MMS or IrDA depending on your phone and the recipient's phone.

On the See today list, please select an event and in the Todo event actions menu list, select Send.

Then choose between MMS, IrDA or serial link for the type of sending and confirm.

For MMS deliveries, you should in addition select your contact information (phone number or Email address) before confirming.

If you receive a call while you are sending a vCal, the call will have precedence.

### Receiving a vCal

The vCal receipt mode differs with the type of delivery:

- By MMS, you receive a message you have to open to extract the vCal. You cannot add the event to your diary until you have saved it.
- By IrDA or serial link, you receive a message and when the download is completed, a message appears on your phone display, asking you what you want to do with the vCal (save it, delete it...).

You can assign a different beep to each diary event.

You can also assign a different ring tone to each diary event category.

## Settings

*This menu allows you to set your phone.*



### Sounds

*This menu allows you to customize the ring tones on your phone and to activate beep and vibrate modes.*

#### Volume and ring tone

*This menu allows you to allocate a ring tone to each type of event.*



On the **Sounds** menu, please select the **Ring tones** menu and **Select**.  
Select one of the events given: Alarm, Calls, Messages, Local Infos and Fax and validate.

Select the **ring tone** from the proposed list and validate.

Adjust the **volume** using the **▼ ▲** keys and validate.

*You can deactivate the sound by pressing the \***⏏** key.*

**Voice Calls: the ring tone selected here will be played only when receiving a call from a contact stored without any call group. Otherwise, the ring tone selected for this call group will be played.**

#### Vibrate



*This menu allows you to activate the vibrate mode for calls.*

On the **Sounds** menu, please select the **Vibrate** menu and **Select**.

 
Select the vibrate mode from the proposed choices (ring tone and vibrate, vibrate only, vibrate inactive or vibrate plus ring tone) and validate.

## Settings



*Warning: vibrate mode is not a priority regarding the ring tone selected on the call group. To make vibrate mode apply in general, switch to Silent mode.*

### Silent mode

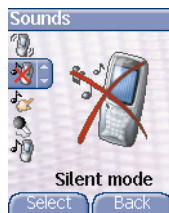

*This menu allows you to switch to Silent mode.*

On the **Sounds** menu, please select **Silent mode** and **Select**.

**Activate** or **deactivate** Silent mode and validate.

Silent mode can also be accessed via the initial screen by holding down the \* \* \* key.

*When the phone is in silent mode, the relevant icon appears on the initial screen.*

*In this mode, the ring tone will not function, except for the alarm clock.*

**Note:** if you have activated the silent mode, it does not remain after switching off your phone.

### Beeps



*This menu allows you to activate a beep for each type of event.*

On the **Sounds** menu, please select the **Beeps** menu and **Select**.

Select the type of beep you want to allocate from the proposed choices (Key beep, Network beep or Battery beep) and validate. Activate or deactivate the beep and validate.

If you select key beeps, different options are given.

## Settings

---



### Recorder



 
*This menu allows you to record your own melody.*

On the **Sounds** menu, please select the **Recorder** menu and **Record**. Record your melody or your voice by means of the microphone then save it. Give it a name and validate. The new tone is saved in the list of ringtones and in **Multimedia/My Sounds**.

If you select the recorder by means of a programmable key, the sound is saved in the **Assistant/Memo** menu.

### Display

*This menu allows you to customize your screen by choosing a different presentation.*

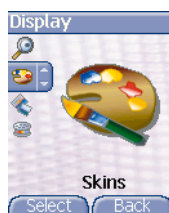

*This menu allows you to choose the skin of your phone, i.e. define its look (text font, colors, default animation, background image...).*

On the **Display** menu, please select **Skins**.

Select the desired skin and validate.


Skins are not downloadable but you can download screensavers and boot mode animations without changing those included by default with the skin.

## Settings

 ---



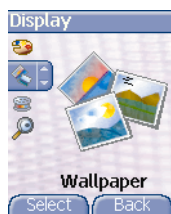

### Wallpaper



*This menu allows you to display the background picture you want on your phone.*

On the **Display** menu, please select the **Wallpaper** menu and **Select**.

Select the Wallpaper and **Visualise**. The picture appears in the background of the screen.

Press the  key to validate this choice, or the  key to go back to choice.

### Screensaver



*This menu allows you to display an animation when the phone is in standby mode.*

On the **Display** menu, please select the **Screensaver** menu and **Select**.

Select one of the screensavers given and **Visualise**.

The chosen screensaver appears on the screen, validate it.

Adjust the screensaver display time (more than 60 seconds) and validate. The screensaver comes on the screen each time the display time that has been selected runs off.

 
**NB:** the selected screensaver is active only if the **Eco**. mode is deactivated on the **Energy saving** menu.

## Settings

---



### Operator logo

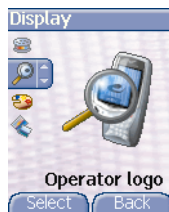

*This menu allows you to display your operator's logo on the initial screen.*

On the **Display** menu, please select the **Operator logo** menu and **Select**.

Select **Activate** or **Deactivate** and press **OK**.

## Settings

---



### Camera

*This menu allows you to set the camera and video features of your phone.*



On the **Settings** menu, please select the **Camera** menu and **Select**.

#### *Photo*

**Timer:** this menu enables you to take a photo with a 5, 10 or 15 second time delay. During preview of the photo, activate the delayed exposure by pressing on the button . (NB: if you want to take the photo immediately, then press on the Photo button).

**Click sound:** This menu allows you to select the sound you will hear when taking a photo.

**Photo format:** This menu allows you to choose the format in which your photo will be saved. There are several options:

- either you systematically set the photo format to one of the following:  
**High resolution** or **Mobile format**,
- or you can choose the photo format on a case-by-case basis.

#### *Video*

**Video size restriction:** This menu allows you to choose a video size.

**Video sound:** This menu allows you to select or not the sound when recording a video.

## Settings

---



### Languages

*This menu allows you to choose your phone's display language.*



On the **Settings** menu, please select the **Languages** menu and **Select**.  
Select your language and validate.  
If you select **Automatic**, the language used will be the one relative to your SIM card.

### Calls

*The **Calls** menu allows you to manage all the calls functions (call forward, displaying numbers, call waiting, voicemail number, etc.).*



## Settings

---



 
### Call forward



*Depending on your subscription, this service allows you to forward incoming calls to a different number or to the voice mailbox.*

On the **Calls** menu, please select the **Call forward** menu and **Select**.  
Choose the type of forwarding you want from the options available.

### View last calls

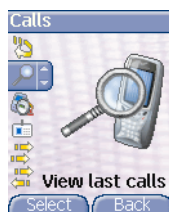

*This menu allows you to access the list of last numbers used.*

On the **Calls** menu, please select the **View last calls** menu and **Select**.  
*For every phone call are displayed on the screen:*

- its characteristics (shown with an icon),
- the time (or date),
- its duration.

Select a call from the list and validate.

Select one of the options given: Call, Store in your phonebook, Send a message, Delete, Delete all.

*You can also make the call by pressing the **↵** key.*

## Settings

Fast access to the list of calls from the initial screen: press the  key.



### Counters



This menu allows you to consult the duration of the up calls.  
It can also be used to check the volume of data exchanged in GPRS.  
On the **Calls** menu, please select the **Counters** menu and **Select**.  
Select one of the options given.

### Display number



This menu allows you to modify the status of the display number function.

On the **Calls** menu, please select the **Display number** menu and **Select**.  
Select one of the options given: Anonymous mode, My number, Callers' number.

#### Anonymous mode

You have the facility to mask your number on the phone of the person you are calling.

Preset: network default mode.

No: you choose not to activate anonymous mode and then to display your number.

Yes: you choose to activate anonymous mode and then not to display your number.

## Settings

 
---



*During a call, you may be informed that a caller is trying to reach you: you hear a special tone. The caller's identity is displayed on the screen (name or number).*

### Call waiting

*(Operator-dependent service)*

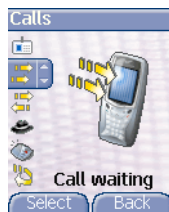

On the **Calls** menu, please select the **Call waiting** menu and **Select**. You can **activate, deactivate, or consult the status** of the call waiting service in order to check if it is active or not.

During a call, if a second caller tries to contact you, the screen displays the call warning.

### Automatic redial

*This menu allows you to call back a caller you have not managed to reach.*



On the **Calls** menu, please select the **Auto redial** menu and **Select**.

You can set the redial function to inactive, on request or systematic.

If you choose **On demand**, your phone will offer to redial your caller automatically if his number is busy.

## Settings

---



### Blacklist



*The blacklist is used to limit failures on automatic calls (calls generated by the automatic redial function or by applications: data, fax for example).*

On the **Calls** menu, please select the **Blacklist** menu and **Select**.

When several automatic calls failed with a number (number busy or unknown), this number is put in the blacklist and no automatic call will be done with this number any more until you delete it from the blacklist.

**Note:** this function does not apply to the calls performed manually.

### Voicemail



*This function is used to record your answer phone number.*

*This number will be used during a call to the voice mailbox using the programmable keys.*

On the **Calls** menu, please select the **Voicemail** menu and **Select**.

Enter your answer phone number and validate.

### ALS

The ALS (Alternate Line Service) function allows you, depending on your subscription, to have two phone lines. The number of the line selected (1 or 2) for the calls appears on the initial screen.

## Settings



### Security

*This menu allows you to configure your phone's security settings.*

#### Keypad locking

*This menu allows you to lock the keypad to avoid unwanted key presses. On the **Security** menu, please select the **Keypad locking** menu and **Select**.*

Select **Activate** or **deactivate** and validate.

 The lock icon appears on the initial screen.

*This function is also available in the initial screen pressing the \* 2 6 and 0 keys.*



#### PIN number

*This menu allows you to activate and modify your phone's PIN.*

On the **Security** menu, please select the **PIN number** menu and **Select**.

To modify the PIN, select **Modify** and **Select**.

Enter old PIN and validate.

Enter new PIN twice and validate.

To activate or deactivate the PIN, select the **Check PIN** menu and **Select**.

Enter PIN and validate.

Select **Activate** or **Deactivate** and validate.



## Settings

---



### PIN2 number



You have a second PIN number to allow you to access certain functions\*.

\* These functions may or may not be available depending on your SIM card.

Proceed as above in order to activate, deactivate or modify PIN number 2 of your phone.

### Phone code



The Phone code menu allows you to activate the phone code so that it is requested and checked whenever the phone is switched on if a different SIM card is used. This code is automatically linked to the SIM card installed when the phone is activated, for example to protect the phone if stolen.

To activate or deactivate the phone code, select the **Phone code** menu and validate.

Enter 0000 (the factory code, by default) and validate.

Select **Activate** or **Deactivate** and validate.

To modify the phone code, select **Modify** and validate.

Enter old phone code and validate.

Enter new phone code and validate.

Enter phone code again to confirm it and validate.

## Settings

---



*The Confidentiality function is used to delete numbers stored in View last calls and the SMS stored in the memory when a new SIM card is inserted into the phone.*

### Confidentiality



*This menu allows the activation of automatic deletion, after power off/on, for messages and/or calls stored in the phone.*

On the **Security** menu, please select the **Confidentiality** menu and **Select**.

Select **Activate** or **Deactivate** and validate.

### Operator



*This menu allows you to modify the call barring.*

On the **Security** menu, please select the **Operator** menu and **Select**.

*Access to this service depends on your type of subscription.*

## Settings



*Call barring can be applied to ALL calls (incoming and outgoing), to all incoming calls when you are away from your home country (if roaming available).*

### Call barring



*This menu allows you to block the sending or reception of certain calls. Before you can use this service, a password will be provided by your operator when you take out your subscription.*

On the **Security** menu, please select the **Call barring** menu and **Select**. Select **Activate** or **Deactivate** and validate.

*Access to this service depends on your subscription type.*

### Fixed dialling



*This menu allows you to restrict the outgoing calls. The availability of this menu depends on your SIM.*

On the **Security** menu, please select the **Fixed dialling** menu and **Select**.

Enter PIN2 number and validate. Select **Activate** or **Deactivate** and validate. Proceed as for any other phonebook.

When activating this function, only the numbers stored in the phonebook can be called.

*This phonebook is linked to the SIM card, and its size depends on the card's capacity.*



## Settings



### Cost



*This menu allows you to control the cost of your calls (\*).*

On the **Security** menu, please select the **Cost** menu and validate.

The **Cost** menu (\*) lets you check the cost of the last call you made and of all the calls you made since you last deleted them.

The **Delete costs** menu (\*) lets you delete the cost of your last call and reset the cost counter after entering your PIN 2 code.

**(\*) WARNING**

*Depending on how the networks and associated subscription cards are configured, some functions may be unavailable (these are marked out with \*).*

### Networks

*This menu allows you to configure network preferences.*



On the **Settings** menu, please select the **Networks** menu and **Select**.

Choose **Preferred** to view all the pre-registered networks.

Choose **Selection** to activate (automatically or manually) one of the networks accessible in the area in which you are located.

Choose **Network type** to select your network: GSM-DCS or PCS (depending on model).

Choose **GPRS** to select the way you want to be attached on the GPRS network: always, or only when needed (when launching a data connection).

## Settings



 
### Others

#### Car kit



*This menu allows you to configure your phone with a car kit.*  
On the **Others** menu, please select the **Car kit** menu and **Select**.  
Choose one of the options given: Automatic response, Switch off, Kit volume.

#### Energy saving

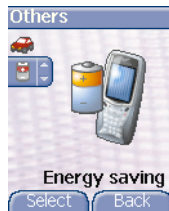

*This function is used to deactivate the screen backlight and to select the economic mode.*


On the **Others** menu, please select the **Energy saving** menu and **Select**.

**Backlight:** choose one of the options given: Deactivate, Full backlight, Screen only, and validate.

*By deactivating the screen backlight, you increase the battery life of your phone. Warning: display legibility is reduced.*

**Economic mode:** choose one of the options given: Partial, Deactivate, Complete, and validate.

When choosing the economic mode, the screen goes out (standby mode).

To quit economic mode, press the  key.

**NB:** if you selected an animation in the **Display/Screensavers** menu and activated the economic mode, this will be activated as the priority and the screensaver will not appear.

## Settings

---



### Short cuts

*This menu allows you to allocate functions to the programmable keys.*

*(Function available depending on model)*

*This menu allows you to customize the settings of your phone to make it as convenient as possible for you to use.*

On the **Settings** menu, please select the **Short cuts** menu and **Select**.  
Select the key that you wish to modify and validate.  
Choose the function that you want to allocate to this key and validate.



## Settings



### Date / Time

#### Set Date/Time



*This menu allows you to set the date and time of your phone.*

On the **Date / Time** menu, please select **Set Date/Time** and validate.

**Date:** set the date by entering it directly in digital form or by using the ▼ ▲ keys.

Use the ► (or ◀) key to access the next (or previous) entry field.

Once the date is correct, validate it.

**Time:** same procedure as for setting the date.

#### Automatic update



*This menu allows you to choose manual or automatic updating of date and time (after switch off of your phone or when going abroad for instance) (service depending on the operator).*

From the **Date / Time** menu, please select **Automatic upd.** and press **OK**.

Please select Automatic, Manual or On demand and press **OK**.

## Settings

---



### Display



*This menu allows you to select the date and time display type.*  
On the **Date / Time** menu, please select **Display** and validate.  
In the list that appears, select the desired display type between:

- Analog,
- Digital,
- None,

by using the ▼ ▲ keys and validate.

### Time zone



 
*This menu allows you to change time in relation to the GMT time.*  
On the **Date / Time** menu, please select **Time zone** and validate.  
Choose the time of the country desired by calculating the time from the GMT time.

## Settings

---



### Summer time

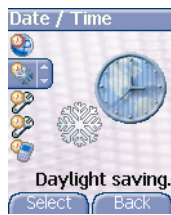

*This menu allows you to set your phone to the summer/winter time.*

On the **Date / Time** menu, please select 1 h, 2 h **Summer time** or **Winter time** depending on the season, and validate.

## Settings

 
---



### Connectivity

You can also connect it to your computer in order to receive data or fax through GSM or GPRS network (depending on subscription): configure the connection parameters of your computer using the Wellphone CD supplied as an accessory.

#### IrDA

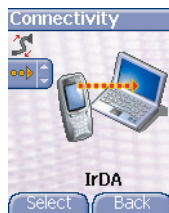


This menu is used to configure the data exchange with another device (Personal Digital Assistant, PC, etc.).

On the **Connectivity** menu, please select the **IrDA** parameters menu and validate.

You may then:

- send or receive images, sounds etc either using a different compatible phone or from a PC installed with "My Pictures and Sounds" (available from [www.planetsagem.com](http://www.planetsagem.com)), or
- exchange contacts, events and tasks with your PC by means of the Wellphone software (page 53).

#### Serial Speed

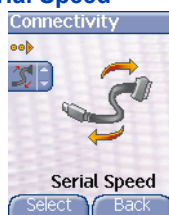 

On the **Connectivity** menu, please select the **Serial Speed** parameters menu and validate.

The **Speed** menu enables you to select the speed to be used for data exchanges via your phone's serial port. Except for specific requirements, it is advisable to stick to the default setting: **Automatic**.

## Settings

 
---



### Menu Hot-line

*This menu is used to provide information to your operator if an intervention on your phone is necessary.*

On the **Settings** menu, please select the **Menu Hot-line** parameters menu and validate.

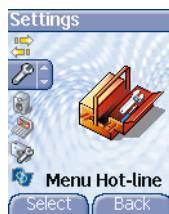



## Care and safety information

### Safety

Use of your phone is subject to safety measures designed to protect users and their environment. Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture. Do not expose your phone to extreme temperatures from - 10°C to + 55°C. The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures. Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

#### Electrical safety

Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

#### Aircraft safety

When travelling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs. Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network. Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

#### Explosive materials

Please comply with warning signs at petrol station asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

#### Electronic medical equipment

Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

#### Hospitals

Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

#### Road safety

Except in emergencies, do not use your phone when driving unless you have a hands-free kit enabling you to manoeuvre freely. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation. Ensure that no part of your body is permanently close to the aerial unless there is a metal screen (e.g.: a vehicle roof, ...).

## Care and safety information

### SAR

This phone complies with European requirements governing exposure to radio waves. Your phone is a transmitter/receiver. It has been designed and manufactured to comply with radiofrequency energy exposure limits recommended by the Council of the European Union and the ICNIRP for the entire population. These limits were established by independent scientific agencies on the basis of in-depth and regular evaluations of scientific studies. The limits include a large safety margin that is intended to guarantee the safety of all, irrespective of age or state of health.

The exposure standard for phones uses a unit of measure called the SAR, or Specific Absorption Ratio. The SAR limit recommended by the Council of the European Union and the ICNIRP is 2 W/kg (\*). Tests were conducted on a standardised usage position basis, with the phone transmitting at its maximum level certified in all its frequency bands. Although the standardised measurement is done at maximum power, the real SAR of the phone in use is generally very far below the maximum value.

The phone was designed to operate at the power level strictly necessary to ensure communication with the network. In general, the closer you are to a base station, the lower the power at which the phone will transmit.

Validation of conformity with European directive 1999/5 (directive R&TTE) is a pre-requisite for introducing any model of phone onto the market. Protection of health and the safety of the public and the user are a vital requirement of this directive. This model's maximum SAR value measured at the compliance test for use at the ear was 0.57 W/kg. Although differences may exist from one phone to the other and depending on position, all comply with European regulations.

### Advice for limiting exposure to radiofrequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.

(\* ) *The SAR limit for phones used by the general public is 2 watts/kilogram (2 W/kg) on average for 10 g of tissue. This value includes a large safety margin to increase protection and to take account of the variations in measurements. The SAR information may vary in different parts of the world, depending on declared national requirements and the frequency bands used by the network.*

## Warranty

---

The software program developed by SAGEM remains the exclusive property of SAGEM SA. It is therefore highly prohibited to modify, translate, de-compile or disassemble this software program or any part thereof.

### Usage precautions

Your phone allows you to download ring tones, icons and animated screensavers. Some of these items may contain data that may cause malfunctions of your phone or data losses (virus for example). For this reason, SAGEM SA rejects all responsibility concerning (1) the reception of downloaded data or losses of the said data, (2) the impact on the operation of the phone and (3) damages resulting from receiving the said downloaded data or loss of said data. In addition, SAGEM SA states that a failure caused by receiving downloaded data that do not comply with the specifications set by SAGEM SA is excluded from the warranty. Consequently, the diagnosis and repair of a phone infected by the said downloaded data will be at the expense of the customer.

### Warranty conditions

Whenever you wish to make use of the warranty, please contact your vendor and present him with the purchasing paperwork that he gave you.

If a fault occurs, he will advise you.

#### 1.

The new phone (excluding consumables), including new accessories bundled with the phone, are guaranteed by SAGEM SA, parts and labour (apart from travel) against any manufacturing fault for a period of twelve (12) months with effect from the sale of the phone by SAGEM SA to the customer, on presentation of the paperwork stating the purchase date of the phone.

Phones that have been repaired or replaced as standard during the warranty period stated above are guaranteed (parts and labour) until the later of these two dates:

Expiry of the guarantee period of twelve (12) months stated above or three (3) months with effect from the support provided by SAGEM SA.

In any disputes, the phone is covered by the legal warranty against the consequences of faults or hidden defects in compliance with articles 1641 and subsequent of the French civil code.

#### 2.

All faulty phones under warranty will be replaced or repaired free of charge at SAGEM SA's option (with the exclusion of repair of any other damage), once it has been specified that the work required for the application of the warranty will be done in a workshop and that the return costs (transport and insurance) of the phone to the address to be indicated to it by the SAGEM SA after-sales service, whose phone number will appear on the delivery note, will be charged to the customer.

Subject to essential legal provisions, SAGEM SA does not accept any warranty, explicit or implicit, other than the warranty provided expressly in this chapter, nor shall SAGEM SA accept responsibility for any immaterial and/or indirect damages (such as loss of orders, loss of profit or any other financial or commercial damage) under the warranty or not.

## Warranty

---

**3.**  
The acceptance of a phone under warranty demands that a purchase document that is legible and without modification, stating vendor's name and address, date and place of purchase, type of phone and IMEI, are attached to the warranty, and that the information on the phone identification label is legible and that this label or any other seal has not been tampered with.

The warranty applies in normal conditions of use.

Prior to sending the phone for repair, it is the customer's responsibility to backup at his expense the customized data stored in the phone (phonebook, settings, wallpapers). A list of backup facilities can be provided by SAGEM SA on request. The responsibility of SAGEM SA cannot be invoked if damage occurs to customer files, programs or data. The information or operating elements and the contents of files will not be re-installed in any case in the event of loss.

SAGEM SA may decide, at its option, to repair the phone with new or reconditioned parts, replace the phone with a new phone or, in any dispute, a phone in good working condition. During its work SAGEM SA reserves the facility to make, where necessary, any technical modifications to the phone where these modifications do not adversely affect its initial purpose.

Faulty parts to be replaced during a repair under warranty will become the property of SAGEM SA.

The phone repair and standstill time during the warranty period may not lead to an extension of the warranty period as stated in article 1 above, provided no other vital provisions have been agreed.

The application of the warranty is subject to the full payment of the sums due for the phone when the request for support is made.

**4.**  
The following are excluded from the warranty:

Breakdowns or malfunctions due to non-compliance with the installation and use instructions, to an external cause of the phone (shock, lightning, fire, vandalism, malice, water damage of any type, contact with various liquids or any harmful agent, unsuitable electric current...), to modifications of the phone made without the written consent of SAGEM SA, to a servicing fault, as described in the documentation supplied with the phone, to lack of supervision or care, to poor environmental conditions of the phone (especially temperature and hygrometry, effects of variations in electric voltage, interference from the mains network or earth) or even due to a repair, a call-out (opening or trying to open the phone) or to servicing done by personnel not approved by SAGEM SA.

Damage resulting from inadequate packaging and/or poor packing of the phone sent back to SAGEM SA.

Normal wear and tear of the phone and accessories.

Communication problems linked with a poor environment, especially:

Problems accessing and/or logging onto the Internet, such as breakdowns of the access network, the failure of the subscriber's or his correspondent's line, transmission fault (poor geographic coverage by radio transmitters, interference, disturbance, failure or poor quality of phone lines...), a fault inherent to the local network (cabling, file server, user phone) and/or transmission network fault (interference, disturbance, failure or poor quality of the network...).

Change of parameters of the cellular network made after the phone was sold.

Supply of new software versions.

Current servicing work: delivery of consumables, installation or replacement of these consumables...

Call-outs for phone or software modified or added without the written consent of SAGEM SA.

## Warranty

---

Faults or disruptions resulting from the use of products or accessories not compatible with the phone.

Phones returned to SAGEM SA without having complied with the return procedure specific to the phone covered by this warranty.

The opening or closing of a SIM operator key and call-outs resulting in the non-operation of the phone resulting from the opening or closing of SIM operator key done without the agreement of the original operator.

### 5.

In the cases of warranty exclusion and of expiry of the warranty period, SAGEM SA shall draw up an estimate to be given to the customer for acceptance before any call-out. The repair and carriage costs (there and back) given in the accepted estimate will be charged to the customer.

These provisions are valid unless a special written agreement has been made with the customer. If one of the provisions turns out to infringe a legally essential rule that consumers could have the benefit of under the national legislation, this provision will not be applied, but all other provisions will remain valid.

## Troubleshooting

PROBLEM - SITUATION	ACTIONS
<b>It is impossible to switch the phone on</b>	Remove and replace the battery. If you still cannot switch the phone on, charge the battery: <ul style="list-style-type: none"><li>- Put it on charge for at least 15 minutes before switching it back on again.</li><li>- Check if the battery icon is scrolling up and down.</li><li>- If so, the phone is charging.</li><li>- If not, please take the charger out and put it back on again. Please check that the charging icon is scrolling up and down.</li><li>- If you still cannot switch the phone on, please disconnect the charger, put it back on again and please repeat that manipulation several times.</li><li>- If the charging icon is still not scrolling up and down, please contact your after-sales services.</li><li>- When the charging icon has stopped scrolling up and down, the battery is charged.</li></ul>
<b>Battery status unknown</b>	The phone does not recognize the battery. Please check the position of the battery.
<b>LOW BATTERY</b>	This message is displayed when the battery becomes too weak. The phone switches itself off automatically. Put the phone on charge.
<b>SIM not present</b>	Check if the SIM card is present and properly positioned / inserted. Check the condition of the SIM card. If damaged, please go back to the operator's shop for advice. Contact your after-sales service if the message persists.
<b>Incorrect PIN code</b>	An incorrect PIN code has been entered. Be careful! Three incorrect PIN codes will block the SIM Card.
<b>SIM BLOCKED</b>	You have entered three incorrect PIN codes. Enter your PUK code to unblock your SIM Card. You must enter: **05*PUK*PIN*PIN# You must enter the PUK code (Personal Unblocking Key) given by your network provider. 10 errors will permanently block your SIM Card. You must then contact your network provider to get a new one.

## Troubleshooting

PROBLEM - SITUATION	ACTIONS
<b>SIM LOCKED</b>	On network providers' request, the handset can only be used with some types of SIM cards. This message means that the SIM card you are using does not fit with the phone. Take the SIM card out, and switch it back on. If the message <b>SIM not present</b> appears on the screen, you will need to check its compatibility next to the place where you bought it. If not, please contact your after-sales service.
<b>No call connection</b>	Check that the number you have dialled is correct. If the letter R is displayed on the top right corner of the screen, without any network name displayed, only emergency services can be called. Check the status of your credit. Check that the SIM Card you are using offers the service you are requesting ; check if its validity has not expired. Check and deactivate the outgoing calls restriction when necessary. The network could be saturated. Try later. If the problem persists, please contact your Technical Helpdesk.
<b>No receiving calls</b>	Try to make a call in order to check that the phone and the networks are operational. Check and deactivate the permanent call forwarding (permanent call forwarding icon displayed on the screen). Check and deactivate the incoming calls restriction when necessary. If the problem persists, please contact your Technical Helpdesk.
<b>Quality reception when calling</b>	Avoid placing your fingers on the top of the phone, where the aerial is integrated: the phone will have to use full strength to establish a quality transmission.
<b>Impossible to send message</b>	Check that the message centre number is correctly entered. To do so, please select the menu <b>Messages</b> , select <b>Options</b> , select <b>MSG centre n°</b> and check the number entered. Please contact your network provider to get this number.

## Troubleshooting

PROBLEM - SITUATION	ACTIONS
<b>No answer phonebox</b>	<p>Check that the SIM card does offer this service.</p> <p>Program the call to be forwarded to answer phoneusing the information provided by the operator.</p> <p>Check that the SIM card used offers this service. Try to make a call to check that phone and network are operational.</p> <p>Check if the answer phone number is properly configured. To do so, go to the <b>Calls</b> menu, select <b>Voice mail</b> and check the number. Otherwise, enter your operator's answer phone centre number.</p>
<b>If answer phone icon flashing</b>	<p>Call the answer phone and listen to the new messages to make it disappear.</p>
<b>Wrong ring tone is played on call reception</b>	<p>Check the call group of the contact who has called: check the ring tone selected for this group.</p>
<b>Backlight does not work</b>	<p>Go into the <b>Settings / Others</b> menu, select the <b>Energy saving</b> menu and activate backlight.</p>
<b>In WAP context: SERVER NOT ANSWERING message</b>	<p>Switch off and then switch phone back on.</p>
<b>Logon to home page impossible</b>	<p>In the <b>WAP</b> menu, <b>Clear the cache</b>.</p>
<b>Operator name does not appear on screen</b>	<p>Go into the <b>Settings</b> menu, select <b>Networks</b>, then <b>Selection</b>. Wait until the operator appears, select it and validate.</p> <p>If the Operator logo is present (depending on model), activate the display (<b>Settings/Display/Operator logo</b>).</p>
<b>How do I (un)lock the keypad?</b>	<p>Press the * * * key, then the key (validate).</p>
<b>How do I switch to silent mode?</b>	<p>Hold the * * * key down unless ring tone sounds, when a short touch is enough.</p>
<b>How do I activate zoom?</b>	<p>Can be activated only in SMS and WAP screens; hold down the # key.</p>
<b>How do I delete the envelop that appears on the screen?</b>	<p>If you have received a voice mail, please call your voice mailbox and follow the instructions given.</p>
<b>How do I delete the answer phone that appears on the screen?</b>	<p>This answer phone means that you have received a voice mail: please call your voice mailbox and listen to it. Please follow the instructions given.</p>
<b>How do I remove the written message at the bottom of the home page (1 call)</b>	<p>Press the key to go back to the initial page without messages.</p>



## Troubleshooting

### PROBLEM - SITUATION

### ACTIONS

**How do I download ring tones?**

Logon to one of the following site via your computer: [www.planetsagem.com](http://www.planetsagem.com). These site offer to send ring tones to your phone in the form of an SMS. You can also logon to your operator's site. Once the SMS has been received, all you have to do is save it: validate the option « Save messages », the tune will then be added to your list. In addition, you can logon to some sites by phone.

**How do I free up memory to download my objects (sounds, images)**

Go into the **Multimedia** menu, select **My Videos**, **My Pictures** or **My Sounds** then delete some objects.

**How do I free up memory to receive new messages?**

Manage your **Outbox** carefully. It is recommended not saving them automatically: too many messages saved will quickly fill up the available memory and no further messages will be received. To delete them, please go into the **Messages** menu, select **Outbox** then delete some messages. Manage your **Inbox** carefully also.

**How do I free up memory to store new contacts in my Phonebook?**

It is highly recommended to manage your Phonebook carefully. If you have received pictures enclosed to a Vcard, please save or delete them.

**How can I increase the efficiency of my phone?**

 
 
 
 
 
 
The most efficient actions are as follows:  
You can deactivate the backlight (in the menu **Settings / Others / Energy Saving**), or please keep your phone safely in order to avoid pressing the keys unnecessarily: every time a key is pressed the screen lights up. You can deactivate the screensaver or select the activation time to be more than every 300 s (the screensaver uses processing power).  
Make sure that you don't obstruct the antenna with your fingers when using the phone (see page 16).

 
 
 
 
 
 
 
## Index

 

<b>A</b>			
Accessories	p9	<b>D</b>	
Activating your phone	p14	Date / Time	p76
Alarm	p55	Description	p9
Anonymous mode	p66	Display	p60
<b>B</b>		<b>E</b>	
Battery		Energy saving	p74
Charging the battery	p17	<b>F</b>	
Installing the battery	p15	Fax	p79
Beeps	p59	Fixed dialling	p72
<b>C</b>		<b>G</b>	
Calculator	p53	Games	p48
Call barring	p72	GPRS	p44, p45, p47
Calls (menu)		GSM	p45
Automatic redial	p67	<b>I</b>	
Call forward	p65	Icon	p13
Call waiting	p67	Initial screen	p13
Counters	p66	Input modes	p27
Display number	p66	IP address	p45
View last calls	p65	IrDA	p79
Camera	p36	<b>K</b>	
Car kit	p74	Keypad locking	p10, p69
Changing cover	p15	<b>L</b>	
Charger	p9	Languages	p64
Confidentiality	p71	Local information	p34
Contact	p19	Lock keypad	p69
Add contact	p19		
Delete	p23		
Modify contact	p23		
See contact	p22		
Converter	p54		
Currencies	p54		

## Index

- M**
- Memory p23, p34
  - Menus p3
  - Messages
    - Compose p25
    - Drafts p32
    - Inbox p31
    - MMS p29
    - Receiving messages p30
    - Sending options p33
- N**
- Navigation principles p12
  - Networks p73
- O**
- Operator p71
- P**
- Phone code p70
  - Phonebook
    - Phonebook menu p19
    - Using the phonebook p18
  - PIN number p69
  - PIN2 number p70
  - Programmable keys p10
- R**
- Ring tones p58
- S**
- Safety information p81
  - Screensaver p61
  - Security p69, p70, p71, p72, p73
  - Sending options p33
- Serial Speed p79
  - Short cut keys p10, p75
  - Silent mode p59
  - SIM card p14, p15
  - Skins p60
  - SMS p25
  - Sounds p58, p59
- T**
- T9 p26
  - Text p28, p29, p30
  - Timer p55
  - Troubleshooting p86, p87, p88, p89
- V**
- vCard p24
  - Vibrate p58
  - Video p38, p39
  - Voicemail p68
  - Volume p58
- W**
- Wallpaper p61
  - WAP p43, p44, p45, p46, p47
    - Configuring WAP parameters p44, p45
    - Downloading sounds and images p46
    - Services menu p43, p44
    - WAP logging off p46
    - WAP logging on p46
  - Warranties p83
- Y**
- Your phone package p9



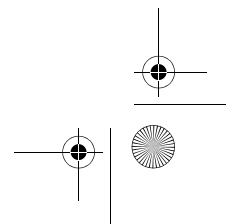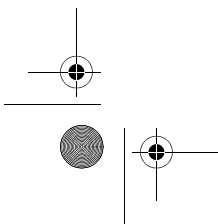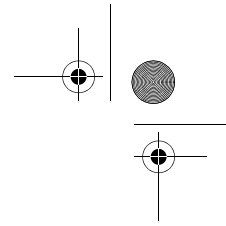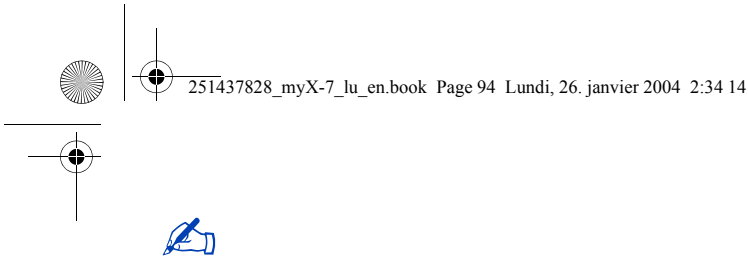



251437828\_myX-7\_lu\_en.book Page 95 Lundi, 26. janvier 2004 2:34 14

