

* Some of the contents of this manual may differ from your phone, depending on the software installed or your service provider.



Printed in Korea

World Wide Web

<http://www.samsungmobile.com>

Code No.: GH68-05386A

English. 07/2004. Rev 1.1



SGH-E310 User Guide



Customised for



vodafone™ *live!*

Contents

Important Safety Precautions	7
Unpacking	9
Your Phone.....	10
Phone Layout	10
Display.....	13
Service Lights	16
Camera	16
Getting Started.....	17
Installing the SIM Card.....	17
Charging the Battery.....	19
Switching On or Off the Phone	21
Call Functions.....	22
Making a Call	22
Adjusting the Volume.....	27
Answering a Call.....	28
Viewing Missed Calls	29
Quickly Switching to Silent Mode	31
Selecting Functions and Options.....	32
Using the Soft Keys	32
Selecting Options	33
Entering Text.....	34
Changing the Text Input Mode	35
Using Alphabet Mode	36
Using T9 Mode	37
Using Number Mode.....	39
Using Symbol Mode	39
Options During a Call.....	40
Putting a Call on Hold.....	40
Using the Menu Functions	41
Switching Off the Microphone (Mute).....	42
Muting or Sending Key Tones	43
Sending a Sequence of DTMF Tones	43
Searching for a Number in Contacts	44
Call Waiting	45
Making a Multi-party Call	45

Contents

Using the Menus	48
Accessing a Menu Function by Scrolling	48
Using Shortcuts.....	49
List of Menu Functions.....	50
Games & more	56
Saved applications.....	56
More games.....	58
DNS settings.....	59
Vodafone live!	60
Vodafone live!	60
Enter URL.....	64
Bookmarks	64
What's new.....	65
Games	65
Ringtones.....	65
Pictures.....	66
News	66
Browser settings	66
Clear cache.....	68
Applications	69
Vodafone.....	69
Alarms	69
Calculator.....	71
To do list	72
Voice recorder.....	74
Currency converter	76
Messages	77
Create message	77
Inbox.....	86
My messages	91
Call voicemail.....	97
live! Studio	98
Vodafone mail.....	98
Vodafone messenger.....	98
Push messages	99
Message settings	99
Memory status	103
Delete all.....	104

Camera	105
Take photo	105
Record video.....	109
My photos	110
My videos.....	112
My items	113
Pictures.....	113
Games	114
Sounds	115
My videos.....	116
Templates	116
Memory status	116
Calendar	118
Consulting the Calendar	118
Writing a Memo.....	118
Viewing a Memo.....	120
Contacts	121
Contacts list.....	121
Create contact	124
Group search	125
Group edit	126
Call log	127
Speed dial list	132
My numbers.....	133
Memory status	133
Settings	134
Phone settings	134
Display settings.....	138
Sound settings	140
Call settings.....	145
Time & date.....	152
Network selection.....	153
Security	154

Contents

Solving Problems	158
Access Codes	161
Phone Password	161
PIN.....	162
PUK.....	162
PIN2	163
PUK2	163
Barring Password.....	164
Health and Safety Information	165
SAR Certification Information	165
Precautions When Using Batteries	166
Road Safety.....	168
Operating Environment	168
Electronic Devices.....	169
Potentially Explosive Environments	171
Emergency Calls.....	172
Other Important Safety Information.....	173
Care and Maintenance.....	174
Glossary	176
Index	181
Quick Reference Card	187



Important Safety Precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

Switching Off When Refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switching Off in an Aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching Off in Hospitals

Switch your phone off near medical equipment. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special Regulations


Follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

Important Safety Precautions

Sensible Use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency Call

Ensure the phone is switched on and in service. Key in the emergency number for your present location, then press the  key. You must deactivate any unnecessary features before you can make an emergency call. Give all the necessary information as accurately as possible. Do not end the call until given permission to do so.

Water Resistance

Your phone is not water-resistant. Keep it dry.

Accessories and Batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.

Qualified Service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and Safety Information" on page 165.

CAUTION

RISK OF EXPLOSION IF A BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO
THE INSTRUCTIONS.

Unpacking

Your package contains the following items:



Handset



Travel Adapter



Battery



Straight Headset



User's Manuals



Hand Strap

Note: The items supplied with your phone may be different, depending on your country or service provider.

You can obtain the following accessories for your phone from your local Samsung dealer:

- Standard/Extended battery
- Simple handsfree car kit
- Battery charger
- Hand strap
- PC data link kit
- Travel adapter

Your Phone

Phone Layout

The following illustrations show the main elements of your phone:



Key(s)	Description
---------------	--------------------



In Menu mode, scrolls through the menu options.

When entering text, moves the cursor up and down, depending on the direction of the key you pressed.

In Idle mode, allows you to access your favourite menu options directly. For further details about shortcuts, see page 136.



When entering text, moves the cursor to the left and right, depending on the direction of the key you pressed.

In Idle mode, allows you to access your favourite menu options directly. For further details about shortcuts, see page 136.



(soft keys)

Performs the functions indicated by the text above them, on the bottom line of the display.












Enters Menu mode in Idle mode.

In Menu mode, selects the current menu or option or confirms your input. When there are options available, pressing this key selects the first option immediately.



Deletes characters from the display.


In Menu mode, returns you to the previous screen.

Key(s)	Description (continued)
	Makes or answers a call. In Idle mode, recalls the last number dialed, missed, or received when held down.
	Ends a call. Also switches on and off the phone when held down. In Menu mode, cancels your input and returns the phone to Idle mode.
	In Idle mode, accesses your voicemail server when held down.
	Enters numbers, letters, and some special characters.
	
	Enters special characters.
	Performs various functions.
	(on the right side of the phone) In Idle mode, enters the Camera menu. Turns on the camera when held down. In Capture mode, take a photo.
	(on the left side of the phone) During a call, adjusts the earpiece volume. In Idle mode with the phone open, adjusts the keypad tone volume. With the phone closed, turns on the external display when held down. In Menu mode, scrolls through menu options.

Display





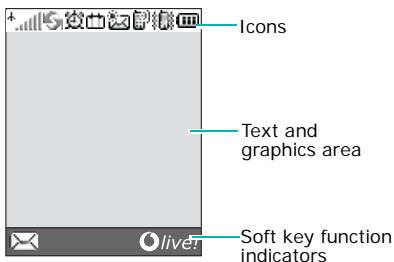






Display Layout

The display has three areas:



Area	Description
First line	Displays various icons. See page 14.
Middle lines	Displays messages, instructions, and any information that you enter, such as the number you are dialling.
Last line	Shows the current functions assigned to the two soft keys.




Icons

Icon	Description
	Shows the received signal strength. The greater the number of bars, the stronger the signal.
	Appears when the IrDA port is active. For details, see page 134.
	Appears when you set an alarm to ring at a specified time.
	Appears when you are out of your home area and have logged onto a different network; for example, when travelling in other countries.
	Appears when a new SMS (Short Message Service) message has been received.
	Appears when a new voice mail message has been received.
	Appears when a new MMS (Multimedia Message Service) message has been received.
	Appears when a call is in progress.
	Appears when you are out of your service area. When it displays, you cannot make or receive a call.
	Appears when you are connected to the GPRS network.
	Appears when you are in the Home Zone, if you have registered for the service.

Icon **Description** (continued)

Appears when you are in the Office Zone, if you have registered for the service.



Appears when you set incoming calls to be diverted to another destination. When your SIM card supports ALS (Alternate Line Service), it may appear with the number of the current line, such as , , and .



Appears when Silent mode is active or when you set the phone to vibrate when you receive a call. For further details, see page 31 and page 141 respectively.



Appears when Mute mode is active.



Shows the level of your battery. The more bars you see, the more power you have remaining.

Backlight

The backlight illuminates the display and the keypad. When you press any key or open the phone, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on your setting in the **Back light** menu. The display turns off after one minute to conserve battery power.

To specify the length of time the backlight is active, set the **Back light** menu. See page 139 for further details.

External Display

Your phone has an external display on the front of the phone. It indicates when you have an incoming call or a message. It also alerts you at a specified time when you have set an alarm. The backlight turns on and the corresponding icon appears on the external display.

The external display turns off about 15 seconds after you close the phone. To turn on the display, press and hold either of the Volume keys.

With the phone closed, you can take photos using the external display by pressing and holding the Camera key on the right side of the phone. See page 109.

Service Lights

The service lights are on the front of the phone. They flash when services are available on the phone.

To activate or deactivate the service lights, set the **Service light** menu. See page 139 for further details.



Camera

The camera module on the front of your phone allows you to take a photo and record a video while on the move.

For further details about the Camera feature, see page 105.


Getting Started


Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available, and so on.

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.

Keep all SIM cards out of the reach of small children.


1. If necessary, switch off the phone by holding down the  key until the power-off image displays.
2. Remove the battery. To do so:
 - ① Pull the battery lock toward the top of the phone and hold it in that position.
 - ② Lift away the battery, as shown.

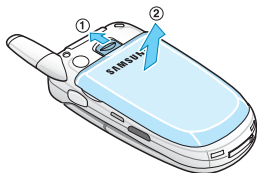


Getting Started

- Slide the SIM card into the SIM card socket, as shown, so that the card locks into position.


Make sure that the metal contacts of the card face into the phone.

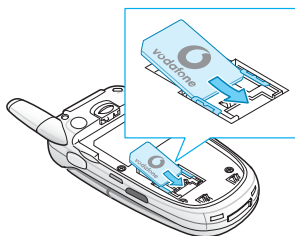


Note: When you need to remove the SIM card, slide it upward, as shown, and take it out of the socket.

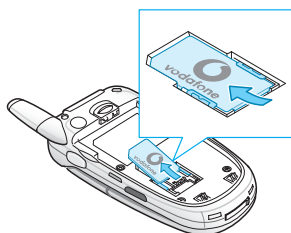

- Replace the battery so that the tabs on the end align with the slots at the bottom of the phone.

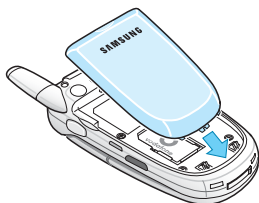

5. Press the battery down until it clicks into place. Make sure that the battery is properly installed before switching on the power.

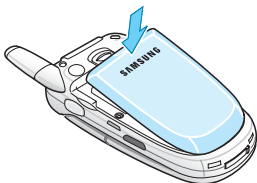


Charging the Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

The travel adapter allows you to use the phone while the battery is charging, but this causes the phone to charge more slowly.


Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 200 minutes.

1. With the battery in position on the phone, plug the connector of the travel adapter into the jack at the bottom of the phone.

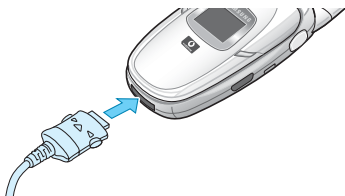

Getting Started

2. Plug the adapter into a standard AC wall outlet.
3. When charging is finished, unplug the adapter from the power outlet, and then disconnect it from the phone by pressing the buttons on both sides of the connector and pulling the connector out.

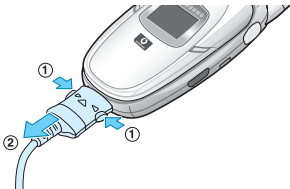


Note: You must unplug the adapter before removing the battery from the phone during charging; otherwise, the phone could be damaged.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and a message repeats at regular intervals on the display. If this happens, your phone will turn off the backlight to conserve the remaining battery power.

When the battery level becomes too low, the phone automatically turns off.

Switching On or Off the Phone


1. Open the phone.
2. Press and hold the  key until the phone switches on.
3. If the phone asks you to enter a password, enter a password and press the **Ok** soft key or the Centre key.

The phone password is preset to “00000000” at the factory. For further details, see page 161.

4. If the phone asks for a PIN, enter the PIN and press the **Ok** soft key or the Centre key. For further details, see page 162.


The phone searches for your network and, after finding it, the idle screen appears on the display. Now, you can make or receive a call.

Note: The display language is preset to English at the factory. To change the language, use the **Language** menu. For further details, see page 135.

5. When you wish to switch off the phone, press and hold the  key until the power-off image displays.


Call Functions

Making a Call

When the idle screen displays, enter the area code and phone number, then press the  key.

Note: When you activate the **Auto redial** option in the **Extra settings** menu, the phone will automatically redial up to ten times when the person does not answer the call or is already on the phone. See page 137 for further details.


Making an International Call

1. Press and hold the **0** key.
The **+** character appears.
2. Enter the country code, area code and phone number and press the  key.

Correcting the Number

To clear	Press the
the last digit displayed	C key.
any other digit in the number	Left or Right key until the cursor is immediately to the right of the digit to be cleared and press the C key. You can also insert a missing digit.
the whole display	C key and hold it for more than one second.



Ending a Call


When you want to end your call, briefly press the  key or close the phone.

Redialling the Last Number

The phone stores the numbers of the calls you've dialled, received, or missed, if the call recipient or the caller is identified. See "Call log" on page 127 for further details.

To recall any of these numbers:

1. If you have typed characters on the display, press the  key to return to Idle mode.
2. Press the  key to display a list of the most recent numbers used in the order you dialled or received them.
3. Use the Up and Down keys to scroll through the numbers until the number you want highlights.

4. To	Press the
dial the number	 key.
view the number in Edit mode	Centre key, or press the Options soft key and select View .
delete the number	Options soft key and select Delete .
delete all of the numbers on the Call log list	Options soft key and select Delete all . For details, see page 129.

Making a Call from the Contacts List

You can store the phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called Contacts.

Once you have stored a number in Contacts, you can dial it by pressing a few keys. You can also assign your most frequently-used numbers to number keys using the Speed Dial feature.




For further details about the Contacts feature, see page 121.

Storing a Number in Idle Mode

As soon as you start to enter a number, **Save** appears above the left soft key to allow you to store the number in Contacts.

1. Enter the number you want to store.

Note: If you make a mistake while entering a number, correct it using the **Clear** soft key or the **C** key. For further details, see page 22.

2. When you are sure that it is correct, press the **Save** soft key or the Centre key.
3. Select an icon to identify the category in which the number is to be stored. Three categories are available:
 -  : Mobile phone number
 -  : Office number
 -  : Home number

To select the category, press the Left or Right key and press the **Select** soft key or the Centre key.

- Select a memory location, either **SIM** or **Phone**, by pressing the Up or Down key and press the **Select** soft key or the Centre key.



Note: When you change phones, any numbers stored in your SIM card memory are automatically available with the new phone, whereas any numbers stored in the phone's memory will need to be reentered.

- Enter a name and press the **Ok** soft key or the Centre key.

For further details about how to enter characters, see page 34.

- If you do not want to save the number and name in the suggested location, press the **Clear** soft key or the **C** key to clear the location number and enter another location by pressing the numeric keys.
- Press the **Ok** soft key or the Centre key to store the name and number.

After storing, the phone displays the name and number you just stored.

8. To	Press the
use the entry options	Options soft key. For further details, see page 122.
dial the number	Centre key or the  key.
return to the idle screen	 key.

Dialling a Number from Contacts

Once you have stored phone numbers in Contacts, you can dial them easily and quickly by using the location numbers that were assigned to them in Contacts.

Note: If you can't remember a location number, you must go into the **Contacts list** menu to search for the entry by name. See page 121.

To dial a number from the SIM card:

1. In Idle mode, enter the location number for the phone number you want to dial and press the **#** key.

The list of the entries in the SIM card appears.

2. You can press the Up or Down key to find other numbers on the list.
3. Press the **Dial** soft key, the **↵** key, or the Centre key when you have selected the number you want.

To dial a number from the phone's memory:

1. In Idle mode, press and hold the **0** key. A **+** appears.
2. Enter the location number for the phone number you want to dial and press the **#** key.


The list of the entries in the phone's memory appears.

3. You can press the Up or Down key to find other numbers on the list.
4. Press the **Dial** soft key, the **↵** key, or the Centre key when you have selected the number you want.

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

Press the ▲ key to increase the volume level and the ▼ key to decrease the level.

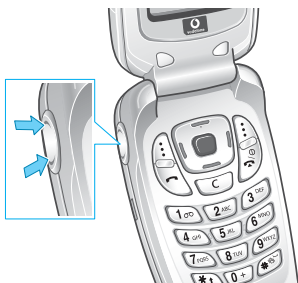



In Idle mode, you can also adjust the keypad tone volume using these keys.

Answering a Call


When somebody calls you, the phone rings and displays the incoming call image.


The caller's phone number or name, if stored in Contacts, displays.

1. If necessary, open the phone. Press the  key or the **Accept** soft key to answer the incoming call.

When the **Anykey answer** option in the **Extra settings** menu is activated, you can press any key to answer a call except for the  key and the **Reject** soft key. See page 137.

When the **Active folder** option in the **Extra settings** menu is activated, you can answer the call simply by opening the phone. See page 137.

Note: To reject the call, press and hold one of the Volume keys before opening the phone, or press the **Reject** soft key or  key.

2. End the call by closing the phone or pressing the  key.

Note: You can answer a call while using Contacts or menu features. After ending the call, the display returns to the function screen you were using.

Viewing Missed Calls


When you are unable to answer a call for any reason, you can find out who called you so that you can call the person back.

The number of calls you have missed displays on the idle screen immediately after a call is missed.

To view a missed call immediately:

1. If the phone is closed, open it.
2. Press the **View** soft key or the Centre key.

The number for the most recent missed call displays, if available.

3. To	Press the
scroll through the missed calls	Up or Down key.
call the number displayed	 key.
edit or delete a missed call number	Select soft key or the Centre key. See below.

Editing a Missed Call Number


Note: When the number for the missed call is unavailable, the **View** option doesn't display.

1. Press the Centre key.

You can also press the **Options** soft key and then select the **View** option using the Up or Down key.


Call Functions

2. Press the **Select** soft key or the Centre key.
3. Change the number.

4. To	Press the
call the number	 key.
store the number	Save soft key or the Centre key, and enter a name and a location number. For further details, see page 24.

Deleting a Missed Call


1. Press the **Options** soft key.
2. If necessary, press the Up or Down key to highlight the **Delete** option.
3. Press the **Select** soft key or the Centre key.

You can press the  key at any time to exit the Missed call feature.

Note: You can access the Missed call feature at any time by selecting the **Missed calls** menu. For further details, see page 127.


Quickly Switching to Silent Mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theatre for example.

In Idle mode, press and hold the **#** key until the “Silent mode” message and the Vibration icon () display.

In Silent mode, your phone changes the sound settings as follows:



Sound Items	New Setting
Alert type	Vibration
Keypad tone	Off
SMS/MMS tone	Light + Vibration
SMS-CB tone	Light only
Folder tone	Off
Power off tone	Off
Extra tones	Off

To exit and reactivate the previous sound settings, press and hold the **#** key again until “Exit silent mode” appears. The Vibration icon () no longer displays.

Notes:

- When you turn off the phone, Silent mode is automatically deactivated.
- Activating Silent mode will not turn off the camera shutter sound.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customise it. These functions are arranged in menus and sub-menus, accessed using the two soft keys,  and . Each menu and sub-menu allows you to view and alter the settings of a particular function.

Using the Soft Keys

The roles of the soft keys vary, depending on the function you are currently using; the labels on the bottom line of the display just above each key indicate their current role.

Example:




Press the left soft key to access the **Messages** menu.

Press the right soft key to launch the WAP (Wireless Application Protocol) browser.

Selecting Options

To view the various functions and options available and to select the one you want:

1. Press the appropriate soft key.

2. To	Press the
select the: <ul style="list-style-type: none"> • function displayed • option highlighted 	Select soft key or the Centre key.
view the next function or highlight the next option on a list	Down key or the ▼ key on the left side of the phone.
move back to the previous function or option on a list	Up key or the ▲ key on the left side of the phone.
move back up one level in the menu structure	Back soft key or the C key.
exit the menu structure without changing the settings	 key.

In some functions, you may be asked for a password or PIN. Enter the code and press the **Ok** soft key or the Centre key.

Note: When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

Entering Text

When using your phone, you will often need to enter text, such as when storing a name in Contacts, writing a message, creating your personal greeting, or scheduling events on your calendar. You can enter alphanumeric characters by using the phone's keypad.

Your phone has the following text input modes:

- **Alphabet mode**

This mode allows you to enter letters by pressing the key labelled with the letter you want. Press the key once, twice, three, or four times until it displays.

- **T9 mode**

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing the **5** key once can enter, J, K, or L. T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional Alphabet mode.

- **Number mode**

This mode allows you to enter numbers.


- **Symbol mode**

This mode allows you to enter various symbols and special characters.

Changing the Text Input Mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

Example: Writing an SMS (Short Message Service) message

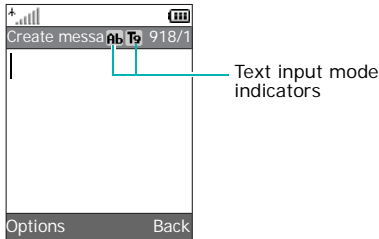

1. Press and hold the * key to switch between Alphabet mode and T9 mode.

In T9 mode, **T9** appears on the menu title bar. In Alphabet mode, no indicator appears.

2. Press the * key to switch to the following modes:

Mode	Indicator
Initial Capital mode	Ab displays.
Capital Lock mode	AB displays.
Lower Case mode	ab displays.
Number mode	1 displays.
Symbol mode	S displays.

Note: Additional text input modes may be available, depending on your country.

Using Alphabet Mode

Use the **1** to **0** keys to enter your text.

1. Press the keys labelled with the letter you want:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. Select the other letters in the same way.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Refer to the table below for further details about the available characters:

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	. , - ? ! @ : () / 1	
2	A B C 2 Ä Å Æ Ç Γ	a b c 2 à ä å æ Γ
3	D E F 3 É Δ Φ	d e f 3 è é Φ
4	G H I 4 Θ Ψ	g h i 4 ì Ψ
5	J K L 5 Λ	j k l 5 λ
6	M N O 6 Ñ Ø Ö ö	m n o 6 ñ ø ò ö
7	P Q R S 7 Π Σ Ξ	p q r s 7 β Σ Ξ
8	T U V 8 Ü ü	t u v 8 ù ü
9	W X Y Z 9 Ω	w x y z 9 ω
0	+ = < > € £ \$ % & ¥ ¤ 0	

Note: The characters available in Alphabet mode may be different, depending on your country.

- To insert a space, press the **#** key.
- You can move the cursor by pressing the Navigation keys. To delete letters, press the **Clear** soft key or the **C** key. Press and hold either of them to clear the display.

Using T9 Mode

T9 is a predictive text input mode that allows you to enter any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the keys **2** to **9**. Press each key only once for each letter.

Example: To enter "Hello" in T9 mode, press the **4**, **3**, **5**, **5**, and **6** keys.

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

If the word doesn't display correctly, press the **0** key, or the Up or Down key repeatedly to display alternative word choices for the keys that you have pressed.

Example: Both "Of" and "Me" use the **6** and **3** keys. The phone displays the most commonly used choice first.

Entering Text

4. Put a space by pressing the **#** key and start entering the next word.

To add a new word into the T9 dictionary:

1. After pressing the keys corresponding to the word you want to add, press the **O** or Down key to display the alternative words.
2. When there are no more alternative words, the display shows **Add** on the bottom line. Press the **Add** soft key or the Centre key.
3. If necessary, clear the word using the **Clear** soft key or the **C** key and enter the word you want to add using Alphabet mode. See page 36.
4. Press the **Ok** soft key.

The word is added to the T9 dictionary and becomes the first word for the associated keypress series.

Note: This feature may not be available for some languages.

- To enter periods, hyphens, or apostrophes, press the **1** key. T9 mode applies grammar rules to ensure that correct punctuation is used.
- You can move the cursor by using the Left and Right keys. To delete letters, press the **Clear** soft key or the **C** key. Press and hold either of them to clear the display.

Using Number Mode

Number mode enables you to enter numbers into an SMS message. Press the keys corresponding to the digits you want to enter.

Using Symbol Mode

Symbol mode enables you to insert symbols into an SMS message.

To	Press the
select a symbol	corresponding numeric key.
display more symbols	Up or Down key.
insert the symbol(s) into your message	Ok soft key or the Centre key.
clear the symbol(s)	Clear soft key or the C key. When the input field is empty, pressing this key returns the display to the previous mode.
cancel your input and exit Symbol mode.	Back soft key.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Putting a Call on Hold


You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

To place a call on hold, simply press the **Hold** soft key. You can reactivate the call whenever you want, by pressing the **Unhold** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in Contacts.

For details about searching for a number in Contacts, see page 121.

2. Press the  key to dial the second call.

The first call is automatically put on hold.


Alternatively,

1. Put the current call on hold by pressing the **Hold** soft key.
2. Make the second call in the normal way.

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

To switch between the two calls, simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with that person.

When you want to finish, end each call normally by pressing the  key.

Using the Menu Functions

You can access the main menu functions during a call.

1. Press the Centre key.

You can also press the **Options** soft key and then press the **Ok** soft key or the Centre key when the **Menu** option highlights.

2. Press the Up or Down key to scroll through the menu list.

Note: You cannot use some menus during a call. They are deactivated on this list.

3. When the menu you want highlights, press the **Select** soft key or the Centre key.
4. If the selected menu has sub-options, repeat steps 2 and 3.

For further details about available menu functions, see the list on page 50.

Switching Off the Microphone (Mute)

You can temporarily switch your phone's microphone off so that the other person on the phone cannot hear you.

Example: You wish to say something to a person in the room, but do not want the person on the phone to hear you.

To switch off the microphone temporarily:

1. Press the **Options** soft key.
2. Press the Down key to highlight the **Mute** option.
3. Press the **Ok** soft key or the Centre key.

The other person can no longer hear you.

To switch back off the microphone:

1. Press the **Options** soft key.
2. If necessary, press the Down key to highlight the **Unmute** option.
3. Press the **Ok** soft key or the Centre key.

The other person can hear you again.

Muting or Sending Key Tones

The **Mute keys** and **Send keys** options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerised telephone systems, the **Send keys** option must be selected.

Sending a Sequence of DTMF Tones

You can send the DTMF tones as a group after entering the entire number you need to send.

This option is helpful for entering a password or an account number when you call an automated system, like a banking service.

To send the DTMF tones:

1. While connected to the teleservice system, press the **Options** soft key.
2. Press the Down key to highlight the **Send DTMF** option.
3. Press the **Ok** soft key or the Centre key.
4. Enter the number you want to send and press the Centre key.

The tones are sent.

Searching for a Number in Contacts

You can search for a number in Contacts during a call.

1. Press the **Options** soft key.
2. Press the Down key to highlight the **Contacts** option.
3. Press the **Ok** soft key or the Centre key.

The Contacts entries are listed.

4. Enter the name that you wish to find.

If you enter the first few letters of the name, the Contacts entries are listed starting with the first entry matching your input.


5. To view the highlighted entry, press the **View** soft key or the Centre key.


For further details about the Contacts feature, see page 121.

Call Waiting

You can answer an incoming call while you have a call in progress, if your network supports this service and you have set the **Call waiting** menu to **Activate**; see page 148. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press the  key to answer the incoming call.
The first call is automatically put on hold.
2. To switch between the two calls, press the **Swap** soft key.
3. To end the call on hold, press the **Options** soft key and select the **End held call** option.

To end the current call, press the  key.

Making a Multi-party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call. For further details about subscribing to this service, contact your service provider.

Setting up a Multi-party Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way.

The first call is automatically put on hold.

Options During a Call


3. To join the first participant to the multi-party call, press the **Options** soft key and select the **Join** option. Press the **Ok** soft key or the Centre key.
4. To add a new person to the multi-party call, call the new person in the normal way and press the **Options** soft key. Select the **Join** option and press the **Ok** soft key or the Centre key.

You can add incoming callers by answering the call, pressing the **Options** soft key, and selecting the **Join** option. Repeat as required.

Having a Private Conversation with One Participant

1. Press the **Options** soft key and choose the **Select one** option. Press the **Ok** soft key or the Centre key.

The list of call participants appears.

2. Highlight a person from the list by pressing the Up or Down key and press the  key.
3. When the **Private** option highlights, press the **Ok** soft key or the Centre key.

Now, you can talk privately to that person. The other participants can still converse with each other.


4. To return to the multi-party call, press the **Options** soft key and select the **Join** option. Press the **Ok** soft key or the Centre key.

All the multi-party call participants can now hear each other.


Dropping One Participant

1. Press the **Options** soft key and choose the **Select one** option. Press the **Ok** soft key or the Centre key.

The list of call participants appears.

2. Highlight a person from the list by pressing the Up or Down key and press the  key.
3. Press the Down key to select the **Remove** option and press the **Ok** soft key or the Centre key.

The call with that participant ends, but you can continue to talk to the others.

4. When you want to end the multi-party call, close the phone or press the  key.

Using the Menus

The phone offers a range of functions that allow you to tailor it to your needs. These functions are arranged in menus and sub-menus.


The menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Idle mode, press the Centre key to access Menu mode.
2. Scroll using the Navigation keys to reach a main menu, **Settings** for example. Press the **Select** soft key or the Centre key to enter the menu.
3. Scroll using the Up or Down key to reach a menu, **Phone settings** for example. Press the **Select** soft key or the Centre key to enter the menu.
4. If the menu contains sub-menus, **Language** for example, you can access them by scrolling using the Up or Down key and pressing the **Select** soft key or the Centre key.

If the menu that you have selected contains further options, repeat this step.

5. To	Press the
scroll through the menus	Up or Down key, or use the Volume keys.
confirm the chosen setting	Select soft key or the Centre key.

5. To	Press the
return to the previous menu level	Back soft key or the C key.
exit the menu without changing the settings	 key.

Using Shortcuts

Menu items, such as menus, sub-menus and options, can be accessed quickly by using their shortcut numbers. For the main menus, you can access any one of them by pressing the number keys (**1** to **9**) corresponding to their location on the screen.

Press the Centre key and enter the number of the menu you want.

Notes:

- The numbers assigned to each menu are indicated on the list on page 50.
- For menu numbers 10 and 11, use the **0** and ***** keys respectively.

Example: Accessing the **Language** menu.

1. Press the Centre key.
2. Press the **9** key for **Settings**.
3. Press the **1** key for **Phone settings**.
4. Press the **3** key for **Language**.

The languages available display.

List of Menu Functions

The following list shows the menu structure available and indicates the number assigned to each option and the page where you can find a description of each feature.

- 1. Games & more** (see page 56)
 - 1.1 Saved applications
 - 1.2 More games
 - 1.3 DNS settings

- 2. Vodafone live!** (see page 60)
 - 2.1 Vodafone live!
 - 2.2 Enter URL
 - 2.3 Bookmarks
 - 2.4 What's new
 - 2.5 Games
 - 2.6 Ringtones
 - 2.7 Pictures
 - 2.8 News
 - 2.9 Browser settings
 - 2.10 Clear cache

- 3. Applications** (see page 69)
 - 3.1 Vodafone
 - 3.2 Alarms
 - 3.2.1 Once alarm
 - 3.2.2 Daily alarm
 - 3.2.3 Morning call
 - 3.2.4 Remove all alarms
 - 3.2.5 Autopower
 - 3.3 Calculator
 - 3.4 To do list
 - 3.5 Voice recorder
 - 3.5.1 Record
 - 3.5.2 My sounds
 - 3.5.3 Delete all
 - 3.5.4 Memory status
 - 3.6 Currency converter

- 4. Messages** (see page 77)
 - 4.1 Create message
 - 4.1.1 MMS
 - 4.1.2 SMS
 - 4.1.3 MMS postcard
 - 4.2 Inbox
 - 4.2.1 MMS
 - 4.2.2 SMS
 - 4.3 My messages
 - 4.3.1 Drafts
 - 4.3.1.1 MMS Drafts
 - 4.3.1.2 SMS Drafts
 - 4.3.1.3 MMS postcard
 - 4.3.2 Outbox
 - 4.3.2.1 MMS
 - 4.3.2.2 MMS postcard
 - 4.3.3 Templates
 - 4.3.3.1 MMS templates
 - 4.3.3.2 SMS templates
 - 4.3.4 Cell broadcast
 - 4.3.4.1 Read
 - 4.3.4.2 Receive
 - 4.3.4.3 Channel list
 - 4.3.4.4 Language
 - 4.4 Call voicemail
 - 4.4.1 Connect to voice server
 - 4.4.2 Voice server number
 - 4.5 live! Studio
 - 4.6 Vodafone mail
 - 4.7 Vodafone messenger
 - 4.8 Push messages
 - 4.8.1 Inbox
 - 4.8.2 Receive
 - 4.8.3 Delete all
 - 4.9 Message settings
 - 4.9.1 MMS settings
 - 4.9.2 MMS profiles
 - 4.9.3 SMS settings
 - 4.10 Memory status
 - 4.10.1 MMS
 - 4.10.2 SMS

4. Messages (continued)

- 4.11 Delete all
 - 4.11.1 MMS
 - 4.11.2 SMS
 - 4.11.3 MMS postcard

5. Camera (see page 105)

- 5.1 Take photo
- 5.2 Record video
- 5.3 My photos
- 5.4 My videos

6. My items (see page 113)

- 6.1 Pictures
 - 6.1.1 My photos
 - 6.1.2 Saved pictures
 - 6.1.3 Download more
- 6.2 Games
 - 6.2.1 Saved games
 - 6.2.2 Download more
- 6.3 Sounds
 - 6.3.1 My sounds
 - 6.3.2 Saved sounds
 - 6.3.3 Download more
- 6.4 My videos
- 6.5 Templates
 - 6.5.1 MMS templates
 - 6.5.2 SMS templates
- 6.6 Memory status
 - 6.6.1 Games
 - 6.6.2 Sounds & images
 - 6.6.3 Photos & videos

7. Calendar (see page 118)

8. Contacts (see page 121)

- 8.1 Contacts list
- 8.2 Create contact
- 8.3 Group search
- 8.4 Group edit
- 8.5 Call log
 - 8.5.1 Missed calls
 - 8.5.2 Received calls
 - 8.5.3 Dialed calls
 - 8.5.4 Delete all
 - 8.5.5 Call time
 - 8.5.6 Call costs*
 - 8.5.7 Data counter
- 8.6 Speed dial list
- 8.7 My numbers
- 8.8 Memory status

9. Settings (see page 134)

- 9.1 Phone settings
 - 9.1.1 Activate infrared
 - 9.1.2 Greeting message
 - 9.1.3 Language
 - 9.1.4 Shortcuts
 - 9.1.4.1 Key up
 - 9.1.4.2 Key down
 - 9.1.4.3 Key right
 - 9.1.4.4 Key left
 - 9.1.5 Extra settings
 - 9.1.6 Reset settings
- 9.2 Display settings
 - 9.2.1 Main display
 - 9.2.1.1 Wallpaper
 - 9.2.1.2 Text display
 - 9.2.1.3 Text colour
 - 9.2.2 Front LCD display
 - 9.2.3 Menu style
 - 9.2.4 Back light
 - 9.2.5 Service light
 - 9.2.6 Graphic logo

* Shows only if supported by your SIM card.

9. Settings (continued)

9.3 Sound settings

- 9.3.1 Ringtone
- 9.3.2 Ring volume
- 9.3.3 Alert type
- 9.3.4 Keypad tone
- 9.3.5 Message tone
 - 9.3.5.1 SMS tone
 - 9.3.5.2 SMS-CB tone
 - 9.3.5.3 MMS tone
 - 9.3.5.4 Repetition
- 9.3.6 Folder tone
- 9.3.7 Power on/off
- 9.3.8 Alert on call
- 9.3.9 Extra tones

9.4 Call settings

- 9.4.1 Call diverting
 - 9.4.1.1 Divert always
 - 9.4.1.2 Busy
 - 9.4.1.3 No reply
 - 9.4.1.4 Unreachable
 - 9.4.1.5 Cancel all
- 9.4.2 Call barring
 - 9.4.2.1 All outgoing
 - 9.4.2.2 International
 - 9.4.2.3 International except home
 - 9.4.2.4 All incoming
 - 9.4.2.5 Incoming while abroad
 - 9.4.2.6 Cancel all
 - 9.4.2.7 Change barring password
- 9.4.3 Call waiting
- 9.4.4 Caller ID
 - 9.4.4.1 Default
 - 9.4.4.2 Hide number
 - 9.4.4.3 Show number

9. Settings (continued)

- 9.4.5 Closed user group
 - 9.4.5.1 Index list
 - 9.4.5.2 Outside access
 - 9.4.5.3 Default group
 - 9.4.5.4 Deactivate*
- 9.5 Time & date
 - 9.5.1 Set time
 - 9.5.2 Set date
 - 9.5.3 World time
 - 9.5.4 Time format
 - 9.5.5 Display options
- 9.6 Network selection
 - 9.6.1 Automatic
 - 9.6.2 Manual
- 9.7 Security
 - 9.7.1 PIN check
 - 9.7.2 Change PIN
 - 9.7.3 Phone lock
 - 9.7.4 Change password
 - 9.7.5 Privacy
 - 9.7.6 SIM lock
 - 9.7.7 FDN mode**
 - 9.7.8 Change PIN2**

* Shows when the closed user group feature is activated.

** Shows only if supported by your SIM card.

Games & more

In this menu, you can:

- enjoy downloaded MIDlets (Java applications that run on mobile phones).
- download applications from the web site provided by your service provider.
- change the DNS (Domain name server) settings required for accessing Java services, if necessary.

Saved applications

When you access this menu, the list of default games appears. Once you have downloaded games, they are added to the list.

Launching a MIDlet


Note: The procedure explained below are for the default games. For downloaded games, the procedure may be different.

1. Scroll to the MIDlet you want on the Games list and press the Centre key.
2. On the startup screen of the MIDlet, scroll to an option using the Navigation keys or the **2**, **4**, **6**, and **8** keys.

The following options are available:

- **START GAME:** starts a new game.
- **CONTINUE:** allows you to continue the last game you played, if you were interrupted during the game.

- **HIGH SCORE:** shows the high score table. This option may not be available for some games.
 - **HOW TO PLAY:** shows how to play the game and the key functions for the game.
 - **OPTION:** allows you to switch on or off the game sound.
3. Press the **5** key or the Centre key to confirm your selection.

While you are playing a game, to	Press the
adjust the sound volume	Volume keys.
stop the game and return to the startup screen	C key.
exit the game	 key.

Viewing MIDlet Information

1. Scroll to the MIDlet you want and press the **Info** soft key.

The display shows information about the MIDlet, such as the file size, application version, its vendor, and Java VM version. You can also check if the MIDlet can be deleted.

2. Press the Up or Down key to scroll through the information screen.
3. Press the Left or Right key to scroll to other MIDlet information.

4. If you want to delete the MIDlet, press the **Delete** soft key and then press the **Yes** soft key or the Centre key to confirm the deletion.
5. To exit and return to the Games list, press the **Back** soft key or the **C** key.

Entering Text

If you need to enter text while using a MIDlet, you can use the following input modes:

Upper-case character mode (A): allows you to enter upper-case English characters.

Lower-case character mode (a): allows you to enter lower-case English characters.

Number mode (1): allows you to enter numbers.

Symbol mode (S): allows you to enter symbols. After highlighting a symbol by pressing the Navigation keys, press the Centre key to insert it.

T9 mode (T9): allows you to enter English characters by pressing one key per letter.

To change the text input mode, see page 35.

More games

When you select this menu, you are accessed to the web site preset by your service provider and you can download more Java games.

Note: Downloading Java applications may not be available, depending on your service provider.

DNS settings

The DNS (Domain Name Server) is the server that assigns the Java server domain name to an IP address. The DNS setting is preset at the factory, but sometimes you may need to change it at your service provider's instructions.

1. Enter the primary address using the number keypad and press the **Ok** soft key or the Centre key.
2. Enter the secondary address and press the **Ok** soft key or the Centre key.

Vodafone live!

Your phone is equipped with a WAP (Wireless Application Protocol) browser to allow you to access and navigate the Wireless Web using your phone.


Vodafone live!

Selecting this menu connects the phone to the network and loads the homepage of the Wireless Web service provider. You can also press the **live!** soft key in Idle mode to launch the browser.

The contents of the WAP Browser startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the Up and Down keys.

Note: To go to the startup homepage from any other screen in the WAP browser, use the **Home** option. For further details about the WAP Browser menus, see page 62.

Exiting the WAP Browser

To exit the browser at any time, simply press and hold the  key.

Navigating the WAP Browser

To	Press the
scroll through and select browser items	Up or Down key and then press the Select soft key or the Centre key to confirm the selection.
return to the previous page	Back soft key or the C key.
use the Browser menu options	* key for more than 2 seconds. For further details about this option, see page 62.

Entering Text in the WAP Browser

When you are prompted to enter text, the currently active text input mode is indicated on the screen.

To change the text input mode, press the Centre key one or more times.

The following modes are available:

Upper-case character mode (A): allows you to enter upper-case English characters.

Lower-case character mode (a): allows you to enter lower-case English characters.

Note: You can enter symbols and punctuation marks in Upper-case or Lower-case Character mode. For details about available characters, see page 36.

T9 mode (T9): allows you to enter English characters by pressing one key per letter. In this mode, you can use only the **0** key to display alternative words. To change case, press and hold the * key.

Number mode (1): allows you to enter numbers.

Selecting and Using Browser Menu Options

Various menu options are available when you are using the WAP browser to navigate the Wireless Web.

To access a menu option:

1. Press and hold the * key.
A menu list displays.
2. Highlight a menu by pressing the Up or Down key.
3. Select an option by pressing the **Select** soft key or the Centre key.
4. If necessary, select a secondary option using the Up or Down keys, and press the **Select** soft key or the Centre key to confirm.

Note: The menus may vary, depending on your version of the WAP browser.

The following options are available:

Bookmarks: shows the bookmarks list. You can bookmark the current web page or access one of bookmarked pages.

Reload: reloads the current page.

Home: takes you back at any time to the home page of the Wireless Web service provider.

Go to URL: allows you to manually enter the URL address of a Web page. After entering an address, press the **Ok** soft key to go there directly.

Show URL: displays the URL address of the Web page to which you are currently connected. It also enables you to set the current site as the startup home page.

To	Press the
set the current page as your startup home page	Options soft key and select the Save to home option.
set a bookmark for the current page	Options soft key and select the Save to bookmark option.
cancel your setting	Back soft key.

Clear cache: deletes the information stored in the cache. The cache stores the most recently accessed Web pages.

Security info: shows security information when you access the wireless web with the secured WAP setting activated.

Inbox: allows you to read messages received from a web server.

Show images: shows the image on the current web page.

Enter URL

This menu allows you to manually enter the URL address of a web site that you wish to access.

For further details about how to enter characters, see page 34.

After entering the address, press the **Ok** soft key to access the web site.

Bookmarks

This menu allows you to store the up to 13 URL addresses of your favourite web sites. The first bookmark item is a default link preset by your service provider. You can change or delete the item.

Note: You can access this menu directly by pressing and holding the ✖ key while using the WAP browser.

To store a URL address:

1. Select an empty location and press the **Edit** soft key.
2. Enter the address and press the **Ok** soft key or the Centre key.

For further details about how to enter characters, see page 34.

3. Enter a name for the item and press the **Ok** soft key or the Centre key.

To access a web site of a bookmark, select a bookmark item and press the Centre key.

After saving an item, you can access the following options by pressing the **Options** soft key:

Go to URL: takes you to the site.

Edit: allows you to edit the address and the name of the bookmark.

Delete: deletes the bookmark.

What's new

Selecting this menu loads the web site preset by your service provider so that you can obtain information about your service provider's latest offerings, such as downloads, pricing plans, entertainment, technical help, and customer services.

Games

Selecting this menu loads the web site preset by your service provider so that you can obtain information about the latest games and download a variety of games.

Ringtones

Selecting this menu loads the web site preset by your service provider so that you can download a variety of ring tones and melodies.

Note: You may not be able to download some ring tones if they are not in the correct file format.

Pictures

Selecting this menu loads the web site preset by your service provider so that you can download a variety of pictures and animated images.

Note: You may not be able to download some pictures if they are not in the correct file format.

News

Selecting this menu loads the web site preset by your service provider so that you can obtain latest news or press releases on your service provider.

Browser settings

This menu allows you to set up four proxy servers for the WAP browser. Contact your service provider for details about your browser setting options.

Notes:

- The last profile accessed is automatically selected for connecting to the Wireless Web.
- Depending on your country, the availability of the setting options may vary.

For each server, the following options are available:

Profile name: enter a name that you wish to assign to the HTTP server.

Homepage URL: set the address of your startup homepage. When the default homepage displays, you can delete it using the **Clear** soft key or the **C** key and enter your own choice.

Security: select a data transmission mode. Choose **Secure** to protect your data against unauthorised access; otherwise, choose **Non-secure**.

Bearer: select a bearer to be used for each type of network address accessed; **GPRS**, **Data**, or **GPRS preferred**.

When you select **GPRS preferred**, the phone searches for a GPRS network first. If a GPRS network is not available, the phone uses a GSM (Data) network.

The remaining options depend on the Bearer setting.

When the bearer is set to **GPRS** or **GPRS preferred**:

IP address: enter the WAP gateway address required to connect to the Internet.

User name: enter the User ID required to connect to the GPRS network.

Password: enter the password required to connect to the GPRS network.

APN: enter the access point name used for the address of the GPRS network gateway.

When the bearer is set to **Data**:

IP address: enter the WAP gateway address required to connect to the Internet.

Login name: enter the PPP server login ID.

Password: enter the PPP server password.

Dial-up number: enter the PPP server phone number.

Data call type: select a data call type; **Analogue** or **ISDN**.

Note: The WAP browser settings may vary, depending on the service provider. Contact your service provider for further details.

Clear cache

You can clear the information stored in the cache, the phone's temporary memory in which the most recently accessed web pages are stored.

Press the **Yes** soft key or the Centre key to confirm the deletion. Otherwise, press the **No** soft key.

Applications

In this menu, you can use the various applications which provides you with convenient features.

Vodafone

This menu is available if you use a SIM AT card that provides additional services, such as news, weather, sports, entertainment, and location services. Available services may vary, depending on your service provider's service plans.

For further details, see your SIM card instructions or contact your service provider.

Alarms

This feature allows you to:

- set the alarm to ring at a specific time.
- set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:

Once alarm: the alarm rings only once and is then deactivated.

Daily alarm: the alarm rings every day at the same time.

Morning call: the alarm rings to wake you up in the morning.

Applications

To set an alarm:


1. Choose the type of alarm to be set and press the **Select** soft key or the Centre key.
2. Enter the time for the alarm to sound.

Note: Your phone is preset to use a 24-hour format. To change the format, see page 152.

If you want to use the alarm options, press the **Options** soft key. The following options are available:

- **Set alarm:** sets the alarm.
- **Remove alarm:** deactivates the selected alarm.
- **Alarm tone:** allows you to select an alarm melody.

3. Press the Centre key.
4. If applicable, select **AM** or **PM** and press the **Select** soft key or the Centre key.
5. If you select **Morning call** in step 1, choose the repeat option, **Monday to friday** or **Monday to saturday**, and press the **Select** soft key or the Centre key.

To stop the alarm when it rings, press any of the **Exit** soft key, the Volume keys, and the  key. If the photo is closed, press either of the Volume keys.

Remove all alarms: deactivates all alarm settings.

Autopower: when this option is set to **Enable**, the alarm rings at the specified time, even if the phone is switched off.

If the option is set to **Disable** and the phone is switched off at the specified time, the alarm does not ring.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides basic arithmetic functions; addition, subtraction, multiplication, and division.

1. Enter the first number using the numeric keys.

Notes:

- You can move the cursor by pressing the **✕** or **#** key.
 - To include a decimal point or a bracket, press the left soft key until the symbol you want displays.
2. Enter the operation for your calculation by pressing the Navigation keys, according to the image on the display.
 3. Enter the second number.
 4. To view the result, press the Centre key.
 5. Repeat steps 1 to 4 as many times as required.

To do list

This feature allows you to:

- enter a list of tasks to be done.
- assign a priority and a deadline to each task.
- sort the tasks by priority and status.

Creating the To do list




1. Press the **Add new** soft key or the Centre key.
2. Enter the first task.

Note: For further details about how to enter characters, see page 34.

3. Press the **Ok** soft key or the Centre key.
4. Select a priority level of **High**, **Normal**, or **Low**, using the Up and Down keys and press the **Select** soft key or the Centre key.
5. Enter your deadline and press the Centre key.

If you don't want to set the deadline, press the **Skip** soft key.

Editing the To do list

When you select the **To do list** menu, the list of tasks displays with a status mark, if a task has been done, and priority level indicators;  for High,  for Normal, and  for Low.

Scroll to a task from the list and press the Centre key to view the details for the task. You can scroll through the tasks using the Up and Down keys, if necessary.

To change the status of a specific task as completed as of the current time and date, press the ✖ key to mark the task.

You can access the following options by pressing the **Options** soft key:

View: shows the details of a task.

Add new: allows you to create a new task.

Status: allows you to change the status of a task. Select the appropriate status, **Completed** or **To do**.

Edit: allows you to edit a task. You can change the text, priority, and/or deadline for the task.

Sort: allows you to sort the existing tasks by priority or status. Select the sort criterion, **High**, **Low**, **Completed**, or **To do**.

Copy: allows you to copy a task.

Copy to calendar: allows you to copy a task to the calendar as a memo. You can change the text and deadline for the task and/or set an alarm.

Delete: deletes a task.

Delete all: allows you to delete all tasks.

Voice recorder

You can record voice memos. After recording, you can send a memo to other people as a part of an MMS message.

Record

This menu allows you to record a new memo. When you select this menu, the display shows a 30-second timer.

1. To start recording, press the **Record** soft key or the Centre key.
2. Record a memo by speaking into the microphone.
3. When you press the **Stop** soft key or the Centre key, or if the recording time expires, the following options display:
 - **Play**: plays back your memo.
 - **Re-record**: discards the memo and enables you to record another one.
 - **Save**: allows you to save the memo.
4. To save the memo, choose **Save** and press the **Select** soft key or the Centre key.
5. Press the **Clear** soft key or the **C** key to clear the default name, if necessary, and enter a name for the memo.


For further details about how to enter characters, see page 34.

6. Press the **Ok** soft key or the Centre key.

The memo is saved and then the display shows the memo name and the time and date it was saved.

7. Press the **Options** soft key to access the following memo options:

- **Send MMS:** allows you to send the memo to other people by using the MMS feature. See page 77 for further details about sending a message.
- **Rename:** allows you to change the memo's name.
- **Delete:** deletes the memo.

8. To exit, press the **Back** soft key or the  key.

My sounds

This menu shows the list of saved voice memos. Scroll to a memo and press the Centre key to play the memo.

On the memo list, press the **Options** soft key to access the following options:

Play: plays the memo.

Send MMS: allows you to send the memo to other people by using the MMS feature. See page 77 for further details about sending a message.

Rename: allows you to change the memo name.

Information: displays detailed information about the memo.

Delete: allows you to delete the memo.

Delete all

In this menu, you can delete all of your voice memos.

When the display asks for confirmation, press the **Yes** soft key or the Centre key one or more times.

Memory status

You can check the amount of the memory being used and the memory remaining for voice memos.

The display shows the Total, Free, and Used memory amount, including the number of memos you recorded and the total number of memos you can record. Press the Up or Down key to scroll through the screen.

Currency converter

Using this menu, you can figure out currency conversions.

1. Enter the current exchange rate of your source currency and press the **Ok** soft key or the Centre key.

You can insert a decimal point by pressing the **#** key.

2. Enter the amount to convert and press the **Ok** soft key or the Centre key.

The amount you entered and its equivalent value display.


3. Press the **Exit** soft key to exit the currency convertor.

Messages

Using the **Messages** menu, you can use various message features, such as:

- SMS (Short Message Service) messages
- MMS (Multimedia Message Service) messages
- MMS postcards
- voice mail
- cell broadcast messages
- WAP push messages

You can also access online album, mail and messenger services given by your service provider.

Note: You can quickly access this menu by pressing the  soft key in Idle mode.

Create message

This menu allows you to create a new message.

MMS

Multimedia Message Service (MMS) is a messaging service that provides delivery of personal MMS messages from phone to phone or from phone to e-mail.

In addition to the familiar text content of SMS messages, MMS messages can contain images, graphics, voice, and audio clips. An MMS message is a multimedia presentation in a single file entry. It is not a text file with attachments.

Using the MMS feature, your phone can receive and send MMS messages that contain multimedia files, such as your photos, sounds and images you downloaded from the Internet, and voice memos you recorded. This function is available only if it is supported by your service provider.

Only phones that offer MMS messaging features can receive and display MMS messages.

Creating and Sending an MMS Message

1. Enter the subject of your message.

For further details about how to entering characters, see page 34.

By pressing the **Options** soft key, you can access the following options:

- **Ok:** confirms the entered subject and continues to the next step.
 - **Input method:** allows you to change the text input mode.
 - **Input language:** allows you to change the language to be used in T9 input mode.
2. Press the Centre key when you have finished entering the subject.
 3. When **Add here** highlights, press the **Options** soft key or the Centre key and add the message contents using one of the following options:
 - **Add text:** allows you to enter the message text. After entering text, press the Centre key.
 - **Add photo:** allows you to add a photo taken using the camera on your phone. You can take a new photo or select one of the photos stored in the phone's memory. For further details about using the camera, see page 105.

- **Add picture:** allows you to add a picture stored in the **Pictures** folder.
- **Add sound:** allows you to add a sound file. You can record a new voice memo or select one of voice memos or sounds stored in the phone's memory.
- **Send message:** allows you to send the message. Skip to step 7.
- **Save:** saves the message in the **MMS Drafts** or **MMS templates** box for later use.
- **Settings:** allows you to change the message settings. For further details about each setting option, see page 99. After changing the settings, you need to press the **Back** soft key or the **C** key to go back to the Options list.
- **Preview:** shows the entire message.

Notes:

- You can add text, an image and a sound once for each page.
 - You may not be able to add downloaded images or sounds if they are not in the correct file format.
4. Repeat step 2 until you have finished creating your message.
 5. If you want to change the added items, press the Up or Down key to highlight one and press the or **Options** soft key to display the Options list.

Note: The available options are different depending on whether the item you select on the message screen is text, an image, a sound or the Page field.

The following options are available:

- **Edit text/photo/picture/sound:** allows you to change the text or replace the image or sound with another one.
 - **Add page:** allows you to add up to 5 pages. After you add a page, the display shows you the current page number and memory space used for the page. You can move to each page using the Left and Right keys on the message screen.
 - **Delete, Delete photo, Delete picture, Delete sound:** deletes the selected item from your message.
 - **Duration:** allows you to set when and how long text, an image or a sound displays on the message presentation screen. If the duration you set is shorter than the content duration (for example, the length of sound clip) for a particular page, the content duration is automatically decreased.
 - **Send message:** allows you to send the message. Skip to step 7.
 - **Save:** saves the message in the **MMS Drafts** or **MMS templates** box for later use.
 - **Settings:** allows you to change the message settings. For further details about each setting option, see page 99.
 - **Preview:** shows the entire message.
6. When you are finished creating the message, choose **Send message** from the options and press the **Select** soft key or the Centre key.
 7. Select a destination type (**To**, **Cc**, or **Bcc**) and press the **Select** soft key or the Centre key.

8. Choose one of the following options and press the **Select** soft key or the Centre key:
 - **Contacts list**: allows you to retrieve a number or an e-mail address from your Contacts list.
 - **Phone number**: allows you to manually enter the phone number of the recipient.
 - **E-mail address**: allows you to manually enter the e-mail address of the recipient.
9. Enter a number or an e-mail address, or select a number from the Contacts list.
10. When the correct number or address displays, press the **Ok** soft key or the Centre key.
11. To add a destination, press the **Select** soft key or the Centre key when **Add contacts** highlights. Repeat from step 8.

If you want to edit the destinations, select one and press the **Options** soft key or the Centre key. You can change or delete it.

12. To enter additional numbers or addresses to the other destination types, press the **Back** soft key or the **C** key and repeat steps 7 through 11.

You can enter up to 10 destinations each for **To**, **Cc**, and **Bcc**.

13. When you have finished entering the destinations, select **Send message** and press the **Select** soft key or the Centre key.

Your phone sends the message.

SMS

Short Message Service (SMS) allows you to send and receive short SMS messages to and from other GSM mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple pictures, melodies, and animated images in your messages.

To use this feature, you must subscribe to your service provider's message service.

Creating a Simple SMS Message

1. Create your message.

Note: For further details about entering characters, see page 34.

2. When you have finished entering the message, press the **Options** soft key. The following options are available:

Note: Pressing the Centre key on the message screen directly selects **Send only**.

- **Send only:** allows you to send the message. The message is deleted after sending.
- **Save and send:** allows you to save a copy of the message and then send the message. You can read the message in the **SMS Drafts** box.
- **Save only:** allows you to save the message so that it can be sent later. You can read the message in the **SMS Drafts** box.
- For further details about **SMS template**, **Input method**, **Input language**, **Text formatting**, **Add objects**, **Add contact**, and **Add bookmark** options, see page 84.

3. Select **Send only** or **Save and send**, and press the **Select** soft key or the Centre key.
If you want to just save the message, select **Save only**. After saving the message, the phone returns to the Create message screen.
4. If you select a save option, choose the memory location by pressing the Up and Down keys and press the **Ok** soft key or the Centre key.
5. Enter a destination number and press the **Ok** soft key or the Centre key.

The message is sent.

Creating an SMS Message Using Options

1. Create a message.
2. Press the **Options** soft key.
3. Select one of the following options by using the Up and Down keys and pressing the **Select** soft key or the Centre key:
 - **SMS template**: allows you to apply one of the preset message templates to the text. Select one of five items stored in the **SMS templates** menu. For further details, see page 95.
 - **Input method**: allows you to change the text input mode.
 - **Input language**: allows you to change the language to be used in T9 input mode. Select the language you want to use.

Messages

- **Text formatting:** allows you to format the style of the text.

For the **Size** attribute, **Normal**, **Large** and **Small** sizes are available.

For the **Bold**, **Italic**, **Underline**, and **Strikethrough** attributes, select **On** or **Off**.

These attributes can be combined.

- **Add objects:** allows you to add a sound, melody, picture or animated image to the message. Select the category of the object to be added. In each category, you can select from the various factory-set items or choose an item received from other sources, such as the Internet or other phones.
- **Add contact:** allows you to add a Contacts entry to your message. Select one from the list.
- **Add bookmark:** allows you to add a web page's address stored in your Bookmarks list. Select one from the list.

4. Complete the message, and send or save it by following the procedure from step 2 on page 82.

MMS postcard

In this menu, you can send photos stored in the **My photos** menu as a postcard along with a simple greeting. Your message is sent to the MMS centre, where it is formatted, printed, and sent out as a real postcard to the address of your choice.

Note: This feature may not be available, depending on your country. Please contact your service provider for further details.

1. Select the photo you want to send using the Navigation keys and press the Centre key.

Note: Use a photo in maximum resolution.

You can also select one of the following options by pressing the **Options** soft key:

- **Select:** selects the photo.
 - **View:** displays the photo on the full screen. To use the photo for sending a postcard, press the **Select** soft key or the Centre key.
2. Enter a greeting message and press the Centre key.

Note: For further details about entering characters, see page 34.

3. Scroll to the field using the Up or Down key and press the Centre key to enter the recipient information.

The following options are available:

- **Name:** enter the recipient's name.
- **Additional information:** enter any additional personal information.
- **Street:** enter the house number and street.
- **Zip & city:** enter the zip or postal code.
- **State/Province:** enter the state or province.
- **Country:** enter the country. This option may not display, depending on your country.

Note: If you don't enter the name, street, and zip code, your postcard cannot be sent.

Messages

4. When you have finished, press the **Options** soft key.

The following options are available:

- **Send**: sends the postcard.
- **Save**: saves the postcard in the **MMS postcard** folder in the **Drafts** box.

Note: If you press the **Options** soft key when the Name field is selected, the **Contact list** options is activated. Selecting this option opens your Contacts list so that you can retrieve a name from the list.

5. Select **Send** and press the **Select** soft key or the Centre key.


Your postcard is sent.

Inbox

In this menu, you can access received messages.

MMS

Viewing a Message When You Receive it

When a new MMS message comes in, the display shows the MMS Message icon () and a text notification along with the sender's number.

1. Press the **View** soft key to view brief information about the message, such as the sender's number, the message size, and the subject.

If you want to view the message later in the Inbox, press the **Exit** soft key or the **C** key.

2. To scroll through the message information, press the Up or Down key.


You can access the following options by pressing the **Options** soft key:

- **View:** shows the information about the message.
- **Retrieve:** retrieves the message from the MMS server.
- **Delete:** deletes the message.
- **Properties:** shows the information about the message.

Note: If the **Auto download** option in the **MMS settings** menu is switched on, your phone automatically retrieves new messages from the server. You can then immediately view the new messages by pressing the **View** soft key. See page 100 for more about the option.








3. To read the message, select **Retrieve** from the option list and press the **Select** soft key or the Centre key.

Your phone retrieves the message contents from the server and displays it.

4. To scroll through the message, press the Up or Down key.
5. When you are finished, press the  key.

Viewing a Message from the Inbox

When you access the **MMS** menu, the list of MMS messages you have received displays along with the subjects. The icons on the left tell you the status of the messages:

- : Message notifications that have been opened.
- : Message notifications that have not been opened.
- : You have sent an enquiry to the MMS server requesting the message be sent to your phone.
- : The MMS server is processing your request.
- : The MMS server is unable to send the message to your phone.
- : Messages that have been opened.
- : Messages that have not been opened.

1. Select a message on the list and press the Centre key.

The display presents the message and scrolls to the next page, if it has one, after a specified time.

2. Press the **Ok** soft key or the Centre key to go to the message view screen.

Or, the display automatically switches to the screen after a few seconds.

3. Press the Up or Down key to scroll through the message.

If the message has more than one page, you can scroll through the pages by using the Left and Right keys.

4. Press the ✖ or # key to scroll to the previous or next message.

While viewing a message, you can access the message options by pressing the **Options** soft key.

If you are viewing a message notification, the options are the same as when you view a message at the time of its receipt. See page 87.

When you are reviewing a message retrieved from the MMS server, the following options are available:

View: shows the message.

Reply: allows you to send a reply to the sender.

Reply all: allows you to send a reply to the sender and all of the other recipients.

Delete: deletes the message.

Call sender: allows you to call the sender back.

Extract...: allows you to extract the sender's number or e-mail address and URL, e-mail addresses, or phone numbers from the message text.

Forward: allows you to forward the message to another person.

Save picture: allows you to save an image from the message into the **Pictures** folder.

Save sound: allows you to save a sound from the message into the **Sounds** folder.

Properties: shows you detailed information about the message.

SMS

This message box is used to store messages that you have received.

When you enter this menu, the list of messages in the box displays with the senders' phone numbers or names, if available in your Contacts.

1. Select a message from the list and press the Centre key.
2. Press the Up or Down key to scroll through the message.
3. Press the * or # key to scroll to the previous or next message.

While viewing a message, you can access the following options by pressing the **Options** soft key:

Reply: allows you to send a reply to the sender.

Delete: allows you to delete the message.

Forward: allows you to change and forward the message.

Call sender: allows you to call the sender.

Extract...: allows you to extract the sender's number and URL, e-mail addresses, or phone numbers from the message text.

Move to phone: allows you to move the message from the SIM card to the phone's memory. This option is only available when you select a message stored in the SIM card.


Move to SIM: allows you to move the message from the phone's memory to the SIM card. This option is only available when you select a message stored in the phone's memory.

Select objects: allows you to save media objects, such as sounds or images, from the message into your phone. You can use the objects when writing a message. For details, see page 84.

My messages

In this menu, you can access messages you have sent or saved for later retrieval. You can also read cell broadcast messages from your service provider.

Drafts

This message box stores MMS messages and MMS postcards you have saved as a draft before sending, or SMS messages you have saved and/or sent. When you press the  key while creating a message, you can also select to save the message in this box.

MMS Drafts

When you select this menu, the list of the MMS messages appears.

Scroll to the message you want to view and press the Centre key.

While viewing the message, you can access the following options by pressing the **Options** soft key:

Send: allows you to send the message.

Edit: allows you to change the message.

Messages

Delete: allows you to delete the message.

Extract...: extracts the destination numbers or addresses of the message and the URL, e-mail addresses, and phone number from the message text.

Properties: shows the information about the message.

SMS Drafts

When you select this menu, the list of the SMS messages you have sent and/or saved appears.

Scroll to the message you want to view and press the Centre key.

While viewing the message, you can access the following options by pressing the **Options** soft key.

Edit: allows you to change the message and then send or save it.

Delete: allows you to delete the message.

Extract...: extracts the destination numbers or addresses of the message and the URL, e-mail addresses, and phone number from the message text.

Move to SIM: allows you to move the message from the phone memory to the SIM card. This option is only available when you select a message stored in the phone's memory.

Move to phone: allows you to move the message from the SIM card to the phone memory. This option is only available when you select a message stored in the SIM card.

Select objects: allows you to save media objects, such as sounds or images, from the message into your phone. You can use the objects when writing a message. For details, see page 84.

MMS postcard

When you select this menu, the list of the MMS postcards you have saved appears.

Scroll to the message you want to view and press the Centre key.

While viewing the message, you can access the following options by pressing the **Options** soft key:

Send: allows you to send the postcard.

Edit: allows you to change the postcard.

Delete: allows you to delete the postcard.






Properties: shows detailed information about the postcard.

Outbox

In this menu, you can access MMS messages and MMS postcards you have sent.

MMS

When you access this menu, the list of the MMS messages you have sent displays. The icons on the left tell you the status of the messages.

- : Messages currently being sent
- : Messages sent
- : Messages your phone couldn't send
- : Messages to be sent
- : Messages deferred

Messages

Select a message on the list and press the Centre key.

While viewing the message, you can access the following options by pressing the **Options** soft key:

Delete: deletes the message.

Send: allows you to send/resend the message.

Edit: allows you to change the message contents, such as sounds, pictures, or text.

Extract...: allows you to extract the destination numbers or e-mail addresses and URL, e-mail addresses or phone numbers from the message text.

Properties: shows you detailed information about the message.

MMS postcard

When you access this menu, the list of the MMS postcards you have sent displays.

Select a message on the list and press the Centre key.

While viewing the message, you can access the following options by pressing the **Options** soft key:

Delete: allows you to delete the postcard.

Send: allows you to send the postcard.

Edit: allows you to change the postcard.

Properties: shows detailed information about the postcard.

Templates

In this menu, you can use message templates to easily and quickly create a new message.

MMS templates

This menu stores messages you have saved as templates so that you can use them to make new messages.

Your phone has three preset message templates.

Scroll through the template list using the Up and Down keys. When the message template you want highlights, press the Centre key.

Press the **Ok** soft key or the Centre key to access the following options, or the display automatically shows the options after a specified time:

Edit: allows you to change the message template and then send it.

Delete: allows you to delete the message template. You are asked to confirm the deletion by pressing the **Yes** soft key or the Centre key. For the preset templates, this option is not available.

SMS templates

Using this menu, you can preset a maximum of five messages that you use most frequently.

Select an empty location or the message template you want and press the Centre key to enter a new message.

Once you have preset a message template, you can access the following options by pressing the **Options** soft key:

Edit: allows you to edit the message template.

Messages

Send: allows you to write a new message using the message template.

Delete: allows you to delete the message template. You are asked to confirm the deletion by pressing the **Yes** soft key or the Centre key.

Cell broadcast

This network service allows you to receive SMS messages on various topics, such as the weather or traffic. Cell Broadcast (CB) messages display as soon as they are received, provided that:

- the phone is in Idle mode.
- the **Receive** option is set to **Enable**.
- the message channel is currently active on the channel list.

The following options are available:

Read: lets you view the received message. The **Volatile** box displays messages from the network, but loses its contents as soon as the phone is switched off. Scroll through the message by using the Up and Down keys.

You can save a CB message in the **Archive** box for later retrieval. When a text notification appears, press the **Options** soft key or the Centre key and select **Save**.

Receive: allows you to enable or disable the reception of broadcast messages.

Channel list: allows you to indicate the channels from which you wish to receive broadcast messages.

The following options are available:

Select: use to enable or disable channels on the list by marking or unmarking them, respectively. A check mark displays in front of each selected channel.

Add channel: use to enter the ID and title for a new channel.

Delete: use to remove a channel from the list.

Edit: use to change the ID and title of an existing channel.

Language: allows you to select your preferred language to display cell broadcast messages.

Please contact your service provider for further details.

Call voicemail

This menu allows you to access your voicemail box, if your network supports this service.

The following options are available:

Connect to voice server: before using the Voice mail feature, you must enter the voice server Number obtained from your service provider. You can then select this option and press the **Ok** soft key or the Centre key to listen to your messages.

You can quickly connect to the voice server by pressing and holding the **1** key in Idle mode.

Voice server number: allows you to change the voice mail server number, if necessary.

Note: Voice mail is a network feature. Please contact your service provider for further details.

live! Studio

From this menu, you can access the online media album. Your online album allows you to store your photos and compose MMS messages. You can also access Vodafone contents and message templates.

Please contact your service provider for more information.

Vodafone mail

From this menu, you will find the Vodafone Mail service offering you mobile access and management of your e-mails, either by using your Vodafone email account or by fetching your existing email account. This service can be upgraded offering you Unified Messaging—an integrated inbox with all your voice mails, faxes, and e-mails.

Please contact your local service provider for more information.

Vodafone messenger

With Vodafone Messenger, you can stay in touch and have fun with friends through instant text conversations. You will know when your friends are available to chat and that they immediately receive your instant messages. When you first start using Vodafone Messenger, all you need to know is your friend's mobile number to build your Vodafone Messenger contacts list.

Please contact your service provider for more information.

Push messages

In this menu, you can receive and access web messages from the server.

The following options are available:

Inbox: allows you to read the messages received from the web server.

Receive: allows you to set whether or not your phone receives web messages. Select **Always** to receive web messages or **Never** to reject web messages.

Delete all: allows you to delete all of the web messages.

Message settings

In this menu, you can change the various settings for the Messages feature.

MMS settings

You can change the default settings for sending or receiving MMS messages.

The following options are available:

Delivery report: when this option is enabled, the network informs you whether or not your message has been delivered.

Read reply: when this option is enabled, your phone sends a request for a reply along with your message to the recipient.

Messages

Auto download: you can set whether or not your phone retrieves new incoming messages from the MMS server without notifications.

Off: you need to manually download new messages by using the **Retrieve** option.

On: the phone automatically retrieves new messages from the server. As soon as you receive a message you can use more options while you are reading. See page 89 for details about the options.

Off when roaming: the phone automatically downloads new messages unless you are roaming on another network or in another country.

Message acceptance: you can specify the category of messages you want to receive.

Hide ID: when this option is enabled, your phone number does not display on the recipient's phone.

Expiry period: you can select the length of time your messages are stored at the message centre after they are sent.

Delivery time: you can set a time delay before the phone sends your messages.

Priority: you can select the priority level of your messages.

Report allowed: when this option is enabled, the sender of an incoming message receives a delivery report from the network.

Page duration: you can set how long one page of an outgoing message displays on the message presentation screen. After a specified time, the display automatically scrolls to the next page.

MMS profiles

In this menu, you can configure various network settings that are required when you send or receive MMS messages.

Notes:

- The last profile you accessed is automatically activated for sending subsequent messages.
- If you change the MMS settings without first checking with your service provider, the MMS feature may not work properly.

The following options are available for each profile:

Profile name: enter a name that you wish to assign to the MMS server.

Connection URL: enter the address of your MMS server.

Security: select a data transmission mode. Choose **Secure** to protect your data against unauthorised access; otherwise, choose **Non-secure**.

IP address: enter the gateway address required to connect to the MMS server.

User name: enter the user ID required to connect to the MMS server.

Password: enter the password required to connect to the MMS server.

APN: enter the access point name used for the address of the MMS server.

For further details, contact your service provider.

SMS settings

In this menu, you can set up default SMS/EMS information. A setting group is a collection of settings required to send messages. The number of setting groups available depends on the capacity of your SIM card.

Notes:

- The setting options available in this menu may vary, depending on your service provider.
- The last setting you accessed is automatically activated for sending subsequent messages.

Setting x (where **x** is the setting group number): each group has its own sub-menu.

Setting name: allows you to give a name to the setting group currently being defined.

Service centre: allows you to store or change the number of your message centre, which is required when sending messages. You must obtain this number from your service provider.

Default destination: allows you to store a default destination number. The number automatically displays on the Destination screen when you create a message.

Default type: allows you to set the default message type to **Text**, **Fax**, **Email**, or **Paging**. The network can convert the messages into the selected format.

Validity period: allows you to set the length of time your SMS messages are stored in the message centre while attempts are made to deliver them.

Common settings: The following options are available:

Reply path: allows the recipient of your message to send you a reply through your message centre, if your network supports this service.

Delivery reports: allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.

Bearer selection: allows you to choose either **GSM** or **GPRS**, depending on your network.

Character support: allows you to choose a character type from **GSM-alphabet**, **Uni-code**, or **Automatic**. If you select **Uni-code** and your recipient's phone does not support it, your recipient may not be able to read your message.

Memory status

You can check the amount of the memory being used and the memory remaining for messages.

The following options are available:

MMS: shows the total space, including the free and used space, and how much space is currently occupied by each message box. Press the Up or Down key to scroll through the screen.

SMS: shows the number of messages currently stored and the total number of messages you can store in the SIM, Phone, and CB memories.

Delete all

This menu allows you to delete all of the messages in each message box separately. You can also delete all of your messages at one time.

1. Select a message type and press the **Select** soft key or the Centre key.


2. To	Press the
select a message box to clear	Up or Down key. To delete all of your messages, select All messages .
place a check mark	Mark soft key.
remove a check mark	Unmark soft key.

3. Press the Centre key to delete the marked messages.
4. When a confirmation message displays, press the **Yes** soft key or the Centre key to confirm.
5. When the display asks for confirmation again, press the **Yes** soft key or the Centre key.

Camera

Using the camera module embedded in your phone, you can take photos of people or events while on the move. Additionally, you can send photos to other people in an MMS message or set one as wallpaper or a caller image for a Contacts entry.

You can also record videos using the phone as a camcorder.

Note: You can quickly access the **Camera** menu by pressing the Camera key () on the right side of the phone in Idle mode.

CAUTION:

- Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.

Take photo


This menu allows you to take photos. Your camera produces JPEG photos.

You can take photos with the phone open or closed. When the phone is closed, you can use the external display.

Note: When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

Taking a Photo with the Phone Open


1. Accessing the **Take photo** menu turns on the camera on the phone.

Alternatively, you can press and hold the Camera key () on the right side of the phone in Idle mode.

The image to be captured appears on the display.

2. Adjust the image by aiming the camera at the subject.
 - Press the left soft key to use the camera options. For details, see page 107.
 - You can use the keypad to adjust the image settings. For details, see page 108.
3. Press the Camera key or the Centre key to take the photo.
4. Press the **Save** soft key or the Centre key.

To discard the photo, press the **Cancel** soft key or **C** key.

5. To	Press the
use the photo options	Options soft key or the Centre key. For details, see page 111.
return to Capture mode	Back soft key.
return to Idle mode	 key.

Using the Camera Options

In Capture mode, you can use various options for the camera by pressing the left soft key.

The following options are available:

Effects: allows you to change the colour tone or apply a special effect to the photo.

Frames: allows you to use a decorated frame. Select a frame from the list using the Navigation keys.

Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display.

Normal shot: allows you to take a photo in the normal mode.

Multi shot: allows you to take a series of action stills. Select the capture speed, **High speed** or **Normal speed**, and the number of photos the camera will take. When you press the Centre key or the Camera key, the camera takes photos successively.

After taking photos, press the **Save all** soft key or the Centre key. You can save all of the photos in a separate folder.

Night shot: allows you to take a photo of the best quality when it is dark.

Rotation: allows you to rotate the photo. You can flip the photo vertically, see its mirror image, or do both at the same time.

Self timer: allows you to set a time delay before the camera takes the photo. Select the length of delay you want. When you press the Centre key or the Camera key, the camera takes the photo after the specified time.

Settings: allows you to change the image settings.

Photo size: allows you to select the image size. The selected image size displays on the top of the capture screen.

Photo quality: allows you to select the image quality. The selected quality displays on the top of the capture screen.


Using the Keypad in Capture Mode

In Capture mode, you can access the following keys to adjust the image settings or use options:

Key	Function
Up/Down	zooms in or out.
Left/Right	adjusts the image brightness.
^	flips the image vertically.
v	shows the mirror image.
1	switches to Record mode. For details, see page 109.
2	changes the image size.
3	changes the image quality.
4	switches to Night Shot mode.
5	changes the colour tone or applies a special effect to the photo.
6	clears white lines on the photo.

Taking a Photo with the Phone Closed

Note: If the external display turns off, you first need to turn it on by pressing and holding one of the Volume keys.

1. When the phone is closed, press and hold the Camera key () on the right side of the phone for more than 3 seconds.

The image to be captured appears on the external display.

2. Adjust the image by aiming the camera at the subject.

You can adjust the brightness by pressing the ▲ key and zoom in by pressing the ▼ key. After increasing the zoom four times, it returns to its original status.

3. Press the Camera key to take the photo.

Your phone automatically saves the photo and returns to Capture mode.

Record video

This menu allows you to record a video using your phone as a camcorder. You can record up to five videos, even though you haven't reached the limit of available memory.

1. When the camera turns on, adjust the image by aiming the camera at the subject.
 - Press the Up and Down keys to zoom in or out.
 - Press the Left and Right keys to adjust the brightness of the image.

Camera

- Press the **▲** key to flip the image vertically or the **▼** key to see its mirror image.
 - Press the **1** key to switch to Capture mode. For details, see page 106.
2. Press the left soft key, the Centre key, or the Camera key to start recording.
 3. When you are finished, press the left soft key, the Centre key, or the Camera key.

The phone automatically stops when the recording time expires.

4. Press the **Save** soft key or the Centre key. The video is saved and the display returns to Record mode.

To discard the video, press the **Cancel** soft key or the **C** key.

My photos

This menu allows you to review your photos.

When you access this menu, your phone displays the photos in Thumbnail mode, which shows them as small images. Use the Navigation keys to scroll through the photos.

To view the photos on the full screen, press the Centre key. In this mode, press the Left or Right key to scroll through the photos. To go back to Thumbnail mode, press the **Back** soft key or the **C** key.

Press the **Options** soft key to access the following options:

View: displays the photo on the full screen. This option is shown only in Thumbnail mode.

Send MMS: allows you to send the photo as a part of an MMS message. For further details, see page 78.

Send MMS postcard: allows you to send the photo as a part of an MMS postcard. For further details, see page 84.

Rename: allows you to change the name of the photo.

Set as wallpaper: allows you to set the photo as your wallpaper on the idle screen.

Set as caller ID: allows you to set the photo as a caller ID image for a Contacts entry.

Protection: allows you to protect the photo from being deleted.

Delete: allows you to delete the photo.

Delete all: allows you to delete all of the photos saved in your phone.


Properties: shows the properties of the photo.

My videos

When you access this menu, thumbnail images of your videos display.

To play a video:

1. Press the Navigation keys to scroll to the video you want to review.
2. Press the Centre key to start playing the video.

3. To	Press the
pause the playing	Pause soft key.
resume	Continue soft key.
stop	Stop soft key or the C key.
return to Idle mode	 key.

Press the **Options** soft key on the video list to access the following options:

Play: plays the video.

Rename: allows you to change the name of the video.

Delete: allows you to delete the current video.

Delete all: allows you to delete all of your videos.

Protection: allows you to protect the video from being deleted.

Properties: shows the properties of the video.

My items

This menu allows you to access:

- games, pictures, and sounds you have downloaded from the Wireless Web.
- photos and videos you have captured by using the camera.
- message templates you have saved while using the Message feature.

Pictures

In this menu, you can access the images you downloaded or access a web site to download new images.

My photos

In this menu, you can access the photos you took by using the camera.

For further details about viewing a photo and using the options, see page 110.

Saved pictures

You can view the list of images downloaded from a web server or received in messages.

Scroll to the image you want to view and press the Centre key.

By pressing the **Options** soft key, you can access the following options:

Send MMS: allows you to send the image in an MMS message. For details, see page 78.

My items

Rename: allows you to change the name of the image.

Delete: deletes the image.

Set as wallpaper: sets the image as your wallpaper for the idle screen.

Download more

Selecting this menu loads the web site preset by your service provider so that you can download more pictures or animated images.

Games

In this menu, you can access Java games you downloaded from the web or access a web site to download new games.

Saved games

You can access the list of games downloaded from a web server.

Scroll to the game you want and press the Centre key. For further details for playing a game, see page 56.

Download more

Selecting this menu loads the web site preset by your service provider so that you can download more games.

Sounds

In this menu, you can access sounds you downloaded from the web or access a web site to download new sounds.

My sounds

You can access the voice memos you have recorded by using the **Voice recorder** menu. For further details about reviewing a memo and using the options, see page 75.

Saved sounds

You can access the list of sounds downloaded from a web server or received in MMS messages.

Sound files in red on the list cannot be forwarded as part of an MMS message.

Scroll to the sound you want to listen to and press the Centre key.

By pressing the **Options** soft key, you can access the following options:

Play: plays the sound.

Send MMS: allows you to send the sound in an MMS message. For details, see page 78.

Rename: allows you to change the name of the sound.

Delete: deletes the sound.

Set as ringtone: sets the sound as your ring tone.

Download more

Selecting this menu loads the web site preset by your service provider so that you can download more ring tones or melodies.

My videos

In this menu, you can access the videos you have recorded by using the camera.

For further details about playing a video and using the options, see page 112.

Templates

In this menu, you can access the message templates you have saved while using the SMS or MMS message feature.

For further details about viewing a template and using the options, see page 95.

Memory status

You can check the amount of the memory being used and the memory remaining for media contents. Press the Up or Down key to scroll through the screen.

The following options are available:

Games: the display shows the Total, Free, and Used memory amount and the number of games you have downloaded.

Sounds & images: the display shows the Total, Free, and Used memory amount, including each memory used for sounds and images separately.

Photos & videos: the displays shows the Total, Free, and Used memory amount for photos and videos separately.

Calendar

With the Calendar feature, you can:

- consult the calendar and check your memos.
- write memos to keep track of your schedule.
- set an alarm to act as a reminder.

Consulting the Calendar

When you select the **Calendar** menu, the calendar displays with today's date highlighted. The following options are available when you press the **Options** soft key:

Go to date: allows you to go to a specific date.

Search all: displays all of the memos, starting with the oldest regardless of the day. To scroll through the memos, press the Up or Down key.

Delete all: allows you to delete all of the memos. You are asked to confirm your action.

Writing a Memo

You can make up to 30 memos for one day.

To write or edit a memo on a specific date:

1. Select a date on the calendar by using the Navigation keys.

Note: To skip to the previous or next month, press the Volume keys on the left side of the phone.

2. Press the Centre key.

An empty memo screen displays allowing you to enter your memo.

3. Enter your memo and then press the **Ok** soft key or the Centre key.

Note: For further details about how to enter characters, see page 34.

You are asked if you wish to set an alarm.

4. If you want an alarm to ring on the chosen day, press the Centre key. Continue to the next step.

Otherwise, press the **Skip** soft key. The memo is saved.

5. Enter the time for the alarm to sound and press the Centre key.


Note: Your phone is preset to use a 24-hour format. To change the format, see page 152.

You can access the following options by pressing the **Options** soft key:

- **Set alarm:** sets the alarm.
- **Melody:** allows you to select a melody for the alarm.

6. If applicable, select **AM** or **PM** and press the **Select** soft key or the Centre key.

The colour of the date on the calendar changes to green to indicate that a memo exists for that date.

When the alarm time for a memo comes and the phone sounds the selected alarm melody, press the **View** soft key or the Centre key to view the memo. Alternatively, press the **Exit** soft key or  key to stop the alarm.

Viewing a Memo

When you select a day on which more than one memo exists, the latest memo for the day displays.

In that case, press the Up or Down key to scroll to the previous or next memo.

You can access the following options by pressing the **Options** soft key or the Centre key:

Edit: allows you to change the memo text.

Add new: allows you to write a new memo.

Alarm: allows you to set an alarm to ring at a specified time to remind you of the memo. If you have already set an alarm for that memo, you can change or delete the alarm.

Delete: allows you to delete the memo.

Duplicate: allows you to duplicate the memo to another date.

Change date: allows you to change the date of the memo.

Contacts

You can store phone numbers of contact persons and their corresponding names in both your SIM card and your phone's memory. They are physically separate but are used as a single entity, called Contacts.

Note: Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store may differ.

Contacts list


In this menu, you can access the Contacts list and search for Contacts entries by entering names.

1. Enter the first few letters of the name that you want to find.

The Contacts entries are listed, starting with the first entry matching your input.

2. To	Press the
view the highlighted entry	View soft key or the Centre key.
select a different entry	Up or Down key until the entry you want highlights.
look for a name starting with a different letter	key labelled with the letter you want.

Contacts

3. Once you have found the entry, press the Centre key or the  key to dial the number.

Alternatively, press the **Options** soft key to access the Contacts entry options; for further details, see the following section.

Using Contacts Entry Options

While accessing any Contacts entry, press the **Options** soft key to access the options for the entry.

The following options are available:

Call: make a call to the selected contact person.

Edit: allows you to edit the name and/or number.

Select **Name and contact** to change the name and/or the currently selected phone number. If you change the name, the number is saved separately with the new name.

Select **Name only** to change the name.

Add entry: allows you to add a new number to the currently selected name.

Photo caller ID: allows you to assign one of the photos you took using the camera as a caller ID image to be displayed when you receive a call from the selected number. For details about the Camera feature, see page 105.

Paste: allows you to paste the number into the normal dialling mode. Use this option to dial a number similar to one in Contacts, such as a different extension in the same office.

Delete: allows you to delete the selected number from Contacts. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key or the Centre key.

Copy: allows you to copy the number to another location. You can select the memory location and change the location number.

Caller group: allows you to organise your Contacts entries in caller groups so that the phone alerts you in a specific way when a person from one of your groups calls you. Select one of the ten groups available.

To remove a number from a group, select the **No group** option.

For further details about how to change caller group properties, see page 126.

Send MMS: allows you to send an MMS message to the person. For details, see page 77.


Send SMS: allows you to send an SMS message to the person. For details, see page 82.

Send MMS postcard: allows you to send an MMS postcard to the person. For details, see page 84.

Create contact

This menu allows you to add a new entry to the Contacts list.

1. Select an icon to identify the category in which the number is to be stored by pressing the Left or Right key, and press the **Select** soft key or the Centre key.

Note: The E-mail icon () is available in this step. It allows you to save an e-mail address instead of a phone number.

2. Select a memory location, either **SIM** or **Phone**, by pressing the Up or Down key and press the **Select** soft key or the Centre key.


Note: When you are saving an e-mail address, SIM is not available.

3. Enter a name and press the **Ok** soft key or the Centre key.

For further details about how to enter characters, see page 34.

4. Enter the number or address you want to store and press the **Save** soft key or the Centre key.
5. If you do not want to save the number and name in the suggested location, press the **Clear** soft key or the **C** key to clear the location number and enter another location by pressing the numeric keys.
6. Press the **Ok** soft key or the Centre key to store the name and number.

After storing, the phone displays the name and number you just stored.

- To dial the number, press the Centre key or the  key.

Alternatively, press the **Options** soft key to access the Contacts entry options; for further details, see page 122.

Group search

You can search for Contacts entries by selecting a caller group.


- Enter the first few letters of the group name that you want to find.

The caller groups are listed, starting with the first group matching your input.

- If necessary, scroll to a group by pressing the Up or Down key and press the **View** soft key or the Centre key.

The Contacts entries in the caller group are listed.

3. To	Press the
view the highlighted entry	View soft key or the Centre key.
select a different entry	Up or Down key until the entry you want highlights.

- Once you have found the entry, press the Centre key or the  key to dial the number.

Alternatively, press the **Options** soft key to access the Contacts entry options; for further details, see page 122.

Group edit

In this menu, you can change the properties of each caller group.


1. Scroll through the group list by pressing the Up or Down key.
2. When the group you want highlights, press the **Options** soft key.
3. Select each option and change the settings, as you want. The following options are available:
 - **Call ringtone**: allows you to set a ring tone to be used when you receive a voice call from a member of that group.
 - **SMS tone**: allows you to set a ring tone to be used when you receive a message from a member of that the group.
 - **Graphic**: allows you to set a graphic icon to be displayed when you receive a voice call from a person in the group.
 - **Group name**: allows you to assign a name to the group. For further details about how to enter characters, see page 34.
4. After changing the settings, press the **Select** or **Ok** soft key or the Centre key.

Call log

In this menu, you can view the:

- calls you missed, received, or dialled.
- length of your calls.
- cost of your calls, if your SIM card supports it.

Notes:

- You can access the numbers in the three types of call records by pressing the  key in Idle mode.
- The number of call records the phone can store may vary, depending on your SIM card.

Missed calls

This menu lets you view the 20 most recent numbers of the calls you received, but did not answer.


The number or name, if available, displays together with the time and date the call was received.

Pressing the Centre key shows the number of the call.

By pressing the **Options** soft key, you can access the following options:

View: shows the number of the call log. You can edit the number, if necessary, and dial it or save it in Contacts.

Delete: deletes the call log from the list.

You can also dial the number by pressing the  key.

Received calls


This menu lets you view the 20 most recent numbers of the calls you received.

The number or name, if available, displays together with the time and date the call was received. Pressing the Centre key shows the number of the call log.

By pressing the **Options** soft key, you can access the following options:

View: shows the number of the call log. You can edit the number, if necessary, and dial it or save it in Contacts.

Delete: deletes the call log from the list.

You can also dial the number by pressing the  key.

Dialled calls


This menu lets you view the 20 most recent numbers you dialled.

The number or name, if available, displays together with the time and date the call was made. Pressing the Centre key shows the number of the call log.

By pressing the **Options** soft key, you can access the following options:

View: shows the number of the call log. You can edit the number, if necessary, and dial it or save it in Contacts.

Delete: deletes the call log from the list.

You can also dial the number by pressing the  key.

Delete all

This menu allows you to delete all of the logs in each call type separately. You can also delete all of your call logs at one time.

1. Scroll to the call type to be deleted and press the **Mark** soft key to place a check mark.

You can remove the check mark by pressing the **Unmark** soft key.

2. If necessary, repeat step 1.
3. Press the Centre key to delete the marked types.
4. When a confirmation message displays, press the **Yes** soft key or the Centre key to confirm.
5. When the display asks for confirmation again, press the **Yes** soft key or the Centre key.

Call time

This menu lets you view the timers for calls you have made and received.

Note: The actual time invoiced by your service provider may vary, depending on network features, rounding-off for billing purposes, and so on.

The following timers are available:

Last call time: length of the last call.

Total sent: total length of all calls you have made since the timer was last reset.

Contacts

Total received: total length of all calls you have received since the timer was last reset.

Reset timers: option used to reset the call timers. You must first enter the phone password and then press the **Ok** soft key or the Centre key.

Note: The password is preset to "00000000." To change this password, see page 155.

Call costs

This network feature lets you view the cost of calls. This menu may not be available depending on your SIM card.

The following options are available:

Last call cost: cost of the last call you made.

Total cost: total cost of all calls you have made since the cost counter was last reset. If the total cost exceeds the maximum cost set in the **Set max cost** option, you can no longer make any calls until you reset the counter.

Max cost: maximum cost set in the **Set max cost** option. See below.

Reset counters: option used to reset the cost counter. You must first enter your PIN2 (see page 163) and then press the **Ok** soft key or the Centre key.

Set max cost: option used to enter the maximum cost that you authorise for your calls. You must first enter your PIN2 (see page 163) and then press the **Ok** soft key or the Centre key.

Price/unit: option used to set the cost of one unit; this price per unit is applied when calculating the cost of your calls. You must first enter your PIN2 (see page 163) and then press the **Ok** soft key or the Centre key.

Data counter

This menu allows you to view and check the amount of data sent and received during GPRS connections.

The following options are available:

Last sent data: amount of the data you last sent.

Last received data: amount of the data you last received.

Total sent data: total amount of data you have sent since the data counter was last reset.

Total received data: total amount of data you have received since the data counter was last reset.

Reset counters: option used to reset the data counter. You must first enter your phone password and then press the **Ok** soft key or the Centre key.

Speed dial list

You can assign up to eight phone numbers from the Contacts list that you use most frequently to the number keys (**2** to **9**), and then dial them easily whenever you want, simply by pressing and holding the associated number key.

Setting Up Speed-dial Entries

1. Select the key where you wish to assign the speed-dialling number, from the **2** to **9** keys, and press the **Select** soft key or the Centre key.

Note: Memory location 1 is reserved for your Voice mail server number.

If you have already assigned a number to the key, the **Options** soft key replaces the **Select** soft key.


2. Select a Contacts name from the list and press the **View** soft key or the Centre key.
3. Select a number, if the name has more than one, by pressing the Up or Down key and press the **Select** soft key or the Centre key.

Once you have assigned a number to the key, you can access the following options by pressing the **Options** soft key:

Change: allows you to assign a different number to the key.

Delete: allows you to clear the setting so that no number is assigned to the key.

Delete all: allows you to clear the settings for all keys so that no numbers are assigned to any of the keys.

Number: allows you to view the number assigned to the key. You can dial the number by pressing the  key.

Speed-dialling from Contacts

To speed-dial the numbers assigned to the **2** to **9** keys, press and hold the appropriate key in Idle mode.

My numbers

This function is a memory aid, which you can use to check your own phone numbers if you need to do so.

You can:

- assign a name to each of the own phone numbers registered on your SIM card.
- edit the names and numbers.

Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

Memory status

You can check how many names and numbers are stored in Contacts, the SIM card and the phone's memory. You can also see the capacity of both memories.

Press the Up or Down key to view the number of existing and total entries available on the SIM card and in the phone's memory.

Settings

In this menu, you can customise your phone's various settings, such as:

- phone settings
- display settings
- sound settings
- call setting
- time and date
- network
- security


Phone settings

Many different features of your phone can be customised to suit your preferences.

Activate infrared

This feature allows you to send or receive data through the infrared port. To use an infrared connection with your computer, you must:

- configure and activate an IrDA-compliant infrared port on the computer.
- activate the infrared feature on the phone; the IrDA icon (📶) appears on the top line of the display.
- align the IrDA port on the phone with the IrDA port on the computer.

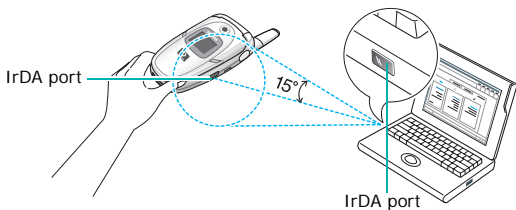

The connection is ready for data transmission.

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activating the feature, it is automatically deactivated.

Note: For optional performance, use an optional PC data cable. You can purchase one from your local Samsung dealer.

Greeting message

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

For further details about how to enter characters, see page 34.

Language

You can select a display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used.

Note: Depending on your country, service provider, or the software version of the phone, the **Automatic** option may not display.

Shortcuts

The Navigation keys can be used as shortcut keys. In Idle mode, they allow you to access specific menus directly.

In this menu, you can change the shortcuts assigned to the Navigation keys.

To assign a shortcut to a key:

1. Select the key to be used as a shortcut key by pressing the Up or Down key and press the **Select** soft key or the Centre key.
2. Select the menu to be assigned to the key by pressing the Up or Down key.

Note: To deactivate a shortcut key, select the **None** option.

3. Press the **Select** soft key or the Centre key to save the selection.

Extra settings

You can turn the automatic redialling or answering features on or off.

To turn a feature	Press the
on	Mark soft key. A check mark displays in front of the option.
off	Unmark soft key. The check mark no longer displays.



The following options are available:


Auto redial: when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between attempts varies.

Active folder: when this option is checked, you can simply open the phone to answer a call.

When it is unchecked, you must open the phone and press a key to answer a call, depending on the setting of the **Anykey answer** option.

Anykey answer: when this option is checked, you can answer an incoming call by pressing any key, except the  key and the **Reject** soft key. To reject the call, press the  key or the **Reject** soft key.

When this option is unchecked, you must press the  key or the **Accept** soft key to answer a call.

Reset settings

You can easily reset your phone to its default settings.

Enter the 4- to 8-digit phone password and press the **Ok** soft key or the Centre key.

Note: The password is preset to "00000000." To change this password, see page 155.

Display settings

In this menu, you can change various settings for the display or the backlight.

Main display

This menu allows you to change the background image or to change the settings for the text display in Idle mode.

The following options are available:

Wallpaper: you can select a background image to be displayed on the idle screen.

To change the background image:

1. Scroll through the list by pressing the Up or Down key.

You have various preset images available. You can also select a blank background, any photos you captured, or any images downloaded from the Internet and the EasyGPRS programme or received in messages.

Using the **More pictures** option, you can access the web site preset by your service provider and download new images.

2. Press the **Select** soft key or the Centre key when the image you want highlights.
3. When the image displays, press the **Select** soft key or the Centre key to display it on the idle screen.

Text display: you can specify whether or not the phone displays the time and date on the idle screen.

Text colour: you can select the colour of the text to be displayed on the idle screen. This option is available when the text display is enabled.

Front LCD display

This menu allows you to select an image to be displayed on the external display.

Menu style

This menu allows you to select the menu display style. You can choose either **Grid style**, **Bar style**, or **Page style**.

Back light

You can select the length of time the backlight is on. The backlight turns on when you press a key, open the phone, or receive a call or message and then it turns off after the specified length of time.

Service light

This menu allows you to select whether or not the service lights are used for indicating that service is available. It also allows you to select a colour in which they flash.

Select one of the colour settings. When the phone is ready for use, the service lights flash in the chosen colour.

If you do not wish to use the service lights, select **Off**.

Graphic logo

This menu allows you to display your service provider's logo instead of its name.

Off: the service provider's name displays in Idle mode.

On: the service provider's logo stored in your phone displays in Idle mode; if no logo has been stored, the service provider's name displays.

Sound settings

You can change various sound settings.

Note: When the phone is in Silent mode (see page 31), you cannot change the sound settings.

Ringtone

This menu allows you to select a ring melody.

You can choose between many different melodies. If you have downloaded sounds from the Internet or the optional EasyGPRS programme, you can access them in this menu.

Using the **More Sounds** option, you can access the web site preset by your service provider and download new ring tones or melodies.

Ring volume

This menu allows you to adjust the ring volume to one of five levels.

Use the Up and Down keys or the Volume keys on the left side of the phone to increase or decrease the volume.

Alert type

This menu allows you to specify how you are to be informed of incoming calls.

The following options are available:

Light only: the service light flashes; the phone neither rings nor vibrates.

Melody: the phone rings using the ring tone selected in the **Ringtone** menu.

Note: For some ring tones, the phone rings, as well as flashing and vibrating.

Vibration: the phone vibrates but does not ring.

Vibration+melody: the phone first vibrates three times and then starts ringing.

Keypad tone

This menu allows you to select the tone that the phone sounds when you press a key.

To turn the sound off, select **Off**.

Message tone

This menu allows you to select how the phone informs you that a new message has been received.

SMS tone

The following options are available for alerting you to new SMS messages:

Off: the phone does not use an SMS tone.

Light only: the service lights flash.

Vibration: the phone vibrates.

Single beep: the phone beeps once.

SMS tone x: the phone uses one of several SMS tones.

SMS-CB tone

The following options are available for alerting you to new cell broadcast (CB) messages:

Off: the phone does not use a CB tone.

Light only: the service lights flash.

Vibration: the phone vibrates.

Single beep: the phone beeps once.

SMS-CB tone x: the phone uses one of several CB tones.

MMS tone

The following options are available for alerting you to new MMS messages:

Off: the phone does not use an MMS tone.

Light only: the service light flashes.

Vibration: the phone vibrates.

Single beep: the phone beeps once.

MMS tone x: the phone uses one of several MMS tones.

Repetition

You can set how often the phone alerts you to new messages.

Once: the phone alerts you once.

Periodic: the phone alerts you at the interval of two minutes.

Folder tone

This menu allows you to select the tone that the phone sounds when you open or close the phone. Select either **Future** or **Crystal**.

To turn the sound off, select **Off**.

Power on/off

This menu allows you to select the melody that the phone sounds when it is switched on or off. Select either **Classical** or **Cheerful**.

To turn the sound off, select **Off**.

Alert on call

This menu allows you to choose whether or not the phone informs you when you receive a new message or when the time for an alarm during a call.

The following options are available:

Off: the phone doesn't actively alert you to incoming message or alarms. It only displays the corresponding notification.

On: the phone alerts you with a beep and displays the corresponding notification.

Extra tones

You can customise additional tones used for the phone.

To turn a given tone	Press the
on	Mark soft key. A check mark displays in front of the option.
off	Unmark soft key. The check mark no longer displays.

The following options are available:

Error tone: sets whether or not the phone informs you when you make a mistake.

Minute minder: sets whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of your call.

Connect tone: sets whether or not your phone beeps when your call is connected to the system.

Call settings

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

Call diverting

This network service enables incoming calls to be rerouted to a number that you specify.

Example: You may wish to divert your business calls to a colleague while you are on holidays.

To set your call diverting options:

1. Select a call diverting option by pressing the Up or Down key, and then press the **Select** soft key or the Centre key.

The following options are available:

- **Divert always**: all calls are diverted.
 - **Busy**: calls are diverted when you are already on another call.
 - **No reply**: calls are diverted when you do not answer the phone.
 - **Unreachable**: calls are diverted when you are not in an area covered by your service provider or when your phone is switched off.
 - **Cancel all**: all call diverting options are cancelled.
2. Select the type of calls, voice or data, by pressing the Up or Down key, and then press the **Select** soft key or the Centre key.

Settings

- If you selected **No reply** in step 1, select the length of time the network waits before diverting a call and press the **Select** soft key or the Centre key.

The current status displays. If the option has already been set, the number to which the calls are diverted displays.

4. To	Press the
activate call diverting	Activate soft key or the Centre key. Go to step 5.
change the number to be called	Change soft key or the Centre key. Go to step 5.
deactivate call diverting	Remove soft key.

- Enter the number to which the calls are to be diverted and press the **Ok** soft key or the Centre key.

To enter an international code, press the **0** key until the **+** sign displays.

The phone sends your settings to the network and the network's acknowledgement displays.

Call barring

The call barring network service allows you to restrict your calls.

To set your call barring options:

1. Select a call barring option by pressing the Up or Down key, and then press the **Select** soft key or the Centre key.

The following options are available:

- **All outgoing:** calls cannot be made.
 - **International:** international calls cannot be made.
 - **International except home:** when abroad, calls can be made only to numbers within the current country and to your home country, which is the country where your home network provider is located.
 - **All incoming:** calls cannot be received.
 - **Incoming while abroad:** calls cannot be received when you are using your phone outside of your home country.
 - **Cancel all:** all call barring settings are deactivated; calls can be made and received normally.
 - **Change barring password:** you can set and change the call barring password obtained from your service provider using this option.
2. Select the type of calls, voice or data, by pressing the Up or Down key, and then press the **Select** soft key or the Centre key.

Settings

3. Press the **Activate** soft key to confirm your settings.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement displays.

To deactivate specific call barring settings:

1. Select the call barring option to be deactivated.
2. Select the type of calls to which this option applies.
3. Press the **Deactivate** soft key.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement displays.

Call waiting

This network service informs you when someone is trying to reach you during another call.

You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

1. Select the type of calls, voice or data, to which you want to apply the call waiting option by pressing the Up or Down key, and then press the **Select** soft key or the Centre key.

The screen informs you whether call waiting is activated or deactivated.

2. You can activate or deactivate the Call waiting feature as necessary by using the **Activate** or **Deactivate** soft key respectively.

To return to the previous screen, press the **Exit** soft key.

You can also deactivate all call waiting settings by selecting the **Cancel all** option.

Caller ID

You can prevent your phone number from being displayed on the phone of the person being called.

Note: Some networks do not allow the user to change this setting.

The following options are available:

Default: the default setting provided by the network is used.

Hide number: your number does not display on the other person's phone.

Send number: your number is sent each time you make a call.

Closed user group

Closed User Group (CUG) is a network service which allows incoming and outgoing calls to be restricted to a selected user group. You can create up to ten user groups.

For details about how to create and use a closed user group, contact your service provider.

Example: A company lends SIM cards to its employees and wants to restrict outgoing calls to members of the same team.

Activating a Closed User Group

If you select the **Closed user group** menu, you can enter the CUG function. You can access the following options after pressing the Centre key or **Select** soft key:

Index list: lets you list, add or delete CUG index numbers.

If there is no CUG index stored, you are prompted to add a new index when you select this option. Once you have added a CUG index, the list of current CUG indexes appears.

Add a new CUG index as advised by your service provider or delete a group.

To	Press the
scroll through the existing CUG indexes	Up or Down key.
add a new CUG index	Options soft key, select the Add option and enter the index.
delete a CUG index	Options soft key and select the Delete option.
activate a CUG index	Options soft key and select the Activate option.

Outside access: lets you enable or disable calls to numbers other than those in the Closed user group. This feature depends on the nature of your CUG subscription. Please check with your service provider.

Default group: you may set a default CUG with your service provider. If you have done so, you can enable the **Default group** option on your phone. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.

Deactivate: deactivates the CUG function. This option appears only when the default group is enabled or a CUG index is selected.

Time & date

This menu allows you to change the current time and date displayed. You can also find out what time it is in another part of the world.

The following options are available:

Set time: allows you to enter the current time. You can choose the time format in the **Time format** menu.

Note: Before setting the time, you must specify your time zone in the **World time** menu.

Set date: allows you to enter the day, month, and year.

World time: allows you to find out what time it is in another part of the world, using the Left and Right keys.

The screen shows the city name and the current time and date.

To select your time zone:

1. Select the city corresponding to your time zone by pressing the Left or Right key one or more times.

The local time and date display.

2. Press the **Set** soft key or the Centre key.

Time format: allows you to change the time format to **12 hours** or **24 hours**.

Display options: allows you to set whether the phone displays the time or the date on the menu title bars.

Network selection

The Network selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

Note: You can select a network other than your home network only if there is a valid roaming agreement between the two.

To automatically or manually select the network to be used when roaming:

1. Press the Up or Down key until the appropriate option highlights and then press the **Ok** soft key or the Centre key.

If you select **Automatic**, you are connected to the first available network when roaming.

If you select **Manual**, go to step 2.

2. Press the Up or Down key until the network you want highlights and then press the **Ok** soft key or the Centre key.

The phone will scan for that network and you will be connected.

Security

The Security feature enables you to restrict the use of your phone by others and to restrict the types of calls made.

Various codes and passwords are used to protect the features of your phone. They are described in the following sections. Also see pages 161-164.

PIN check

When the PIN check feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note: Before disabling the PIN check feature, you must enter your PIN.

The following options are available:

Disable: the phone connects directly to the network when you switch it on. This option may not be available depending on your network provider.

Enable: you must enter the PIN each time the phone is switched on.

Change PIN

This feature allows you to change your current PIN to a new one, provided that the PIN check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

Phone lock

When the Phone lock feature is enabled, the phone is locked and you must enter a 4-to 8-digit phone password each time the phone is switched on.

The password is preset to “00000000” at the factory. To change the phone password, see the **Change password** menu.

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

Disable: you are not asked to enter the phone password when you switch the phone on.

Enable: you are required to enter the phone password when you switch the phone on.

Change password

The Change password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is preset to “00000000” at the factory. Once you have entered a new password, you are asked to confirm it by entering it again.

Privacy

Using this menu, you can lock your media contents, such as MMS messages, MMS postcards, photos, video clips, images and sounds from the other phones or the wireless, and voice memos.

Once you have locked the contents, you must enter the phone password to access the associated menus.

To	Press the
select an item to lock	Up or Down key. To lock all of the contents, select All .
place a check mark	Mark soft key.
remove a check mark	Unmark soft key.
lock the marked items	Centre soft key.

When the phone asks for the phone password, enter the password and press the **Ok** soft key or the Centre key.

Note: The password is preset to "00000000" at the factory. To change this password, see page 155.

SIM lock

When the SIM lock feature is enabled, your phone only works with the current SIM card. You must enter the SIM lock code to use a different SIM card.

Once you have entered the lock code, you are asked to confirm it by entering it again.

To unlock the SIM, you must enter the SIM lock code.

FDN mode

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

Disable: you can call any number.

Enable: you can only call phone numbers stored in Contacts. You must enter your PIN2.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Change PIN2

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one.

Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Solving Problems

If you are experiencing problems with your phone, perform the following simple checks, before contacting a service professional. This may save you the time and expense of an unnecessary service call.

When you switch your phone on, the following messages may appear:

Insert SIM Card

- Check that the SIM card is correctly installed.

Phone Locked Enter Password

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

Enter PIN

- You are using your phone for the first time. You must enter the Personal Identification Number (PIN) supplied with the SIM card.
- The PIN check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN check** menu.


Enter PUK

- The PIN code was entered incorrectly three times in succession and the phone is now blocked. Enter the PUK supplied by your service provider.


“No service,” “Network failure,” “Service not available,” or “Not done” displays

- The network connection was lost. You may be in a weak signal area (in a tunnel or surrounded by buildings). Move and try again.
- You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialed

- Have you pressed the  key?
- Are you accessing the right cellular network?
- You may have set an outgoing call barring option.

Your correspondent cannot reach you

- Is your phone switched on (the  key pressed for more than one second)?
- Are you accessing the right cellular network?
- You may have set an incoming call barring option.


 
 
Your correspondent cannot hear you speaking

- Have you switched off the microphone?
- Are you holding the phone close enough to your mouth? The microphone is located at the bottom of the phone.

The phone starts beeping and “Warning** Low battery” flashes on the display**

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- Check the signal strength indicator on the display (+ ); the number of bars indicates the signal strength from strong (+ ) to weak (+ ).
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialed when you recall a Contacts entry

- Check that the number has been stored correctly, by using the Contacts list menu.
- Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take note of:

- the model and serial numbers of your phone
- your warranty details
- a clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Access Codes

There are several access codes that are used by your phone and its SIM card. These codes help you protect the phone against unauthorised use.

When requested for any of the codes explained below, enter the appropriate code (displayed as asterisks) and press the Centre key or **Ok** soft key. If you make a mistake, press the **C** key one or more times until the incorrect digit is cleared and then continue entering the correct code.

The access codes, except for the PUK and PUK2 codes, can be changed using the **Security** menu. See page 154 for further details.

Important! Avoid using access codes resembling emergency numbers, such as 112, so that you do not accidentally dial an emergency number.

Phone Password

The Phone lock feature uses the phone password to protect your phone against unauthorised use. The phone password is supplied with the phone and is preset to "00000000" at the factory.

To	See
activate/deactivate the Phone lock feature	page 155.
change the phone password	page 155.

PIN

The **P**ersonal **I**dentification **N**umber or PIN (4 to 8 digits) protects your SIM card against unauthorised use. It is usually supplied with the SIM card.

If you enter an incorrect PIN three times in succession, the code is disabled and cannot be used until you re-enable it by entering the PUK (see below).

To	See
activate/deactivate the PIN check feature	page 154.
change the PIN	page 154.

PUK

The 8-digit PUK (**P**IN **U**nblocking **K**ey) is required to change a disabled PIN. The PUK may be supplied with the SIM card. If not, or you have lost it, contact your service provider.

To re-enable your PIN:

1. Enter the PUK and press the **Ok** soft key or the Centre key.
2. Enter a new PIN of your choice and press the **Ok** soft key or the Centre key.
3. When the **Confirm new PIN** message displays, enter the same code again and press the **Ok** soft key or the Centre key.

If you enter an incorrect PUK ten times in succession, the SIM card becomes invalid. Contact your service provider for a new card.

PIN2

The PIN2 (4 to 8 digits), supplied with some SIM cards, is required to access specific functions, such as setting the maximum cost of a call. These functions are available if supported by your SIM card.

If you enter an incorrect PIN2 three times in succession, the code is disabled and you cannot access the functions until you re-enable it by entering the PUK2.

To change the PIN2, see page 157.

PUK2

The 8-digit PUK2 (**PIN Unblocking Key 2**), supplied with some SIM cards, is required to change a disabled PIN2. If you lose the code, contact your service provider.

To re-enable your PIN2:

1. Enter the PUK2 and press the Centre key or **Ok** soft key.
2. Enter a new PIN2 of your choice and press the **Ok** soft key or the Centre key.
3. When the **Confirm PIN2** message displays, enter the same code again and press the **Ok** soft key or the Centre key.

If you enter an incorrect PUK2 ten times in succession, you will not be able to access the functions requiring the PIN2. Contact your service provider for a new card.

Barring Password

A 4-digit barring password is required when you use the Call Barring function. You can obtain the password from your service provider when you subscribe to this function.

You can change this password in the **Call barring** menu. See page 147 for further details.

Health and Safety Information

SAR Certification Information

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured so as not to exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as SAR (Specific Absorption Rate). The SAR limit recommended by the EU Council is 2.0W/kg.*

The highest SAR value for this model phone was 0.52 W/kg.

* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a new model phone is available for sale to the public, compliance with the European R&TTE Directive must be shown. This directive includes as one of its essential requirements the protection of the health and safety of the user and any other person.

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge, the type of battery and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and – terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, make sure that you are following the special regulations in a given area or country.

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimise potential interference

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call, proceed as follows:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 112 or any other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phones in an aircraft may be dangerous to the operation of the aircraft, and is illegal.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.



Glossary

To help you understand the main technical terms and abbreviations used in this booklet, and to take full advantage of the features of your mobile phone, here are a few definitions:

Active Folder

Ability to answer a call simply by opening the phone.

Call Barring

Ability to restrict outgoing and incoming calls.

Call Diverting

Ability to reroute calls to another number.

Call Holding

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

Call Waiting

Informs you that you have an incoming call when you are engaged on another call.

Caller Line Identification Services (Caller ID)

Services allowing subscribers to view or block the telephone numbers of callers.

EMS (Enhanced Message Service)

An adaptation of the Short Message Service (SMS) that allows you to send and receive ring tones and the service provider's logo, as well as combinations of simple media to and from EMS-compliant handsets. Because EMS is based on SMS, it can use SMS centres the same way that SMS does. EMS works on all Global System for Mobile communications (GSM) networks. EMS senders can use text, melodies, photos, sounds, and animations to enhance the expressive power of messages that are limited by the display constraints of mobile devices.

GPRS (General Packet Radio Service)

New non-voice value-added service that allows information to be sent and received across a mobile telephone network. GPRS provides continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short Message Service (SMS).

GSM (Global System for Mobile Communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

Java

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a *Java applet*. When it is run on a mobile phone or pager, it is called a MIDlet.

MMS (MMS Message Service)

A message service for the mobile environment, standardized by the WAP Forum and the 3rd Generation Partnership Program (3GPP). For phone users, MMS is similar to Short Message Service (SMS)-it provides automatic, immediate delivery of user-created content from phone to phone. The message addressing used is primarily phone numbers, thus the traffic goes from phone to phone. MMS also provides support for e-mail addressing, so that messages can be sent by e-mail. In addition to the text content of SMS, MMS messages can contain still images, voice or audio clips, and also video clips and presentation information.

Multi-party Calling

Ability to establish a conference call involving up to five additional parties.

Phone Password

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

PIN (Personal Identification Number)

Security code that protects the phone against unauthorised use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, as required.

Proxy Server

A proxy server resides between a Web client, such as a web browser, and a real Web server and acts as an intermediary between them. When some people browse a web site, their browser is not actually connecting to the web server. The request from their browser goes to a proxy server, and the proxy server makes the request to the web server.

A proxy server can improve performance for groups of users because it caches the results of all requests for a certain amount of time. If a user requests a web page that it already loaded for another user, it reloads the page instead of forwarding the request to the Web server, which can be a time-consuming operation.

PUK (PIN Unblocking Key)

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

Roaming

Use of your phone when you are outside your home area (when travelling for example).

SDN (Service Dialling Numbers)

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.



SIM (Subscriber Identification Module)

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

SMS (Short Message Service)

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received can be displayed, received, edited or sent.

Soft Keys

Two keys  and  on the phone, the purpose of which:

- varies according to the function that you are currently using.
- is indicated on the bottom line of the display just above the corresponding key.

Voice Mail

Computerised answering service that automatically answers your calls when you are not available, plays a greeting (optionally in your own voice) and records a message.

Index

A

- Access codes • 161
- Active folder • 137
- Alarm • 69
- Alert on call • 144
- Alert type • 141
- Alphabet mode, text input • 36
- Answering
 - call • 28
 - second call • 45
- Anykey answer • 137
- Auto redial • 137

B

- Background image • 138
- Backlight
 - description • 15
 - time, set • 139
- Barring, calls • 147
- Battery
 - charging • 19
 - installing • 18
 - low indicator • 20
 - precautions • 166
 - removing • 17
- Broadcast messages • 96
- Browser, WAP • 60

C

- Calculator • 71
- Calendar memos
 - copying • 120
 - deleting • 120
 - viewing • 120
 - writing • 118
- Call back, message • 89, 90
- Call cost • 130
- Call log
 - dialled • 128
 - missed • 29, 127
 - received • 128

- Call settings • 145
- Call time • 129
- Caller groups
 - editing • 126
 - searching • 125
- Caller ID • 149
- Calls
 - answering • 28
 - barring • 147
 - diverting • 145
 - ending • 23
 - from Contacts • 26
 - holding • 40
 - making • 22
 - redialling • 23
 - rejecting • 28
 - waiting • 45, 148
- Camera
 - playing video • 112
 - recording video • 109
 - taking photos • 105
 - viewing photos • 110
- CB (Cell Broadcast) messages • 96
- Characters, enter • 34
- Charging battery • 19
- Closed user group (CUG) • 149
- Conference call • 45
- Connect tone • 144
- Contacts
 - copying • 123
 - deleting • 123
 - dialling • 26
 - editing • 122
 - options • 122
 - searching • 121
 - speed-dialling • 132
 - storing • 24, 124
- Cost, calls • 130
- Currency converter • 76

D

- Data counter • 131
- Date, set • 152
- Deleting
 - calendar memo • 120
 - call log • 127
 - Contacts • 123
 - MMS message • 89, 92, 94
 - MMS postcard • 93, 94
 - photo • 111
 - SMS message • 90, 92
 - task • 73
 - video • 112
 - voice memo • 75

Delivery reports, message • 103

Dialled calls • 128

Display

- backlight • 15
- external • 16
- icons • 14
- layout • 13
- settings • 138

Diverting, calls • 145

DNS settings • 59

Downloading

- games • 114
- sounds • 116

DTMF tones, send • 43

E

- Earpiece volume • 27
- Emergency calls • 172
- EMS (Enhanced Message Service) • 82
- Error tone • 144
- External display • 16, 139

F

- FDN (Fixed Dial Number) mode • 157
- Folder tone • 143

Forwarding, message

MMS • 89

SMS • 90

Front LCD • 16, 139

G

Games

downloading • 58

playing • 56

Graphic logo • 140

Greeting message • 135

H

Health and safety • 165

Holding, call • 40

I

Icons, description • 14

Images, downloaded • 113

Inbox, messages

MMS • 86

SMS • 90

Infrared, connect • 134

International calls • 22

Internet • 60

J

Java service • 56

K

Key volume • 27

Keypad tones

selecting • 141

sending • 43

Keys

description • 11

location • 10

shortcut • 136

L

- Language, select • 135
- Last number, redial • 23
- live! Studio • 98
- Locking
 - media contents • 156
 - phone • 155
 - SIM card • 157
- Low battery indicator • 20

M

- Memory status
 - Contacts • 133
 - downloaded items • 116
 - MMS messages • 103
 - SMS messages • 103
 - voice memos • 76
- Menus
 - accessing • 48
 - list • 50
- Message tone • 142
- Messages
 - cell broadcast • 96
 - greeting • 135
 - MMS • 77
 - MMS postcard • 84
 - SMS • 82
 - voice • 97
 - web push • 99
- MIDlets, launch • 56
- Minute minder • 144
- Missed calls • 29, 127
- MMS messages
 - creating/sending • 78
 - deleting • 89, 94
 - editing • 94
 - reading • 86, 93
 - setting • 79
- MMS postcard • 84
- Morning call • 69
- Multi-party calls • 45
- Muting
 - all sounds • 31
 - key tones • 43
 - microphone • 42
- My items • 113

N

- Names
 - entering • 34
 - searching/dialling • 121
- Network selection • 153
- Numbers, phone
 - searching/dialling • 121
 - storing • 24, 124

O

- On/off switch, phone • 21
- Outbox, messages
 - MMS • 93
- Own number • 133

P

- Password
 - call barring • 147, 164
 - phone • 155, 161
- Phone
 - care and maintenance • 174
 - display • 13
 - icons • 14
 - keys • 11
 - layout • 10
 - locking • 155
 - password • 161
 - resetting • 137
 - switching on/off • 21
 - unpacking • 9
- Photo
 - deleting • 111
 - taking • 105
 - viewing • 110
- PIN
 - changing • 154
 - description • 162
- PIN2
 - changing • 157
 - description • 163
- Power on/off tone • 143
- Privacy • 156

Index

Problems, solve • 158
PUK • 162
PUK2 • 163
Push messages • 99

R

Received calls • 128
Received messages
 MMS • 86
 SMS • 90
Recording
 videos • 109
 voice memos • 74
Redialling
 automatically • 137
 manually • 23
Resetting phone • 137
Ring tone • 140
Ring type • 141
Ring volume • 141
Road safety • 168
Roaming • 153

S

Safety
 information • 165
 precautions • 7
SAR information • 165
Scheduler • 118
Searching, Contacts • 121
Security, calls • 154
Sent messages
 MMS • 93
 MMS postcard • 94
 SMS • 92
Service light • 16, 139
Shortcut, keys • 136
Silent mode • 31
SIM card
 installing • 17
 locking • 156
SMS message

 creating/sending • 77
 deleting • 90, 104
 reading • 86
 setting • 102

Soft keys • 32
Sound settings • 140
Sounds, downloaded • 115
Speed-dial • 132
Switching on/off
 microphone • 42
 phone • 21
Symbol, text input • 39

T

T9 mode, text input • 37
Tasks, to do list
 creating • 72
 deleting • 73
 editing • 72
Templates
 MMS • 95
 SMS • 95
Text input mode • 35
Text, enter • 34
Time format • 152
Time, set • 152
To do list • 72
Tone
 connect • 144
 error • 144
 folder • 143
 keypad • 141
 message • 142
 minute minder • 144
 power on/off • 143
 ring • 140
Travel adapter • 19

U

User group • 149

V



- Vibration • 141
- Video
 - deleting • 112
 - playing • 112
 - recording • 109
- Vodafone live! • 60
- Vodafone Mail • 98
- Vodafone Messenger • 98
- Voice mail • 97
- Voice memo
 - deleting • 75
 - playing • 75
 - recording • 74
- Voicemail server • 97
- Volume, adjust
 - earpiece • 27
 - keypad tone • 27
 - ring • 141




 



W

- Waiting call • 148
- Wallpaper • 138
- WAP browser
 - access • 60
 - cache, clear • 68
 - favourite • 64
 - settings • 66
- Wireless web • 60
- World time • 152
- Writing messages
 - MMS • 77
 - MMS postcard • 84
 - SMS • 82


Samsung SGH-E310 GPRS Telephone Quick Reference Card


- Access the Menu Functions
- 1 Press the Centre key to enter Menu mode.
 - 2 Scroll using the Navigation keys through the list of the menus until you reach the menu you want.
 - 3 Press the **Select** soft key.
 - 4 Scroll using the Up and Down keys through the list of the options until the one you want is selected.
 - 5 Press the **Select** soft key.

Each of the two soft keys ( and ) performs the function indicated by the text above it, on the bottom line of the display.

Switch On/Off	Press and hold the  key.
Make a Call	<ol style="list-style-type: none"> 1 Enter the number. 2 Press the  key.
End a Call	Briefly press the  key.
View Missed Calls Immediately After Missing Them	<ol style="list-style-type: none"> 1 Open the phone and press the View soft key. 2 Scroll using the Up and Down keys through the missed calls. 3 To return the call, press the  key.
Answer a Call	Open the phone or Press the  key.
Adjust the Volume	Press the  or  key on the left side of the phone.



Choose the Alert Type	<ol style="list-style-type: none"> ① Select the Alert type menu (Menu 9.3.3). ② Select an option: <ul style="list-style-type: none"> • Light only • Melody • Vibration • Vibration+melody ③ Press the Select soft key.
Store Numbers in Contacts	<ol style="list-style-type: none"> ① Enter the number and press the Save soft key. ② Select an icon. ③ Press the Select soft key. ④ Select a memory. ⑤ Press the Select soft key. ⑥ Enter the name. ⑦ Press the OK soft key. ⑧ If necessary, change the location number. ⑨ Press the OK soft key. ⑩ Press the  key to return to Idle mode.

Search for a Number in Contacts	<ol style="list-style-type: none"> ① Select the Contacts list menu (Menu 8.1). ② Enter the first few letters of the name. ③ To scroll through the names, press the Up or Down key. ④ Press the View soft key. ⑤ To scroll through the numbers, press the Up or Down key. ⑥ Press the  key to dial.
Take a Photo	<ul style="list-style-type: none"> • With the phone open <ol style="list-style-type: none"> ① Press and hold the Camera key. ② Press the Camera key. ③ Press the Save soft key. <ul style="list-style-type: none"> • With the phone closed <ol style="list-style-type: none"> ① Press and hold the Camera key. ② Press the Camera key.

Declaration of Conformity (R&TTE)

For the following product:

GSM900/GSM1800 Dualband Digital

Portable Cellular Telephone

(Product description)

SGH-E310

(Model name)

Manufactured at:

Samsung Electronics Co., Ltd, 94-1, Imsoo-Dong, Gumi City, Kyung-Buk, Korea,
730-350

(factory name, address*)

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety : EN 60950:2000

EMC : EN 301 489-01 v1.3.1 (2001-09)
EN 301 489-07 v1.1.1 (2000-09)

SAR : EN 50360:2001
EN 50361:2001

Network : EN 301 511 v9.0.2 (2003-03)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Claremont House, 34 Molesey Road,
Walton-on-Thames, KT12 4RQ, UK

Identification mark: 168

CE 0168

The technical documentation kept at:

Samsung Electronics Euro QA Lab.

which will be made available upon request.

(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK
2004. 03. 16

(place and date of issue)



In-Seop Lee / S. Manager

(name and signature of authorised person)

* This is not the address of the Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.