

\* Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

**SAMSUNG**

**DUAL BAND  
GSM TELEPHONE  
SGH-A400**

**SAMSUNG**

ELECTRONICS



Printed in Korea

Code No.: GH68-02250A

English. 07/2001. Rev. 1.0

World Wide Web  
<http://www.samsungmobile.com>

# Contents

---

<b>Important Safety Precautions</b> .....	7
<b>Unpacking</b> .....	9
<b>Your Phone</b> .....	10
Phone Layout .....	10
Display .....	13
Service Light .....	15
<b>Getting Started</b> .....	16
Your First Call .....	16
Installing the SIM Card .....	17
Charging a Battery .....	19
Switching the Phone On/Off .....	21
Access Codes .....	22
<b>General Functions</b> .....	26
Making a Call .....	26
Adjusting the Volume .....	28
Answering a Call .....	28
Viewing Missed Calls .....	30
<b>Selecting Functions and Options</b> .....	32
Example: Setting the Display Language .....	34
<b>Phonebook</b> .....	36
Storing a Phone Number with a Name .....	36
Speed-Dialling by Memory Location .....	37
Searching for and Dialling a Number in the Phonebook ...	38
Phonebook Options .....	39
<b>Entering Text</b> .....	43
Changing the Text Input Mode .....	44
Using the T9 Mode .....	44
Using the Upper/Lower-Case Character Mode .....	46
Using the Number Mode .....	47

<b>In-Call Options</b> .....	48
Putting a Call on Hold .....	48
Switching the Microphone Off (Mute).....	49
Muting/Sending Key Tones.....	50
Searching for a Number in the Phonebook.....	51
Using the SMS Service .....	52
Answering a Second Call .....	52
Making a Multiparty Call .....	53
<b>Using the Menus</b> .....	55
Using the Navigation Keys .....	55
Using the Index System.....	56
Menu Map.....	57
<b>Call Records</b> .....	62
Missed Calls ( <i>Menu 1.1</i> ) .....	62
Received Calls ( <i>Menu 1.2</i> ).....	62
Dialled Calls ( <i>Menu 1.3</i> ).....	63
Call Time ( <i>Menu 1.4</i> ).....	63
Call Cost ( <i>Menu 1.5</i> ) .....	64
<b>Messages</b> .....	65
Read Messages ( <i>Menu 2.1</i> ).....	65
Write Messages ( <i>Menu 2.2</i> ).....	67
Preset Message ( <i>Menu 2.3</i> ).....	67
Setup ( <i>Menu 2.4</i> ) .....	68
Broadcast ( <i>Menu 2.5</i> ).....	69
Voice Mail ( <i>Menu 2.6</i> ).....	71
<b>Sound Settings</b> .....	72
Ring Tone ( <i>Menu 3.1</i> ).....	72
Melody Composer ( <i>Menu 3.2</i> ).....	72
Ring Volume ( <i>Menu 3.3</i> ).....	74
Alert Type ( <i>Menu 3.4</i> ).....	75
Keypad Tone ( <i>Menu 3.5</i> ).....	75
Message Tone ( <i>Menu 3.6</i> ).....	76

<b>Sound Settings</b> (continued)	
Error Tone ( <i>Menu 3.7</i> ).....	76
Minute Minder ( <i>Menu 3.8</i> ).....	77
Connect Tone ( <i>Menu 3.9</i> ).....	77

<b>Phone Settings</b> .....	78
Screen Saver ( <i>Menu 4.1</i> ).....	78
Infrared Activate ( <i>Menu 4.2</i> ).....	79
Greeting Message ( <i>Menu 4.3</i> ).....	80
Own Number ( <i>Menu 4.4</i> ) .....	80
Language ( <i>Menu 4.5</i> ).....	81
Light ( <i>Menu 4.6</i> ).....	81
Auto Redial ( <i>Menu 4.7</i> ).....	82
Active Flip ( <i>Menu 4.8</i> ).....	82
Anykey Answer ( <i>Menu 4.9</i> ) .....	83
Contrast ( <i>Menu 4.0</i> ).....	83
Reset Settings ( <i>Menu 4.*</i> ).....	83

<b>Organiser</b> .....	84
Calendar ( <i>Menu 5.1</i> ).....	84
To Do List ( <i>Menu 5.2</i> ).....	86
Time & Date ( <i>Menu 5.3</i> ).....	88
Alarm ( <i>Menu 5.4</i> ).....	90
Calculator ( <i>Menu 5.5</i> ).....	91
ShortCut ( <i>Menu 5.6</i> ).....	92

<b>Security</b> .....	93
PIN Check ( <i>Menu 6.1</i> ).....	93
Change PIN ( <i>Menu 6.2</i> ).....	94
Phone Lock ( <i>Menu 6.3</i> ).....	94
Change Password ( <i>Menu 6.4</i> ).....	95
SIM Lock ( <i>Menu 6.5</i> ).....	95
FDN Mode ( <i>Menu 6.6</i> ).....	96
Change PIN2 ( <i>Menu 6.7</i> ).....	96

<b>Network Services</b> .....	97
Call Diverting ( <i>Menu 7.1</i> ) .....	97
Call Barring ( <i>Menu 7.2</i> ) .....	99
Call Waiting ( <i>Menu 7.3</i> ) .....	101
Network Selection ( <i>Menu 7.4</i> ) .....	102
Caller ID ( <i>Menu 7.5</i> ) .....	103
Closed User Group (CUG) ( <i>Menu 7.6</i> ) .....	104
<b>WAP Browser</b> .....	106
<b>Life</b> .....	107
Games ( <i>Menu 9.1</i> ) .....	107
Health ( <i>Menu 9.2</i> ) .....	108
<b>Solving Problems</b> .....	114
<b>Using the Batteries</b> .....	117
Precautions When Using Batteries .....	117
<b>Safety Information</b> .....	119
Road Safety .....	119
Operating Environment .....	119
Care and Maintenance .....	121
Emergency Calls .....	122
<b>Glossary of Terms</b> .....	123
<b>Index</b> .....	127
<b>Quick Reference Card</b> .....	131

## Important Safety Precautions

---

Read these simple guidelines. Failure to comply with them may be dangerous or illegal.

For more detailed safety information, see Safety Information on page 119.

### Road safety comes first

Do not use a hand-held phone while driving; park the vehicle first. Remember that in some countries, it is illegal to use a hand-held phone while driving.

### Switch off when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

### Switch off in aircraft

Mobile phones can cause interference. Using them on aircraft is both illegal and dangerous.

### Respect special regulations

Follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

### Interference

All mobile phones may be subject to radio interference, which may affect their performance.

### Qualified service



Only qualified service personnel must repair cellular equipment. Use only approved accessories and batteries.

# Unpacking

## Use sensibly

Use only in the normal position (held to the ear).  
Avoid unnecessary contact with the antenna when the phone is switched on.

## Emergency calls

Ensure that the phone is switched on and in service.  
Enter the emergency number (112 or another official emergency number) and press the  key. Give your location. Do not end the call until given permission to do so. End the call by closing the flip cover or pressing the  key.

**IMPORTANT!** Use only SAMSUNG-approved accessories.

The use of any other power accessory will invalidate any approval or warranty applying to the phone, and may be dangerous.

When you disconnect the power cord of any accessory, grasp and pull the connector, not the cord.

Your package contains the following items.

### Handset



### Travel Adapter



### Battery



### Hand Strap



### User's Manuals



### Ear-microphone




In addition, you can obtain the following accessories for your phone from your local SAMSUNG dealer:

- Travel adapter
- Simple hands-free kit
- Standard and slim batteries
- Cigarette lighter adapter
- Desktop cradle
- Earphone
- Car holder


# Your Phone

## Phone Layout

The following illustrations show the main elements of your phone.

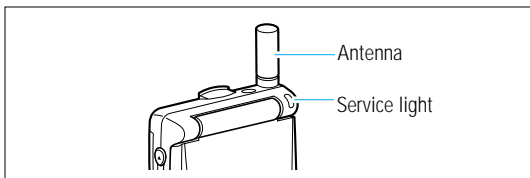

### Key Description

 Perform the functions indicated by the text above them (in the bottom line of the display).  
(soft keys)



*In the menu facility*, scroll through the menu options and phonebook memory.

*When pressed in idle mode*, the ▲ key launches the WAP Browser. The ▼ key accesses your favourite menu options directly (for more information on shortcuts, see page 92).



*In the menu facility*, return to the previous menu level and select the current menu respectively.

*When entering a name*, move the cursor left and right respectively.

*When pressed in idle mode*, access your favourite menu options directly (for more information on shortcuts, see page 92).



Deletes characters from the display.

*In the menu facility*, returns to the previous menu level.

*When held down for more than two seconds in idle mode*, accesses one of your favourite menu options directly (for more information on shortcuts, see page 92).

## Key Description (continued)



Makes or answers a call.

*In idle mode*, recalls the last number dialed.

*In the menu facility*, selects a menu function or stores information that you have entered (such as a name) in the phone or SIM memory.



Ends a call. Also switches the phone on and off when pressed and held.

*In the menu facility*, returns to the idle mode and cancels your input.



*When held down in idle mode*, accesses your voice mailbox.



Enter numbers, letters and some special characters.



Enter special dial characters.



(on the side of the phone)

*During a call*, adjust the earpiece volume.


*In idle mode with the flip cover open*, adjust the key volume.

*In the menu facility*, scroll through the menu options and phonebook memory.

## Display

### Display Layout


The display comprises three areas.

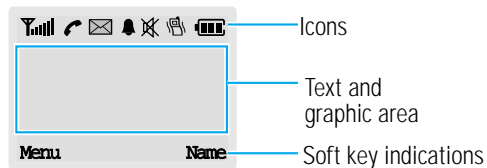

Area	Description
First line	Displays various icons (see below).
Middle lines	Display messages, instructions and any information that you enter (number to be dialled, for example).
Last line	Shows the functions currently assigned to the two soft keys.

## Icons

Icon Description *(continued)*


 Shows the received signal strength. The greater the number of bars, the better the signal strength.

 
 Appears when a call is in progress.


 Appears when a new text message has been received.

 Appears when the Vibrate mode is active.


 Appears when you set the alarm.

 Shows the level of your battery. The more bars you see, the more power you have left.

 Indicates that you have activated the Infrared feature to communicate with an IrDA-compliant device and send or receive data or a fax (for further details, see page 79).

 Appears when you are out of your home area and have registered with a different network (when travelling in other countries, for example).

 Appears when a new voice mail message has been received.

 Appears when you activate the Mute mode.

## Backlight


The display is illuminated by a backlight. When you press any key, the backlight illuminates. It turns off if no key is pressed within a given period of time, depending on the **Back Light** option in the **Phone Settings** menu.

To specify the length of time for which the backlight is active, set the **Back Light** menu option (4.6.1); see page 81 for further details.

## Service Light

The service light is in the top right-hand corner of the phone. It flashes when services are available on the phone.

To activate or deactivate use of the service light, set the **Service Light** menu option (4.6.2); see page 81 for further details.

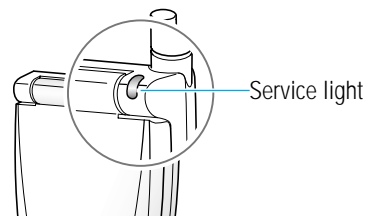




# Getting Started

## Your First Call

The following diagram explains the main steps required when making your first call and indicates the pages on which you can find more detailed instructions.

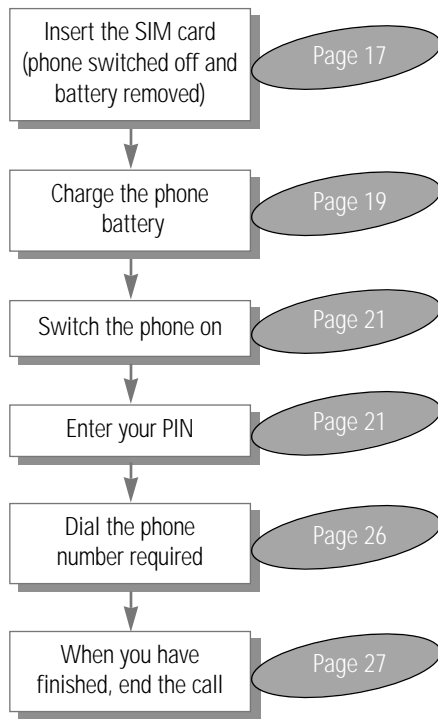


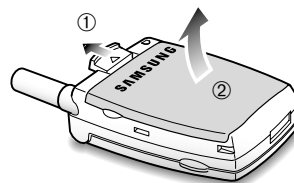
## Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details (PIN, optional services available and so on).


**Important!** The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card.

Keep all SIM cards out of the reach of small children.


1. If necessary, switch off the phone by holding down the  key until the power-off animation is displayed.
2. Remove the battery. To do so:
  - ① Slide the catch above the battery toward the top of the phone and hold it in the position.
  - ② Lift the battery away, as shown.




- Slide the SIM card into the SIM card holder so that the holder locks the card in position.

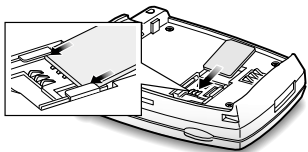

 
**Note:** When you need to remove the SIM card, slide it, as shown and take it out of the holder.



- Insert the tabs on the battery into the notches on the base of the phone.

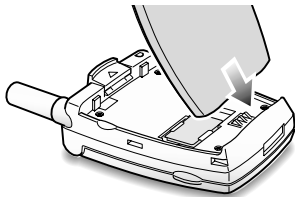

- Push the battery down until it clicks into place. Make sure that the battery is properly installed before switching on the phone.

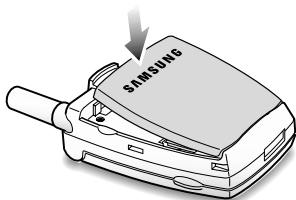


## Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter is provided with your phone. Use only approved batteries and chargers. Ask your local SAMSUNG dealer for further details.

The phone can be used while the battery is charging.

**Note:** You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 200 minutes.


- With the battery in position on the phone, connect the lead from the travel adapter to the bottom of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.

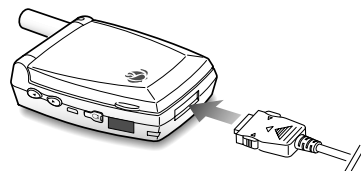

- Connect the adapter to a standard AC wall outlet.


You can see the bar in the display indicating the charging progress.

- When charging is finished, disconnect the adapter from the power outlet and from the phone by pressing the gray tabs on both sides of the connector and pulling the connector out.

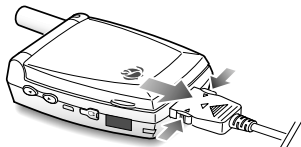


## Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, you will hear a warning tone and a message will be repeated at regular intervals on the display:

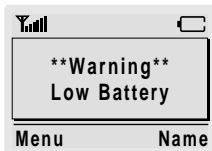


When the battery becomes too weak for the phone to operate, it switches off automatically.


## Switching the Phone On/Off

- Open the phone.
- Hold down the  key for more than one second to switch the phone on.
- If the phone asks for a password, key in the password and press the **OK** soft key. The phone password is factory set to 00000000. For further details, see page 22.
- If the phone asks for a PIN, key in the PIN and press the **OK** soft key. For further details, see page 23.

The phone searches for your network and when it finds it, the idle screen, illustrated below, is displayed. Now, you can make or receive a call.

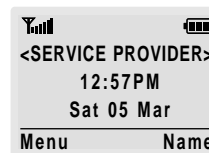

### Notes:

- If your SIM supports the AoC (Advice of Charge) feature or the **Receive** option in the **Broadcast** menu option (see page 69) is set to **Enable**, the current date will be replaced by the received message or AoC information. To retrieve it, press the **C** key once (or twice).
  - The display language is factory set to English. To change the language, use the **Language** menu option (4.5); for further details, refer to page 81.
- When you wish to switch the phone off, hold down the  key for more than two seconds.

## Access Codes

---

There are several access codes that are used by your phone and its SIM card. These codes help you protect the phone against unauthorised use.

When requested for any of the codes explained below, key in the appropriate code (displayed as asterisks) and press the **OK** soft key. If you make a mistake, press the **C** key one or more times until the incorrect digit is cleared and then continue entering the correct code.

The access codes (except for the PUK and PUK2 codes) can be changed using **Security** menu options. See page 92 for further details.

**Important!** Avoid using access codes resembling emergency numbers, such as 112, so that you do not dial an emergency number accidentally.

### Phone Password

The Phone Lock feature uses the phone password to protect your phone against unauthorised use. The phone password is supplied with the phone and is factory set to 00000000.

To...	Refer to page...
Activate/deactivate the Phone Lock feature	94 (menu option <b>6.3</b> ).
Change the phone password	95 (menu option <b>6.4</b> ).

### PIN

The **Personal Identification Number** or PIN (4 to 8 digits) protects your SIM card against unauthorised use. It is usually supplied with the SIM card.

If you enter an incorrect PIN three times in succession, the code is disabled and cannot be used until you re-enable it by entering the PUK (see below).

To...	Refer to page...
Activate/deactivate the PIN Check feature	93 (menu option <b>6.1</b> ).
Change the PIN	94 (menu option <b>6.2</b> ).

### PUK

The 8-digit PUK (**Personal Unblocking Key**) is required to change a disabled PIN. The PUK may be supplied with the SIM card. If not, or you have lost it, contact your service provider.

To re-enable your PIN, proceed as follows.

1. Key in the PUK and press the **OK** soft key.
2. Enter a new PIN of your choice and press the **OK** soft key.
3. When the **Confirm New PIN** message is displayed, key in the same code again and press the **OK** soft key.

If you enter an incorrect PUK ten times in succession, the SIM card becomes invalid. Contact your service provider for a new card.

## PIN2

The PIN2 (4 to 8 digits), supplied with some SIM cards, is required to access specific functions, such as setting the maximum cost of a call. These functions are available if supported by your SIM card.

If you enter an incorrect PIN2 three times in succession, the code is disabled and you cannot access the functions until you re-enable it by entering the PUK2.

To change the PIN2, refer to page 96 (menu option **6.7**).

## PUK2

The 8-digit PUK2 (**P**ersonal **U**nblocking **K**ey **2**), supplied with some SIM cards, is required to change a disabled PIN2. If you lose the code, contact your service provider.

To re-enable your PIN2, proceed as follows.

1. Key in the PUK2 and press the **OK** soft key.
2. Enter a new PIN2 of your choice and press the **OK** soft key.
3. When the **Confirm PIN2** message is displayed, key in the same code again and press the **OK** soft key.

If you enter an incorrect PUK2 ten times in succession, you will not be able to access the functions requiring the PIN2. Contact your service provider for a new card.

## Barring Password

The 4-digit barring password is required when you use the Call Barring function. You obtain the password from your service provider when you subscribe to this function. See page 99 for further details.


# General Functions

## Making a Call

When the idle screen is displayed, key in the area code and phone number and press the  key.

**Note:** If you have set the **Auto Redial** menu option (4.7) to **ON** (see page 82) and the person called does not answer or is already on the phone, the number is redialled automatically up to ten times.


## Making International Calls

1. Press and hold down the **0** key.  
The + character appears.
2. Key in the country code, area code and phone number and press the  key.

## Correcting the Number

To clear...	Then...
The last digit displayed	Press the <b>C</b> key.
Any other digit in the number	Press the <b>◀</b> or <b>▶</b> key until the cursor is immediately to the right of the digit to be cleared. Press the <b>C</b> key. You can also insert a missing digit simply by pressing the appropriate key.
The whole display	Hold down the <b>C</b> key for more than one second.

## Ending a Call


When you have finished your call, briefly press the  key.


## Making a Call from the Phonebook

You can store the names and phone numbers dialled regularly in the SIM card and phone memory, called the phonebook. You then simply select the required name to recall the associated number. For further details on the Phonebook feature, refer to page 36.

## Redialling the Last Number



The phone stores the last 10 numbers dialled. To recall any of these numbers, proceed as follows.


1. If you have typed any characters on the display, clear the display by holding down the **C** key for more than one second.
2. Press the  key to display a list of the last numbers dialled.
3. Use the **▲** or **▼** keys to scroll through the numbers until the required number is highlighted.
4. **To...**

 
 
<p>Dial the number highlighted</p> <p>Edit the number highlighted</p>	<p><b>Then...</b></p> <p>Press the  key.</p> <ul style="list-style-type: none"> <li>• Press the <b>Edit</b> soft key.</li> <li>• Change the number as required, referring to Correcting the Number on page 26 for further details.</li> </ul>
---	--

## Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the volume keys on the left side of the phone.


Press the  key to increase and the  key to decrease the volume.

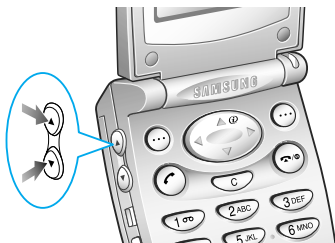


In idle mode with the flip cover open, you can adjust the key volume using the  and  keys.


## Answering a Call

When somebody calls you, the phone rings and the phone icon in the middle of the screen flashes.

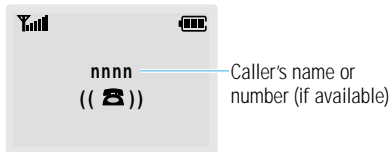


If the caller can be identified, the caller's phone number (or name if stored in your phonebook) is displayed. If the caller cannot be identified, only the phone icon flashes.

1. If necessary, open the flip. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Anykey Answer** menu option (4.9) is set to **ON**, you can press any key to answer a call except for the  key and the **Reject** soft key (see page 83).

### Notes:

- To reject an incoming call, press and hold the volume keys on the left side of the phone without opening the flip.
  - If the **Active Flip** menu option (4.8) is set to **Enable**, you do not need to press any key. You can answer the call simply by opening the flip (see page 82).
2. End the call by closing the phone or pressing the  key.

**Note:** You can answer a call while using the phonebook or menu features.

## Viewing Missed Calls

---

If you are unable to answer a call for any reason, you can find out who was calling you, provided that this service is available. In this way, you can call the person back, if necessary.

The number of missed calls is displayed on the idle screen immediately after the call was missed.

To view the missed call immediately, proceed as follows.

1. If the phone is closed, open the flip cover.
2. Press the **View** soft key.

The number corresponding to the most recent missed call is displayed, if available.

### 3. **To...** **Then press the...**

Scroll through the missed calls **▲** and **▼** keys.

Call the number displayed **☎** key.

Edit or delete a missed call number **Select** soft key (see next page).

## Editing a Missed Call Number

**Note:** If the number corresponding to the missed call is not available, the **Edit Number** option is not displayed.

1. Press the **Options** soft key.
2. If necessary, press the **▲** or **▼** key to highlight the **Edit Number** option.
3. Press the **Select** soft key.
4. Change the number as required.

### 5. **To...** **Then press the...**

Call the number **☎** key.

Store the number **Save** soft key and enter the name and location required (for further details, refer to page 36).

## Deleting a Missed Call


1. Press the **Options** soft key.
2. If necessary, press the **▲** or **▼** key to highlight the **Delete** option.
3. Press the **Select** soft key.

You can press the **⏏** key at any time to exit the Missed Call feature.

**Note:** You can access the Missed Call feature at any time by selecting the **Missed Calls** menu option (1.1); for further details, see page 62.




# Selecting Functions and Options

Your phone offers a set of functions that allow you to customise your phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked . Each menu and sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the display just above each key indicates its current role.

Example:

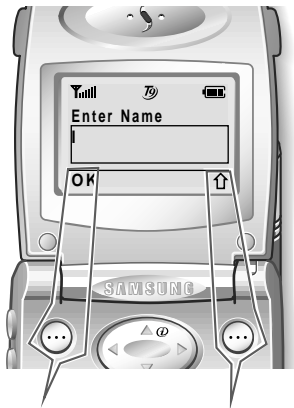

Press the left soft key to save the name entered.

Press the right soft key to change the text input mode.

To view the various functions/options available and select the one required, proceed as follows.

1. Press the appropriate soft key.

2. **To...**

Select the:

- Function displayed
- or
- Option highlighted

View the next function or highlight the next option in a list

Move back to the previous function or option in a list

Move back up one level in the structure



Exit the structure without changing the settings

**Then press the...**

**Select** soft key or  key.

 key or  key on the left side of the phone.

 key or  key on the left side of the phone.

 key,  soft key or **C** key.


/0 key.

In some functions, you may be asked for a password or PIN. Enter the required code and press the **OK** soft key.

**Note:** When you access a list of options, your phone highlights the current option. If, however, there are only two options, such as On/Off or Enable/Disable, your phone highlights the option that is not currently active, so that you can select it directly.

## Example: Setting the Display Language


1. When the idle screen is displayed, press the **Menu** soft key to enter the menu facility.

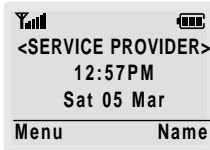

2. Scroll through the menus until you reach the **Phone Settings** menu, by pressing the ▲ and ▼ keys.




3. To select the **Phone Settings** menu, press the **Select** soft key or ► key.

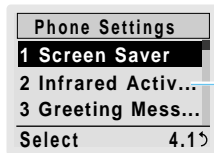


If the menu name is too long for the display, it is scrolled when highlighted.

4. Scroll through the sub-menus until you reach the **Language** sub-menu, by pressing the ▲ and ▼ keys.

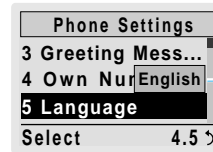

Shows the current setting

5. To view the languages available, press the **Select** soft key or the ► key. The current setting is highlighted.

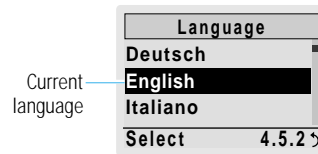

Current language

6. Scroll through the list of languages until the appropriate one is highlighted, by pressing the ▲ and ▼ keys.
7. Press the **Select** soft key or the ► key to confirm your selection.
8. Press the **C** or ◀ key twice to exit the menu structure.

# Phonebook

You can store phone numbers and their corresponding names in the memory of your SIM card. In addition, you can store up to 99 numbers and names in the phone memory. The SIM card and phone memories, although physically separate, are used as if they were a single entity, called the phonebook.

## Storing a Phone Number with a Name

As soon as you start to enter a number, **Save** appears above the left soft key to allow you to store the number in the phonebook.

1. Key in the number to be stored.

**Note:** If you make a mistake while entering a number, correct it using the **C** key. For further details, refer to page 26.

2. When you are sure that it is correct, press the **Save** soft key.
3. Enter the corresponding name (the maximum length depends on your SIM card). For information on how to enter a name, see page 43.
4. When you are satisfied, press the **OK** soft key. The phone now displays the first free location in the last memory used to save a number and name. If that memory is full, the first free location in the other memory is displayed.
5. Press the right soft key to toggle between the phone (**To Phone**) and card (**To Card**) memories.

6. If you do not want to save the number and name in the suggested location, press the **C** key to clear the location number and enter your preferred location by pressing the number keys.
7. Press **OK** to store the name and number.
8. Press **⏪/⊕** to return to the idle screen.

## Speed-Dialling by Memory Location

Once you have stored phone numbers in the SIM card, you can dial them easily whenever you want.

To speed-dial a number, proceed as follows.

### To speed-dial number in locations...

To speed-dial number in locations...	Then...
2 to 9	Press and hold down the appropriate key.
10 and above	<ul style="list-style-type: none"> <li>• Press the appropriate keys, followed by the <b>#</b> key. The display shows the name, phone number and location.</li> <li>• To dial the number, press the <b>Dial</b> soft key.</li> </ul>

**Note:** Memory location 1 is reserved for your Voice Mail server number.


## Searching for and Dialling a Number in the Phonebook

---

1. When the idle screen is displayed, press the **Name** soft key. You are asked to enter a name.
2. Enter the start of the name that you wish to find and press the **Search** soft key.

**Note:** You can also scroll through the phonebook from the beginning, by pressing the **Search** soft key directly.

The phonebook entries are listed, starting with the first entry matching your input. This entry is also highlighted.

- |  |   |
|--|---|
| 3. <b>To...</b>                                  | <b>Then press the...</b>  |
| View the highlighted entry                       | <b>View</b> soft key.   |
| Select a different entry                         | ▲ or ▼ key one or more times until the required entry is highlighted. |
| Look for a name starting with a different letter | Key labelled with the required letter.                                |
4. Once you have found the required entry, press the  key to dial the number.

## Phonebook Options

---

When storing or viewing a number in the phonebook, **Options** appears above the left soft key to allow you to access the phonebook options, described in the following paragraphs.

### Accessing the Options


To access the various phonebook options, proceed as follows.

1. Press the **Options** soft key. The first available option is highlighted.

- |                               |  |
|-------------------------------|--|
| 2. <b>To...</b>               | <b>Then press the...</b>   |
| Select the highlighted option | <b>Select</b> soft key or ► key.                                       |
| Highlight a different option  | ▲ or ▼ key one or more times until the required option is highlighted. |

### Paste

This option allows you to paste the phonebook number into the normal dialling mode. Use this option to dial a number similar to one in the phonebook (a different extension in the same office for example).

Use the **C** key to change the number as required (refer to page 26 for further details). When you are ready to dial, press the  key.

## Edit

This option allows you to edit a number and name stored in the phonebook.

## Erase

This option allows you to erase a number and name stored in the phonebook. You are asked to confirm that you wish to erase the name and number from the phonebook by pressing the **Yes** soft key.

## Copy

This option allows you to copy a phonebook number to another location. Use this option to store a number similar to one already in memory; once copied, edit the number and store it in the phonebook.

## Caller Group

You can set the phone to ring in a specific way and display a preselected graphic icon when a particular person calls you. To do so, you must:

- Define your caller groups
- Assign the numbers in the phonebook to the appropriate group

### Defining a caller group

You can define up to five caller groups.

1. In the idle mode, press the **Name** soft key.
2. Press the **Options** soft key.

3. Select the **Caller group** option.
4. Select the group to be defined.
5. Set the appropriate options.

The following options are available.

**Call ring tone:** allows you to select the ring tone to be used when you receive a voice phone call from a person in the group.

**SMS tone:** allows you to select the ring tone to be used when you receive a text message from a person in the group.

**Graphic:** allows you to select the graphic icon to be displayed when you receive a call from a person in the group.

**Group Name:** allows you to assign a name to the group; for further details on how to enter characters, refer to page 43.

### Assigning numbers to a group

1. View the required number in the phonebook.
2. Press the **Options** soft key.
3. Select the **Caller Group** option.
4. Select the required group.

To remove a number from a group, select the **No Group** option.

## Memory Status

You can check how many names and numbers are stored in the phonebook (card and phone memories). Proceed as follows.

1. In the idle mode, press the **Name** soft key.
2. Press the **Options** soft key.
3. Select the **Memory Status** option.
4. Press **Next** to toggle between the card and phone memories.

## SDN

You can view the list of Service Dialling Numbers (SDN) assigned by your network provider. Such numbers include the emergency, directory enquiries and voice mail numbers.

1. In the idle mode, press the **Name** soft key.
2. Press the **Options** soft key.
3. Select the **SDN** option.
4. Scroll through the numbers using the ▲ and ▼ keys.
5. To dial the number displayed, press the **Dial** soft key.


**Note:** This option is available only when your SIM card supports Service Dialling Numbers (SDN).

## Entering Text

When using your phone, you will often need to enter text. For example, when storing a name in the phonebook, creating your personal greeting or scheduling events in your calendar. You can enter alphanumeric characters by using your phone's keypad.

You are provided with the following text input modes.

- **T9 mode**

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter - when you press the  key once, J, K or L may be displayed. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional upper/lower-case character modes.

- **Upper/lower-case character modes**


These modes allow you to enter letters by pressing the key labelled with the required letter once, twice or three times until the letter is displayed.

- **Number mode**

This mode allows you to enter numbers.

## Changing the Text Input Mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the display.

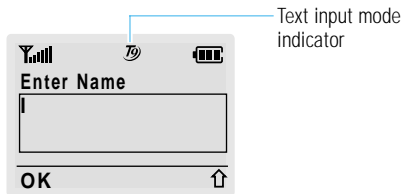

### To select...

Upper-case characters

**A** is displayed. See page 46.

Lower-case characters

**a** is displayed. See page 46.

Numbers only

**1** is displayed. See page 47.

The T9 mode

**T9** is displayed. See below.

Then press the **↑** soft key until...

## Using the T9 Mode

The T9 predictive text input mode allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys **2 ABC** to **9 WXYZ**. Press each key only once for one letter.

Example: to enter *HELLO* in the T9 mode, press

**4 OH**, **3 DEF**, **5 JK**, **5 JKL** and **6 MNO**.

The word that you are typing appears in the display. It may change with each key that you press.

2. Type to the end of the word before editing or deleting any keystrokes.
3. If the word is correct, start entering the next word.

 
Otherwise, press **0 +**, **▲** or **▼** repeatedly to display alternate word choices for the keys that you have pressed.

Example: *OF* and *ME* both share the sequence **6 MNO**, **3 DEF**. The phone displays the most commonly used choice first.

4. Complete each word with a space by pressing the **#** key.
  - To type words not found in the T9 mode, change the text input mode to the upper/lower-case character input mode.

- To enter full stops, hyphens or apostrophes, press . The T9 mode applies grammar rules to ensure that the correct punctuation is used.

Example: is used twice to display two punctuation marks:



- To change the case in the T9 mode, use the \* key.
- You can move the cursor by using the ◀ and ▶ keys. To delete letters, press the C key. Press and hold down the C key to clear the display.

## Using the Upper/Lower-Case Character Mode

Use the to keys to enter your text.

- Press the key labelled with the required letter:
  - Once for the first letter
  - Twice for the second letter
  - And so on
- Select the other letters in the same way.

**Note:** The cursor moves to the right when you press a different key. When entering the same letter twice (or a different letter on the same key), just wait for a few seconds for the cursor to move right automatically, and then select the next letter.

Refer to the table below for more information on the characters available using the keys.

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	Space . 1 ! ? & i ç \$	. % @ _ £ \$ ¥ ¢ \$
2	A B C 2 Ä Å Æ Ç Γ	a b c 2 à á â æ Γ
3	D E F 3 É Δ Φ	d e f 3 è é Φ
4	G H I 4 Θ Ψ	g h i 4 ì Ψ
5	J K L 5 Λ	j k l 5 Λ
6	M N O 6 Ñ Ò Ö ö	m n o 6 ñ ò ö ö
7	P Q R S 7 Π Σ Ξ	p q r s 7 β Σ Ξ
8	T U V 8 Û Ü	t u v 8 ù ü
9	W X Y Z 9 Ω	w x y z 9 Ω
0	0 * # , ; ' " =	/ : - + ( ) < >

- To insert a space, press the # key.
- You can move the cursor by using the ◀ and ▶ keys. To delete letters, press the C key. Press and hold down the C key to clear the display.

## Using the Number Mode

The Number mode enables you to enter numbers in a text message (a telephone number for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.



# In-Call Options

Your phone provides a number of control functions that you can use during a call.


## Putting a Call on Hold

---

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if this service is supported by the network. Of these two calls, one is active and the other is on hold and you can swap between the calls.

To place a call on hold, simply press the **Hold** soft key. You can reactivate the call whenever you want, by pressing the **Unhold** soft key.

To make a call while you have a call in progress, proceed as follows.


1. Key in the phone number that you wish to dial or look it up in the phonebook.
2. Press the  key to dial the second call. The first call is automatically put on hold.

Or alternatively, proceed as follows.

1. Put the current call on hold by pressing the **Hold** soft key.
2. Make the second call in the normal way.

To swap between the two calls, simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with the other party.

When you have finished, end each call normally by pressing the  key.


## Switching the Microphone Off (Mute)

---

You can temporarily switch your phone's microphone off, so that the other party cannot hear you.

Example: You wish to say something to another person in the room but do not want the other party to hear you.

To switch the microphone off temporarily, proceed as follows.

1. Press the **Options** soft key.
2. If necessary, press the  key to highlight the **Mute** option.
3. Press the **OK** soft key.

The other party can no longer hear you.

To switch the microphone back on, proceed as follows.

1. Press the **Options** soft key.
2. If necessary, press the ▼ key to highlight the **Unmute** option.
3. Press the **OK** soft key.

The other party can hear you again.

## Muting/Sending Key Tones

---

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the key tones. It allows you to press keys without hearing annoying key tones during a call.

**Note:** To communicate with answering machines or computerised telephony systems, the **Send keys** option must be selected.

## Searching for a Number in the Phonebook

---

You can search for a number in the phonebook during a call.

1. Press the **Options** soft key.
2. Press the ▼ key to highlight the **Phonebook** option.
3. Press the **OK** soft key.  
The phonebook entries are listed.
4. Enter the name that you wish to find.

If you enter the start of the name, all phonebook entries are listed, starting with the first entry matching your input. The entry is also highlighted.

5. To view the highlighted entry, press the **View** soft key.

For a more detailed description of the Phonebook feature, refer to page 36.

## Using the SMS Service

---

If you receive an SMS (Short Message Service) message during a call, the message icon (✉) flashes in the display. The **SMS Service** option enables you to use this feature.

**Read Messages:** allows you to read the messages that you have received.

**Write Messages:** allows you to write a message.



For further details on the SMS service, refer to page 65.

## Answering a Second Call

---

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the **Call Waiting** menu option (7.3) to **Activate** (see page 101). You will be notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress, proceed as follows.

1. Press the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Swap** soft key.  
To end a held call, press the **Options** soft key and select the **End Held Call** option.
3. To end the current call, press the  key.

## Making a Multiparty Call

---

A multiparty call is a network service that allows up to six people to take part simultaneously in a multiparty or conference call. For more information, contact your service provider.

### Setting up the Multiparty Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multiparty call, press the **Options** soft key and select the **Join** option.
4. To add a new person to the multiparty call, call the person in the normal way, then press the **Options** soft key and select the **Join** option.

You can add incoming callers by answering the call and pressing **Options**, followed by **Join**. Repeat as required.

### Having a Private Conversation With One Participant

1. Press the **Options** soft key and choose the **Select one** option.  
The list of call participants appears.

2. Highlight the required person, by pressing the ▲ or ▼ key, followed by the **Select** soft key or the ↩ key.
3. Select **Private**.  
Now you can talk privately with that person. The other participants can continue to converse with each other.
4. To return to the multiparty call, press the **Options** soft key and select **Join**.  
All the multiparty call participants can now hear each other.

### Dropping One Participant

1. Press the **Options** soft key and choose the **Select one** option.  
The list of call participants appears.
2. Highlight the required person, by pressing the ▲ or ▼ key, followed by the **Select** soft key or the ↩ key.
3. Select **Remove**.  
The call is ended with that participant, but you can continue to talk with the other participants.
4. End the multiparty call by closing the phone or pressing the ⏏/ⓧ key.

## Using the Menus

The phone offers a range of functions that allow you to tailor the phone to your needs. These functions are arranged in menus and sub-menus.

The menus and sub-menus can be accessed by using the navigation keys or by using the index system.

### Using the Navigation Keys

The navigation keys are used as follows.

Key	Purpose
▼	Moves to the next option on the same level as the one displayed.
▲	Moves to the previous option on the same level as the one displayed.
▶	Selects the option displayed.
◀	Goes back to the previous menu level.

You can also use the ⏪ and ⏩ keys on the left side of the phone to move to the next or previous option on the same level as the one displayed.

Example: accessing the **Language** option.

1. Press the **Menu** soft key.
2. Scroll through the menus by using the ▲ and ▼ keys until **Phone Settings** is displayed, then press the **Select** soft key or the ▶ key.

3. Scroll through the options by pressing the ▲ and ▼ keys until **Language** is displayed, then press the **Select** soft key or the ► key.

The languages available are displayed.

## Using the Index System

Each menu option is assigned a hierarchical number. You can use this number to access the corresponding option directly. Simply press the **Menu** soft key and key in the required number.

Example: accessing the **Language** option.

1. Press the **Menu** soft key.
2. Press **40\***.
3. Press **53\***.

The languages available are displayed directly.

The numbers assigned to each option are indicated on the following menu map.


## Menu Map

The following illustration shows the menu structure available and indicates the:


- Number assigned to each option
- Page on which you can find a description of each feature

**Note:** If you use a SIM AT card that provides additional services, the **SIM AT** menu (**0**) is displayed first when you press the **Menu** soft key to enter the menu facility. For further details, refer to your SIM card documentation.

### 1. Call Records (see page 62)

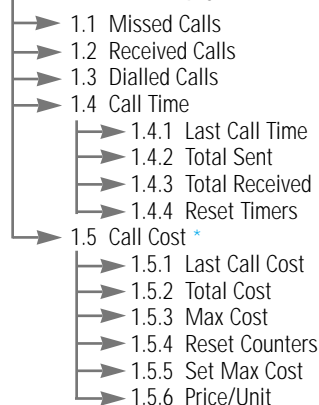

### 2. Messages (see page 65)

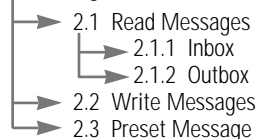

\* Shown only if supported by your SIM card.

**2. Messages (continued)**

- 2.4 Setup
  - 2.4.1 Setting 1 \*
  - 2.4.2 Setting 2 \*
  - 2.4.3 Common Setting
- 2.5 Broadcast
  - 2.5.1 Read
  - 2.5.2 Receive
  - 2.5.3 Channel List
    - 2.5.3.1 Select
    - 2.5.3.2 Add Channel
    - 2.5.3.3 Delete
    - 2.5.3.4 Edit
  - 2.5.4 Language
- 2.6 Voice Mail
  - 2.6.1 Connect to Voice Server
  - 2.6.2 Voice Server

**3. Sound Settings (see page 72)**

- 3.1 Ring Tone
- 3.2 Melody Composer
- 3.3 Ring Volume
- 3.4 Alert Type
- 3.5 Keypad Tone
- 3.6 Message Tone
- 3.7 Error Tone
- 3.8 Minute Minder
- 3.9 Connect Tone

**4. Phone Settings (see page 78)**

- 4.1 Screen Saver
- 4.2 Infrared Activate
- 4.3 Greeting Message
- 4.4 Own Number
- 4.5 Language

**4. Phone Settings (continued)**

- 4.6 Light
- 4.7 Auto Redial
- 4.8 Active Flip
- 4.9 Anykey Answer
- 4.0 Contrast
- 4.\* Reset Settings

**5. Organiser (see page 84)**

- 5.1 Calendar
- 5.2 To Do List
- 5.3 Time & Date
  - 5.3.1 Set Time
  - 5.3.2 Set Date
  - 5.3.3 World Time
  - 5.3.4 Format
- 5.4 Alarm
  - 5.4.1 Once Alarm
  - 5.4.2 Daily Alarm
  - 5.4.3 Weekly Alarm
  - 5.4.4 Remove Alarm
  - 5.4.5 Autopower
- 5.5 Calculator
- 5.6 ShortCut
  - 5.6.1 Key down
  - 5.6.2 Key right
  - 5.6.3 Key left
  - 5.6.4 C long press

**6. Security (see page 93)**

- 6.1 PIN Check
- 6.2 Change PIN
- 6.3 Phone Lock
- 6.4 Change Password
- 6.5 SIM Lock
- 6.6 FDN Mode \*
- 6.7 Change PIN2 \*

---

\* Shown only if supported by your SIM card.

## 7. Network Services (see page 97)

- 7.1 Call Diverting
  - 7.1.1 Divert Always
  - 7.1.2 Busy
  - 7.1.3 No Reply
  - 7.1.4 Unreachable
  - 7.1.5 Cancel All
- 7.2 Call Barring
  - 7.2.1 All Outgoing
  - 7.2.2 International
  - 7.2.3 International Except to Home
  - 7.2.4 All Incoming
  - 7.2.5 Incoming While Abroad
  - 7.2.6 Cancel All
  - 7.2.7 Change Barring Password
- 7.3 Call Waiting
  - 7.3.1 Voice Calls
  - 7.3.2 Cancel All
- 7.4 Network Selection
  - 7.4.1 Automatic
  - 7.4.2 Manual
- 7.5 Caller ID
  - 7.5.1 Default
  - 7.5.2 Hide Number
  - 7.5.3 Send Number
- 7.6 Closed User Group
  - 7.6.1 Index List
  - 7.6.2 Outside Access
  - 7.6.3 Default Group
  - 7.6.4 Deactivate \*

## 8. WAP Browser (see page 106)

- 8.1 Home
- 8.2 Favorite
- 8.3 http://
- 8.4 Settings
- 8.5 Clear Cache

## 9. Life (see page 107)

- 9.1 Games
- 9.2 Health
  - 9.2.1 Bio Rhythm
    - 9.2.1.1 Today
    - 9.2.1.2 Special day
    - 9.2.1.3 Setup
    - 9.2.1.4 Help
  - 9.2.2 Fatness
    - 9.2.2.1 Calculate
    - 9.2.2.2 Help
  - 9.2.3 Calorie
    - 9.2.3.1 Daily Work
    - 9.2.3.2 Exercise
    - 9.2.3.3 Total
  - 9.2.4 Pink Schedule
    - 9.2.4.1 My Schedule
    - 9.2.4.2 Friend's Schedule
    - 9.2.4.3 Setup

\* Shown only if the Closed User Group feature is activated.

# Call Records

Via this menu, you can view the phone calls:

- Missed
- Received
- Dialed

The number and name (if available) are displayed, together with the date and time at which the call was made.

**Note:** Your phone can keep up to ten numbers in each list.

## Missed Calls

*Menu 1.1*

This option lets you view the last 10 unanswered calls. You can also:

- Edit the number if available and dial it or save it in the phonebook
- Delete the call from the list

## Received Calls

*Menu 1.2*

This option lets you view the last 10 phone calls received. You can also:

- Edit the number if available and dial it or save it in the phonebook
- Delete the call from the list

## Dialed Calls

*Menu 1.3*

This option lets you view the last 10 numbers dialed.

You can also:

- Delete the number
- Edit the number and save it in the phonebook
- Redial the number

## Call Time

*Menu 1.4*

This option lets you view the timers for calls made and received. The following timers are available.

**Last Call Time:** length of the last call.

**Total Sent:** total length of all calls made since the timer was last reset.

**Total Received:** total length of all calls received since the timer was last reset.

**Reset Timers:** option used to reset the call timers; you must first enter the phone password (see page 22) and then press the **OK** soft key.

**Note:** The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing purposes and so forth.



## Call Cost <sup>\*</sup>

Menu 1.5

This network feature lets you view the cost of calls. The following options are available.

**Last Call Cost:** cost of the last call made.

**Total Cost:** total cost of all calls made since the cost counter was last reset. If the total cost exceeds the maximum cost set via the **Set Max Cost** option, you can no longer make any calls until you reset the counter.

**Max Cost:** maximum cost set via the **Set Max Cost** option (see below).

**Reset Counters:** option used to reset the cost counter; you must first enter your PIN2 (see page 24) and then press the **OK** soft key.


**Set Max Cost:** option used to enter the maximum cost that you authorise for your calls.

**Price/Unit:** option used to set the cost of one unit; this price per unit is applied when calculating the cost of your calls.

<sup>\*</sup> Shown only if supported by your SIM card.

# Messages

The SMS (Short Message Service) function is a network service and may not be supported by your network. Messages can be sent by text, fax, Email and paging messaging systems, provided that these services are supported by your network. To send text messages by phone, you must obtain the number of the SMS centre from your service provider.

When the  icon appears, you have received new text messages. If the message memory is full, an error message is displayed and you cannot receive any new messages. Use the **Delete** option in the **Read Messages** menu (2.1) to delete obsolete messages.

## Read Messages

Menu 2.1

Two message boxes are available.

**Inbox:** used to store the messages that you have received.

**Outbox:** used to store the messages that you have already sent or will send.

Select the required box. The list of messages in the box is displayed.

To view a message, highlight it in the list using the ▲ and ▼ key and press the **View** soft key. The screen shows the:

- Sender's phone number (if sent with the message) or name if it is available in your phonebook (inbox only)
- Date and time at which the message was received (inbox only)
- Message text

To scroll through the message, press the ▲ and ▼ keys.

You can choose the following options, by pressing the **Options** soft key.

**Delete:** allows you to delete obsolete messages.

**Text Reply** (inbox only): allows you to reply by sending a text message. You can also change the SMS centre number (if required).

**Call Back** (inbox only): allows you to call the sender back.

**Cut Number:** allows you to extract a number from the message text, so that you can call the number or save it in the phonebook.

**Send:** allows you to send a message that you have received or saved. You can:

- Send the message
- Save and send the message
- Save but not send the message

**Edit Message:** allows you to edit a message.

**Note:** The options available vary, depending on the message status (new/old, not sent or sent for example).

## Write Messages

*Menu 2.2*

Via this menu, you can write text messages of up to 160 alphanumeric characters.

**Note:** For further information on how to enter the characters in your message, refer to page 43.

After you complete the message, you can select the following options.

**Send Only:** enter the destination and select a setting group in which you set up default information on the SMS feature via the **Setup** menu (see the following page).

**Save and Send:** allows you to save a copy of the message and then send the message to the required destination. You are also required to select a setting group. You can read the message in your outbox using the **Read Messages** option.

**Save Only:** allows you to save the message so that it can be sent later. You can read the message in your outbox using the **Read Messages** option.

## Preset Message

*Menu 2.3*

Using this menu, you can preset up to five messages that you use most frequently. This menu shows the preset message list. Scroll through the list using the ▲ and ▼ keys. When the required message number appears, press the **Options** soft key.

**Edit:** allows you to write a new message or edit the selected preset message.

**Note:** For further information on how to enter the characters in your message, refer to page 43.

**Send Message:** allows you to recall the selected message. Once you have completed the message, you can send, save and send, or simply save it.

**Delete:** allows you to delete the selected message. You are asked to confirm the deletion by pressing the **Yes** soft key.

## Setup

### Menu 2.4

Via this menu, you can set up default SMS information. A setting group is a collection of settings required to send messages. The number of setting groups available depends on the capacity of your SIM card.

**Setting x** (where **x** is the setting group number): each group has its own sub-menu.

Service Centre: allows you to store or change the number of your SMS centre required when sending messages. You must obtain this number from your service provider.

Default Type: allows you to set the default message type (Text, Fax, Email and Paging). The network can convert the messages into the selected format.

Default Validity: allows you to set the length of time for which your text messages will be stored at the message centre while attempts are made to deliver them to you.

Setting Name: allows you to give a name to the setting group currently being defined.

**Common Setting:** two options are available.

Reply Path: allows the recipient of your SMS message to send you a reply message via your message centre, if the service is provided by the network.

Delivery Reports: allows you to activate or deactivate the report function. When this function is activated, the network informs you whether your message has been delivered or not.

## Broadcast

### Menu 2.5

This network service allows you to receive text messages on various topics, such as the weather or traffic. Messages are displayed immediately they are received, provided that:

- The phone is in the idle mode
- The **Receive** option is set to **Enable**
- The message channel is currently active in the channel list

**Note:** When the received message are displayed in idle mode, pressing the **C** key retrieves the current date.

The last ten messages are also stored for later retrieval.

The following options are available.

**Read:** lets you view the first message. Scroll through the message using the ▲ and ▼ keys. At the end of the message, press the **Next** soft key to move to the next message.

**Receive:** allows you to enable or disable the reception of broadcast messages.

**Channel List:** allows you to indicate the channels from which you wish to receive broadcast messages. Several options are available.

**Select:** used to enable or disable channels in the list by marking or unmarking them respectively (a check mark is displayed in front of each channel selected).

**Add Channel:** used to declare the ID and title for a new channel.

**Delete:** used to remove a channel from the list.

**Edit:** used to change the ID and title of an existing channel.


**Language:** allows you to select your preferred language to be used when displaying cell broadcast messages.

Please contact your service provider for more information.

## Voice Mail

*Menu 2.6*

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).

To quickly connect to the voice server, press and hold down the  key in the idle mode.

**Note:** Voice Mail is a network feature. Please contact your service provider for more information.

**Connect to Voice Server:** before using this feature, you must enter the voice server number obtained from your service provider (see menu option **2.6.2**). You can then select this option and simply press the **OK** soft key to listen to your messages.

**Voice Server:** allows you to change the voice mail server number.

To...	Then press the...
Enter the server number	Corresponding numeric keys.
Correct a digit	<b>C</b> key.
Move the cursor to the left/right without clearing the digit	◀ or ▶ key.

# Sound Settings

You can use the Sound Settings feature to customise various settings, such as the:

- Ringing tone or melody, volume and type
- Sounds made when you press a key, make an error or receive a message

## Ring Tone

*Menu 3.1*

This option allows you to select the required ringing tone. You can choose between 48 different tones. Each time you select a tone, it is played for a few seconds. Two additional options correspond to the melodies that you can compose, using the **Melody Composer** menu option (3.2).

## Melody Composer

*Menu 3.2*

This option allows you to compose your own melody to be used as the ring tone.

Two octaves are available. A maximum of 100 notes can be entered. You can adjust the length of the notes and add rests, as required.

### Composing a Melody

You can compose two melodies.

1. When you access the menu, the names of any melodies created are displayed. Otherwise, **Melody 1** and **Melody 2** appear. Select the melody that you wish to create or edit.

2. Press the **Edit** soft key and compose your melody using the following keys.

#### To...

Enter a note between C and B (do and si)

Move a note up or down one octave

Insert the same note again

Enter a rest

Delete a note

Move a note a semitone up or down

Change the length of a note

Listen to your melody

Modify your melody

#### Then press the...

**1** to **7** keys respectively.

**8** key.

**Next** soft key.

► key (press the key until the rest is of the required length).

**C** key.

▲ or ▼ key (for example, the note A changes to A#, B, C, C# and so on in the scale, each time you press the ▲ key).

◀ key (the length will be changed each time you press the key).

**Listen** soft key.

**Modify** soft key.

3. When you are satisfied with your melody, press the **Save** soft key.

- Enter a title for the melody.  
**Note:** For further details on how to enter characters, refer to page 43.

You are asked if the melody is to become the ring tone.

- To use the melody as the ring tone, press the **Yes** soft key.  
The melody is saved and is played each time your phone rings. You can also select the melodies composed via the **Ring Tone** menu option (3.1).

Otherwise, press the **No** soft key. The melody is saved only.

### Deleting a Melody

- Select the melody that you wish to delete.
- Press the **Delete** soft key.
- You are asked to confirm that you wish to delete the melody by pressing the **Yes** soft key.

## Ring Volume

*Menu 3.3*

This option allows you to adjust the ringing volume to one of five levels. Use the ▲ and ▼ keys or the Ⓜ and Ⓜ keys on the left side of the phone. The greater the number of bars, the greater the volume.

## Alert Type

*Menu 3.4*

This option allows you to indicate how you are to be informed of any incoming calls. The following options are available.

**Light only:** only the backlight is switched on; the phone neither rings nor vibrates.

**Melody:** the phone rings using the ringing tone selected via the **Ring Tone** menu option (3.1).

**Vibration:** the phone vibrates but does not ring.

**Note:** In idle mode, you can set the phone to vibrate only (silent mode) or to start ringing again, simply by pressing one of the shortcut keys (for further details, see page 92).

**Vibra+Melody:** the phone first vibrates three times and then starts ringing.

## Keypad Tone

*Menu 3.5*

This option allows you to select the tone that the keypad generates when you press a key. The following options are available.

**OFF:** the keys do not make any sound.

**Tone:** each key, when pressed, makes a different sound.

**Beep:** each key, when pressed, makes the same sound.

## Message Tone

*Menu 3.6*

---

This option allows you to select how the phone informs you that a new message has been received.

The following options are available.

**Light Only:** the service light at the top of the phone flashes.

**Single Beep:** the phone beeps once.

**SMS Tone1~10:** the phone uses an SMS tone. You are provided with ten SMS tones.

## Error Tone

*Menu 3.7*

---

This option allows you to select how the phone informs you that you have made a mistake.

The following options are available.

**OFF:** the phone does not beep.

**ON:** the phone beeps to indicate an invalid entry.

## Minute Minder

*Menu 3.8*

---

This option allows you to specify whether the phone must beep every minute during an outgoing call to keep you informed of the length of your call.

The following options are available.

**OFF:** the phone does not beep.

**ON:** the phone beeps every minute.

## Connect Tone

*Menu 3.9*

---

You can set your phone to beep when the person you are calling answers the phone.

The following options are available.

**OFF:** the phone does not beep.

**ON:** the phone beeps when your call is accepted.

# Phone Settings

Many different features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone Settings** menu.

## Screen Saver

*Menu 4.1*

This feature allows you to use the Screen Saver feature which displays a constantly shifting pattern or image on a display screen to prevent damage to the screen through continuous display of the same image.

### Screen Mode

You can turn the Screen Saver feature on or off.

The following options are available.

**OFF:** Screen Saver is not used.

**ON:** the Screen Saver image selected in the Select Image menu option (**Menu 4.1.2**) is displayed after a preset time in idle mode. Pressing any key resumes the idle screen.

### Select Image


This option allows you to select the image to be displayed when you set the Screen mode option to **On**.

The six images (**Picture 1 ~ 6**) are available.

## Infrared Activate

*Menu 4.2*

This feature allows you to send or receive data/fax through the infrared port. To use an infrared connection, you must:

- Install the modem driver for receiving or sending data/fax (We recommend 14400 bps Data/Fax modem by 'Rockwell' company)
- Install the network dial-up software supplied by your service provider or a fax application program for a fax call on your PC
- Configure and activate an IrDA-compliant infrared port on your PC
- Activate the Infrared feature on the phone; the  symbol appears on the top line of the display
- Dial the network service number given to you by the service provider

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activating the feature, it is automatically deactivated.

For further details, contact your service provider.

For information on downloading and installing the IrDA program, visit to <http://www.samsungmobile.com>.



## Greeting Message

Menu 4.3

This option allows you to set a greeting message to be displayed briefly when the phone is switched on. The current message is displayed.

To...	Then press the...
Clear the existing message	<b>C</b> key and hold it down until the message is cleared.
Enter a new message	Appropriate alphanumeric keys.
Change the text input mode	⇧ soft key.

For further details on how to enter characters, refer to page 43.

## Own Number

Menu 4.4

This feature allows you to:

- Assign a name to each of your own phone numbers registered on your SIM card
- Edit the names and numbers

This function is a memory aid, which you can use to check your own phone numbers if you need to do so. Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

## Language

Menu 4.5

You can select a display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used.

## Light

Menu 4.6

### Back Light

You can select whether or not the phone uses the backlight. A marginal increase in standby/talk time can be achieved by turning the backlight off.

The following options are available.

**OFF:** the backlight is not used.

**Short:** the backlight comes on when you press a key or receive a call and switches off 10 seconds after the last key is pressed.

**Long:** the backlight comes on when you press a key or receive a call and switches off 20 seconds after the last key is pressed.

### Service Light

This option allows you to select whether or not the service light on the top of the phone is used.

The following options are available.

**OFF:** the service light is not used.

**ON:** the service light flashes when the phone is ready for use.

## Auto Redial

Menu 4.7

With the Auto Redial function, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

**Note:** The interval between two call attempts varies.

The following options are available.

**OFF:** the number is not redialled.

**ON:** the number is redialled automatically.

## Active Flip

Menu 4.8

This option allows you to answer a call simply by opening the flip.


The following options are available.



**Disable:** to answer a call, you must open the flip and press a key, depending on the setting of the **Anykey Answer** menu option (page 83).



**Enable:** to answer a call, you simply open the flip.

## Anykey Answer

Menu 4.9





This option allows you to answer an incoming call by pressing any key, except the  key and **Reject** soft key.

**ON:** to answer a call, you can press any key except the  key and the **Reject** soft key. To reject the call, press the  key or the **Reject** soft key.

**OFF:** to answer a call, you can only press the  key or **Accept** soft key. To reject the call, the  key or the **Reject** soft key.

## Contrast

   Menu 4.0

This option allows you to adjust the contrast of the LCD screen by pressing the  and  keys or the  and  keys on the left side of the phone.

## Reset Settings

Menu 4.\*

You can easily reset your phone to its default configuration. To do so, proceed as follows.

1. Select the **Reset Settings** menu option.
2. Enter the 8-digit phone password.

**Note:** The password is preset to 00000000. To change this password, refer to page 94.

# Organiser

The Organiser feature enables you to:

- View the calendar and organise your schedule
- Define a list of things to do
- Set the current date and time
- Set the alarm so that the phone rings at a specific time (to remind you of an appointment for example)
- Use the phone as a calculator
- Assign functions to the navigation keys so that they can be used as shortcuts giving direct access to your favourite menus

## Calendar

*Menu 5.1*

With the Calendar feature, you can:

- Consult the calendar
- Write memos to keep track of your schedule and trigger an alarm if necessary

### Consulting the Calendar

When you select the **Calendar** menu option (5.1), the calendar is displayed. The following options are available when you press the **Options** soft key.

**Search all:** displays all memos set, regardless of the day and starting with the oldest. To scroll through the memos, press the ▲ and ▼ keys.

**Delete all:** allows you to delete all memos. You are asked to confirm your action.

**Go to date:** allows you to jump to a specific date.

### Writing a Memo

To write or edit a memo on a specific date, proceed as follows.

1. Select the required date in the calendar, using the navigation keys.

**Note:** To skip to the previous or next month, press the ⏪ or ⏩ key on the left side of the phone.

2. Press the **Select** soft key.  
An empty memo screen is displayed to allow you to enter your memo.

3. Enter your memo and then press the **OK** soft key.

**Note:** For further details on how to enter characters, refer to page 43.

You are asked if you wish to set the alarm.

4. If you want the alarm to ring on the chosen day, press the **Yes** soft key.  
Otherwise, press the **No** soft key.

5. If you pressed **Yes**, set the time for the alarm and press **OK**.

A check mark is displayed in front of the date in the calendar to indicate that a memo exists.

### Editing a Memo

If you select a day for which a memo already exists, you can press the **Edit** soft key to edit the memo displayed.

**Note:** For further details on how to enter characters, refer to page 43.

Once you have finished editing the memo, press the **OK** soft key. The following options are then available when you press the **Options** soft key.

**Alarm:** allows you to set the alarm to ring on the chosen day.

**Erase:** allows you to delete the memo.

**Copy to:** allows you to copy the memo to another date and/or time.

**Move to:** allows you to change the date and/or time of the memo.

## To Do List

*Menu 5.2*

This feature allows you to:

- Draw up a list of tasks to be done
- Assign a priority and deadline to each task
- Sort the tasks by priority and status mark ( for tasks to be done,  for completed tasks)

### Creating the To Do List

To create the To Do List, proceed as follows.

1. Press the **New** soft key.
2. Enter the first task.
 

**Note:** You can enter up to 48 characters. For further details on how to enter characters, see page 43.
3. Press the **OK** soft key.
4. Select high or low priority using the **▲** or **▼** key and the **Select** soft key.

5. Enter your deadline.

If you want to skip this step, press the **Skip** soft key. The task is saved without the deadline.

6. When entering is completed, press the **OK** soft key to save the task.

### Editing the To Do List

If tasks are already defined in the To Do List when you select the **To Do List** menu option (5.2), the current contents are displayed with the associated status mark and priority. The following options are available.

#### To...

View the details for a specific task

Change the status of a specific task ( or )

Edit an existing task

#### Then...

- Highlight the task.
- Press the **View** soft key.

- Highlight the task.
- Press the **✕** key to mark the task as completed as of the current date and time.

or

- Highlight the task.
- Press the **Options** soft key.
- Select the **Mark** option.
- Select the appropriate status.

Create a new task

- Press the **Options** soft key.
- Select the **New** option.
- Enter the text, priority and deadline for the task.

- Highlight the task.
- Press the **Options** soft key.
- Select the **Edit** option.
- Change the text, priority and deadline for the task.

To...	Then...
Sort the existing tasks by priority or status	<ul style="list-style-type: none"> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Sort</b> option.</li> <li>• Select the sort criterion (high, low, done, undo).</li> </ul>
Copy a task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Copy</b> option.</li> <li>• Change the text, priority and deadline for the task as required.</li> </ul>
Delete a task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Delete</b> option.</li> </ul>
Delete all tasks	<ul style="list-style-type: none"> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Delete all</b> option.</li> <li>• Confirm the deletion by pressing <b>OK</b>.</li> </ul>

## Time & Date

*Menu 5.3*

This option allows you to change the current time and date displayed. You can also check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world.

The following options are available.

**Set Time:** allows you to enter the current time. You can choose the time format via Format menu option (5.3.4).

**Note:** Before setting the time, you must specify your time zone, via the **World Time** menu option (5.3.3).

**Set Date:** allows you to enter the day, month and year. You can change the date format via the **Format** menu option (5.3.4).

**World Time:** allows you to check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world, using the ◀ and ▶ keys.

The screen shows the:

- City name
- Current date and time
- Time difference between the selected city and your city if you have set the local time (see below for further details) or GMT (by default)

To select the time zone in which you are located, proceed as follows.

1. Select the city corresponding to your time zone by pressing the ◀ or ▶ key one or more times. The local date and time are displayed.
2. Press the **Set** soft key.

**Format:** allows you to change the time and date formats.

Time format: 24 hours  
12 hours

Date format: YYYY/MM/DD (year/month/day)  
DD/MM/YYYY (day/month/year)  
MM/DD/YYYY (month/day/year)

## Alarm

Menu 5.4

This feature allows you to:

- Set the alarm to ring at a specific time
- Set the phone to switch on automatically and ring the alarm even if the phone is switched off (**Autopower** menu option set to **Enable**)

In the **Alarm** menu, the following options are available.

**Once Alarm:** the alarm rings only once and is then deactivated.

**Daily Alarm:** the alarm rings every day at the same time.

**Weekly Alarm:** the alarm rings every week on the same day and at the same time.

To set the alarm, proceed as follows.

1. Choose the alarm frequency option.
2. Enter the required time and day of the week (if applicable).

To stop the alarm when it rings, open the flip and press the **Exit** soft key.

**Remove Alarm:** deactivates the alarm.

**Autopower:** if this option is set to **Enable**, switches the phone on automatically only when the alarm rings, then switches the phone back off.

If the menu option is set to **Disable** and the phone is switched off at the specified time, the alarm will not ring.

## Calculator


Menu 5.5

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

### Using the Calculator

1. Enter the first number using the numeric keys.
2. Press the right soft key until the required arithmetic symbol appears: + (add), - (subtract), x (multiply), / (divide).
3. Enter the second number.
4. Repeat Steps 1 to 3 as many times as required.

#### Notes:

- To erase any mistakes and clear the display, press the **C** key.
  - To include a decimal point or a bracket, press the left soft key until the required symbol is displayed.
5. To calculate the result, press the  key.

## ShortCut

Menu 5.6

The down, left and right navigation keys and the **C** key can also be used as shortcut keys. When held down in idle mode, they allow you to access specific menu options directly.

Using the **ShortCut** menu option (5.6), the following menu options can be assigned to the shortcut keys:

- **None**
  - **Silent mode** (Vibration setting (3.4.3) in Alert Type menu option)
  - **Calendar** (menu option 5.1)
  - **Calculator** (menu option 5.5)
  - **Messages** (menu option 2)
  - **Sound Settings** (menu option 3)
  - **Games** (menu option 9.1)
  - **To Do List** (menu option 5.2)
  - **Voice Mail** (menu option 2.6)
  - **Broadcast** (menu option 2.5)
  - **Infrared Activate** (menu option 4.2)
  - **Health** (menu option 9.2)
1. Select the key to be used as a shortcut key:
    - Key down (▼)
    - Key right (▶)
    - Key left (◀)
    - **C** long press (held down)

2. Select the menu option to be assigned to the key.

**Note:** To deactivate a shortcut key, select the **None** option.

## Security

The Security feature enables you to restrict the use of your phone to:

- The people of your choice
- The types of calls of your choice

Various codes and passwords are used to protect the features of your phone. They are described in the following sections (see also pages 22-25).

### PIN Check

Menu 6.1

When the PIN Check feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

**Note:** Before disabling the PIN Check feature, you must enter your PIN.

To change your PIN, refer to menu option 6.2.

The following options are available.

**Disable:** the phone connects directly to the network when you switch it on.

**Enable:** you must enter the PIN each time the phone is switched on.

## Change PIN

*Menu 6.2*

---

This feature allows you to change your current PIN to a new one, provided that the PIN Check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

## Phone Lock

*Menu 6.3*

---

When the Phone Lock feature is enabled, the phone is locked and you must enter the 8-digit phone password each time the phone is switched on.

The password is factory set to 00000000. To change the phone password, refer to menu option **6.4** on the following page.

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available.

**Disable:** you are not asked to enter the phone password when you switch the phone on.

**Enable:** you are required to enter the phone password when you switch the phone on.

## Change Password

*Menu 6.4*

---

The Change Password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is factory set to 00000000. Once you have entered a new password, you are asked to confirm it by entering it again.

## SIM Lock

*Menu 6.5*

---

When the SIM Lock feature is enabled, your phone only works with the current SIM. You must enter the SIM lock code.

Once you have entered the lock code, you are asked to confirm it by entering it again.

To unlock the SIM, you must enter the SIM lock code.



## FDN Mode

*Menu 6.6*

The FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available.

**Disable:** you can phone any number.

**Enable:** you can only call phone numbers stored in the phonebook. You must enter your PIN2.

**Note:** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

To change your PIN2, refer to menu option **6.7** below.

## Change PIN2

*Menu 6.7*

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one.

Once you have entered a new PIN2, you are asked to confirm it by entering it again.

**Note:** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

# Network Services

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you so wish.

## Call Diverting

*Menu 7.1*

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to divert your business calls to a colleague while you are on holiday.

Call diverting can be set up in the following ways.

**Divert Always:** all calls are diverted.

**Busy:** calls are diverted if you are already making another call.

**No Reply:** calls are diverted if you do not answer the phone.

**Unreachable:** calls are diverted if you are not in an area covered by your service provider.

**Cancel All:** all call diverting options are cancelled.

You can specify individual diverting options for each of the following call types:

- Voice calls only
- Fax calls only
- Data calls only

Example: You can:

- Systematically divert fax calls to your office fax machine
- Divert voice calls to your colleague if you are already using the phone

To set your call diverting options, proceed as follows.

1. Select the type of call diverting required by pressing the ▲ or ▼ key until the appropriate option is highlighted, and then press **Select**.
2. Select the type of calls to be diverted by pressing the ▲ or ▼ key until the appropriate option is highlighted and then press **Select**.

The current status is displayed. If the option has already been set, the number to which the calls are diverted is displayed.

- |                           |  |
|---------------------------|--|
| 3. <b>To...</b>           | <b>Then...</b>   |
| Activate call diverting   | <ul style="list-style-type: none"> <li>• Press the <b>Activate</b> soft key.</li> <li>• Go to step 4.</li> </ul> |
| Change the call number    | <ul style="list-style-type: none"> <li>• Press the <b>Change</b> soft key.</li> <li>• Go to step 4.</li> </ul>   |
| Deactivate call diverting | Press the <b>Remove</b> soft key.  |
4. Enter the number to which the calls are to be diverted and press **OK**.  
To enter the international code, press the **0** key until the + sign is displayed.

The phone sends your settings to the network and the network's acknowledgement is displayed.

You can deactivate all call diverting settings by selecting the **Cancel All** option.

## Call Barring

Menu 7.2

The call barring network service allows you to restrict your calls.

Call barring can be set up in the following ways.

**All Outgoing:** calls cannot be made.

**International:** international calls cannot be made.

**International Except to Home:** when abroad, calls can be made only to numbers within the current country and to your home country, that is the country where your home network provider is located.

**All Incoming:** calls cannot be received.

**Incoming While Abroad:** calls cannot be received when you are using your phone outside your home service area.

**Cancel All:** all call barring settings are deactivated; calls can be made and received normally.

You can specify individual barring options for each of the following call types:

- Voice calls only
- Fax calls only
- Data calls only

To set your call barring options, proceed as follows.

1. Select the type of call barring required by pressing the ▲ or ▼ key until the appropriate option is highlighted and then press **Select**.

2. Select the type of calls to be barred by pressing the ▲ or ▼ key until the appropriate option is highlighted and then press **Select**.
3. Press the **Activate** soft key to confirm your settings.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement is displayed.

To deactivate specific call barring settings, proceed as follows.

1. Select the call barring option to be deactivated.
2. Select the type of call to which this option applies.
3. Press the **Deactivate** soft key.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement is displayed.

You can also deactivate all call barring settings by selecting the **Cancel All** option.

**Change Barring Password:** you can set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one.

Once you have entered a new password, you are asked to confirm it by entering it again.

## Call Waiting

*Menu 7.3*

This network service enables you to be informed when someone is trying to reach you during another call.

You can specify the call waiting option for voice calls only.

To set your call waiting options, proceed as follows.

1. Select the **Voice Calls** option by pressing the **Select** soft key.

The screen informs you whether call waiting is activated or deactivated.

2. You can activate or deactivate the call waiting feature as necessary using the **Activate** or **Deactivate** soft key respectively.

To return to the previous screen, press the **Exit** soft key.

You can also deactivate all call waiting settings by selecting the **Cancel All** option.

## Network Selection

Menu 7.4

The Network Selection feature enables you to indicate whether the network used when roaming (outside your home area) is selected automatically or manually.

**Note:** You can select a network other than your home network only if it has a valid roaming agreement with your home network.

To indicate whether the network is to be selected automatically or manually when roaming, proceed as follows.

1. When **Network Selection** is displayed, press the **Select** soft key.
2. Press the ▲ or ▼ key until the appropriate option is highlighted and then press the **OK** soft key.

If you select **Automatic**, you are connected to the first available network when roaming.

If you select **Manual**, the phone scans for the available networks. Go to Step 3.

3. Press the ▲ or ▼ key until the preferred network is highlighted and then press the **OK** soft key.

You are connected to that network.

## Caller ID

Menu 7.5

You can prevent your phone number from being displayed on the phone of the person being called.

**Note:** Some networks do not allow the user to change this setting.

The following options are available.

**Default:** the default setting provided by the network is used.

**Hide Number:** your number is not displayed on the other person's phone.

**Send Number:** your number is sent each time you make a call.

## Closed User Group (CUG)

Menu 7.6

This network service allows incoming and outgoing calls to be restricted to a selected user group. You may be a member of up to ten user groups. For details on how to create, activate and use a closed user group, contact your service provider.

Example: A company lends SIM cards to its employees and wants to restrict outgoing calls to members of the same team.

### Activating a Closed User Group

If you select the **Closed User Group** menu, you can enter the CUG function. You can now access the following options after pressing the **Select** soft key.

**Index List:** lets you list, add or delete CUG index numbers. The list of current CUG indexes appears. Add a new CUG index (as advised by your service provider) or delete a selected group.

#### To...

Scroll through the existing CUG indexes

Add a new CUG index

#### Then press the...

▲ or ▼ key.

**Options** soft key, select the **Add** option and enter the index.

#### To...

Delete a CUG index

Activate a CUG index

#### Then press the...

**Options** soft key and select the **Delete** option.

**Options** soft key and select the **Activate** option.

**Outside Access:** lets you enable or disable calls to numbers other than those nominated for the Closed User Group. This feature depends on the nature of your CUG subscription. Please check with your service provider.

**Default Group:** you may communicate a default CUG to your service provider. If you have done so, you can enable the **Default Group** option on your phone. When making a call, you will be given the option of using your default CUG, instead of selecting one from the list.

**Deactivate:** deactivates the CUG function. This menu appears only when the default group is enabled or a CUG index is selected.

# WAP Browser

Your phone is equipped with a WAP Browser to allow you to access and navigate the Wireless Web via your phone.

For further details on the WAP Browser menu, refer to the WAP Browser User's Manual supplied with your phone.

# Life

The Life feature enables you to:

- enjoy some games.
- check your physical condition to keep your health.

## Games

*Menu 9.1*

Using this feature, you can play seven different games with the phone:

- Casino
- Roulette
- Black Jack
- Sniper
- Snake
- Mole
- Othello

Once you have selected a game, the following options are available.

**Play:** allows you to start a game.


**Level** (only in Sniper and Snake): allows you to select the level of difficulty. Select the required level using the ▲ and ▼ keys and press the **OK** soft key. This option is only available in games with several levels.

**Configuration:** allows you to configure the phone for the chosen game (backlight and sound settings). To adjust each setting, highlight the **Backlight** or **Sound** option by pressing the ▲ or ▼ key and then toggle between **ON** and **OFF** by pressing the **On/Off** soft key.

**Instructions:** describes the buttons used by the game. If necessary, press the ▲ or ▼ key to see a more detailed description.

**High Score:** enables you to view the highest score recorded for the selected game. You can also reset this score by pressing the **Reset** soft key.

If you break the current record for the game, the phone displays the High Score screen.

To stop playing a game, press the **C** or  key.

## Health

*Menu 9.2*

Using this menu, you can check your body condition, such as bio rhythm, fatness index, and Pink schedule. Also, this menu can be helpful to keep your health by checking and counting how much calories some exercises or daily works consume.

### Bio Rhythm

You can check the physical, emotional, or intellectual rhythm of your body for today or a specified day. To check the bio rhythm, you must enter your birthday in **Setup** menu (Menu 9.2.1.3) first.

The following options are available.

**Today:** shows today's bio rhythm.

**Special Day:** shows a specified day's bio rhythm. Enter the desired date and press the **OK** soft key. You must enter the date in order of day, month, and year.

**Setup:** Enter the date of your birthday. You must enter the date in order of day, month, and year.

**Help:** shows the cycles of the each types of the bio rhythm.


### Fatness

Using this feature, you can check the fatness index of your body.

The following options are available.

**Calculate:** allows you to calculate your fatness degree for your height and weight.

To calculate the fatness index, proceed as follows.

1. Select your gender, **Male** or **Female** using the ▲ and ▼ keys, and press the **Select** soft key.
2. Enter your weight using the numeric keys, and press the **OK** soft key.
3. Enter your height using the numeric keys, and press the **OK** soft key.
4. The phone calculates your fatness index for your height and displays the result.
5. Press the **OK** soft key and the phone shows the fatness status of your body.
6. Press the  key to return to idle mode.

**Help:** tells you what the result means. Press the ◀ or ▶ key to move the black bar to the number cell according to the result.

## Calorie

You can check and count how much calories of heat the selected exercise or daily work consumes.

To calculate the caloric value, proceed as follows.

1. Select **Exercise** or **Daily work** using the ▲ and ▼ keys and press the **Select** soft key.
2. Press the ▲ or ▼ key to select a desired exercise or daily work, and press the **Select** soft key.
3. Check the calorie value which the exercise or daily work for 10 minutes represents. Enter the desired length of time and press the **OK** soft key.
4. The phone displays the calorie value according to the length of time you have entered. Press the **OK** soft key.
5. Repeat steps 1 to 4 to add more exercises or daily works for your count.
6. When you have finished selecting, select **Total** by pressing the ▲ or ▼ key, and press the **Select** soft key to view the sum total.

**Note:** If you want to reset the sum total to resume calculation, press the **Reset** soft key.

## Pink Schedule

Using this feature, you can set your menstrual period and check your physical schedule, such as the ovulation day, today's pregnancy probability, the pregnancy period and next menses day.

**Note:** The schedule may not fit to your physical condition. Therefore, use this Pink schedule just for reference.

The following options are available:

**My Schedule:** allows you to check your schedule.

**Friend's Schedule:** allows you to check the schedule of your friend's.

**Setup:** allows you to set up your menstrual schedule. To check your physical schedule, you must set up your menstrual schedule first.

To set up your menstrual schedule, proceed as follows.

1. Press the ▲ or ▼ key to select **Setup**, and press the **Select** soft key.
  2. Enter the starting day of your last menstruation, and press the **OK** soft key.
- Note:** Enter the date in order of day, month, and year.
3. Enter your average menstrual period, and press the **OK** soft key.



To check your pink schedule, proceed as follows.

1. Press the **Select** soft key when **My Schedule** is highlighted.
2. Press the ▲ or ▼ key to select the desired one of the the following schedule items and press the **Select** soft key.
  - Pregnant probability
  - Pregnancy period
  - Ovulation day
  - Next mense day
3. After checking, press the **OK** soft key.

To check the pink schedule of your friend's, proceed as follows.

1. Press the ▲ or ▼ key to select **Friend's Schedule**, and press the **Select** soft key.
2. Enter the starting day of her last menstruation, and press the **OK** soft key.

**Note:** Enter the date in order of day, month, and year.

3. Enter your average menstrual period, and press the **OK** soft key.

4. Press the ▲ or ▼ key to select the desired one of the the following schedule items and press the **Select** soft key.

- Pregnant probability
- Pregnancy period
- Ovulation day
- Next mense day

5. After checking, press the **OK** soft key.

# Solving Problems

Before contacting the after-sales service, perform the following simple checks. They may save you the time and expense of an unnecessary service call.

## When you switch your phone on, the following messages may appear

### Insert SIM Card

- Check that the SIM card is correctly installed.

### Phone Locked

#### Enter Password

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

### Enter PIN

- You are using your phone for the first time. You must enter the Personal Identification Number supplied with the SIM card.
- The option requiring that the PIN be entered each time the phone is switched on was enabled. You must enter your PIN and then disable this option if so required.


### Enter PUK

- The PIN code was entered wrongly three times in succession and the phone is now blocked. Enter the PUK supplied by your network operator.


## "No service", "Network failure" or "Not done" is displayed

- The network connection was lost. You may be in a weak signal area (in a tunnel or surrounded by buildings). Move and try again.
- You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

## You have entered a number but it was not dialled

- Have you pressed the  key?
- Are you accessing the right cellular network?
- You may have set an outgoing call barring option.

## Your correspondent cannot reach you

- Is your phone switched on (/⊙ pressed for more than one second)?
- Are you accessing the right cellular network?
- You may have set an incoming call barring option.

## Your correspondent cannot hear you speaking

- Have you switched off the microphone?
- Are you holding the phone close enough to your mouth? The microphone is located at the bottom of the phone.

# Using the Batteries

## The phone starts beeping and “\*\*Warning\*\* Low Battery” flashes in the display

- The battery is insufficiently charged. Replace the battery and recharge it.

## The audio quality of the call is poor

- Check the signal strength indicator in the display (📶); the number of bars after it indicates the signal strength from strong (📶) to weak (📶).
- Try moving the phone slightly or moving closer to a window if you are in a building.

## No number is dialed when you recall a phonebook entry

- Check that the numbers have been stored correctly, by using the Phonebook Search feature.
- Re-store the number, if necessary.

If the above guidelines do not enable you to solve the problem, take a note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG after-sales service.

Your phone is powered by a rechargeable Li-ion battery. The following batteries are also available (ask your SAMSUNG dealer for further details):

- Standard battery
- Slim battery

## Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging times depend on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.

- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and life-time of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and – terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

## Safety Information

### Road Safety

---

- Remember, road safety always comes first!
- Do not use a hand-held phone while driving a vehicle. Always park the vehicle before having a conversation.
- Make sure that the phone is stored safely and will not fall or be broken in the event of a collision or emergency stop.
- The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.
- Only qualified personnel should install or service the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the unit.
- Electronic fuel injection, anti-skid braking, electronic cruise control or any other electronic systems may malfunction due to the lack of protection from radio signals. Check regularly that all cellular phone equipment in your vehicle is mounted and operating correctly.

### Operating Environment

---

- Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

- Operation of any radio-transmitting equipment, including cellular phones, may interfere with inadequately protected medical devices. Consult a doctor or the manufacturer of the medical device if you have any questions. Other electronic equipment may also be subject to interference.
- As with other mobile radio-transmitting equipment, you are advised that for satisfactory operations and personal safety, the equipment should only be used in the normal operating position.
- Always switch off the phone when at a refuelling point (service station). You are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- Switch off your cellular phone when in aircraft. The use of cellular phones in aircraft is illegal and may be dangerous to the operation of the aircraft or disrupt the cellular network. Failure to observe these instructions may lead to the suspension or denial of cellular telephone services to the offender, legal action or both.

## Care and Maintenance

---

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill the warranty obligations and enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids containing minerals will corrode the electronic circuits.
- Do not use or store the phone in dusty, dirty areas as its components may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal temperature, moisture can form inside the phone, which may damage the electronic circuits.
- Do not attempt to open the phone's casing. Non-expert handling of the phone may damage it.
- Do not drop or knock the phone. Rough handling may damage the internal circuits.

- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in mild, soapy water.
- If the phone or any of its accessories are not working properly, take them to your nearest qualified service centre. The personnel there will assist you, and if necessary, arrange for the phone to be repaired.

## Emergency Calls

---

**Important!** This phone, like any cellular phone, uses radio signals, cellular and landline networks, as well as user-programmed functions that cannot guarantee connection in all conditions. Therefore, you should never rely solely on any cellular phone for essential communications (medical emergencies for example).

Remember, to make or receive any calls, the phone must be switched on and in a service area with adequate cellular signal strength.

Emergency calls may not be possible on all cellular phone networks or when certain network services and/or phone features are in use. Check with local cellular service providers.

# Glossary of Terms

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the features on your mobile phone, here are a few definitions.

## Active Flip

Ability to answer a call simply by opening the phone.

## Call Barring

Ability to restrict outgoing and incoming calls.

## Call Diverting

Ability to reroute calls to another number.

## Call Holding

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

## Call Waiting

Ability to inform users that they have an incoming call when engaged on another call.

## DCS

Digital cellular network standard based on the GSM network architecture. With the higher frequency range (1800 MHz for DCS instead of 900 MHz for GSM), more radio channels can be made available, thus allowing the network to support more subscribers and traffic.

## Dual Band

Ability to operate with both DCS (1800 MHz) and GSM (900 MHz) networks. The phone automatically uses the network with the strongest signal and even switches networks during a call within the same operator's network.

## GSM (Global System for Mobile Communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

## Line Identification Services (Caller ID)

Services allowing subscribers to view or block the telephone numbers of callers.

## Multiparty Calling

Ability to establish a conference call involving up to five additional parties.

## Phone Password

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

## PIN (Personal Identification Number)

Security code that protects the phone against unauthorised use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, as required.

## PUK (PIN Unblocking Key)

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

## Roaming

Use of your phone when you are outside your home area (when travelling for example).

## SDN (Service Dialling Numbers)

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.

## SIM (Subscriber Identification Module)

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

## SMS (Short Message Service)

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received (up to 160 characters long) can be displayed, received, edited or sent.

## Soft Keys

Two keys (☺) on the phone, the purpose of which:

- Varies according to the function that you are currently using
- Is indicated on the bottom line of the display just above the corresponding key

## Voice Mail

Computerised answering service that automatically answers your calls when you are not available, plays a greeting (optionally in your own voice) and records a message.

## A

Access codes • 22  
 Accessories • 9  
 Active Flip (4.8) • 82  
 Alarm (5.4) • 90  
 Alert Type (3.4) • 75  
 Answering  
   a call • 28; 83  
   a second call • 52  
 Anykey Answer (4.9) • 83  
 Auto Redial (4.7) • 82  
 Autopower (5.4.5) • 90

## B

Backlight • 15; 81  
   contrast • 83  
 Barring  
   calls (7.2) • 99  
   password • 25; 100  
 Batteries  
   charging • 19  
   low battery indicator • 20  
   precautions • 117  
 Bio rhythm • 108  
 Broadcast (2.5) • 69

## C

Calculator (5.5) • 91  
 Calendar (5.1) • 84  
 Caller  
   group • 40  
   ID (7.5) • 103

## Calls

answering • 28; 83  
   a second call • 52  
 barring (7.2) • 99  
 cost (1.5) • 64  
 dialled (1.3) • 63  
 diverting (7.1) • 97  
 emergency • 8; 122  
 ending • 27  
 holding • 48  
 international • 26  
 making • 26  
 missed • 30; 62  
 multiparty • 53  
 received (1.2) • 62

## Calls (continued)

records (1) • 62  
 redialling automatically • 82  
 time (1.4) • 63; 77  
 via the phonebook • 36  
 waiting (7.3) • 52; 101  
 Calorie, counting • 110  
 Care • 121  
 Changing  
   call barring password • 100  
   password (6.4) • 95  
   PIN (6.2) • 94  
   PIN2 (6.7) • 96  
 Characters  
   changing case • 44  
   entering • 43  
 Charging batteries • 19  
 Closed User Group (7.6) • 104  
 Composer  
   Melody (3.2) • 72  
 Conference calls  
   • See Multiparty calls  
 Connect  
   to Voice Server (2.6) • 71  
   tone (3.9) • 77  
 Contrast (4.0) • 83  
 Copying  
   memos • 86  
   phonebook numbers • 40  
 Correcting numbers • 26  
 Cost of calls • 64  
 CUG • 104

## D

Date  
   format (5.3.4) • 89  
   setting (5.3.2) • 89  
 Deleting  
   memos • 84; 86  
   missed calls • 31  
   phonebook numbers • 40  
   tasks • 88  
 Dialled Calls (1.3) • 63  
 Display • 13  
   contrast • 83  
   icons • 13  
   setting the  
     language (4.5) • 34; 81  
 Diverting calls (7.1) • 97



## E

- Earpiece
  - adjusting the volume • 28
- Editing
  - memos • 85
  - messages • 66
  - missed calls • 31; 62
  - phonebook numbers • 40
  - tasks • 87
- Emergency calls • 8; 122
- Erasing
  - memos • 84; 86
  - missed calls • 31
  - phonebook numbers • 40
  - tasks • 88
- Error Tone (3.7) • 76

## F

- Fatness index • 109
- FDN Mode (6.6) • 96
- Fixed Dial Number mode • 96
- Functions
  - selecting • 32

## G

- Games (9.1) • 107
- Greeting Message (4.3) • 80
- Groups
  - caller • 40
  - user • 104

## H

- Holding calls • 48

## I

- Icons
  - description • 13
- Identifying a caller • 28; 103
- Infrared Activate (4.2) • 79
- IrDA • 79

## K

- Key tones
  - adjusting the volume • 28
  - muting • 50
  - selecting • 75
  - sending • 50
- Keypad Tone (3.5) • 75

## Keys

- description • 11
- location • 10
- navigation • 55
- shortcut • 92

## L

- Language (4.5) • 34; 81
- Last number redialling • 27
- Length of calls • 63; 77
- Letters

- changing case • 44
- entering • 43

## Light

- backlight • 15; 81
- service • 15; 81

## Locking

- phone (6.3) • 94
- SIM card (6.5) • 95

## Low battery indicator • 20

- Lower-case characters
  - entering • 46

## M

- Maintenance • 121
- Melody Composer (3.2) • 72
- Memory status • 42

## Memos

- copying • 86
- deleting • 84; 86
- editing • 85
- writing • 85

## Menus

- map • 57
- numbers • 56
- using • 55

## Message Tone (3.6) • 76

## Messages

- broadcast (2.5) • 69
- greeting (4.3) • 80
- preset (2.3) • 67
- reading (2.1) • 65
- setup (2.4) • 68
- text • 65
- voice mail • 71
- writing (2.2) • 67

## Microphone mute • 49

## Minute Minder (3.8) • 77

## Missed calls (1.1) • 62

- deleting • 31
- editing the number • 31; 62
- viewing • 30; 62

## Multiparty calls

- dropping a participant • 54
- making • 53
- private conversation • 53

## Mute

- key tones • 50
- microphone • 49

## N

## Names

- entering • 43
- searching/dialling • 38; 51
- storing in the phonebook • 36

## Navigation keys • 55

## Network Selection (7.4) • 102

## Network Services (7) • 97

## Numbers

- copying phonebook • 40
- correcting • 26
- editing
  - missed call • 31; 62
  - phonebook • 40
- entering • 47
- erasing phonebook • 40
- fixed dial • 95
- own • 80
- pasting • 39
- redialling • 27
  - automatically • 82
- searching/dialling • 38; 51
- storing in the phonebook • 36

## O

## Options

- selecting • 32
- Organiser (5) • 84
- Own Number (4.4) • 80

## P

## Password

- barring • 25
- changing • 100
- phone • 22
- changing (6.4) • 95

## Pasting phonebook numbers • 39

Personal Identification Number
 

- See PIN

## Personal Unblocking Key • 23

## Phone

- Lock (6.3) • 94
- password • 22; 95
- Settings (4) • 78

## Phonebook • 36

- copying numbers • 40
- dialling • 38
- editing numbers • 40
- erasing numbers • 40
- making calls • 27
- options • 39
- pasting numbers • 39
- searching • 38; 51
- storing numbers/names • 36

## PIN • 23

- changing (6.2) • 94
- checking (6.1) • 93

## PIN2 • 24

- changing (6.7) • 96

## Pink schedule • 111

## Port

- infrared • 79

## Preset Message (2.3) • 67

## Problem solving • 114

## PUK • 23

## PUK2 • 24

## R

## Read Messages (2.1) • 65

## Received Calls (1.2) • 62

## Redialling

- automatically (4.7) • 82
- last number • 27

## Reset Settings (4.✖) • 83

## Ring

- Tone (3.1) • 72
- type • 75
- Volume (3.3) • 74

## Roaming • 102

## S

## Safety

- batteries • 117
- information • 119
- precautions • 7




 
- Schedule • 84
- Screen saver (4.1) • 78
- SDN • 42
- Searching for names/numbers • 38; 51
- Security (6) • 93
- Selecting functions/options • 32
- Sending
  - key tones • 50
  - messages • 65
- Service
  - dialling numbers (SDN) • 42
  - light • 15; 81
- Setting
  - alarm (5.4) • 90
  - date (5.3.2) • 89
  - display language • 34; 81
  - time (5.3.1) • 88
- Settings
  - resetting (4.✕) • 83
- Setup (2.4) • 68
- ShortCut (5.6) • 92
- SIM card
  - installing • 17
  - locking (6.5) • 95
  - precautions • 17
- SIM Lock (6.5) • 95
- SMS
  - broadcast (2.5) • 69
  - setup (2.4) • 68
  - text message icon • 65
  - using • 52; 65
- Soft keys • 32
- Solving problems • 114
- Sound Settings (3) • 72
- Speed-dialling • 37
- Switching on/off
  - microphone • 49
  - phone • 21; 90
- T**
- Tasks
  - defining • 86
- Text
  - changing modes • 44
  - entering • 43
- Text messages • 65
  - broadcasting (2.5) • 69
  - icon • 65
  - preset (2.3) • 67
  - reading (2.1) • 65
  - setup (2.4) • 68
  - writing (2.2) • 67
- Time
  - calls (1.4) • 63; 77
  - setting (5.3.1) • 89
  - world (5.3.3) • 89
- To Do List (5.2) • 86
- Tone
  - connect (3.9) • 77
  - error (3.7) • 76
  - keypad (3.5) • 75
  - melody • 75
  - message (3.6) • 76
  - ring (3.1) • 72
- Travel adapter • 19
- T9 mode • 43; 44
- U**
- Upper-case characters
  - entering • 46
- User groups • 104
- V**
- Vibration • 75
- Voice mail • 71
- Voice Server (2.6.2) • 71
- Volume
  - adjusting • 28
  - selecting the ring (3.3) • 74
- W**
- Waiting
  - call • 52; 101
- WAP Browser (8) • 106
- World Time (5.3.3) • 89
- Write Messages (2.2) • 67
- Writing memos • 85

## Dual Band SGH-A400 GSM Telephone Quick Reference Card

- Access the Menu Function
- 1 Press the **Menu** soft key.
  - 2 Scroll with the **▲** and **▼** keys through the list of menus until you reach the required menu.
  - 3 Press the **Select** soft key.
  - 4 Scroll with the **▲** and **▼** keys through the list of options until the required one is selected.
  - 5 Press the **Select** soft key to confirm.



- Each of the two soft keys (☺) performs the function indicated by the text above it (bottom line in the display).

Switch On/Off	Press and hold  /☺.
Make a Call	<ol style="list-style-type: none"><li>1 Key in the number.</li><li>2 Press the  key.</li></ol>
End a Call	Briefly press the  /☺ key.
View Missed Calls Immediately After Missing Them	<ol style="list-style-type: none"><li>1 Open the phone and press the <b>View</b> soft key.</li><li>2 Scroll with the <b>▲</b> and <b>▼</b> keys through the missed calls.</li><li>3 To return the call, press the  key.</li></ol>

## Declaration of Conformity (R&TTE)

For the following product :

DUAL BAND GSM TELEPHONE SGH-A400

(Product name)

SGH-A400

(Model Number)

Manufactured at :

- Samsung Electronics 94-1 Insu-Dong, Gumi City, Kyung Buk, Korea, 730-330
- Samsung Electronics Iberia, S.A. Pol. Ind. Riera de Caldes, Via Augusta, n=10  
08184 Palau de Plegamans, Barcelona, Espana

(factory name, address)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

**BABT, Claremont House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ, UK**  
Identification mark: 168


The technical documentation kept at :

Samsung Electronics Euro QA Lab.

which will be made available upon request.  
(Manufacturer)

Samsung Electronics Co.,Ltd.  
Suwon P.O.Box 105  
Kyungki-Do, Korea 440-600  
2001. 07. 25

(place and date of issue)


  
**JUNGKWAN CHOI / S. Manager**

(name and signature of authorized person)



 
 
 

(Representative in the EU)

Samsung Electronics Euro QA Lab.  
Blackbushe Business Park,Saxony Way,  
Yateley, Hampshire,GU86 9GG. UK  
2001. 07. 25

(place and date of issue)

  
**In-Seop Lee / Manager**

(name and signature of authorized person)

Answer a Call	Open the phone or Press the  key.	Store Numbers in the Phonebook	<ol style="list-style-type: none"> <li>① Key in the number.</li> <li>② Press the <b>Save</b> soft key</li> <li>③ Enter the name.</li> <li>④ Press the <b>OK</b> soft key.</li> <li>⑤ If necessary, change the location.</li> <li>⑥ Press the <b>OK</b> soft key.</li> </ol>
Adjust the Volume	Press the  or  key on the left side of the phone.	Search for a Number in the Phonebook	<ol style="list-style-type: none"> <li>① Press the <b>Name</b> soft key.</li> <li>② Enter the start of the name.</li> <li>③ Press the <b>Search</b> soft key.</li> <li>④ To scroll through the names, press the  and  keys.</li> <li>⑤ To make a call, press the  key.</li> </ol>
Choose the Alert Type	<ol style="list-style-type: none"> <li>① Select the <b>Alert Type</b> menu option (3.4).</li> <li>② Select an option: <b>Light only, Melody, Vibration, Vbra+ Melody.</b></li> <li>③ Press the <b>Select</b> soft key to confirm.</li> </ol>		