

Your phone



- Up and down keys**
Located on the front of your phone - these can increase volume or scroll through menus and options.
- Soft keys**
These keys perform the function indicated by the text immediately above them on the display.
- Quick Access key**
The function of this key will vary depending on the mode of your phone. It provides quick access to a certain function such as SIM Toolkit or messaging.
- Clear key**
This erases characters or text or takes you back to your previous step, depending on the context. A long press on this key takes you back to the main screen.

Making a call

Dialling a number

- Key in the area code and number that you want to call then press **Call** to dial.
- To delete the entire number and return to the main screen, press and hold **Call**.
- You can adjust the earpiece volume in a call by using the front keys **Up** and **Down**.
- To end the call, press **End**.

Making an international call

- Press and hold **Call** until the plus sign "+" is displayed. This replaces the international access code.
- Enter the country code, area code, and phone number.
- Press **Call** to dial.

Making an emergency call

- Enter 112 (or the local emergency number). Press **Call** to dial.

Making calls from the contact list

- Press **Call** from the main screen, you can also press **Call**. Contacts then select the Search option.
- Type in the first letters of the name or scroll and find the one that you want.
- Press **Call** to dial.

Speed dialling

Allows you to dial a number simply by pressing and holding the assigned key from the main screen.

To assign a contact list entry to a key: Press **Call**, then press and hold one of the keys **1-9** until the key number appears on the left of the screen, beside the name. This indicates that the speed dial is successfully assigned.

Making a call from the calls list

The phone stores a list of your recent incoming, outgoing and missed calls. The list stores up to 30 entries.

An icon on the left of the screen indicates the type of call:

- Incoming call
- Missed call
- Outgoing call

To dial a number from the redial/calls list: Press **Call** to access the list. Scroll and find the one that you want and press **Call** to dial.

Answering a call

Answering a call

To answer a call, press **Accept**. To reject a call, press **Reject**.

Call waiting

This feature means you are informed of a second incoming call by an audible tone in the earpiece.

Press **Reject** to reject the second call. Press **Accept** to put the current call on hold and activate the second call. To end the active call and return to the held call, press **End**.

To switch between calls, press **Swap**. Options and then select the Swap option.

Note: Your network may not support call waiting. If it does not, accepting a second call will end the first call. You will not be able to switch.

In call options

When you are in a call, you can press **Options**. Options these could be:

- Contacts**
Gives you access to the contact list.
- Hold/Unhold**
Puts the active call on hold/reactivates the held call.
- Mute/Unmute**
Switches the microphone off/on.
- Send message**
Allows you to send a text message.
- SIM Toolkit**
Gives you access to the SIM Toolkit.
- Swap**
Swaps between the current call and the call on hold.
- End all**
Ends all calls.

Ringer tone composer

Go into the Sounds menu and press **Options**. Options to enter the menu screen. The available options are:

Tempo: Allows you to choose from a list of tempos at which to play your tone.

Play: Allows you to play your melody. Save: Allows you to save your melody. Delete: Allows you to delete the tone. Send: Allows you to send your tone to one of your friends.

Once you have composed the tone press **Options** to enter the menu screen. The available options are:

- 1** Changes the duration of the note. Each press decreases the duration of the note between the range: full note, half note, quarter note, eighth note, sixteenth note and thirty-second note.
- 2** Changes a normal note to a sharp and a sharp note to a normal note.
- 3** Changes a normal note to a dotted, double dotted or 2/3 note.
- 4** Erases the previous note. A long press will clear all notes.
- 5** Tip: A short press of the **Q** and **Y** keys will move you between notes in either entry mode.
- 6** C
- 7** G
- 8** D
- 9** E
- 0** F
- 1** Enters a rest (text mode)
- 2** Enters a rest (graphic mode)
- 3** Changes the scale of the note between the range 1-4

Getting started

To use your phone, you must first insert the miniature SIM card supplied by your service provider, and then charge the battery.

Removing the back cover

Press down on the ridges below the clip and slide the cover back. Lift off.

Inserting the SIM card

Place the SIM in the phone, starting with the right side first, making sure that the golden contacts of the card are touching the contacts of the phone. Hold the SIM card in place and slide the metal plate to the right, in order to cover the left hand side of the SIM card.

Fitting the battery

Insert the battery with the label facing down. Align the battery on the battery with the tabs on the back of the phone. Clip into place. To remove press on the clip and lift the battery out.

Charging the battery

Insert the connector on the charger lead into the connector at the base of the phone. Plug the charger into a mains AC socket. When charging commences, the battery icon will change into a charger cable icon. When the battery is fully charged, the battery icon will reappear and you can disconnect the charger.

Powering up/down

To switch the phone on: Press **Power**. If the phone asks for a PIN code: Enter the code that is supplied with the SIM card. The code will be displayed as asterisks. When complete, press **OK**.

Wait a few seconds while the phone searches for the network. Once the network has been found, the main screen appears and your phone is ready to be used. The main screen shows the network name and two icons giving the signal strength (top right) and battery level (top left). To switch the phone off, press and hold **Power**.

Menu navigation

To enter the main menu, press **Menu** from the main screen.

Scrolling
You can scroll from one menu to another using the front keys **Up** and **Down**. When you find the menu that you are looking for, press **Enter** to go in. Press **End**, back or **Call** to return to the previous level.

SIM Toolkit
Your service provider may offer some special services or applications. The name of the type of service, for example "Information".

For more details, please contact your service provider.

Useful tips

Setting time and date

Enter the Settings menu to set the time and date. Go to Set date and press **Options**. Select. Enter the date and press **OK**. Go to Set time and press **Select**. Enter the time in 24 hour format. Press **OK**. The date and time will be stored.

Alarm clock

You can use your phone as an alarm clock. Enter the Settings menu and press **Alarm**. Set the alarm to On and enter the time (in 24hr format) when you require the phone to ring. When it rings press **Off** to switch it off, or **Snooze** to stop the alarm for ten minutes. The alarm will then sound again.

Note: The alarm will sound even if the phone is switched off. The phone will power on but you will not be able to receive or make calls. Once the alarm finishes the phone will switch off.

Equalizer

Enter the Sounds menu and select Equalizer. This menu allows you to alter the earpiece audio settings of your phone. Choose from these 3 settings for optimum audio quality:

- **Tablet** • **Normal** • **Bass**

Shortcuts

To lock/unlock the keypad, press **Options**, then **Lock** from the main screen. To enter/exist silent mode press **Options** then **Silent** from the main screen. To enter a pause while dialling press and hold **Call** until the letter p appears. This will insert a pause of 3 seconds.

Messages

Calling your voice mail

When you have a new message in your voice mailbox, your phone displays either the voice mail icon **1** in the main screen or a text message sent from the network. This depends on your service provider.

Press and hold **1**. If the phone asks for the voice mailbox number, enter it and press **Call**. The number can be obtained from your service provider.

Reading a text message

When you receive a text message, the envelope icon **2** is displayed at the top of the main screen.

- Press **Read** to display the new message directly from the main screen.
- To read old messages select Read from the Messages menu.
- Use the up and down keys **Up** and **Down** to scroll through the message.
- Press **Options** to access the following message options:

- Delete Removes the message.
- Chat Initiates a chat session.
- Reply Sends a text message to the sender.
- Call Calls the sender (or, if there is a number in quotes in the message, this number is called instead).
- Save no. Adds the sender's phone number to your contact list.
- Time/date Displays the date and time of the message.
- Forward Sends the message to someone else.

Sending a text message

You can send messages of up to 160 characters to another GSM phone.

- Enter the Messages menu and select the option Send.
- Type in a new message or select a message from a list of saved messages.
- When you have entered the text, press **Send**.
- Enter the destination phone number, or press **Contacts** and select a name from your contact list.
- Press **Send** to send the message.

Note: If you reply to a message, you do not have to re-enter the number. This is done automatically.

Sending a Smiley SMS

Send a picture with your text message to compatible phones. All other phones will display an Internet style Smiley. Choose **Smiley**.

- Emotions
- Celebrations
- Sports
- Animals
- Others

Select the Smiley you would like to use from one of these categories and press **Select**. The text is restricted to 156 characters to allow space for the Smiley.

Reading a Smiley SMS

When you choose a message that has a Smiley in it, the Smiley appears on the screen for 3 seconds or until a key is pressed. Then the message appears. After this time the message reads as normal. A message with a smiley attached has a **Smiley** icon if new and a **Read** icon if read.

Note: If replying to or forwarding an SMS the Smiley will not display and only appears on a new message.

Message settings

This menu offers three options:

- Status report Allows you to set whether or not you wish to be informed when your correspondent has received the text message.
- Centre number Allows you to enter or change the service centre number for text messaging.
- Voice mail Allows you to enter or change your voice mail number.

Chat

Sendo chat allows you to send messages to another user and view both sent and received SMS messages for chat participants in a convenient Chat screen.

Starting a chat session

Enter the Messages menu and select the Chat option. Enter your chatname on the My chatname screen (this screen will not appear if you have already created a chatname).

You will then need to enter the number of the person with whom you would like to chat, or alternatively you can press **Contacts** to go into the contact list.

Enter his/her chatname on the Enter chatname screen (this screen will not appear if you have already created a chatname for this person).

Editing a chatname

You can edit a chatname for a contact by selecting the desired name in the contact list and pressing **Options**. Select the Change option and edit the chatname.

You can edit your chatname by selecting My number from the Contacts menu. Select the Consult option and then press **Options**. Select the change option and edit the chatname.

Having a chat

To send a chat message enter the text in the chat editor field and the press **Send**. The sent text will then appear in the chat history field and is sent to the other chat participant as a standard SMS message.

Chat options

Press **Options** from the Chat screen to view the chat options.

You have three options:

- Swap changes the active area between the text entry field and the chat history field.
- Font size select between normal and small font on the Chat screen.
- Exit Exit the chat session.

Predictive Text Input

To save time when you are writing a text message, your phone has a feature which guesses the letters that you are typing and tries to complete the word.

This input method allows you to simply press each key once. For example, to write the name "Ross", press **R**, then **O**, then **S**, then **S**, then **S**, then **S** just once each.

The word may change as you type, but don't worry about what it is on the screen until you have finished the word. Sometimes different words share the same sequence of key presses. If the finished word is wrong, press **Options** to scroll through other possibilities. If the word that you are looking for is still not there, press **Options** repeatedly to change the text mode to **ab** and enter the word again.

After you have completed a word, press the space key **Space** to enter the next word. Press and hold **Space** to pick a symbol to insert from the character table.

Some intelligent punctuation (including full stops, hyphens and apostrophes) are also available on **Space**. The punctuation mark is completed when you enter the next keystroke.

Key	List of characters available
1	! " # \$ % & ' () * + , - . / : ;
2	@ [\] ^ _ ` { } ~
3	! " # \$ % & ' () * + , - . / : ;
4	g h i j k l m n o p q r s t u v w x y z 9
5	j k l m n o p q r s t u v w x y z 9
6	m n o p q r s t u v w x y z 9
7	p q r s t u v w x y z 9
8	t u v w x y z 9
9	w x y z 9
0	0
#	space

Troubleshooting

Problem	Possible cause	Possible corrective action
Phone does not power on	Battery empty Battery contacts dirty	Fully charge the battery and then press Power . Clean contacts on battery and phone with a dry cloth, attach battery, wait a few seconds and press Power .
Phone does not charge	Battery empty Charger incorrectly connected	Charge for 2 hours. Don't worry if the battery icon does not charge immediately. Disconnect and try again. Check the mains socket, and the connection to the phone.
Battery I don't get as much battery life as I expected	How long should I charge the battery the first time? The phone uses battery power when it is switched on even if it is not in a call. Making calls and playing with the different functions of the phone will run down the battery faster. The stated battery life is under optimum conditions.	12 hours continuous. Charge the phone regularly.
"Insert SIM" is displayed when I switch on the phone The PIN code is blocked	SIM card is incorrectly inserted or missing SIM card is damaged or dirty 3 incorrect entries	Check that the SIM card is positioned correctly, and that the metal clip is slid across. Try again. Visually check the SIM and clean the contacts with a dry cloth. Try again. Enter the unblocking code supplied with the SIM card. If you do not have this code, contact your service provider.
The PIN2 code is blocked	3 incorrect entries	Enter the PIN2 unblocking code supplied with the SIM card. If you do not have this code, contact your service provider.
Floor display Can't connect to network	Low temperature Weak signal Network not allowed	Move to a warmer place and let the phone warm up. Contact your service provider. Move into an area of better coverage. If you are in a building, move towards a window. Try reselecting the network. Switch off and then back on.
Can't make/receive calls	Weak signal Phone is switched off Check the number Call key not pressed Network is busy Call barring or fixed dialling is activated	Check that the service provider name is displayed on the screen. If not try to reconnect to the network. Press Power for a few seconds. Use the full area code and country code in the number. After dialling the number you must press Call . If you hear rapid beeps, then the network is busy. Hang up and try again. Check the fixed dialling settings. Otherwise check the call barring settings with your service provider. After purchasing your phone, you may need to call your service provider to activate the line. Recharge your credit.
Low earpiece volume	Low setting	Press Options when you are in a call to increase the volume.
Low ringer tone	Low setting	Go into the Sounds menu, select Volume and increase the setting.
Cannot enter some words	Wrong entry mode	Your phone has 19 text input (i.e. it guesses what words you are trying to enter). To enter a special word press Options repeatedly to change to normal multi tap mode.
"Message list full" is displayed in the main screen Some features do not work	Your SIM card memory is full of text messages, therefore you can not receive any more messages. Feature not supported by the operator or your subscription.	Go into the Recall menu of the message menu and delete some of your messages. Call your service provider.
Some menus are missing	There are restrictions on your SIM card or subscription.	Call your service provider.

Safety information

You should observe and follow these guidelines for the safe and efficient use of your phone. Failure to comply with these guidelines and requirements may void your warranty and may invalidate any approvals given to your phone.

Battery frequency signals
Your phone transmits and receives radio frequency (RF) signals whenever it is switched on. The design of your phone complies with all relevant standards and recommendations for human exposure to RF energy.

Your phone transmits power in compliance with the cellular network at the lowest possible level to maintain a good signal. You may also choose to reduce your exposure to RF signals by controlling the duration of your calls or by using an accessory such as a handsfree device. Your phone has been designed to comply with applicable standards when used correctly in accordance with the user instructions. A sample of this phone model has been tested and found to comply with the following directives, standards or regulations:

- 1999/5/EC • 1999/336/EC • 73/232/EC as amended by 92/68/EC • 1999/319/EC
- EN 50371:272, (M)1998 • EN 50371:1999 Edition

Antenna Care and Efficient Operation
Do not use your phone if the antenna is damaged. Replace the antenna only with one approved by the manufacturer. Unapproved antennas or modifications may damage your phone, degrade its performance and violate local regulations.

Do not touch the antenna unnecessarily while a call is in progress. Contact with the antenna affects call quality and may cause your phone to transmit at a higher power level than otherwise needed. Hold your phone so you would not touch any other phone. The antenna should point up and over your shoulder.

Batteries
All batteries can cause property damage, injury or burns if a conductive material such as gravel or keys comes into contact with the exposed terminals. The material may complete an electrical circuit and become quite hot. Exercise care in handling your phone battery.

For example, avoid carrying your phone battery loose in a pocket or purse. This product is designed for use with manufacturer-approved batteries only. Use of unapproved batteries may be dangerous and may cause damage to the battery or the phone and may void your warranty.

Accessories
Only use accessories approved by the manufacturer. Using unapproved accessories with your phone may result in degraded performance, fire, electric shock or injury, and may void the warranty. Please check with your dealer for the availability of approved accessories. Your phone is intended for use only with chargers approved by the manufacturer.

Any other use will invalidate any approval given to your phone and may be dangerous. The main AC charger is compatible only with power sources indicated on its label. Do not connect the charger to a power source of a different voltage or frequency. Do not use the charger outdoors or in areas where it may become wet.

Unplug the charger from the wall socket using the body of the charger, not the cord. Locate the cord so that it will not be tripped over, stepped on or damaged. Do not use the charger if it is damaged. Unplug the charger from the wall socket before cleaning it. Use a slightly damp cloth for cleaning, and allow the charger to dry fully before plugging it in.

Declaration of conformity

We, Sendo International Ltd
CE 10th Floor AIA Plaza, 18 Hysan Avenue, Causeway Bay, Hong Kong.
Declare under our sole responsibility that the product: S40200, known as S20 Identified by IMI numbers in the range: SAC: 330 741 FAC: 01 SAC: From: 000001 to 4999999 is in conformity with the following standards: EN60950 (Electrical Safety Standard, IT equipment) EN 300 489 (Product standard for EMC)

ETSI 300 607-1 (GSM Phase 2 MS test specification) as defined in:
TS 181 19 (as interpreted by G101 version 4.4)
TS 182 01 (as interpreted by G101 version 4.4)
TS 183 31 (as interpreted by G101 version 4.4)
TS 183 32 (as interpreted by G101 version 4.4)
TS 183 33 (as interpreted by G101 version 4.4)
TS 183 34 (as interpreted by G101 version 4.4)
TS 183 35 (as interpreted by G101 version 4.4)
TS 183 36 (as interpreted by G101 version 4.4)
TS 183 37 (as interpreted by G101 version 4.4)
TS 183 38 (as interpreted by G101 version 4.4)
TS 183 39 (as interpreted by G101 version 4.4)
TS 183 40 (as interpreted by G101 version 4.4)
TS 183 41 (as interpreted by G101 version 4.4)
TS 183 42 (as interpreted by G101 version 4.4)
TS 183 43 (as interpreted by G101 version 4.4)
TS 183 44 (as interpreted by G101 version 4.4)
TS 183 45 (as interpreted by G101 version 4.4)
TS 183 46 (as interpreted by G101 version 4.4)
TS 183 47 (as interpreted by G101 version 4.4)
TS 183 48 (as interpreted by G101 version 4.4)
TS 183 49 (as interpreted by G101 version 4.4)
TS 183 50 (as interpreted by G101 version 4.4)
TS 183 51 (as interpreted by G101 version 4.4)
TS 183 52 (as interpreted by G101 version 4.4)
TS 183 53 (as interpreted by G101 version 4.4)
TS 183 54 (as interpreted by G101 version 4.4)
TS 183 55 (as interpreted by G101 version 4.4)
TS 183 56 (as interpreted by G101 version 4.4)
TS 183 57 (as interpreted by G101 version 4.4)
TS 183 58 (as interpreted by G101 version 4.4)
TS 183 59 (as interpreted by G101 version 4.4)
TS 183 60 (as interpreted by G101 version 4.4)
TS 183 61 (as interpreted by G101 version 4.4)
TS 183 62 (as interpreted by G101 version 4.4)
TS 183 63 (as interpreted by G101 version 4.4)
TS 183 64 (as interpreted by G101 version 4.4)
TS 183 65 (as interpreted by G101 version 4.4)
TS 183 66 (as interpreted by G101 version 4.4)
TS 183 67 (as interpreted by G101 version 4.4)
TS 183 68 (as interpreted by G101 version 4.4)
TS 183 69 (as interpreted by G101 version 4.4)
TS 183 70 (as interpreted by G101 version 4.4)
TS 183 71 (as interpreted by G101 version 4.4)
TS 183 72 (as interpreted by G101 version 4.4)
TS 183 73 (as interpreted by G101 version 4.4)
TS 183 74 (as interpreted by G101 version 4.4)
TS 183 75 (as interpreted by G101 version 4.4)
TS 183 76 (as interpreted by G101 version 4.4)
TS 183 77 (as interpreted by G101 version 4.4)
TS 183 78 (as interpreted by G101 version 4.4)
TS 183 79 (as interpreted by G101 version 4.4)
TS 183 80 (as interpreted by G101 version 4.4)
TS 183 81 (as interpreted by G101 version 4.4)
TS 183 82 (as interpreted by G101 version 4.4)
TS 183 83 (as interpreted by G101 version 4.4)
TS 183 84 (as interpreted by G101 version 4.4)
TS 183 85 (as interpreted by G101 version 4.4)
TS 183 86 (as interpreted by G101 version 4.4)
TS 183 87 (as interpreted by G101 version 4.4)
TS 183 88 (as interpreted by G101 version 4.4)
TS 183 89 (as interpreted by G101 version 4.4)
TS 183 90 (as interpreted by G101 version 4.4)
TS 183 91 (as interpreted by G101 version 4.4)
TS 183 92 (as interpreted by G101 version 4.4)
TS 183 93 (as interpreted by G101 version 4.4)
TS 183 94 (as interpreted by G101 version 4.4)
TS 183 95 (as interpreted by G101 version 4.4)
TS 183 96 (as interpreted by G101 version 4.4)
TS 183 97 (as interpreted by G101 version 4.4)
TS 183 98 (as interpreted by G101 version 4.4)
TS 183 99 (as interpreted by G101 version 4.4)
TS 183 100 (as interpreted by G101 version 4.4)

The authorized EU representative is:
Michael Roper
Mike Roper
Senior Approvals Engineer
30/03/01

Icons

Symbol description

Main screen

Battery indicator
Empty icon indicates a very weak battery level. Solid icon indicates a fully charged battery level.

Battery charging
No bars indicates a very weak signal. Four bars indicates a very strong signal.

Signal strength indicator
No bars indicates a very weak signal. Four bars indicates a very strong signal.

New text message

All incoming calls are diverted

Keypad locked

New voice mail message
(This icon is network dependent)

Silent mode active

Alarm clock set

Shows that a call was incoming

Shows that a call was outgoing

Shows that a call was missed

Indicates the messages which have not yet been read

Indicates the messages which have been read

Indicates the messages which have not yet been read

Indicates the messages which have been read

In lists shows the option that is currently activated

Returns you to the previous screen

Displays the current Homepage

Services

Commands

This menu allows you to send special commands to the network to get specific information. This could be information such as the time and date, your own phone number, or the amount of credit remaining on your SIM card. The commands, and whether this feature is available, can be obtained from your service provider. You can store the number of the command and a name. Once stored, scroll to the command and press **[OK]**. Send to get the required information from the network.

Network selection

This menu allows you to choose how the phone searches for and then displays all available networks. If you are in manual mode then the selected network will become your default network.

Send number

This menu allows you to select whether you hide your identity or not when you call someone.

There are three options:

Network: Setting returns to Network default setting.
On: Your telephone number is sent to your correspondent when you call.
Off: Your telephone number is not sent to your correspondent when you call.

You have two options:

Automatic: The phone searches all available networks and automatically selects one.
Manual: The phone searches all available networks and, when finished, displays a list of all the networks found. You can scroll up and down with **[Up]** and **[Down]** to select the network that you wish to use. Once you select a network, your phone will always try to select this network.

Cost/timers

This menu contains all information on the amount of time you have spent on calls. **This menu offers five options:**
Balance: Displays the amount of credit that you have left on your prepaid card.
Outgoing: Displays the total time that you have spent on your phone on outgoing calls.
Incoming: Displays the total time that you have spent on your phone on incoming calls.
Limit: Allows you to view and set the maximum cost limit that you can go up to.
Rate: Allows you to set the price per unit, and enter the currency in which you wish the call costs to be displayed.

Cost/timers

This menu contains all information on the amount of time you have spent on calls. **This menu offers five options:**
Balance: Displays the amount of credit that you have left on your prepaid card.
Outgoing: Displays the total time that you have spent on your phone on outgoing calls.
Incoming: Displays the total time that you have spent on your phone on incoming calls.
Limit: Allows you to view and set the maximum cost limit that you can go up to.
Rate: Allows you to set the price per unit, and enter the currency in which you wish the call costs to be displayed.

Cost/timers

This menu contains all information on the amount of time you have spent on calls. **This menu offers five options:**
Balance: Displays the amount of credit that you have left on your prepaid card.
Outgoing: Displays the total time that you have spent on your phone on outgoing calls.
Incoming: Displays the total time that you have spent on your phone on incoming calls.
Limit: Allows you to view and set the maximum cost limit that you can go up to.
Rate: Allows you to set the price per unit, and enter the currency in which you wish the call costs to be displayed.

Extras

Splash

Go into the Extras menu and select Splash. You will see an animated display. An incomplete curly pipeline is displayed starting at the top left of the screen and slowly flowing towards the open end. The goal is to connect the open end of this pipe to the outlet at the bottom right of the screen before the water overflows!

Quaddro

Go into the Extras menu and select Quaddro. You can select the number of players: **Demonstration mode** lets you watch the computer play against itself. **You against the computer.** You against a friend.

Tenpin

Go into the Extras menu and select Tenpin. You can select the number of players: **Demonstration mode** lets you watch the computer play against itself. **You against the computer.** You against a friend.

Receiving a logo

When you receive a logo the message "1 new logo" appears on the main screen. **View to display the logo, and then press [OK].** Save to save the logo. To delete the logo press **[OK]**.

Saving the logo

When you have received a new logo press **[View]** to display the logo, and then press **[OK]**. Save to save the logo. To delete the logo press **[OK]**.

Setting the logo

To display the logo on the main screen go to the Extras menu and select the logo option. In this menu you can set the logo on or off.

Logos

This menu allows you to save images to be displayed on the main screen of the phone. **Receiving a logo**
When you receive a logo the message "1 new logo" appears on the main screen. **View to display the logo, and then press [OK].** Save to save the logo. To delete the logo press **[OK]**.

Saving the logo

When you have received a new logo press **[View]** to display the logo, and then press **[OK]**. Save to save the logo. To delete the logo press **[OK]**.

Setting the logo

To display the logo on the main screen go to the Extras menu and select the logo option. In this menu you can set the logo on or off.

Settings

Languages

This menu allows you to change the amount of time you have spent on calls. **This menu offers five options:**
Balance: Displays the amount of credit that you have left on your prepaid card.
Outgoing: Displays the total time that you have spent on your phone on outgoing calls.
Incoming: Displays the total time that you have spent on your phone on incoming calls.
Limit: Allows you to view and set the maximum cost limit that you can go up to.
Rate: Allows you to set the price per unit, and enter the currency in which you wish the call costs to be displayed.

Auto redial

When this function is activated, the phone will automatically redial a number when the call attempt fails. If the other user's phone is busy, the phone will wait a few seconds before each attempt, and then beep when it succeeds.

Auto answer

This function is only applicable when certain handsfree accessories (e.g., a personal hands-free headset) are connected to the phone. When you receive an incoming call with this feature activated, the phone rings three times before automatically accepting the call.

Any key answer

When this function is activated, you can answer an incoming call by pressing any key, except **[*]**, **[#]**, or **[Reject]**.

Sounds

Ringer

Select this menu to set the vibrator for incoming calls or text messages. **You have three options:**
Off: Deactivates the vibrator function.
On: Sets the phone to vibrate for an incoming call or text message.
Vibrate: Sets the phone to vibrate for a then ring few seconds before the phone starts to ring.

Volume

Select this option to change the volume setting for the different tones that the phone plays.

Key tones

This menu allows you to set the type of keypad tones that you would like to hear when pressing the keys.

You have three options:

Off: No sound emitted upon a key press.
On: Short, low volume tones.
DTMF: These are standard tones, as used in touch tone phones. Each number has its own specific tone.

Settings

Languages

This menu allows you to change the amount of time you have spent on calls. **This menu offers five options:**
Balance: Displays the amount of credit that you have left on your prepaid card.
Outgoing: Displays the total time that you have spent on your phone on outgoing calls.
Incoming: Displays the total time that you have spent on your phone on incoming calls.
Limit: Allows you to view and set the maximum cost limit that you can go up to.
Rate: Allows you to set the price per unit, and enter the currency in which you wish the call costs to be displayed.

Auto redial

When this function is activated, the phone will automatically redial a number when the call attempt fails. If the other user's phone is busy, the phone will wait a few seconds before each attempt, and then beep when it succeeds.

Auto answer

This function is only applicable when certain handsfree accessories (e.g., a personal hands-free headset) are connected to the phone. When you receive an incoming call with this feature activated, the phone rings three times before automatically accepting the call.

Any key answer

When this function is activated, you can answer an incoming call by pressing any key, except **[*]**, **[#]**, or **[Reject]**.

Sounds

Ringer

Select this menu to set the vibrator for incoming calls or text messages. **You have three options:**
Off: Deactivates the vibrator function.
On: Sets the phone to vibrate for an incoming call or text message.
Vibrate: Sets the phone to vibrate for a then ring few seconds before the phone starts to ring.

Volume

Select this option to change the volume setting for the different tones that the phone plays.

Key tones

This menu allows you to set the type of keypad tones that you would like to hear when pressing the keys.

You have three options:

Off: No sound emitted upon a key press.
On: Short, low volume tones.
DTMF: These are standard tones, as used in touch tone phones. Each number has its own specific tone.

Security

Your PIN (Personal Identity Number) code is a code which you can use to protect unwanted users from using your phone. This is the number that the phone asks for at switch on.

1 Homepage - Connect to the Internet server and enter your homepage.
2 Homepage - Connect to the Internet server and enter your homepage.
3 Homepage - Connect to the Internet server and enter your homepage.
4 Homepage - Connect to the Internet server and enter your homepage.
5 Homepage - Connect to the Internet server and enter your homepage.
6 Homepage - Connect to the Internet server and enter your homepage.
7 Homepage - Connect to the Internet server and enter your homepage.
8 Homepage - Connect to the Internet server and enter your homepage.
9 Homepage - Connect to the Internet server and enter your homepage.
0 Homepage - Connect to the Internet server and enter your homepage.

Security

Your PIN (Personal Identity Number) code is a code which you can use to protect unwanted users from using your phone. This is the number that the phone asks for at switch on.

Security

Your PIN (Personal Identity Number) code is a code which you can use to protect unwanted users from using your phone. This is the number that the phone asks for at switch on.

Security

Your PIN (Personal Identity Number) code is a code which you can use to protect unwanted users from using your phone. This is the number that the phone asks for at switch on.

Internet menu

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Internet menu

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Internet menu

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage

In order to configure your homepage select Settings from the Internet menu and then select the Homepage option.

Configuring your homepage