## Your phone 66



7 pqrs 8 tuv 9 may 2

\*0 O7 #-Up and down keys cated on the front of you

2 Soft keys
These keys perform the function indicated by the text immediately above them on the display.

Quick Access key
The function of this key will vary depending on the model of your phone. It provides quick access to a certain function such as SIM

Clear key
This erases characters or text or takes you back to your previous step, depending on the context back to the main screen

# Making a call

1 Key in the area code and number that you want to call then press O, Call,

To delete the entire number and return to the main screen, press and hold ©

2 You can adjust the earpiece volume a call by using the front keys (A) (V)

3 To end the call, press ( , End Making an international call Press and hold 🕡 until the plus sign "+" is displayed. This replaces the

international access code. 2 Enter the country code, area code, and phone number.
3 Press , Call, to dial.

# Dialling a number

Making an emergency call 1 Enter 112 (or the local emergency

number). Press , Call, to dial. Making calls from the contact list

1 Press ( ) from the main screen, you can n the Incoming call also press (a), Contacts then select

2 Type in the first letters of the name or scroll and find the one that you want. Press O, Call, to dial.

Speed dialling

Allows you to dial a number simply by pressing and holding the assigned key

from the main screen.

To assign a contact list entry to a key:

Press , then press and hold one of the keys (2 abc) to (9 wayz) until the key numbe appears on the left of the screen, beside the name. This indicates that the speed dial is successfully assigned.

# Answering a call

Making a call from the calls list

To reject a call, press 🕥, Reject Call waiting

This feature means you are informed of a rins reduce means you are minimed of a second incoming call by an audible tone in the earpiece.

Press , Reject, to reject the second call.

Press , Accept, to put the current call

on hold and activate the second call.

To end the active call and return to the held call, press , End.

To switch between calls, press , Options, then select the Swap option

Note: Your network may not support call

## In call options

When you are in a call, you can press

O, Options, these could be:

Gives you access to the contact list. Switches the microphone off/on.

**Send message**Allows you to send a text message. Gives you access to the SIM Toolkit.

call on hold. End all

# Ringer tone composer

Go into the Sounds menu and press O, Change your ringer tones to person your phone. Create your own tones with

You have 2 entry methods

Text notes are entered textually

Both entry methods use the same key In this menu the keys represent the following notes:

2 abc D 6 === A 3 def E 7 pers B (4 ghi)

▼ Enters a rest (graphic mode) (9 minz) Changes the scale of the note

between the range 1-4

(8 tw) Enters a rest (text mode)

Changes the duration of the duration of the note between the range: full note, half note, quarter note, eighth note, sixteenth note and thirty-second note.

#- Changes a normal note to a sharp and a sharp back to a normal note and a sharp back to a normal note.

\*5 Changes a normal note to a dotted, double dotted or 2/3 note.

© Erases the previous note. A long press will clear all notes. Tip: A short press of the (a) and (v) keys Once you have composed the tone pres The available options are: Tempo: Allows you to choose from a list

of tempos at which to play your Allows you to play your melody

Allows you to save your melody Delete: Allows you to delete the tone. Send: Allows you to send your tone to

Receiving a ringer tone

If you have received a ringer tone press
O, Options to enter the menu from where you can play, save or delete the tone. If you press the ring tone and message will be deleted.

Note: It is only possible to save 5 ringe

On the right of the screen you will see the number of moves that you have made so

far, and also the smallest number of move

that it is possible to complete the level in

2 abc

1 w 3 def

← 4 ghi 6 mno → 7 pers 9 waye

8 tuv

and bigger, and harder!

# Useful tips

Enter the Settings menu to set the time and date. Go to Set date and press O, Select. Enter the date, Press O, OK, Go to Set time and press Select. Enter the time in 24 hour format. Press OK The date and time will be stored.

Alarm clock You can use your phone as an alarm clock.
Enter the Settings menu and press (),
Alarm. Set the alarm to On and enter the time (in 24hr format) when you require the

), Snooze, to stop the alarm for ten utes. The alarm will then sound again.

# Setting time and date

Enter the Sounds menu and select Equal This menu allows you to alter the

phone to ring. When it rings press (a), Off, to switch it off, or

earpiece audio settings of your phone Choose from these 3 settings for optimum

To lock/unlock the keypad, press .

then 🖚 from the main screen To enter/exit silent mode press 🕜 then

To enter a pause while dialling press and hold — until the letter p appears. This will insert a pause of 3 seconds.

## Messages

When you have a new message in your voice mailbox, your phone displays either the voice mail icon 2 in the main screen or from the network. This depends on your service provider.

Calling your voice mail

Press and hold (1 a). If the phone asks for the voice mailbox number, enter it and press

O, Call. The number can be obtained from

your service provider. Reading a text message When you receive a text message, the envelope icon is displayed at the top

1 Press ( , Read, to display the new message directly from the main screen.

To read old messages select read from

3 Use the up and down keys lacktriangle and lacktriangle to scroll through the message.

4 Press , Options, to access the

the messages menu

following message options: Removes the message. Sends a text message to the sender Calls the sender (or, if there is a number in quotes in the message, this number is called instead) Adds the sender's phone number

to your contact list.

Time/date Displays the date and time of the Forward Sends the message to someone else.

## Sending a text message

You can send messages of up to 160 characters to another GSM phone. Enter the Messages menu and select the option Send

3 When you have entered the text, press Send.

name from your contact list.

5 Press , Send, to send the message.

Predictive Text Input

The phone stores a list of your recent

incoming, outgoing and missed calls.

To dial a number from the redial/calls list Press (a) to access the list. Scroll and

find the one that you want and press

The list stores up to 30 entries.

■ Missed call

**C**→ Outgoing call

O, Call, to dial.

Type in a new message or select a message from a list of saved messages.

Some intelligent punctuation (including full

# Changing the editing mode

To save time when you are writing a text message, your phone has a feature which guesses the letters that you are typing and tries o complete the word.

This input method allows you to simply press each key once. For example, to write the name "Ross", press  $(7 \, \text{k/s})$ , then  $(6 \, \text{mo})$ , then  $(7 \, \text{k/s})$ , then  $(7 \, \text{k/s})$  just once each.

The word may change as you type, but don't worry about what is on the screen until you have finished the word. Sometimes different words share the same sequence of key presses. If the finished word is wrong, press (07) to scroll through other possibilities If the word that you are looking for is still not there, press \*5 repeatedly to change the text mode to **ab** and enter the word

After you have completed a word, press the space key (#—) to enter the next word.

Press and hold (#—) to pick a symbol to insert from the character table. stops, hyphens and apostrophes) are also available on  $(1 \omega)$ . The punctuation mark is completed when you enter the next keystroke

ab Lower case text mode Upper case text mode

Numeric mode T9 Text Input (lower case)

T9 Text Input (upper case) can switch between upper case, le , and numeric modes by repeated pressing 🖚 You can switch to prediction of the prediction of the pressing 🖚

> 1.,@'?!":;;; abc2àäåæç mno6ñòöø6 wxyz9

reappear before entering the second.

Press (\*5) to enter upper case mode, Press (750) three times, to display "R", you will then return to lower case mode, Press 6 mo three times, to display "o". Press (7 plus) four times, to display "s",
Then press (7 plus) four times, to display "s",

**Entering symbols** A long press on \_\_\_\_ displays a table showing all the symbols available to you Scroll down the table to display more symbols

Scroll to the row containing the symbol

Press the numeric key (1 aw to 9 winc) to reach the the symbol you want.

the 4th row then press (3 def).

## Sending a Smiley SMS Send a picture with your text message to

compatible phones. All other phones will display an Internet style Smiley. Choose , Smiley.

one of these categories and press O, Select.

The text is restricted to 156 characters to allow space for the Smiley. Reading a Smiley SMS

When you choose a message that has a Smiley in it, the Smiley appears on the screen for 3 seconds or until a key is pressed. Then the message appears. After this time the message reads as normal. A message with a smiley attached has a  $\mathfrak G$  icon if new and a  $\mathfrak G$  if read.

Message settings

This menu offers three options: be informed when your correspondent has received the text message.

centre number for text messaging. Allows you to enter or change your voice mail number.

Go into the Extras menu and select FlippIT There are 6 levels; 3x3 is the easiest. The objective of the game is to change the white discs to black discs. You do this by selecting one of the white discs by pressing

the 5 key. This turns the white disc to black, but also turns all of the discs directly above, below, to the left and to the right of the selected discs to black. You can move the cursor from one to anothe

Extras

You will see an animated display. An incomplete curly pipeline is displayed

starting at the top left of the screen and water is slowly flowing towards the open end. The goal is to connect the open end of this pipe to the outlet at the bottom right The 5 N key places the section in the of the screen before the water overflows! To do this you are supplied with pieces of straight and bent pipe, which are shown at the right of the screen. The piece at the You are provided with 3 bombs. These place on the board. You move the cursor using the keys on the grid below, the #- key drops your

position of the flashing cursor. Howeve be careful, once you have put down a

top of these is the next piece that you must bombs will delete the piece where the cursor is positioned. Use them wisely Once you have managed to complete you can press (\*5) to speed up the pipeline to the outlet, you can press the key to speed up the water, to finish the level. With each level

it aets faster and faster. Good luck!

To select the paper press 2 abc.

To select the scissors press 3 def.

The object of the game is to try to bea

Quaddro Quaddro. You can select the

the computer play against itself. ou against a friend.

therefore scissors wins aper (flat palm) wraps stone Stone (fist) blunts scissors,

So into the Extras menu and select number of players: Demonstration mode lets you watch

he objective of the game is to drop your unters into the slots along the top of the board, in the attempt to create a line of four, horizontally, vertically or diagonally

Go into the Extras menu and select Scizzors ou will see an animated display.

n order to select the stone, press 1 w.

3 objects. When you do this the computalso selects one of the 3 objects. cissors (2 fingers out) cuts paper therefore stone wins Two of the same result in a draw

When you drop a counter, it will fall all the way to the bottom or sit on top of any other counters that are in that column. So, think carefully before you play!

You move the flashing cursor left and right along the top of the screen using the  $\begin{pmatrix} \mathbf{4} & \mathbf{8}^{h1} \end{pmatrix}$  and  $\begin{pmatrix} \mathbf{6} & \mathbf{mno} \end{pmatrix}$  keys. Pressing 5 M will drop the counter into the column.

**Declaration of conformity** Sendo International Ltd 10th Floor AIA Plaza, 18 Hysan Avenu Causeway Bay, Hong Kong.

Declare under our sole responsibility that the product: SND200, Known as S200 Identified by IMEI number in the range: TAC: 350156 FAC: 01 SNR: From: 000001 To: 499999

ETS 300 342-1 (Product standard for EMC)
ETS 300 607-1 (GSM Phase 2 MS test specification)

Identification Mark: 168 (notified body number The technical documentation relevant to the above equipment will be held at: Sendo Itd,
Centrelink House, Talbot Way, Small Heath Industrial Estate, Birmingham, B10 OHJ England.



Battery indicator battery level Solid icon indicate a fully charged battery leve

Battery charging ଌ୴



 $\boxtimes$ New text message



연속



shows that a call was incoming C⇔ shows that a call was outgoing

shows that a call was missed



indicates the smiley messages which have not yet been read 99



© 2001 Sendo. All rights reserved.
The Sendo logo and D are trademarks of Sendo
International Ut. Sendo reserve the right to change
any specifications without prior notice.

17<sup>68</sup> Teat Input is a registered trademark of Tegic
Communications. All rights reserved.

17<sup>68</sup> Teat Input is licensed under one or more of the
following U.S. Patents:

5,818,437, 5,953,541, 5187,480, 5,945,928,
6,011,554 and odditional patents are pending

www.sendo.com

# Getting started

To use your phone, you must first insert the miniature SIM card supplied by your service provider, and then charge the battery.

Removing the back cover Press down on the ridges below the clip and slide the cover back. Lift off.

## nserting the SIM card

Place the SIM in the phone, starting with the right side first, making sure that the golden contacts of the card are touching the contacts of the phone. Hold the SIM card in place and slide the metal plate to the right, in order to cover the left hand side of the

## Fitting the battery

Services

Insert the battery with the label facing down Align the tabs on the battery with the tabs on the back of the phone. Clip into place. To remove press on the clip and lift the

the time and date, your own phone number,

or the amount of credit remaining on your SIM

card. The commands, and whether this feature

is available, can be obtained from your service provider. You can store the number of the

command and a name. Once stored, scroll to the command and press , Send to get the

This menu allows you to choose how the

Manual sets the search mode to manual

Searches for and then displays all available

networks. If you are in manual mode then the selected network will become your default

You have two options: Automatic: The phone searches all available networks and automatically selects one. Manual: The phone searches all available

networks and, when finished, displays a list of

You can scroll up and down with (1) to select the network that you wish to use.

Once you select a network, your phone will

always try to select this network.

all the networks found.

required information from the network

Network selection

phone searches for the network.

Charging the battery

into the connector at the base of the phone Plug the charger into a mains AC socket. When charging commences, the battery icon will change into a charger cable icon When the battery is fully charged, the battery icon will reappear and you can disconnect the charge

Powering up/down To switch the phone on: Press (a). If the phone asks for a PIN code: Enter the code that is supplied with the SIM card. The code will be displayed as asterisks. When complete, press O. OK Wait a few seconds while the phone searches for the network. Once the network has been found, the main screen appears and your phone is ready to be used.

and two icons giving the signal strength

To switch the phone off, press and hold

Network selection stays manual until you

This menu allows you to select whether you hide your identity or not when

twork Setting returns to Network default setting

Your telephone number is sent

to your correspondent when

sent to your correspondent

when you call.

This menu offers five options:

Balance: Displays the amount of credit

that you have left on your prepaid card Outgoing: Displays the total time that

you have spent on your phone on outgoing calls.

Incoming: Displays the total time that

you have spent on your phone on

mit: Allows you to view and set the

and enter the currency in which you wish

the call costs to be displayed.

ximum cost limit that you can go up to.
e: Allows you to set the price per unit,

This menu contains all information on the amount of time you have spent on calls.

Send number

you call someone.

Cost/timers

(top right) and battery level (top left).

# Menu navigation

You can scroll from one menu to another

using the front keys (a) and (b). When you find the menu that you are looking for, press (c), Select to go in. Press End, back or © to return to the previous level.

Your service provider may offer some

SIM Toolkit

special services or applications. The name of the menu may change to indicate the type of service, for example "Information". For more details, please contact your service provider

This network feature allows you to dive

your incoming calls to your voice

This menu offers four option

diverted if you are already in a call.

ncoming calls will be diverted. For each of the above, you can: Check, activate or cancel the service

Your service provider may have pre-programmed some useful numbers into your SIM card. These numbers normally

give access to special services. For more

give access to special services. For more information contact your service provider.

1 Press ②, Contacts to display the contact list menu, scroll using ③①.

2 Scroll to the Service no. option, then press ②, Select.

This menu allows you to activate or

deactivate the call waiting feature.

Service numbers

Call waiting

be diverted if you do not answer your

swer: When activated, calls will

able: When activated, calls will be diverted if your phone is off or if you

mailbox or to another number.

# Sounds

you receive a call or a new text message, or some other event occurs.

Select this option to change the volume setting for the different tones that the

This menu allows you to set the type of keypad tones that you would like to hear when pressing the keys. You have three options

Off No sound emitted upon a key press Short, low volume tones.

F These are standard tones, as used in touch tone phones. Each number has its own specific tone.

Troubleshooting

none does not charae

ssage list full" is display

# Settings

Select this menu to set the vibrator for

Sets the phone to vibrate for an

incoming call or text message.

Vibrate Sets the phone to vibrate for a then ring few seconds before the phone

This option is not available on all models.

None of the above settings affects any of

incoming calls or text messages.

starts to ring.

to on or off for the following options:

This is only with certain subscriptions

the sounds settings.

Events

Battery empty

This menu allows you to change the language of the phone. Auto redial

When this function is activated, the phone the call attempt fails. If the other user's phone is busy, the phone will wait a few seconds before each attempt, and then beep when it succeeds.

## phone. When you receive an incoming call with this feature activated, the phone

Any key answer When this function is activated, you can answer an incoming call by pressing any key, except , Reject.

Clean contacts on battery and phone with a dry cloth, attach battery, wait a few and press .

Charge for 2 hours. Don't worry if the battery icon does not change immediately.

Check the mains socket, and the connection to the phone.

This menu allows you to switch your menu animations off or on.

This function is only applicable when certain Your PIN (Personal Identity Number) code is a code which you can use to protect unwanted andsfree accessories (e.g., a personal andsfree headset) are connected to the users from using your phone. This is the number that the phone asks for at switch on. Activate PIN entry requirement at switch

- on (if your SIM card supports this).

  Deactivate PIN entry requirement at switch on (if your SIM card supports this). 4 Change PIN2.

Some network services require a separate security code. This code is the PIN2.
This menu allows you to change the PIN2 code that the mobile asks for when using certain features.

To activate the PIN code requir

## Using the contact list

The names and numbers you enter into your contact list are stored on the SIM card. To access your contact list entries, press 🔻 from the main screen. Storing a name and number

## 1 Press , Contacts, from the main

Using the contact list

- Use the up and down keys (4) and (7) 2 Use the up and down keys (a) and (b) to scroll to the Add new option, then press (a). Select.

  3 Enter the area code and phone number, then press (b). OK.

  4 Enter the name you wish to store in the contact list, then press (c). OK. Use the keypad as explained in the table overleft to enter the characters and to
- overleaf to enter the characters and to switch between lower case, upper case and numeric modes

Pressing © deletes the character immediately to the left of the cursor.

Pressing and holding © deletes all of the text that you have entered.

# Contact list options

When you have selected a name you can open a list of options by pressing Options which will allow you to change, delete, give details and send of

This service allows you to restrict your outgoing calls to certain selected numbers from your SIM card. This feature is dependent on your service provider.
Your phone will ask for the PIN2 code to activate this function. You can obtain this code from your service provider. When this feature is activated, a new contact list is made visible in place of your standard one. Only numbers from this contact list can be dialled. You can ado numbers to this contact list in the same way as adding numbers to your norma contact list, with the exception that you have to enter the PIN2 code

Broadcast messages
Your service provider may offer Cell Broadcast. This could be information on the traffic, weather, events, or local network to all mobiles in a specific area When you activate this feature, you may receive messages about the selected topic. Contact your service provider for

Any other use will invalidate any approval given to your pho

# Safety information



