

**SIEMENS**  
mobile

**SIEMENS**  
mobile



Issued by  
Information and Communication mobile  
Haidenauplatz 1  
D-81667 Munich

© Siemens AG 2004  
All rights reserved. Subject to availability.  
Rights of modification reserved.

Siemens Aktiengesellschaft  
[www.siemens-mobile.com/a65](http://www.siemens-mobile.com/a65)

Designed for life

A65

<b>Safety precautions</b> .....	2	<b>Message lists/</b>	
<b>Phone overview</b> .....	3	<b>Message settings</b> .....	17
<b>Display symbols (selection)</b> .....	5	<b>Surf &amp; fun</b> .....	17
<b>Getting started</b> .....	6	Internet browser (WAP) .....	17
Using the SIM card/battery .....	6	Games & more .....	18
Charging the battery .....	6	<b>Setup</b> .....	19
<b>Switching on/off, PIN</b> .....	7	Profiles .....	19
Enter PIN .....	7	Display .....	19
Strong reception signal .....	7	Call setup .....	20
Emergency number (SOS) .....	8	Clock .....	21
Without a SIM card .....	8	Connectivity .....	21
<b>General information</b> .....	8	Security .....	21
User guide .....	8	Network .....	22
Menu control .....	8	Accessories .....	22
Standby mode .....	8	<b>Ring tones</b> .....	23
<b>Security</b> .....	8	<b>Extras</b> .....	23
Codes .....	8	Alarm clock .....	23
Clear SIM card barring .....	9	Calculator .....	23
<b>Making a phone call</b> .....	9	Stopwatch .....	23
<b>Text entry</b> .....	10	SIM services (optional) .....	24
Text entry without T9 .....	10	<b>Fast access</b> .....	24
Text entry with T9 .....	11	<b>Own stuff</b> .....	24
Predef. texts .....	12	<b>Questions &amp; Answers</b> .....	25
<b>Phonebook</b> .....	12	<b>Customer Care</b> .....	28
<New entry> .....	12	<b>Care and maintenance</b> .....	29
Call (search for an entry) .....	12	<b>Product data</b> .....	30
Edit entry .....	12	<b>Battery quality statement</b> .....	30
Assign picture .....	13	<b>Display quality declaration</b> .....	31
Groups .....	13	<b>Guarantee certificate (UK)</b> .....	31
<b>Records</b> .....	13	<b>Guarantee certificate (IRL)</b> .....	32
<b>Durat/charges</b> .....	13	<b>Accessories</b> .....	34
<b>Camera</b> .....	14	<b>Menu tree</b> .....	35
<b>Voicemail/CB services</b> .....	14	<b>Index</b> .....	39
<b>SMS</b> .....	15		
<b>MMS</b> .....	16		

**See also Index at the end of this User Guide**

# Safety precautions

## Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (Volt) must not be exceeded. Otherwise the charging device may be destroyed.



The ringtone (S. 23), info tones and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (S. 10). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the operating licence.

### Important:



Please dispose of unwanted batteries and phones as permitted by the laws in your country.




The phone may cause interference in the vicinity of TV sets, radios and PCs.




Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee! These safety instructions also apply to Siemens original accessories.

# Phone overview




①  **Call key (press lower part of button)**  
Dial phone number /name displayed, take calls. Show last phone numbers dialled in standby mode.

②  **On/Off/End key (press lower part of button)**


- Switched off: press and **hold** to switch on.
- During a call or in use: press **briefly** to finish.
- In menus: press **briefly**: one level back. Press and **hold**: return to standby mode. Press and **hold**: return to standby mode.
- In standby mode: Press and **hold** to switch off phone.

③ **Control key**




**In lists and menus:**


-  Scroll up and down.
-  Function call.
-  Back a menu level.

**During a call:**

-  Open call menu.

**In standby mode:**

-  Open Phonebook.
-  Open menu.
-  GPRS info.

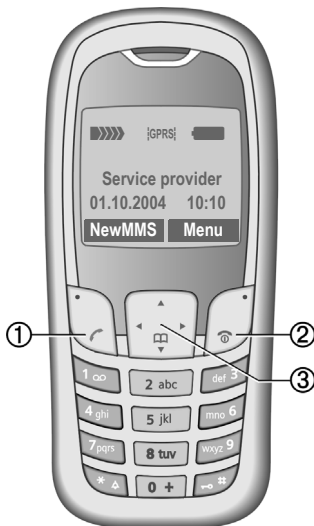

① **Integrated antenna**


Do not interfere unnecessarily with the phone above the battery cover. This reduces reception quality.

② **Loudspeaker**

③ **Display symbols**

Signal strength/GPRS available/battery level.

④ **Display keys (press upper part of button)**

The current functions of these keys are shown in the bottom line of the display as **text**/symbol (e. g. ).

⑤ **Input keys**

Numbers, letters.

⑥ \* **Press and hold**

- In standby mode: switch on/off all signal tones (except alarm).
- For incoming calls: switch off ring tones only.


⑦ # **Press and hold**

In standby mode: switch key lock on/off.

⑧ **Microphone**

⑨ **Plug socket**

Connection for charger, headset, camera etc.

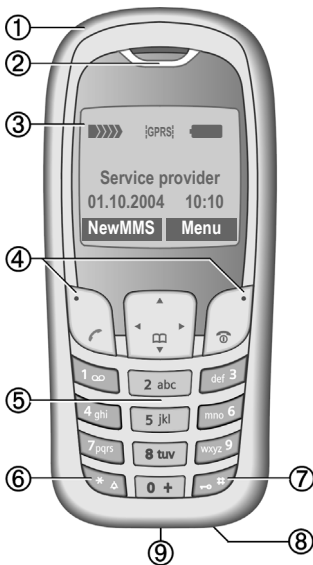

# Display symbols (selection)

## Display symbols

	Signal strength.
	Charging.
	Battery charging status, e.g., 50%.
	Phonebook
	Records
	Surf & fun
	Ring tones
	Messages
	Camera
	Extras
	Own stuff
	Setup
	All calls are diverted.
	Ringer off.
	Short ring (beep) only.
	Ring only if the caller is stored in the Phonebook.
	Alarm set.
	Alarm clock active.
	Key lock active.
	Phone numbers/names:
	On the SIM card
	On the SIM card (PIN 2 protected).
	In the phone memory.
	No network access.
	Function activated/deactivated.

	Phonebook.
	Indicates whether upper- or lower case letters are active.
	Text input <b>with</b> T9.
	Activated and available.
	Registered.
	Temporarily interrupted.
	GPRS download.
	WAP Online.
	WAP via GPRS online.
	WAP No network.
	Headset active.
	Auto answer feature on.

Depending on your service provider, some of the symbols displayed here may differ from those on the phone.

## Soft keys


	Message received.
	MMS received.
	MMS notification.
	Voice mail received.
	Data received.
	Picture received.
	Melody received.
	Unanswered call.
	Store in Phonebook.
	Retrieve from Phonebook.

## Getting started


### Using the SIM card/battery

Your phone's display is delivered with a protective film. **Remove this film before getting started.** To avoid damage to the display, the phone should not be used without the front cover. The service provider supplies you with a SIM card on which all the important data for your account is stored. If the SIM card is credit card-sized, snap out the smaller segment and trim any rough edges.


Remove the battery cover upwards ①.

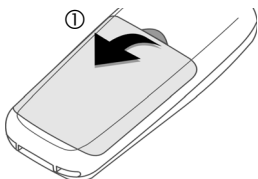

Insert SIM card ② and push it fully into the locating slot (make sure the angled corner is in the correct position ③). Then push the retaining catch over the top of the SIM card ④.

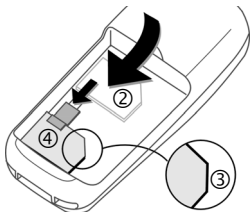


Insert the battery sideways into the phone ⑤, then press downwards ⑥ until it engages.

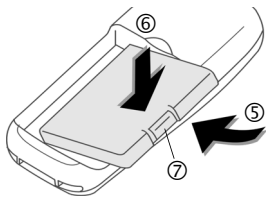

To remove, press the retaining tab ⑦ then lift the battery out.

Insert the battery cover by the tabs at the bottom ⑧, then press downwards ⑨, until it engages.

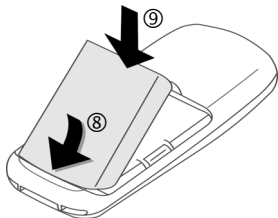


Always switch off phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider if you have an older card.

Functions without SIM card p. 8.

### Charging the battery

The battery is not supplied fully charged. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **two hours**. The power supply unit will become hot after extended use. This is normal and is not dangerous.

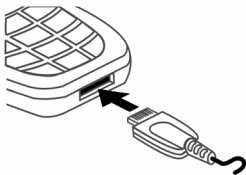

### Display when charging is in progress



### Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to +40 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes as a warning. The voltage specified on the power supply unit must not be exceeded.

### Charge icon not visible

If the battery was fully discharged, the charging symbol will not be immediately visible on connection to the power supply unit. It will appear after up to two hours. In this case the battery is fully charged after 3 - 4 hours.

### Only use the power supply unit provided!

### Display while in service


Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is displayed correctly only after uninterrupted charging/discharging. You should therefore **not remove the battery unnecessarily** and where possible **not interrupt charging prematurely**.

## Switching on/off, PIN

### Turning the phone on/off

Press and **hold** the On/Off/End key  to switch on or off.

### Enter PIN

The SIM card can be protected with a 4- to 8-digit PIN.

Enter the PIN using the number keys. The characters \*\*\*\* appear to ensure nobody can read your PIN on the display. Correct errors with **Clear**.

Confirm your input with **OK**. Logging on to the network will take a few seconds.

### Switching on your phone for the first time

#### Time/Date


The clock must be set to the right time once at start-up.

Press **Yes**. First enter the date (day/month/year), then the time (24 hours, including seconds). Press **OK**. The time and date are updated.

If the battery is removed for longer than 30 seconds, the clock must be reset.

#### Time zones

Specify your current time zone.

Select the desired time zone from the list with . Apply it with **Set**.

### Strong reception signal



Strong receive signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.



## Emergency number (SOS)

### Use only in real emergencies!

By pressing the soft key **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

### Without a SIM card










If you switch on the phone **without** a SIM card you can still use some phone functions.

Press **Menu**. The functions are displayed (f.e. Emergency, SOS).

## General information


### User guide

The following symbols are used to explain operation:

-  Enter numbers or letters
-  On/Off/End key
-  Call key
-  Press the control key on the side indicated
-  Soft key left
-  Soft key right
-  **Menu** Displays a soft-key function
-   Function depends on the service provider, special registration may be necessary

### Menu control

The steps needed to reach a function are shown in **concise form** in this user guide.

E. g. to display call list for missed calls: press **Menu** →  → **Calls missed**

This corresponds to:


Open the main menu, select the **Records**

menu, then select the function **Calls missed**. You have to confirm with **Select**.

### Standby mode

When the name of the service provider appears on the display, the phone is in **standby mode** and **ready for use**.

The left soft key may have different functions pre-assigned to it.


Press and **hold** the On/Off/End key  to return to standby mode from any menu option.

## Security

### Codes

The phone and SIM card are protected against misuse by several security codes.

**Keep these confidential numbers in a safe place where you can access them again if required.**

**Menu** →  → **Security** → **Codes**  
→ Select a function

### PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

### Change PIN

You can change the PIN to any 4-8 digit number you may find easier to remember.

### Change PIN2

(Display only if PIN 2 is available). Proceed as with **Change PIN**.

## Change phonecode


You define the phone code (4 to 8 digits) when calling up a phone-code protected function for the first time. It is then valid for all phone-code protected functions. Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. In such an instance contact Siemens Service (p. 28).

## Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

## Preventing accidental activation


Even if PIN entry is deactivated (p. 8) confirmation is required to switch on phone. This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.

After long press of the On/Off/End key  to switch on the phone or abort the operation with **Cancel**.

# Making a phone call

## Dialling with number keys



The phone must be switched on (standby mode). Dial number (always with area code, if necessary with international dialling code). To dial International dialling codes press and **hold 0** until a "+"-is displayed. Press **+List** and select country.

**Short press** **Clear** to clear the last digit, a **long press** clears the entire phone number. To dial press the  key.

## End call



 
Press the End key  **briefly**. Press this key even if the person on the other end of the line has hung up first.

## Set volume


Use the control key  to start adjusting the volume during conversation. Set volume with  and confirm with **OK**.

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.


## Redial previous numbers

For redialling previously dialled numbers press the Call key  once, pick out the required phone number from the list with , then press  again.

## If number busy

 Press **Auto dial** for automatically dialling the phone number ten times at increasing time intervals or press **Call back** () for phone ringing when the busy number is free. Press **Prompt** and a beep will remind you to redial the displayed phone number after 15 minutes.

## Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone. Press **Answer** or .

**Please make sure you have accepted the call before holding the phone to your ear. This will prevent a loud ring tone from damaging your hearing!**

If the phone number has been transmitted by the network, it is displayed. If the caller's name also appears in the Phonebook, this will appear instead of the number. If set, a picture can be displayed instead of the bell icon.


## Reject call

**Reject** or  press **briefly**.

## Handsfree




You can put the phone down during a call. You can then hear the caller via the loudspeaker.


Activate handsfree function with **Handsfr.** and switch on with **Yes**.

Adjust the volume with . Pressing **Handsfr.** switches off "handsfree talking".




**Always switch off "handsfree talking" before holding the phone to your ear! This will avoid damage to your hearing!**

## Swapping between 2 calls


Make a new connection during a call with  → **Hold** →  (dial a new phone number). With  → **Swap** you can swap back and forth between both calls.

If you are called during a phone call and you can hear the "call waiting tone" (p. 20), you can accept the waiting call with **Swap**, putting the current call on hold to do so. Swap back and forth between the calls as previously described or end the current call with  and accept the new call with **Answer**.

## Conference

Make a new connection during a call with  → **Hold** →  (dial a new phone number). With  → **Conference** you can join the held call.

Repeat this procedure until all participants are linked together (up to 5 participants).

**All** calls in the conference are ended simultaneously when the End key  is pressed.

# Text entry


## Text entry without T9

Press number key repeatedly until the required letter appears. The cursor advances after a short delay. Example:

**2** Pressing briefly **once** types the letter **a**, twice the letter **b**, etc. Press and **hold** to write the number.

**Ä, ä, 1-9** Umlauts and numbers are displayed after the relevant letters.

**Clear** Press **briefly** to delete the letter before the cursor, press and **hold** to erase the whole word.

 Move the cursor (forwards/back).

**#** Press **briefly**: Switch between *abc*, *Abc*, *ABC*, *T9abc*, *T9Abc*, *T9ABC*, *123*. Status indicator in the top line of the display.

Press and **hold**: All input modes are displayed.

**\*** Press **briefly**: Special characters are shown. Press and **hold**: Open input menu.

**0** **Press once/repeatedly**: *. , ? ! ' " 0 - ( ) @ / : \_*  
Press and **hold**: Writes **0**.



**1** Writes blank. Press twice = skip line.

## Special characters

Press **briefly** \*. The character map is displayed:

1)	¿	¡	–	;	.	,	?	!	+	-
"	'	:	*	/	(	)	¤	¥	\$	£
€	@	\	&	#	[	]	{	}	%	~
<	=	>		^	§	Γ	Δ	Θ	Λ	≡
Π	Σ	Φ	Ψ	Ω						

1) Line skip

Navigate to characters with ,  and press **Select**.

## Input menu

Press and **hold** \* with text input. The input menu is displayed:

Text format (SMS only)

Input language

Mark text

Copy/Add

## Text entry with T9

T9 deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

### Activate, deactivate T9

**Options** → T9 input → T9 preferred  
→ **Change** (activate or deactivate T9)

### Select input language

Select the language in which you want to compose your message.

**Options** → T9 input → Input language  
→ **Select** (the new language can be selected) or **Delete** (T9 dictionary for the selected language will be deleted).

### Type a word using T9

The display changes as you proceed. Therefore, it is best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:


Press **briefly** # for T9Abc then

**4 6 8 3 5** and **1** (the blank ends a word).

Do not use special characters such as Ä but rather use the standard characters, e.g. A; T9 will do the rest for you.

### Additional notes




**0** Setting a full stop. Word is ended when followed by a blank space. Within a word, a full stop represents an apostrophe or hyphen: e.g. **provider.s** = provider's.

 Move to the right. Ends a word.

**#** Press **briefly**: Swap between: abc, Abc, T9abc, T9Abc, 123. Status indicator in the top line of the display. Press and **hold**: All input modes are displayed.

**\*** Press **briefly**: Select special characters. Press and **hold**: Open input menu.


### T9 word suggestions




If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. The word must be highlighted as **inverted**. Then press   . The displayed word is replaced with a different word. If this is also incorrect, repeat until the correct word is displayed.

To add a word to the dictionary, select **Spell**. Now write the word without T9-support and accept with **Save** into the dictionary.


## Correct a word

Words written **with** T9:

With  move left or right, word by word, until the required word is **inverted**.

With    scroll through the T9 word suggestions again. **Clear** deletes the character to the left of the cursor **and** displays a new possible word!

Words **not** created using T9:

With  move letter by letter to the left/right. **Clear** deletes the letter to the left of the cursor. New characters are inserted at the cursor position.


T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

## Predef. texts



The phone contains predefined texts that you can add to your messages (SMS, MMS). You can also create and store up to 5 personal stored texts. Each stored text can contain up to 32 characters.

Unlike personal stored texts, predefined texts cannot be changed or deleted.

### Write personal stored texts

 →  → **Predef. texts** → **Options**  
→ **<New entry>** →  (write personal stored text) → **Save**

### Use predefined texts

 (write message text) → **Options**  
→ **Predef. texts** →  (select predefined text from the list) → **Select**

The predefined text is inserted into the text to the left of the cursor.

## Phonebook

Enter frequently used phone numbers in the Phonebook with a special name. To dial them, simply highlight the name. If a phone number is stored with a name, it appears on the display when you are called. Important numbers can be assigned to different groups.

### <New entry>

Open Addressbook (in standby mode)

 → **Select** → Select entry fields

**Number:** Always enter phone number with prefix.

**Name:** Enter first name or surname.

**E-mail:** Enter email address for MMS (max. for 50 addresses).

**Group:** Organise entries in groups, select with **Change**.

**Location:** Select location: **Mobile**, **SIM** or **Protected SIM**.

**Record no.:** This is automatically assigned to the entry.

Press **Save** to store the new entry.

### Call (search for an entry)

Open phonebook , select name and select phone number with .


### Edit entry

 → Select entry → **Options** → **Edit**  
→ Make changes → **Save**.

## Assign picture




Assign a maximum of 50 phone numbers to an individual picture. This picture will appear in the display when there is a call from this number.

 → Select entry → **Options** → Picture  
→ Select picture → **Open** (the picture is displayed) → **Select**

The picture is assigned to the phone number and it appears with a  symbol in the Phonebook.

## Delete/change image


If a picture is assigned to a phone number, it can be deleted or replaced.

 → Select entry with picture   
→ **Options** → **Select** →  Picture  
→ **Delete**

## Groups


Four groups are specified in your phone to enable you to arrange your Phonebook entries clearly. You can rename these groups.

Open Addressbook (in standby mode)

 → <Groups> (the number of entries is listed behind the group name)  
→ Select a group → **Select** (open group) or **Rename** (give group a name)



## Ring tone for group

If you assign a ring tone to a group, it sounds when one of the group members rings.

**Menu** →  → Group calls  
→ Select a group → **Select**  
→ Select ring tone → **Select**


## Records

Your phone stores the phone numbers of calls for convenient redialling.

**Menu** →  → **Select**  
→ Select call record → **Select**  
→ Select phone number → 

## Calls missed


The phone numbers of calls that you have not accepted are stored for call-back purposes, if the network supports the "Caller Identity" feature.

 Symbol for acc. call.

## Calls received

Accepted calls are listed, if the network supports the "Caller Identity" feature.

## Calls dialled

In standby mode you have access to the last numbers dialled with .

## Erase records


The records are deleted.

## Call list menu

**Options** → Edit entries.

## Durat/charges

You can display the charges and the duration of a call and set a unit limit for outgoing calls.

**Menu** →  → Durat/charges →  
Select a function: Last call, All outgoing, All incoming, Remain. units

**Select** Display data.

**Reset** Clear display.

**OK** End display.

**Charge sett.**

**Menu** →  → Durat/charges  
→ Charge sett.

**Currency**

(PIN 2 prompt)

Currency for charge display.

**Personal rate**

(PIN 2 prompt)

Charges per unit/period.

**A/c limit**

(PIN 2 prompt)

Fix a credit/usage period on a special SIM card.

**Auto display**

Call duration and call charges are automatically displayed for each call.


## Camera

You can use the phone to immediately view, save and send photos you have taken with the "QuickPic Camera". Pictures can be taken in two different formats:

- Low resolution:  
QQVGA 160x120 pixels, memory size up to 6 KB for sending as an MMS image (p. 16).
- High resolution:  
VGA 640x480 pixels, memory size of one picture up to 40 KB – e.g. for further editing on PC. To allow the picture to be viewed on the phone display, a QQVGA picture is created for every VGA picture.

In standby mode press **Camera**  
or **Menu** → 

First the number of shots still available is shown (depends on resolution chosen). Confirm with **OK** (the last picture taken is

shown) and scroll through photos with .

**Picture**

A picture requires a few seconds to be processed.

Press **Take**. You will hear an advisory tone when the exposure time has expired. The photo is shown on the display and saved automatically.

**Flashlight**

In the option menu the flashlight function can be switched on/off.

If the flash is switched on, a command is given to charge the flashlight before taking a picture:

Press **Load** briefly. The flashlight is charged (battery capacity at least approx. 30%). Press **Take** and the photo is taken.

**Sending a photo by MMS**

You can easily send a photo as an MMS immediately after taking it.

**Options** → Send via MMS → **Select**  
(select the desired resolution) → **Skip**  
(skip recording a melody, p. 16)

## Voicemail/CB services

**Voice mail/mailbox**

**Menu** →  → Msg. setup  
→ Voice message

Most service providers offer you an external answering service. In this mailbox, a caller may leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- or if you are making a phone call.

You may have to register for this service with your service provider and perform some manual settings.

### Settings:



Your service provider supplies you with two phone numbers:

#### Save mailbox number

You call this phone number to listen to the voice mails left for you.

**Menu** → → **Msg. setup**  
→ **Voice message**

Enter mailbox phone number and confirm with **OK**.

#### Save call divert number

Calls are diverted to this phone number.

**Menu** → → **Divert** → e. g. **Unanswered**  
→ **Set**

Enter call divert number and log on **OK** to network. Divert will be confirmed after a few seconds (see also p. 20).

### Play back messages



A new voice mail can be announced as follows:

A symbol with beep or an SMS indicates a new voice mail or that you are receiving an automatic announcement. Dial into your mailbox and listen to your message(s).

Press and **hold 1** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

### CB services

**Menu** → → **Msg. setup**  
→ **CB services**

Some service providers offer information services (info channels). If reception is activated, your Topic list will supply you with messages on the activated topics.

## SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

### Writing/sending SMS messages

**Menu** → → **New SMS** → (write text) → → / (enter phone number or select from Phonebook)  
→ **OK**

The SMS is sent to the service centre for transmission.

### Receiving SMS

An arrival of a new SMS is announced on display with . To read the SMS, press left soft key.

With you scroll through message line by line. Select **Reply** for a direct reply.

### SMS archive

**Menu** → → **SMS archive**

The list of SMS messages stored in the phone is displayed.

### Special functions

#### SMS to group

Send SMS as a "circular" to a group.

**Options** → **Send** → **Group** → Select group members and send SMS.

#### Picture&sound

Insert pictures and sounds into message.

**Options** → **Picture&sound select**.

The menu contains:

Fix animations, Fix sounds, Own anim.,  
Own pictures, Own sounds



## MMS

The **Multimedia Messaging Service** enables you to send texts, pictures (also photos) and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

### Writing/sending MMS messages

An MMS consists of the address header and the content.

**Menu** →  → **New MMS**

#### Input fields:

**To:**  /  Phone number/  
e-mail address of recipient/s.

**Subject:** Enter MMS heading (up to 40 characters)

**Picture:** **Insert**. The picture list is opened for selection.

#### Additional information

You can also easily send an image by MMS immediately after taking it with the QuickPic Camera (p. 14).

**Text:** **Edit**. Write text with the help of T9.

**Sound:** **Insert**. Select a melody or record a new melody.

#### Slide duration:

Enter length of display for individual pages (minimum 0.1 seconds).

#### Record new melody (ring tone) for MMS

If you press **Insert** in the **Sound:** field when completing the input fields, you have the option of recording a new melody for sending messages by MMS.

Press **Record**. Recording starts, and the maximum available time and recording duration are displayed. To end recording, press **Stop**.

#### Insert additional pages

**Options** Open menu.

**New slide** Select.



#### Send MMS

**Options** Open menu.

**Send** Select.

### Receive/read MMS



 /  Indicates reception or notification of an MMS.

Depending on the profile setting (p. 17):

- Receive complete MMS
- Open the message. Press **Receiving**, in order to receive the complete MMS, with **Play** automatic MMS presentation. Cancel with any key.

Functions for editing MMS can be found under **Options**.

## Message lists/ Message settings

All SMS/MMS messages are stored in one of the following lists according to status.

### Inbox

**Menu** →  → Inbox → SMS/MMS

The list of received SMS or MMS messages is displayed.

### Draft

**Menu** →  → Draft → SMS/MMS

The list of unsent SMS or MMS messages is displayed.

### Unsent

**Menu** →  → Unsent → SMS/MMS

The list of SMS or MMS messages not yet successfully sent is displayed.

### Sent

**Menu** →  → Sent → SMS/MMS

The list of sent SMS or MMS messages is displayed.

## T9 settings

**Menu** →  → Setup  
→ Select a function

### T9 preferred

Activate/deactivate intelligent text entry (see also p. 11).

### Input language

Select language for text entry. Languages with T9 support are marked by the T9 symbol.

## SMS profiles, MMS profiles

**Menu** →  → Setup  
→ SMS profiles/MMS profiles

Profiles have to be created for SMS and MMS. The transmission characteristics are defined in these. The data for these may already have been entered. If not, your service provider will supply you with the relevant information. Additional information is available in the comprehensive operating instructions on the Internet at: [www.siemens-mobile.com/a65](http://www.siemens-mobile.com/a65)

## Surf & fun

### Internet browser (WAP)

**Menu** →  → Select a function

Get the latest information from the Internet that is specifically adapted to the display options of your phone. Internet access may require registration with your service provider.


### Home

A connection is established with the Internet provider's portal (may be specified/configured by default by your service provider).






### Bookmarks

List of URLs for fast access.


### Internet

The browser is activated as soon as you call up the function. The functions of the soft keys vary, depending on the internet page, for example "link" or "menu". The contents of the option menus are also variable. If necessary set how the Internet access should be made. To this end open the browser menu with  and select Setup/Start with... .

**Additional notes**

-  Browser menu.
-  Offline.
-  Online.
-  GPRS online.
-  No network.
- \* Select special characters, such as @, ~, \, see p. 11 or
- 0 press repeatedly for:  
., ? ! ' " 0 - ( ) @ / : \_

**End connection**

Press and hold  to end the connection and close the browser.

**WAP profiles**

**Menu** →  → Internet → Profiles

Preparation of the phone for WAP Internet access depends on your service provider. If these settings have already been applied by the service provider, select and activate profile. If you have to configure the access profile manually, consult your service provider if necessary.

**Activate WAP profile**

You can change the active profile each time before you access the Internet (if the profile has been set already). For this, select profile, then **Select**.

**WAP profile setting**

Up to 5 WAP profiles can be configured (may be limited by the service provider). The specifications may vary according to service provider. Select profile, then **Edit** and fill in the data fields.

Select the connection profile: see p. 21.

**Games & more**

Download games and other applications. You are advised about relevant applications on the Internet. Once you have selected a game or application you can start to download it immediately. Then you can use the application. Most applications include instructions. Applications and games can be found at: **wap.siemens-mobile.com** or on the Internet at **www.siemens-mobile.com**

**Additional information**

To download applications, the WAP profile, HTTP profile and access must be configured (p. 21).

Depending on the service provider, the access and functionality could differ from the present description.

**Games and applications**

Applications and links that are already stored on the phone are found under:

**Menu** →  → Games & more

Different functions are available depending on which entry is highlighted:

 **Download new**

**Internet** The selected Internet page is loaded.

★ **Carry out game/application offline**

**Select** Loadable application can be started immediately.


★ **Load game/application online**


**Select** Only description file, application has still to be loaded.

You will find special instructions or information for each game in the option menu.

## Key control

The following key control is used for many games (virtual joystick):

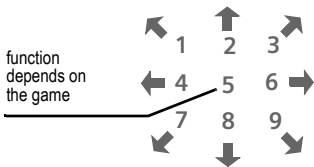

or use the key .

# Setup

## Profiles

**Menu** →  → Profiles

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five profiles are standard with default settings, they can be changed however: Normal envi., Quiet environ., Noisy environ., Car Kit, Headset
- You can set two personal profiles (<No Title>).
- The special profile **Aircraft mode** cannot be changed.

## Activate

Select default profile or personal profile

→ **Activate**.

## Setup

Select profile → **Options** → Change sett.

The list of available functions is displayed:

## Car Kit

The profile is only activated automatically as soon as the phone is inserted into the cradle if a Siemens original Car Kit is used.

## Headset

The profile is only activated automatically if used with an original Siemens headset.

## Aircraft mode

The alarm tone is deactivated. An alarm is only shown on the display. **It is not possible to modify this profile.** The phone will automatically switch off if you select this profile.

## Normal mode

The next time you switch on the phone and return to normal operation the default profile will be activated.

## Display

**Menu** →  → Display

→ Select a function

## Language

Set the language of the display text. "Automatic" will set the language of your home service provider. Reset to this language in standby status:

\*#0000#

## Wallpaper

## Logo

## Colour scheme

## Own greeting

## Big letters

## Illumination

## Contrast

## Screensaver

The screensaver shows a picture on the display as soon as a period that can be set by you has elapsed. The function is ended by an incoming call or by pressing any key.

## Call setup

**Menu** →  → Call setup  
→ Select a function

### Hide ID



When switched on, the display of the calling party shows your phone number (dependent on service provider).

### Call waiting




If you are registered for this service, you can check whether it is set and you can activate/deactivate it with **Call waiting**.

### Divert

You can set the conditions for which calls are diverted to your mailbox or other numbers.


#### Set up call divert (example):

- All calls

All calls are diverted.  is shown in the top line of the display in standby mode.

- Unanswered

Includes **Unanswered, Not reachable, No reply, Busy**.

**Select** → **Set** →  (Enter the phone number, to which the call should be diverted) → **OK**

After a short pause, the setting is confirmed by the network.


Other divert options: **Not reachable, No reply, Busy**

- Status check

After a short pause the current information is shown.

 Condition set.


 Not set.

 Display if status is unknown (e. g. with a new SIM card).

- Clear all

All set diversions are cleared.

### Any to answer

Incoming calls can be accepted by pressing any key (except for ).

### Minute beep

During the call, you will hear a beep after each minute as a reminder of the time elapsed. The recipient does not hear this beep.

## Clock

**Menu** →  → Clock → Select a function

### Time/Date

**Change** → Enter the date first, then the time.

### Time format

Select 24h or 12h.

### Time zones

Specify your current time zone.

### Date format

DD.MM.YYYY or MM/DD/YYYY or  
YYYY-MM-DD

### Show clock

Switch on/off time display.

### Buddhist year

Change to Buddhist date (not available in all phones).

## Connectivity

**Menu** →  → Connectivity

→ Select a function

### GPRS




**Yes / No** Switch GPRS on /off.

### GPRS info

Display connection information.

### Data services


**Menu** →  → Connectivity → Connection profiles → Select function

For the MMS, WAP and Java application at least one connection profile must be set up and activated. If necessary enter **CSD settings** and **GPRS settings** (your service provider will supply you with information on this or [www.siemens-mobile.com/mobilescustomer care](http://www.siemens-mobile.com/mobilescustomer care) under "FAQ").

**Options** → Change sett. → **Edit**

→ Enter data → **Save**

### HTTP profile

Select profile with . Enter or modify settings. If necessary, check with your service provider for details.

### Authentication

**Menu** →  → Connectivity

→ Authentication → **Change**

→ Activate encrypted WAP dial-up

## Security

**Menu** →  → Security

→ Select function

### Auto key lock

If activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

### Direct call

Only **one** phone number can be dialled. To do so press and **hold** the right soft key.

### Only



Restrict calls to SIM-protected numbers in the Phonebook.

### Last 10 only



Limit calls to call list of "dialled numbers" (p. 13).

### Codes

(see p. 8)

### This SIM only



Your phone is prevented from being used with a **different** SIM card.

**Menu** →  → Security

→ Select a function

## Barrings



Network barring restricts the use of your SIM card.

**All outgoing:** Outgoing calls, except emergency 999 calls, are blocked.

**Outgo internat:** Only domestic calls are possible.

**Outgo internat. x home barred:** International calls are not permitted, except for calls to your home country.

**All incoming calls:** The phone is blocked from receiving all incoming calls.

**When roaming:** You do not receive any calls outside your home network.

**Status check:** Query the status of your barrings.

**Clear all:** Remove all barrings.

## Phone identity

Display the phone identity number (IMEI) and software version.

## Filesystem clean up

(Phone code is protected)

The file system is defragmented.

## Master reset

Rest phone to standard values (factory setting).

## Network

**Menu** →  → **Network**

→ Select a function

## Line



**Two independent** phone numbers have to be registered.

## Network info

The list of GSM networks currently available is displayed.

## Auto network

If activated, the next network is dialled in the order of your "preferred networks".

## Choose network

The network search is restarted.

## Preferred network

Set the service providers you prefer when you leave your home network.

## Fast search

When this function is active, network reconnection is speeded up (standby time is reduced).

## Accessories

**Menu** →  → **Accessories**

→ Select a function

## Car Kit

Only in combination with an original Siemens handsfree Car Kit. If an original Siemens Car Kit Portable is used the profile is activated automatically as soon as the phone is inserted into the cradle.

## Auto answer

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

## Headset

Only in conjunction with an original Siemens headset. If an original Siemens Headset is used the profile is automatically activated when the headset is plugged in. Accept call with the Call key or PTT key (Push To Talk) when the key lock is activated.

## Auto answer

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

**If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.**

## Ring tones

**Menu** →  → Select function

You can set the tones to match your needs.

### Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.

### Silent alert

Activate/deactivate the silent alert (functions in addition to ringer).

### Volume

Set the same volume for all ring tones.

### Calls, Group calls, Other calls, Alarm clock, Messages

The ring tones for the stated types of call/functions can be set separately.

### More tones...

**Menu** →  → More tones...  
→ Select a function

### Call screening

Only calls from numbers that are in the Phonebook or in a predefined group are signalled audibly or by silent alert. Other calls are only displayed.

### Key tones

Set acoustic key acknowledge: Click or Tone or Silent

### Minute beep

During the call, you will hear a beep once a minute as a reminder.

### Info tones

Set service and alarm tones.

## Extras

**Menu** →  → Select function

### Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.

**On/off** Switch on/off.

### Setting

Set the time for the alarm call (hh:mm), then **OK**.

### Calculator



Enter number (maximum of 8 characters).



Select calculate function.



Repeat procedure with other numbers.

#

Result is displayed.



Press the right display key repeatedly.

±

Toggle between "+" and "-".

%

Convert to percent.



Save, recall number.

e

Exponent (maximum of two digits).

Special keys:

\*

Set decimal point.

0

Add (press and **hold**).

### Stopwatch

Two intermediate times can be recorded and saved.

**Reset**

Reset to zero.

#

Start/stop.


\*

Intermediate time.



## SIM services (optional)



Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card. If you have such a SIM card, the SIM services will appear in the main menu under "Extras" or directly above the control key (on the left) with symbol .

With the SIM services menu, your phone is ready to support future additions in your service provider's user package. For further information, please contact your service provider.

## Fast access

The left soft key and the number keys 2 to 9 (speed dialling numbers) can each be assigned an important phone number or a function. The phone number can then be dialled or the function can be started at the touch of a button.

### Left soft key

Assign an Assign function/phone number to this key.

#### Change (example)

**Internet** → **Change**

→ Search for application, e.g. New SMS,  
Phone number → **Select**

#### Apply (example)

Key assigned with Phone number/name.  
Press and hold **Carol**.

### Speed dialling keys

Only possible for keys 2 to 9. Key 1 is reserved for the mailbox.

#### Change (example)

**3** → **Set** → Select application, e.g. New SMS,  
Phone number → **Select**

#### Apply (example)



Press and hold key **3**.

## Own stuff

The following folders are provided for organizing your photos: Pictures, Animations, Sounds.

**Menu** → 

Files and folders are displayed.

You can scroll through these lists using  (to scroll up and down) and  (to jump back from a folder). To open a folder or execute a file using related application press **Open**.

### Index structure

Special folders are provided in the file system for the different data types.

 
Folders	Contents	Format
Pictures	Images	*.bmp *.gif *.jpg *.jpeg
Camera	Own Photos (p. 14)	*.png
Animations	Animations	*.bmx *.gif
Sounds	Ring tones, melodies, sounds	*.mid


The following folders are also included in these main folders:

Download new	This enables you to download new files from the Internet.
EMS	Files that can be received per SMS/MMS.

## Questions & Answers

If you have any questions regarding the use of your phone, you can contact us at [www.siemens-mobile.com/mobilescustomer-care](http://www.siemens-mobile.com/mobilescustomer-care) at any time. In addition to this we have listed some frequently asked questions and answers below.

Question	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough. Flat battery.	Press On/Off key for at least two seconds.  Charge battery. Check charging indicator in the display.
Insufficient standby time.	Speed search active. Display illumination switched on.	Deactivate speed search (p. 22). Switch off display illumination (p. 19).
Charging error (charge icon not displayed).	Battery totally discharged.  Contact problem.  No mains voltage.  Wrong charger. Battery faulty.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery. Check power supply and connection to the phone. Check battery contacts and device plug socket, clean them if necessary, then insert battery again. Use different mains power socket, check mains voltage. Only use original Siemens accessories. Replace battery.
SIM error.	SIM card not correctly inserted.  SIM card contacts dirty. SIM card with wrong voltage. SIM card damaged (e.g. broken).	Check that the SIM card is inserted correctly (p. 6). Use a dry cloth to clean the SIM card. Use 3 V SIM cards only. Visually inspect the damage. Have SIM card replaced by service provider.
No connection to network.	Weak signal.  Outside GSM range. SIM card not valid. New network not authorised.  Network barring is set. Network overloaded.	Move to higher location, to a window or open space. Check coverage area of service provider. Contact the service provider. Try manual selection or select a different network (p. 22). Check barrings (p. 22). Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 22). Switching the phone off and on may speed this up.
Calls not possible.	2nd line set. New SIM card inserted. Charge limit reached. Credit used up.	Set first line  (p. 22). Check for new restrictions. Reset limit with PIN 2 (p. 14). Load credit.

Question	Possible causes	Possible solution
Certain uses of the phone not possible.	Call restrictions are set.	Barrings may be set by your service provider. Check barrings (p. 22).
No entries possible in Phonebook.	Phonebook is full.	Delete entries in Phonebook.
Voice mail does not work	Call divert to the mailbox not set.	Set call divert to the mailbox (p. 20).
SMS (text message)  flashing.	SMS memory full.	To free up capacity, delete or file messages (SMS).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Memory problems for, e.g. messages, ring tones, pictures.	Phone memory full.	Delete files in the applicable areas and unneeded T9 dictionaries.
No WAP access, no download possible.	Profile not activated, profile settings wrong/incomplete.	Activate WAP profile (p. 18), set (p. 18). If necessary ask your service provider.
Message cannot be sent.	Service provider does not support this service. Phone number of the service centre is not set or is wrong. SIM card contract does not support this service. Service centre too busy. Recipient does not have a compatible phone.	Check with your service provider. Set service centre (p. 17). Contact your service provider. Repeat message. Check.
EMS pictures and sounds not displayed at destination phone.	Recipient's phone does not support EMS standard.	
No Internet access possible.	Wrong WAP profile set or settings wrong, incomplete.	Check settings, speak to service provider if necessary.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 28).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or removed by your service provider via the SIM card.	Check with your service provider.


---

Question	Possible causes	Possible solution
Charge counter does not work.	Charge pulse is not transmitted.	Contact your service provider.

**Damage**

Severe shock.	Remove battery and SIM and insert them again. Do not dismantle phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Set phone to vertical position in air flow. Do not dismantle phone!	

---

**Reset settings to factory default (see also p. 22): \* # 9 9 9 9 #** 

# Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens-mobile.com/  
mobilescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press \*#06#, the software version (to display, press \*#06#, then **info**) and if available, your Siemens Service customer number.

You will also find the most frequently asked questions and answers in the section entitled "Questions & Answers" in this user guide on p. 25.

You can also get personal advice about our range of products on our Premium Hotline:

**United Kingdom ..... 0906 9597500**  
(0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi .....	0 26 42 38 00
Argentina .....	0 80 08 88 98 78
Australia .....	13 00 66 53 66
Austria .....	05 17 07 50 04
Bahrain .....	40 42 34
Bangladesh .....	0 17 52 74 47
Belgium .....	0 78 15 22 21
Bolivia .....	0 21 21 41 14
Bosnia Herzegovina .....	0 33 27 66 49
Brazil .....	0 80 07 07 12 48

Brunei .....	02 43 08 01
Bulgaria .....	02 73 94 88
Cambodia .....	12 80 05 00
Canada .....	1 88 87 77 02 11
China .....	0 21 38 98 47 77
Croatia .....	0 16 10 53 81
Czech Republic .....	2 33 03 27 27
Denmark .....	35 25 86 00
Dubai .....	0 43 96 64 33
Egypt .....	0 23 33 41 11
Estonia .....	06 30 47 97
Finland .....	09 22 94 37 00
France .....	01 56 38 42 00
Germany .....	0 18 05 33 32 26
Greece .....	0 80 11 11 11 16
Hong Kong .....	28 61 11 18
Hungary .....	06 14 71 24 44
Iceland .....	5 11 30 00
India .....	22 24 98 70 00 Extn: 70 40
Indonesia .....	0 21 46 82 60 81
Ireland .....	18 50 77 72 77
Italy .....	02 24 36 44 00
Ivory Coast .....	05 02 02 59
Jordan .....	0 64 39 86 42
Kenya .....	2 72 37 17
Kuwait .....	2 45 41 78
Latvia .....	7 50 11 18
Lebanon .....	01 44 30 43
Libya .....	02 13 50 28 82
Lithuania .....	8 52 74 20 10
Luxembourg .....	43 84 33 99
Macedonia .....	02 13 14 84
Malaysia .....	+ 6 03 77 12 43 04
Malta .....	+ 35 32 14 94 06 32
Mauritius .....	2 11 62 13
Mexico .....	01 80 07 11 00 03
Morocco .....	22 66 92 09
Netherlands .....	0 90 03 33 31 00
New Zealand .....	08 00 57 43 63
Nigeria .....	0 14 50 05 00
Norway .....	22 70 84 00
Oman .....	79 10 12
Pakistan .....	02 15 66 22 00
Paraguay .....	8 00 10 20 04
Philippines .....	0 27 57 11 18

Poland.....	08 01 30 00 30
Portugal .....	8 08 20 15 21
Qatar .....	04 32 20 10
Romania .....	02 12 04 60 00
Russia.....	8 80 02 00 10 10
Saudi Arabia .....	0 22 26 00 43
Serbia .....	01 13 07 00 80
Singapore .....	62 27 11 18
Slovak Republic .....	02 59 68 22 66
Slovenia .....	0 14 74 63 36
South Africa .....	08 60 10 11 57
Spain.....	9 02 11 50 61
Sweden.....	0 87 50 99 11
Switzerland .....	08 48 21 20 00
Taiwan .....	02 23 96 10 06
Thailand .....	0 27 22 11 18
Tunisia .....	71 86 19 02
Turkey.....	0 21 65 79 71 00
Ukraine .....	8 80 05 01 00 00
United Arab Emirates .....	0 43 66 03 86
United Kingdom .....	0 87 05 33 44 11
USA .....	1 88 87 77 02 11
Vietnam.....	84 89 30 01 21
Zimbabwe .....	04 36 94 24

## Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply, remove the battery and leave the open phone to dry at room temperature!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

# Product data

## Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or:

[www.siemens-mobile.com/conformity](http://www.siemens-mobile.com/conformity).

CE 0682

## Technical data

GSM class:	4 (2 watt)
Frequency range:	880 - 960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710 - 1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850 - 1,990 MHz
Weight:	85 g
Size:	110 x 47 x 23 mm (91 ccm)
Li-Poly battery:	700 mAh
Operating temperature:	-10 °C... 55 °C
SIM card:	3.0 V

## Operating time

A full battery will deliver 60 to 250 hours of standby time or 100 to 300 minutes of talktime.

The operating time depends upon the use:

Action taken	Time (min)	Reduces stand-by time by
Making a phone call	1	30 - 90 minutes
Light *	1	40 minutes
Network search	1	5 - 10 minutes

\* Keypad entry, games etc.

Extreme temperatures reduce the phone's standby time considerably. You should therefore avoid the leaving the phone in the sun or on a radiator.

### Phone ID

You will need the following details if you lose your phone or SIM card. Please enter here:

the number of the SIM card (on the card):

.....

the 15-digit serial number of the phone (under the battery):

.....

the service provider's Customer Service number:

.....

### Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

## Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can

be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

## Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Just remember that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

## Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of

delivery), this warranty shall be valid for six months from the date of purchase.

- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.



- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

## Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
  - The device is opened (this is classed as third party intervention)
  - Repairs or other work done by persons not authorised by Siemens.
  - Components on the printed circuit board are manipulated
  - The software is manipulated
  - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
  - Devices fitted with accessories not authorised by Siemens
  - This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
  - The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
  - Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
  - This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.

 
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.


# Accessories


<b>Multitainment</b>	QuickPic Camera IQP-500
<b>Fashion &amp; Carry</b>	Tour Case FCT-650 Belt Case FCL-600
<b>Energy</b>	Li-Ion Battery EBA-510 Travel Charger ETC-500 (EU) Travel Charger ETC-510 (UK) Travel Charger ETC-520 (USA) Car Charger Plus ECC-600 Desktop Charger EDC-510
<b>Handsfree Portable</b>	Headset Basic HHS-500 Headset HHS-510 Headset Purestyle HHS-610
<b>Office</b>	Data Cable DCA-500 Data Cable USB DCA-510
<b>Car Solutions</b>	Car Kit Portable HKP-500


Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:




# Menu tree

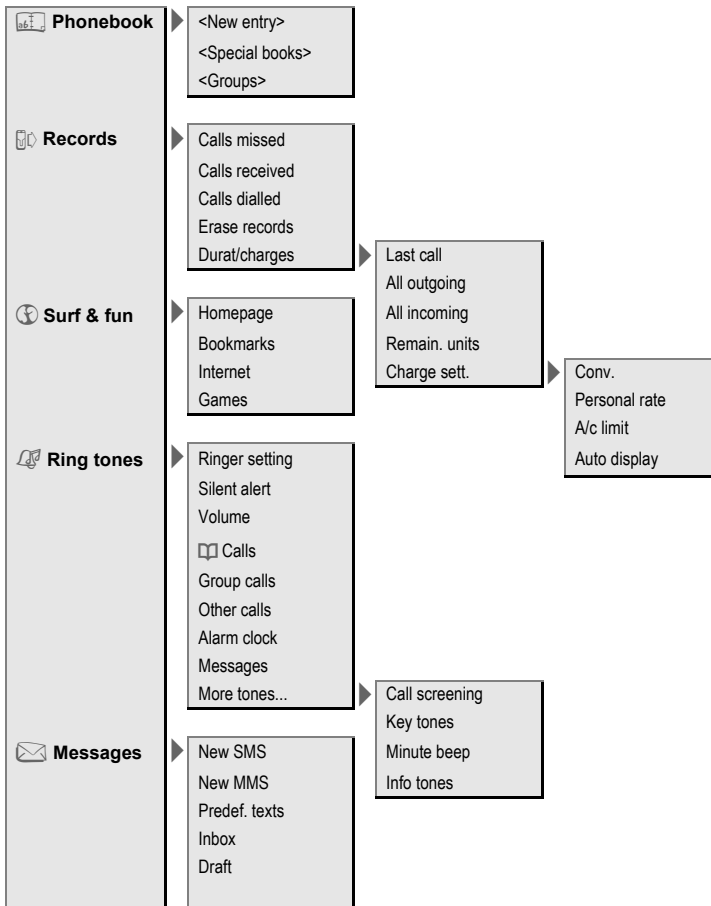

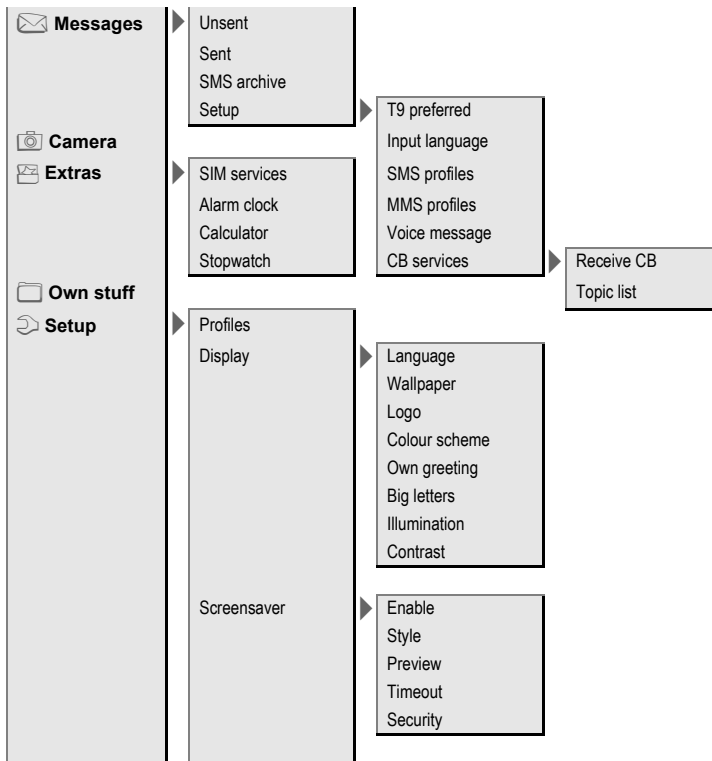

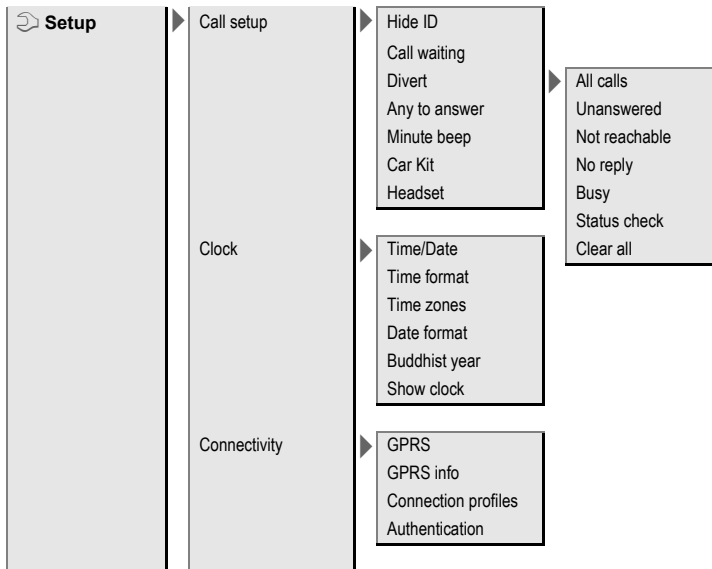

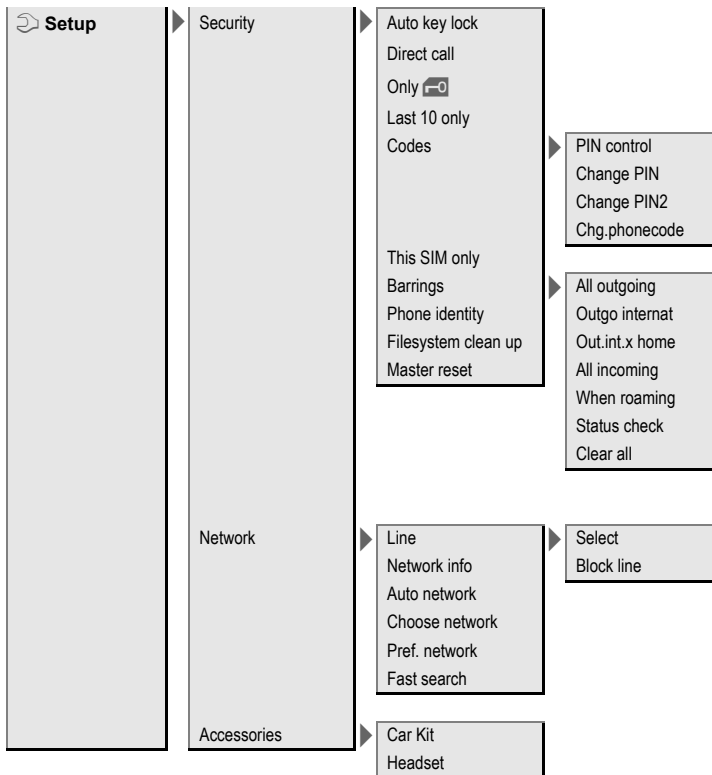

# Index

## A

Accessories.....	34
Account limit.....	14
Alarm clock.....	23
Alarm tones.....	23
All calls (call time/charge).....	13
All calls (diversion).....	20
All incoming (Barrings).....	22
Answering service (in the network).....	14
Any key answer (answer call).....	20
Application (download).....	18
Archive (SMS).....	15
Authentication.....	21
Auto display	
Clock.....	21
Duration/charges.....	14
Automobile accessories.....	34

## B

Battery	
charge.....	6
insert.....	6
operating time.....	30
quality declaration.....	30
Battery operating time.....	30
Bookmarks (WAP).....	17
Busy number.....	9

## C

Calculator.....	23
Calculator functions.....	23
Call	
accept/end.....	9
barred.....	22
charges.....	13
conference.....	10
divert.....	20, 37
End.....	9
reject.....	10
Call records.....	13
Calls dialled (call list).....	13
Calls received (call list).....	13
Camera.....	14
Car Kit	
Accessories.....	34
Setting.....	20
Care of phone.....	29

CB services.....	15
Cell Broadcast (CB).....	15
Charge battery.....	7
Charge rate.....	14
charges.....	13
Clock.....	21
Colour schemes.....	19
conference.....	10
Connection profile.....	21
Contrast (message on display).....	19
CSD settings.....	21
Customer care.....	28

## D

Data exchange (settings).....	21
Data service.....	21
Date format.....	21
Dialling with number keys.....	9
Dial-up access (connection).....	21
Directory (own files).....	24
Display	
Colour schemes.....	19
contrast.....	19
illumination.....	19
Symbols.....	5
Upper-case letters.....	19
Display (settings).....	19
Divert.....	20
Duration/charges.....	13


## E

Emergency number.....	8
Entry no. (phonebook).....	12
Extras.....	23

## F

Factory settings.....	22
Fast access.....	24
Fast search.....	22
Filter	
Incoming calls.....	23
Flashlight.....	14



- G**
- Games & More ..... 18
  - Games (download) ..... 18
  - Getting started ..... 6
  - Group ..... 13
    - SMS to group ..... 15
  - Guarantee certificate (IRL) ..... 32
  - Guarantee certificate (UK) ..... 31
- H**
- Handsfree function ..... 10
  - Headset
    - Accessories ..... 34
    - Setting ..... 22
  - Headset volume ..... 9
  - Hide ID ..... 20
  - Hotline ..... 28
  - HTTP profile ..... 21
- I**
- Identity number (IMEI) ..... 22
  - Illumination (display) ..... 19
  - IMEI number ..... 22
  - Inbox
    - SMS ..... 17
  - Information services (CB) ..... 15
  - Input language (T9) ..... 11
  - International dialling code ..... 9
  - Internet ..... 17
- J**
- Java ..... 21
- L**
- Last 10 only ..... 21
  - Limit (call time/charge) ..... 14
  - Logo, provider logo ..... 19
  - Loss of phone, SIM card ..... 30
- M**
- Mailbox ..... 14, 15
  - Maintenance of phone ..... 29
  - Menu
    - control ..... 8
  - Menu tree ..... 35
  - Message
    - CB ..... 15
    - MMS ..... 16
    - Setup ..... 17
    - SMS ..... 15
  - Minute beep ..... 20, 23
  - Missed calls (call list) ..... 13
- MMS**
- Profiles ..... 17
  - receive ..... 16
  - write ..... 16
- N**
- Network
    - barrings ..... 22
    - connection ..... 22
    - Setup ..... 22
- O**
- Only  ..... 21
  - Only this SIM ..... 21
  - Own files ..... 24
  - Own greeting ..... 19
- P**
- Phone (settings) ..... 20
  - Phone data ..... 30
  - Phone identity number (IMEI) ..... 22
  - Phone number transfer on/off ..... 20
  - Phonebook
    - call an entry ..... 12
    - new entry ..... 12
  - Picture in Phonebook ..... 13
  - Pictures & sounds (SMS) ..... 15
  - PIN
    - Change ..... 8
    - control ..... 8
    - enter ..... 7
    - error ..... 26
  - Pocket calculator ..... 23
  - Predefined text ..... 12
  - Prefix ..... 9
  - Preventing accidental activation ..... 9
  - Product data ..... 30
  - Profiles
    - Connection profile ..... 21
    - HTTP ..... 21
    - MMS ..... 17
    - phone ..... 19
    - SMS ..... 17
    - WAP ..... 18
  - Provider logo ..... 19
- Q**
- Questions & Answers ..... 25

**R**

Redial previous numbers .....	9
Ring tones .....	23
Ringer setting .....	23

**S**

Safety precautions .....	2
Screensaver .....	19
Second phone number .....	22
Security .....	8, 21
Security codes .....	8
Service tones .....	23
Setup	
Clock .....	21
Data connection .....	21
display .....	19
Divert .....	20
MMS .....	17
Network .....	22
phone .....	20
Security .....	21
SMS .....	17
Short message (SMS) .....	15
Signal strength .....	7
Silent alert .....	23
SIM card	
clear barring .....	9
insert .....	6
problems .....	25
SIM services (optional) .....	24
SMS	
Archive .....	15
lists .....	17
Picture & sounds .....	15
Profiles .....	17
read .....	15
T9 input .....	11
to group .....	15
write .....	15
SOS .....	8
Special characters .....	11
Speech time (battery) .....	30
Speed dialling keys .....	24
Standard values .....	22
Standby mode .....	8
Standby time .....	30
Stopwatch .....	23
Surf & Fun .....	17
Switch on .....	7
Symbols .....	5

**T**

T9	
Text entry .....	11
word suggestions .....	11
Technical data .....	30
Text entry with T9 .....	11
Text entry without T9 .....	10
Time zones .....	7, 21
Time/Date setting .....	21

**U**

Unanswered .....	20
Upper, lowercase letters .....	10
Upper-case letters (message on display) .....	19

**V**

Voice message (mailbox) .....	14
Volume, handset	
Headset volume .....	9
Profiles .....	19
Ring tone .....	23

**W**

Wallpaper .....	19
-----------------	----