

# Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola E365 wireless phone.



MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. TrueSync, Sidekick, Starfish and the Stylised Starfish Logo are registered trademarks of Starfish Software, Inc., a wholly owned independent subsidiary of Motorola, Inc. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2003

### **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

# Menu Map

## Main Menu



### Messages \*

- Create
- Inbox
- Templates
- Outbox
- Draft
- Voicemail
- Message Settings
  - Voicemail Number
  - Inbox Setup
  - Info Alert Setup
  - Cleanup Settings



### Games

- Magic II
- Bowling King
- Bubble Tea
- Big 2 Garden
- Pacific Storm
- Sound Setting
- Vibration Setting



### Alarm



### Chat \*

- Start Chat
- History
- Clear History



### Shortcuts



### Profile Setting

- Normal
- Meeting
- Outdoor
- Headset
- Pager



### Tools

- Datebook
- Calculator
- Fixed Dial



### Settings

- (see next page)



### More



### Phone Book



### Recent Calls

- Received Calls
- Dialed Calls
- Missed Calls
- NotePad
- Call Times
- Call Cost



### Media Centre

- New Picture
- Photo Album
- Picture
- Animation
- Melody
- VoiceMemo
- Download
- View Free Space



### Ring Style



### Camera



### Browser \*



### Voice Memo



### Web Shortcut






**Note:** Select **More** when it appears in the menu to see additional menu items.

This is the standard phone menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available for all users.

\* optional network, SIM card, or subscription-dependent features

# Settings Menu

- **Personalise**
  - Caller Groups
  - Banner
  - Wallpaper
  - Screen Saver
- **WAP Profile**
  - Set Profile
  - Set GPRS
- **Shortcuts Setup**
- **Call Divert**
  - Voice Calls
  - Cancel All
- **Phone Status**
  - My Tel. Numbers
  - Credit Available
  - Active Line
- **In Call Setup**
  - In Call Timer
  - Call Cost Setup
  - My Caller ID
  - Call Waiting
- **Security**
  - Phone Lock
    - Lock Now
    - Auto Lock
    - Unlock Code
  - Lock Keypad
  - Auto Key Lock
  - Fixed Dial
  - Call Barring
    - Outgoing Calls
    - Incoming Calls
    - Cancel All
  - SIM PIN
  - Passwords
    - Unlock Code
    - Security Code
    - SIM PIN
    - SIM PIN2
    - Bar Password
- **Initial Setup**
  - Time and Date
  - Power on/off
  - Manual Redial
  - Backlight
  - Language
  - Battery Save
  - Master Reset
  - Master Clear
- **Network**
  - Avail. Networks
  - Network Setup

Shortcuts
<b>View idle menu:</b> Press  in idle
<b>View dialled calls list:</b> Press  in idle
<b>Open Voice Tag list</b> Press and hold  in idle
<b>Lock keypad:</b> Press 
<b>Exit menu system:</b> Press  in a menu

\* optional network, SIM card, or subscription-dependent features

# Contents

---

<b>Menu Map</b> . . . . .	3
<b>Safety and General Information</b> . . . . .	9
<b>Getting Started</b> . . . . .	16
What's in the Box? . . . . .	16
About This Guide . . . . .	16
Changing Your SIM Card . . . . .	16
Installing Your Battery . . . . .	18
Charging Your Battery . . . . .	19
Battery Use . . . . .	20
Turning Your Phone On . . . . .	21
Adjusting Volume . . . . .	21
Making a Call . . . . .	22
Answering a Call . . . . .	23
<b>Learning to Use Your Phone</b> . . . . .	24
Using the Display . . . . .	24
Using the 4-Way Navigation Keys . . . . .	26
Using Menus . . . . .	27
Entering Text . . . . .	29
Locking and Unlocking Your Phone . . . . .	35
Changing a Code or Password . . . . .	37
If You Forget a Code or Password . . . . .	37
Locking and Unlocking the Keypad . . . . .	38
Taking Photos and Sending Picture Messages . . . . .	38
<b>Setting Up Your Phone</b> . . . . .	42
Storing Your Name and Phone Number . . . . .	42
Setting the Time and Date . . . . .	42
Setting a Ring Style . . . . .	42

Setting Answer Mode . . . . .	43
Setting a Wallpaper Image . . . . .	44
Selecting a Screen Saver . . . . .	44
Setting Display Colour . . . . .	44
Adjusting the Backlight . . . . .	45
Conserving Battery Power . . . . .	45
<b>Calling Features</b> . . . . .	46
Changing the Active Line . . . . .	46
Redialling a Number . . . . .	46
Using Caller ID . . . . .	46
Cancelling an Incoming Call . . . . .	47
Calling an Emergency Number . . . . .	47
Dialling International Numbers . . . . .	48
Viewing the Received Calls or Dialed Calls List . . . . .	48
Returning an Unanswered Call . . . . .	50
Using the Notepad . . . . .	50
Calling With Speed Dial . . . . .	50
Calling With TurboDial . . . . .	51
Using Voicemail . . . . .	51
Using Call Waiting . . . . .	52
Putting a Call on Hold . . . . .	53
Transferring a Call . . . . .	53
<b>Messages</b> . . . . .	55
Setting Up the Message Inbox . . . . .	55
Sending Messages, Pictures, and Sounds . . . . .	55
Sending a Quick Note Text Message . . . . .	57
Viewing the Status of Sent Text Messages . . . . .	57
Receiving a Message . . . . .	57
Reading or Deleting a Text Message . . . . .	58
Reading Information Service Messages . . . . .	59
Using Chat . . . . .	60

<b>Setting Up Your Phonebook</b> . . . . .	64
Viewing Entry Details . . . . .	64
Creating a Phonebook Entry . . . . .	64
Storing a PIN Code With a Phone Number . . . . .	66
Recording a Voice Name For a Phonebook Entry . . . . .	67
Dialling a Phonebook Entry . . . . .	68
Editing a Phonebook Entry . . . . .	69
Deleting a Phonebook Entry . . . . .	70
Using Caller Groups . . . . .	70
Sorting Phonebook Entries . . . . .	71
Copying Phonebook Entries . . . . .	71
Checking Phonebook Capacity . . . . .	73
<b>Personalising Your Phone</b> . . . . .	74
Selecting or Editing a Profile . . . . .	74
Creating and Editing Alert Tones . . . . .	75
Setting the Menu Language . . . . .	79
Resetting All Options . . . . .	79
Clearing All Information . . . . .	79
Using the Shortcuts Menu . . . . .	80
<b>Getting More Out of Your Phone</b> . . . . .	81
Making a Conference Call . . . . .	81
Diverting a Call . . . . .	81
Barring Calls . . . . .	83
Using Fixed Dialling . . . . .	83
Monitoring Phone Use . . . . .	84
Adjusting Network Settings . . . . .	87
<b>Personal Organiser Features</b> . . . . .	88
Using the Datebook . . . . .	88
Using the Alarm Clock . . . . .	93
Using the Calculator . . . . .	94

<b>Security</b> .....	97
Locking the SIM Card .....	97
<b>News and Entertainment</b> .....	99
Using the Micro-Browser .....	99
Picture and Animation Viewers .....	103
Playing Games .....	104
<b>Troubleshooting</b> .....	106
<b>Specific Absorption Rate Data</b> .....	113
<b>Warranty Information</b> .....	115
<b>Index</b> .....	120



# ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

## ***Exposure To Radio Frequency (RF) Energy***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## ***Operational Precautions***

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

### ***External Antenna Care***

Use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorised antennas may result in non-compliance with the local regulatory requirements in your country.

## **Phone Operation**

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

## **Body-Worn Operation**

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimetres) from your body when transmitting.

## **Data Operation**

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimetres) from your body.

## **Approved Accessories**

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at [www.Motorola.com](http://www.Motorola.com).

## **RF Energy Interference/Compatibility**

*Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.*

## **Facilities**

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care

facilities that may be using equipment that is sensitive to external RF energy.

## ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

## ***Medical Devices***

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimetres) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimetres) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your GP may be able to assist you in obtaining this information.

## ***Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** *The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.*






## **Blasting Caps and Areas**

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

## **Batteries**

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, bag, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

<b>Symbol</b>	<b>Definition</b>
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

## **Seizures/Blackouts**

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television

or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

## ***Repetitive Motion Injuries***

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:


- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

## European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

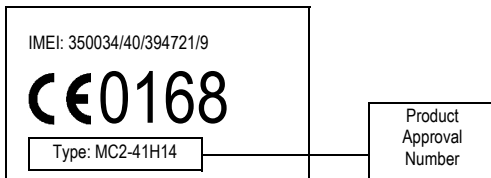

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte) - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site

# Getting Started

---

## What's in the Box?

Your digital wireless phone typically comes equipped with a battery and a charger. You can purchase other accessory items to customise your phone for maximum performance and portability.

## About This Guide

This guide introduces you to your Motorola wireless phone. **Optional Features**



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

## Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

## Changing Your SIM Card

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory.

**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt

### Action

- 1 Switch off your phone by pressing the Power key







## Action

- 2 Pinch the battery cover and slide it back to remove it.


pinch here

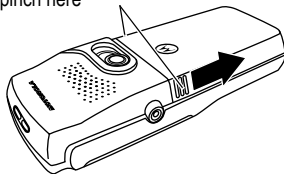


- 3 Remove the battery.

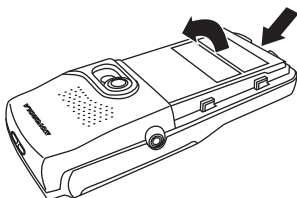

- 4 To remove a SIM card, slide the card carefully downward until it comes out.

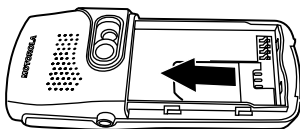


- 5 Slide the new SIM card carefully into the slot as indicated on the phone. Make sure that the notch of the SIM card is in the bottom right corner.

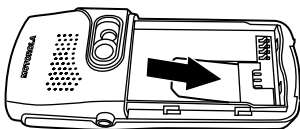

## Action

- 6 Replace the battery and battery cover.

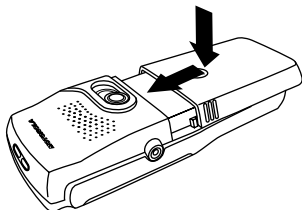

---

## Installing Your Battery

You must install and charge the battery to use your phone.



Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

## Action


- 1 Remove the battery from its protective clear plastic case, if necessary.

If you are replacing an existing battery, make sure your phone is turned off.

- 2 Pinch the battery cover and slide it back to remove it.


pinch here

- 3 Remove the old battery if necessary.

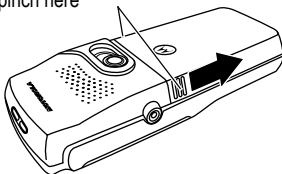

## Action

- 4 Align the connections on the new battery with the connections on the phone.

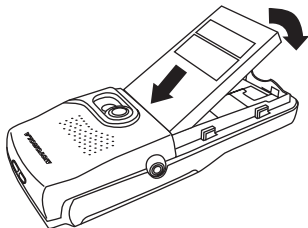

- 
- 5 Press the battery toward the connections and push downward until it clicks into place.

- 
- 6 Replace the battery cover.
- 
- 

## Charging Your Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

## Action

- 1 Connect the travel charger to the phone.

**Note:** *The connector is keyed and can only be inserted one way.*



- 
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.

- 
- 3 When your phone indicates **Charge Complete**, remove the travel charger.
- 
-

When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete.

## **Battery Use**

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector port; and your voice, data, and other application usage patterns.

**Tip:** Prolonged gaming or heavy use of the camera and WAP browser may reduce battery life. To conserve battery life, set your **Backlight** to **Off** (page 45) and set **Battery Save** to **On** (page 45).

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximise your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk

time or an increase in charging time, then it is probably time to purchase a new battery.




The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods.


Never dispose of batteries in a fire because they may explode.


## Turning Your Phone On

### Action


- 1 Press and hold  (the End/Power key).

End/  
Power  
Key



- 
- 2 If necessary, enter your SIM card PIN code and press **OK** () to unlock your SIM card.

**Caution:** If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**. (For more information, see page 97.)


- 
- 3 If necessary, enter your four-digit unlock code and press **OK** () to unlock your phone.

**Note:** The unlock code is originally set to 1234. (For more information, see page 37.)

---

---

## Adjusting Volume

When you are in a call, press  left and right to adjust the earpiece speaker volume.

To adjust keypad or ring tone volume:

## Find the Feature

④ > **Profile Settings** > *active profile* > **Edit**

A ✓ indicates the active profile. You can set


Profile Setting	Description
Ring Volume	the volume of the incoming call alert sound
Keypad Tone	the sound for key presses

For other profile settings, see page 74.

## Making a Call

Do not block the built-in antenna in the top of your phone while you are on a call.

Built-in antenna

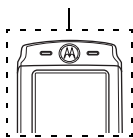

### Press

1 keypad keys

### To

dial the phone number

**Tip:** If you make a mistake, press **DELETE** (☒) to delete the last digit, or press and hold **DELETE** (☒) to delete all digits.

2 

make the call



3 

end the call and “hang up” the phone


## Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

### Action

1 Press  or **ANSWER** ()

---

2 Press  (end key) when the call is done.

---

---

**Note:** *If the phone is locked, unlock it to answer the call.*


# Learning to Use Your Phone



---



See page 1 for a basic phone diagram.

## Using the Display

The *idle display* (shown below) is the standard display you see when you are *not* on a call or using the menu. You must be in the idle display to dial a phone number.

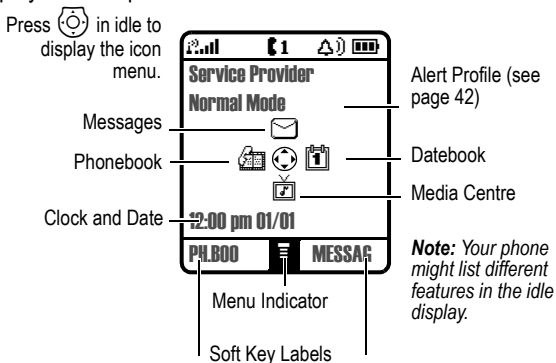


The  (menu) indicator at the bottom centre of the display indicates you can press the menu key () to display the main menu to see more features.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key () or right soft key () to perform the function indicated by the left or right soft key label.



The following status indicators can appear:

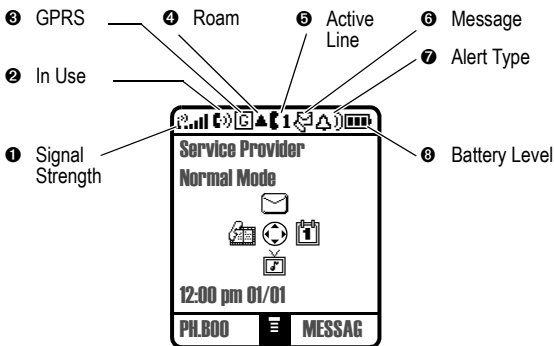

**1 Signal Strength Indicator** Indicates the strength of your phone's connection with the network.

Strong No signal

You cannot make or answer calls when the “no signal” indicator appears.

**2 In Use Indicator** Indicates when a call is in progress ().



**3 GPRS Indicator** Indicates that your phone is using a high-speed GPRS network connection (). GPRS allows faster data transfer speeds. The indicator does not mean that you are in a call; only that you are registered on the network with a GPRS connection.



**4 Roam Indicator** Appears when your phone uses another network system outside your home network (). When you leave your home network area, your phone *roams* or seeks another network.

**5 Active Line Indicator** Shows the current active phone line. To change the active line, see page 46.



**6 Message Indicator** Indicates when you have a new voice ( ) or text ( ) message waiting. The symbol flashes when message memory is full.

**7 Alert Type Indicator** Shows the currently selected alert type for incoming calls and messages.

🔔 Ring

🔔 Flash

🔔 Vibrate

Off

🔔 Vibrate Then Ring

**8 Battery Level Indicator** Shows the amount of charge left in your battery. The more bars visible, the greater the charge.

High



Low

Recharge your battery as soon as possible when you see the **Low Battery** warning message and hear the low battery alert.

## Using the 4-Way Navigation Keys

Use the 4-way navigation key like a joystick to navigate the menu system, change feature settings, and play games.


**Tip:** Down and up are the primary movements within menus. Move left and right to change feature settings, navigate the datebook, and edit text.

Navigation key



## Using Menus

From the idle display, press **☰** to display the main menu.

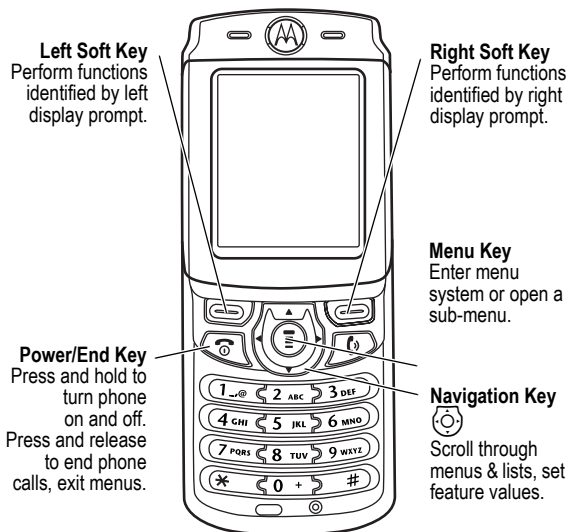

## Selecting a Menu Feature

From the idle display, select a menu feature as follows:


### Find the Feature



- ☰ > **Settings**
- > **Initial Setup**
- > **Time and Date**

This example shows that from the idle display, you must press **☰**, scroll to and select **Settings**, then scroll to and select **Initial Setup**, then scroll to and select **Time and Date** to display the time and date. Use **☰** to scroll, and the left/right soft keys to perform the functions in the bottom left and right corners of the display.

## Selecting a Feature Option

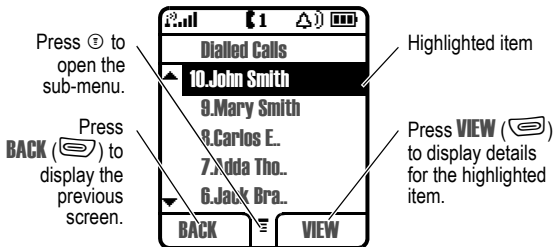
Some features require you to select an item from a list:




- Press  to scroll up or down to highlight an item.
- In a numbered list, press a number key to highlight the item.
- In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list item.
- When an item has a list of possible values, press  to the left or right to scroll and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.

## Entering Text

Some features require you to enter information:

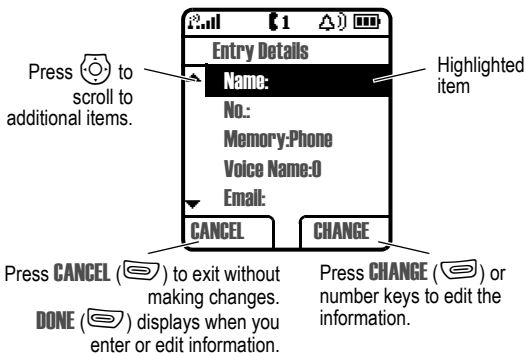


The message centre lets you compose and send text messages. A *flashing cursor* shows where text will appear:

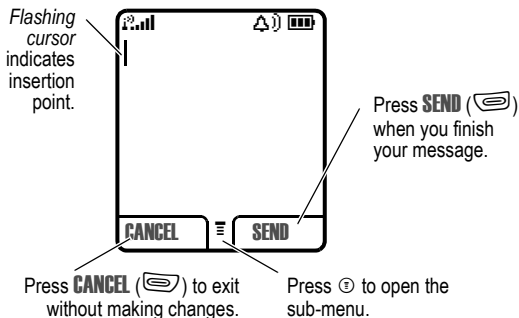

When you enter text using the standard tap method (see page 30), the soft key functions change.

## Choosing a Text Entry Method

Multiple text entry methods make it easy for you to enter names, numbers, and messages.


Press  > **Entry Method** from any text entry screen to select a text entry method:


<b>ITAP</b>	Let the phone predict each word as you enter it, then choose the word from a list (see page 32).
<b>TAP</b>	Enter characters one at a time by pressing the key for the letter, number, or symbol (see page 30). This is the standard method for entering text.
<b>Number</b>	Enter numbers only.

**Note:** *The text entry method you select remains active until you change it by selecting another method.*




## Using the Tap Method

This is the standard entry method for entering text on your phone.

Press  > **TAP** from a text entry screen..











<b>Press</b>	<b>To</b>
<b>1</b> A number key one or more times	select a letter, number, or symbol shown in the chart on page 31.
<b>2</b> Number keys	enter the remaining characters
<b>3</b> <b>SEND</b> (  )	accept the text and open the address display

## Tap Method Text Entry Rules

- Press a number key repeatedly to cycle through its characters. See the chart on page 31.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- Press  up or down to change a character case.
- Your phone may support multiple languages. The current language setting determines whether a new message begins on the left or right side of the display.
- If you enter or edit information and do not want to save your changes, press  to exit without saving.

## Character Chart


Use this chart as a guide for entering characters with the tap method.

	space . 1 ? ! , @ _ & ~ : ; " - ( ) ' ` ¡ ¨ % £ \$ ¥ ¤ €
	a b c 2 ä å á à â ã α β ç
	d e f 3 δ ë é è ê φ
	g h i 4 ï í î γ
	j k l 5 λ
	m n o 6 ñ ö ø ó ò ô õ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú ù û
	w x y z 9 ξ ψ
	+ - 0 x * / \ [ ] = > < # §



**Note:** This chart may not reflect the exact character set available on your phone.

## Using the iTAP™ Method




iTAP™ software provides a predictive text entry method that lets you enter a word using one keypress per letter.

Press  > **iTAP** from a text entry screen.


### Entering Words


<b>Press</b>	<b>To</b>
1 A number key one time	enter the first letter of the word The letters associated with the key are shown at the bottom of the display.
2 Number keys (one per letter)	enter the rest of the word Alternative words and letter combinations are shown at the bottom of the display. The word choices are updated with each keypress.
3  right or left	highlight the word you want
4 <b>SELECT</b> (  )	enter the word at the flashing cursor A space is automatically inserted after the word.




For example, to spell “art,” press   . The display shows:

Flashing cursor indicates insertion point.

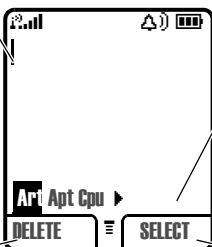

Press  to scroll and see additional choices.

Press **DELETE** () to clear the last letter entered.


Press **SELECT** () to insert the highlighted letters.



## Entering Novel Words


If iTAP does not display the word you want:

### Press

1 **DELETE** () one or more times

2  left or right

3 **SELECT** (), then press  to the left

4 Number keys and 

### To

delete letters until you see a letter combination that matches the start of the word

highlight the letter or letter combination

shift the text entry cursor to the left and “lock” the selected letters


enter letters and highlight letter combinations to spell the word



Your phone stores the unrecognised word, and includes it in the list of alternative word choices the next time you enter it. When you fill memory space for storing unrecognised words, your phone deletes the oldest words as you add new words.

## Entering Punctuation

**Press**



or

**To**

enter punctuation or other characters (see the chart on page 31)

---

---

## Using Capitalisation

The first word of a sentence is automatically capitalised, with the words that follow in lowercase.

**Press**



up

**To**

display complete words that begin with the characters you entered

---



down

change the words to initial character capitalised, all uppercase characters, or all lowercase characters

---

---

## Entering Numbers

Action	To
1 Enter the first digit and then highlight it	put the iTAP software in number entry method
2 Press number keys	add digits to the number
3 Press <b>SELECT</b> (☞)	enter the number

## Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action	To
Press <b>DELETE</b> (☞)	delete 1 letter at a time
Hold <b>DELETE</b> (☞)	delete the entire message

## Locking and Unlocking Your Phone

You can lock your phone manually or set your phone to lock automatically whenever you turn it off.

A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer*. To use a locked phone, enter the unlock code.

You can make emergency calls on your phone even when it is locked. See page 47.

## Locking Your Phone Manually

### Find the Feature

- ⓘ > **Settings** > **Security**
- > **Phone Lock**
- > **Lock Now**

### Press

4 **ENTER** (⏏)

5 keypad keys

6 **OK** (⏏)

### To

open the unlock code display

enter your 4-digit unlock code

lock the phone

## Unlocking Your Phone

At the **Enter Unlock Code** prompt:

### Press

1 **ENTER** (⏏)

2 keypad keys

3 **OK** (⏏)

### To

open the unlock code display

enter your 4-digit unlock code

The unlock code is originally set to 1234. If necessary, see “If You Forget a Code or Password” on page 37.

unlock your phone

## Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

### Find the Feature

- ⓘ > **Settings** > **Security**
- > **Phone Lock**
- > **Auto Lock** > **On**

Press	To
1 <b>ENTER</b> (⏏)	open the unlock code display
2 keypad keys	enter your 4-digit unlock code
3 <b>OK</b> (⏏)	set the phone to lock automatically

**Note:** To automatically lock your keypad, see page 38.

## Changing a Code or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent others from accessing your personal information or modifying your phone settings. The unlock code must contain 4 digits, and the security code must contain 6 digits.

To change a code or password:

### Find the Feature



ⓘ > **Settings** > **Security**  
> **Passwords**

## If You Forget a Code or Password

If you forget your security code (originally set to 000000), SIM PIN, SIM PIN2, or call barring password, contact your service provider.



If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following when you see the **Enter Unlock Code** message:

Press	To
1 <b>ENTER</b> (⏏)	open the unlock code display

<b>Press</b>	<b>To</b>
2 	go to the unlock code bypass screen
3 keypad keys	enter your security code
4 <b>OK</b> (  )	submit your security code

## ***Locking and Unlocking the Keypad***

You can lock the keypad to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

<b>Press</b>	<b>To</b>
 	lock or unlock your keypad

**Note:** *Incoming calls unlock the keypad.*

To make the keypad lock automatically if it is inactive:

**Find the Feature**

 > **Settings** > **Security**  
> **Auto Key Lock** > **On**

## ***Taking Photos and Sending Picture Messages***


You can take photos to view and send as *Multimedia Messaging Service* (MMS) picture messages.





## Take Photos

**Note:** The viewfinder image and captured images are scaled to fit your phone's display. The image will have greater resolution when viewed on a PC.

Open the camera lens on the back of your phone and point the viewfinder at the photo subject:

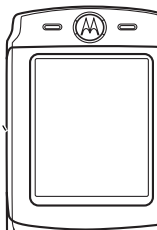
**Camera Key**  
Open camera and  
press to view or  
capture image.



<b>Press</b>	<b>To</b>
<b>1</b>  > <b>Camera</b> <b>or</b> the camera key	The image in the camera's viewfinder appears on your phone's display.
<b>2</b> <b>TAKE</b> (  ) <b>or</b> the camera key	freeze the image in the display
<b>3</b> <b>STORE</b> (  ) <b>or</b> <b>DELETE</b> (  )	save the photo as a JPG file on your phone (see step 4)  delete the photo and return to viewfinder mode.

**Press**  
4  **SELECT** ()

**To**  
scroll to Send MMS, Set As,  
Rename, or Details  
open a new MMS picture  
message with the photo  
attached

**or**  
**BACK** ()

return to viewfinder mode

---

---

Option	Description
<b>Send MMS</b>	Open a new MMS picture message with the photo attached.
<b>Set As...</b>	Save the photo as your wallpaper, or a caller group icon.
<b>Rename</b>	Name the photo.
<b>Details</b>	Display the photo name, type, size, date, and time.

## ***View, Send, Delete, or Rename Photos***

**Find the Feature**

Ⓢ > **Media Centre**  
> **Photo Album** > *album*

**Press**  
1   
2 **VIEW** ()

**To**  
scroll to the photo you want  
view the photo



**Press**  
3 **SEND** (📧)

**To**  
open a new MMS picture message with the photo attached

**or**

Ⓢ

open the **Photo Album** menu for the following options.

---

---

The **Photo Album** menu can include the following options:

<b>Option</b>	<b>Description</b>
<b>Set as ...</b>	Set the picture as your wallpaper or a caller groupimage.
<b>Delete</b>	Delete the picture.
<b>Rename</b>	Rename the picture.
<b>Details</b>	View picture information.
<b>View Free Space</b>	Check the space available for more pictures and animations
<b>Delete All</b>	Delete all pictures in the album.
<b>Send</b>	Open a text message with the picture attached (see page 55).
<b>Move</b>	Move the picture to another location

# Setting Up Your Phone

---

## Storing Your Name and Phone Number

To store or edit your name and phone number information on your SIM card:

### Find the Feature

- ⓘ > **Settings**
- > **Phone Status**
- > **My Tel. Numbers**

If you do not know your phone number, contact your service provider.

## Setting the Time and Date

To use the datebook, you must set the time and date.

### Find the Feature

- ⓘ > **Settings**
- > **Initial Setup**
- > **Time and Date**

## Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call, message, or other event. This ring or vibration is called an *alert*.

### Find the Feature

- ⓘ > **Ring Style**

You can change these ring style settings:

Setting	Description
Ring Volume	volume for all alerts

Setting	Description
<b>In-Call Alert</b>	ring or vibrate alert types <b>Note:</b> <i>The alert indicator in your display shows this alert type (see indicators on page 24).</i>
<b>Ring Type</b>	<b>Continuous</b> or <b>Once</b>
<b>Ring Tones</b>	sound for incoming call alerts
<b>Text Msgs</b>	sound for incoming message alerts
<b>Alarms</b>	sound for alarms


**Tip:** You can choose a *profile* that sets all of your alert, colour, answer mode settings at once. To choose a profile, see page 74.

## Setting Answer Mode

You can answer calls by pressing any key, or tell your phone to answer calls automatically after a delay. To set these options:

### Find the Feature

- ③ > **Profile Settings**
- > *profile* > **Edit**
- > **Answer Mode**

Setting	Description
<b>Auto Answer</b>	answer automatically, after a delay
<b>Anykey Answer</b>	answer by pressing any key
<b>Sendkey Answer</b>	answer by pressing 

**Tip:** You can choose a profile that sets all of your alert, colour, answer mode settings at once. To choose a profile, see page 74.

## Setting a Wallpaper Image

You can set a picture or photo as a wallpaper (background) image in your phone's idle display.

### Find the Feature

- ⓘ > **Settings**
- > **Personalise**
- > **Wallpaper**

Select a wallpaper image, or press ⓘ and select:

Setting	Description
Photo Album	photos stored on your phone
Picture	pictures stored on your phone

## Selecting a Screen Saver

When you display an animation or picture, you can set it as your screen saver image. The screen saver image displays when the phone detects no activity for a specified time.

### Find the Feature

- ⓘ > **Media Centre**
- > **Animation**
- > *the animation*
- ⓘ > **Apply as screen saver**

The screen saver image shrinks to fit the display, if necessary.

## Setting Display Colour

You can select the colour palette that your phone uses to display indicators, highlights, and soft key labels.

### Find the Feature

- ⓘ > **Profile Settings**
- > *profile* > **Edit**
- > **Colour Setting**

**Tip:** You can choose a profile that sets all of your alert, colour, answer mode settings at once. To choose a profile, see page 74.

## ***Adjusting the Backlight***

You can set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power.

### **Find the Feature**

- ③ > **Settings**
- > **Initial Setup**
- > **Backlight**

## ***Conserving Battery Power***



Some networks and phones include a battery save setting to conserve battery power.

### **Find the Feature**

- ③ > **Settings**
- > **Initial Setup**
- > **Battery Save**

# Calling Features

---

For basic instructions on how to make and answer calls, see page 22.

## Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.




### Find the Feature

- Ⓢ > **Settings**
- > **Phone Status**
- > **Active Line**

The active line indicator in the display shows the current active phone line (see page 25).

## Redialling a Number

From the idle display:

Press	To
1 	view the dialled calls list
2 	scroll to the entry you want
3 	redial the number

---

---

## Using Caller ID



Calling line identification (caller ID) displays the phone number for incoming calls.

For **Incoming Calls**: The phone displays the caller's name when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

For **Outgoing Calls**: Other phones can display your phone number when you call them or send a message. To hide your number for the next call, or for all your calls:

### Find the Feature

- ⓘ > **Settings**
- > **In-Call Setup**
- > **My Caller ID**
- > **Next Call Only** or  
**All Calls**

## ***Canceling an Incoming Call***

While the phone is ringing or vibrating:

**Press**

**CANCEL** (📞)

**To**

cancel the incoming call

---

---




Depending on your phone settings and the type of subscription you have, the call may be forwarded to another number, or the caller may hear a busy signal.

## ***Calling an Emergency Number***

Your service provider may program one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.


**Note:** *Emergency numbers vary by country. Your phone's emergency number(s) may not work in all locations, and sometimes*

*an emergency call cannot be placed due to network, environmental, or interference issues.*

<b>Press</b>	<b>To</b>
1 keypad keys	dial the emergency number
2 	call the emergency number


## ***Dialling International Numbers***

To dial the local international access code:

<b>Action</b>	<b>To</b>
Press  for 2 seconds	insert the international access code (+) for the country from which you are dialling




## ***Viewing the Received Calls or Dialed Calls List***

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest, and contain up to 10 entries. The oldest entries are deleted as new ones are added.

**Shortcut:** From the idle display, press  to display the dialed calls list.

### **Find the Feature**

 > **Recent Calls**

<b>Press</b>	<b>To</b>
1 	scroll to <b>Received Calls</b> or <b>Dialed Calls</b>
2 <b>SELECT</b> (  )	select the list
3 	scroll to an entry




**Press**

4 


**To**


call the entry's number

**Note:** Press and hold  for 2 seconds to send the number as DTMF tones during a call.

**or**



if **View** appears above the  key—view the entry's details

if **Store** appears above the  key—store the entry's details in the phonebook



**or**



open the **Last Calls Menu** to perform other procedures in the following list




---

---

Option	Description
<b>Store</b>	Create a phonebook entry with the selected number in the <b>No.</b> field. (This option does not appear if <b>STORE</b> appears above the  key, or if the number is already stored as a phonebook entry.)
<b>Delete</b>	Delete the entry. (This option does not appear if <b>DELETE</b> appears above the  key.)
<b>Delete All</b>	Delete all entries in the current list.
<b>Add Digits</b>	Add digits to the end of the selected number.

## Returning an Unanswered Call

When you do not answer calls, your phone displays  $X$  **Missed Calls**, where  $X$  is the total number of missed calls

Press	To
1 <b>VIEW</b> (  )	see the missed calls list, beginning with the most recent call
2 	scroll through the list and select a call that you want to return
3 	make the call

## Using the Notepad

Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

### Find the Feature

 > **Recent Calls**  
> **Notepad**


### Press



### To

call the number

or



**STORE** ()

create a new phonebook entry, with the notepad number copied into the **No.** field (see page 64).

## Calling With Speed Dial

Each entry in your phonebook is assigned a unique *speed dial* number that identifies where the entry is stored in phone memory

or on the SIM card. To speed dial a phonebook entry, in the idle display:

<b>Press</b>		<b>To</b>
1	keypad keys	enter the speed dial number for the entry you want to dial
2		submit the number
3		call the entry

## ***Calling With TurboDial***

To call phonebook entries 1 to 9 from the idle display, press and hold the 1-digit speed dial number for 1 second.

## ***Using Voicemail***




You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone.

## ***Storing Your Voicemail Number***

Storing your voicemail number in your phone makes it easy for you to listen to new voicemail messages. Your voicemail number is provided by your service provider.

### **Find the Feature**

- ① > **Messages**
- > **Message Settings**
- > **Voicemail No.**


<b>Press</b>		<b>To</b>
1	keypad keys	enter the phone number for your voicemail
2	OK (  )	store the number

**Note:** You cannot store pause (⏸), wait (⏳), or number (1) characters in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. For more about these characters, see page 66.

## Receiving a New Voicemail Message

When you receive a voicemail message, your phone displays  (voice message waiting) and **New Voicemail**. Some networks only indicate when you have messages, whether they are new or not.

**Press**

**CALL** 

**To**

call the voicemail phone number you stored and listen to the message

---

---

## Listening to a Voicemail Message

**Find the Feature**

 > **Messages** > **Voicemail**

Your phone calls your voicemail number. If no voicemail number is stored, the phone prompts you to store one.

## Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.

**Press**

**1** 

**To**

answer the new call

---

**Press**  
2 **SWITCH** (📞)

**or**

**LINK** (📞)

**To**  
switch back to the first call

**Note:** You can press **SWITCH** (📞) at any time to switch between calls.

connect the two calls

---

---

You must turn on call waiting to use this feature. To turn call waiting on or off:

**Find the Feature**

① > **Settings**  
> **In-Call Setup**  
> **Call Waiting**

## ***Putting a Call on Hold***

**Press**  
**HOLD** (📞) (if available)

**or**

① > **Hold**

---

---

**To**  
put a call on hold

## ***Transferring a Call***

While you are on a call, you can transfer the call to another phone

**Find the Feature**

① > **Hold**

**Press**  
1 keypad keys

**To**  
enter the phone number where you are transferring the call

---

**Press****2** **To**

dial the phone number

Speak to the person who answers the target phone.

---

**3** 

open the menu

---

**4** scroll to **Call Transfer**

---

**5** **SELECT** ()confirm the transfer

---

---

# Messages

---



Text messages are brief messages that you can send and receive.

Quick notes are prewritten text messages that you can insert into a message and send quickly.

## Setting Up the Message Inbox

Your message inbox must be set up before you can send and receive messages.

**Note:** Your service provider may have already set up the message inbox for you.

### Find the Feature

- ⓘ > **Messages**
- > **Message Settings**
- > **Inbox Setup**

Setting	Description
<b>Short Msg Setup</b>	Enter your service centre number, expiry period, and reply type for SMS messages.
<b>Multimedia Msg Setup</b>	Enter the network settings, filters, and limits for MMS messages.

## Sending Messages, Pictures, and Sounds

**Note:** Your message inbox must be set up before you can send and receive messages (see page 55).

You can send two types of text messages:

## Find the Feature

④ > **Messages** > **Create**  
> *message type*

### SMS/EMS

Contains text, simple icons, and ring tones.

### Multimedia

Contains text, photos, and complex sounds.

### Multimedia Templates

Contains pre-selected text, photos, or complex sounds.

## Press

1 keypad keys

## To

enter the text message (see page 29)

To insert a picture, animation, or sound file in the message, press:

④ > **Insert Media** > *object type*  
> *object*

**Note:** *Some files may not be compatible with some brands of phones.*

---

2 **SEND** (📧)

store the message contents and open the address editor

---

3 **SELECT** (📧)

select [**New Entry**]

---

4 keypad keys

enter a phone number where you want to send the message

**or**

④ > **Phonebook**

select one or more phone numbers from the phonebook

---



**Press****5 SEND** (📧)

or

ⓘ > **Save to Drafts****To**

send the message

save the message as a draft

**6 OK** (📧)

confirm the send

## ***Sending a Quick Note Text Message***

Quick notes are prewritten text messages that you can insert into a message and send quickly (for example, **Meet me at ...**). You can also create new quick notes.

**Find the Feature**ⓘ > **Messages > Templates**  
> **Quick Notes****Press****1** 📄**To**

scroll to the quick note

**2 SEND** (📧)

send the quick note

or

ⓘ

view the note text or  
create a new quick note

## ***Viewing the Status of Sent Text Messages***

Text messages that you send are stored in the outbox.


**Find the Feature**ⓘ > **Messages > Outbox**

Messages are sorted from oldest to newest.

## ***Receiving a Message***

**Note:** Your message inbox must be set up before you can send and receive messages. See page 55.

When you receive a new message, your phone displays the  (message waiting indicator) and **New Message**, and sounds an alert.

<b>Press</b>	<b>To</b>
1 <b>VIEW</b> (  )	open the message (or your text message inbox if there are multiple messages)

---







---

If reminders are turned on, your phone sends a reminder at regular intervals until you close the new message notification, read the message, or turn off your phone.

When your phone displays **Memory is Full!**, you must delete some existing messages from your inbox, outbox, or drafts folder to receive new messages.

## ***Reading or Deleting a Text Message***

Messages in the text message inbox are sorted from newest to oldest.

<b>Find the Feature</b>	<b> &gt; Messages &gt; Inbox</b>
<b>Press</b>	<b>To</b>
1 	scroll to the message
2 <b>READ</b> (  )	open the message
3 <b>BACK</b> (  )	close the message
<b>or</b>	
<b>REPLY</b> (  )	compose and send a reply
<b>or</b>	
	open the <b>Text Msg Menu</b> for the following options

---

---

Option	Description
<b>Reply</b>	Open a new text message, with the sender's <b>Reply To</b> number or email address in the <b>To</b> field.
<b>Delete</b>	Delete the message.
<b>Call Back</b>	Call the number in the message header or embedded in the message.
<b>Chat</b>	Open a chat session with the message sender.
<b>Forward</b>	Open a copy of the text message, with an empty <b>To</b> field.
<b>Cleanup Message</b>	Delete any messages past the expiry in your <b>Inbox Setup</b> (see page 55)
<b>Extract Address</b>	Create a phonebook entry for the <b>Reply To</b> number

## ***Reading Information Service Messages***



Information service messages are broadcast messages that you can receive, such as stock updates or news headlines.

Your information services message inbox must be set up before you can receive information services messages. The number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored on your phone.

**Note:** Your service provider may have already set up the information services inbox for you.

## Find the Feature

- ⑤ > **Messages**
- > **Message Settings**
- > **Info Alert Setup**

To set up the information services inbox, you must configure the following settings. Contact your service provider to obtain this information, if necessary. Actual field names and values may vary depending on the technologies available to your service provider. Some settings may not be available for all phone models.

Setting	Description
<b>Service</b>	select <b>Yes</b> or <b>No</b> to turn broadcasts on or off
<b>Active Channels</b>	set the subscription channels
<b>Language</b>	select the language(s) in which you want to accept broadcasts

## Using Chat

You can exchange text messages in real time with another wireless phone user in a *chat session*. The messages you send appear immediately on your chat partner's phone.



## Starting a Chat Session

### Find the Feature

- ⑤ > **Chat** > **Start Chat**

### Press

1 keypad keys

### To

enter your **Nickname**

---


Press	To
2 <b>OK</b> (📧)	save your <b>Nickname</b>
3 keypad keys	enter your first chat message
<b>or</b>	
Ⓞ > <b>Quick Notes</b>	select a quick note
4 <b>OK</b> (📧)	save the chat message
5 <b>SELECT</b> (📧)	enter your chat partner's phone number
<b>or</b>	
📞 > <b>PB Lookup</b>	select a number from the phonebook or recent call lists
6 <b>OK</b> (📧)	send the message
	Your phone displays the chat log. When your chat partner replies, the reply appears below your text.
7 <b>CHAT</b> (📧)	enter a reply to your partner
8 <b>OK</b> (📧)	send your reply

### Notes:

- If you send a chat message to a phone that only has text messaging, the chat text appears as a text message on the other phone. The reply appears as chat text on your phone.
- You can start a chat session from a text message. Press Ⓞ and select **Chat** to start a new session with the sender's **Reply To** number in the **To** field.
- When your phone displays **Memory is Full!**, you must delete some existing messages from your inbox, outbox, or drafts folder to receive new chat messages.

## Using the Chat Log

The chat log displays the messages exchanged in a chat session.

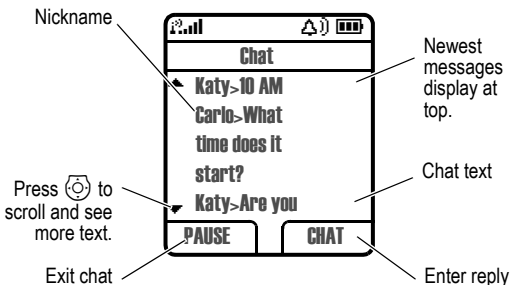

## Responding to Chat

When you receive a chat message, your phone displays **Chat from chat name**, and sounds an alert.

**Press**

**ACCEPT** (📧)

**or**

**REJECT** (📧)

**To**

accept the chat session

refuse the chat session





---

---

If reminders are turned on, your phone reminds you at regular intervals until you respond to the chat notification or turn off your phone.

If you receive another chat request during a chat session, the new message appears as an incoming text message, with the requestor's *chat name* at the beginning of the message.

## Ending a Chat Session

Press	To
1 PAUSE (  )	suspend the session
2 	open the <b>Chat Menu</b>
3 	scroll to <b>End Chat</b>
4 SELECT (  )	select <b>End Chat</b>

A chat session also ends when you turn off your phone, answer an incoming call, or start a new chat session.

Your chat partner is not notified when you end a chat session. If your partner sends more chat text, your phone treats it as an incoming text message, with your chat partner's *chat name* at the beginning of the message.

If you exit the chat log without selecting **End Chat**, and your chat partner sends another message, your phone notifies you and adds it to the chat log. You can re-enter the session by returning to the chat log.

# Setting Up Your Phonebook

---

You can store a list of names and phone numbers or email addresses in your phone's electronic phonebook.


To see the names in your phonebook:

## Find the Feature

☰ > Phonebook

Scroll to a name and press **VIEW** (📄) to view details of the phonebook entry as shown in the following display.

## Viewing Entry Details

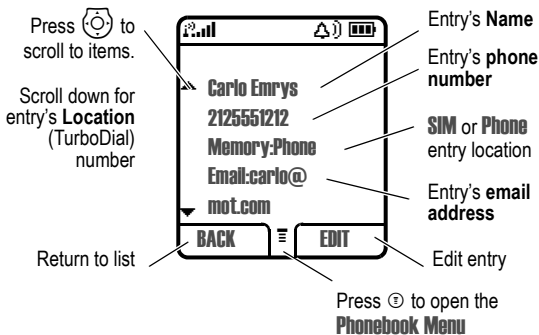

## Creating a Phonebook Entry

You can store a phonebook entry on your phone or on the SIM card.



## Entering Information

To create or edit a phonebook entry:

### Find the Feature

- ① > **Phonebook**
- ② > **New**
- > **Phone Number**

**Shortcut:** Enter a phone number in the idle display, then press **STORE** (☞) to create a phonebook entry with the number in the **No.** field.

A phone number is required for a phonebook entry. All other information is optional. You can enter the following information for a phonebook entry:

Phonebook item	Description
<b>Name</b>	a name for the entry
<b>No.</b>	the phone number
<b>Memory</b>	select whether to store the entry on your <b>Phone</b> or <b>SIM</b>
<b>Voice Name</b>	record a name to voice dial the entry
<b>Email</b>	the email address
<b>Group</b>	the group that classifies the entry (see page 70)
<b>Photo CLI</b>	select a photo to appear when you receive calls from the entry
<b>TurboDial</b>	the number you use to <i>TurboDial</i> the entry (for entries 1 to 9). To TurboDial an entry, press and hold its TurboDial number in idle.

## Completing a Phonebook Entry

When you are finished entering information for a phonebook entry:

<b>Press</b> DONE (☎)	<b>To</b> store the entry and return to the phonebook list
--------------------------	---


---

---

## Storing a PIN Code With a Phone Number

You can store a PIN code with the phone number for calls that require additional digits (for example, to make a calling card call, or to retrieve voicemail or answering machine messages). Insert one or more of the following characters in the dialing sequence to ensure that the number dials and connects properly:

<b>Press</b>	<b>To</b>
Ⓢ > <b>Insert Pause</b>	inserts a <b>p</b> (pause) character Your phone dials the preceding digits, waits for the call to connect, then sends the remaining digit(s). <b>Note:</b> <i>If your network does not recognise the first pause character, try two (pp).</i>
Ⓢ > <b>Insert Wait</b>	inserts a <b>w</b> (wait) character Your phone dials the preceding digits, waits for the call to connect, then prompts you for confirmation before it sends the remaining digit(s).

Press	To
 > <b>Insert 'n'</b>	<p>inserts an <b>n</b> (number) character</p> <p>Your phone prompts you for a number before dialling the call. The number you enter is inserted into the dialling sequence in place of the <b>n</b> character.</p>

### Notes:

- You can store a maximum of 40 digits per number for a phonebook entry on your phone. The maximum number may vary for entries stored on the SIM card. Each character counts as one digit.
- You cannot store numbers that contain a **w** or **n** character on the SIM card.

## Recording a Voice Name For a Phonebook Entry

A voice name lets you call the phonebook entry using voice dial. You can record a voice name for a new or existing phonebook entry.

**Note:** You cannot record a voice name for an entry stored on a SIM card.

Record your voice name in a quiet location. Hold the phone about 4 inches (10 centimetres) from your mouth, and speak directly into the phone's microphone in a normal tone.

### Find the Feature

 > **Phonebook**

#### Press







1 

#### To

scroll to the entry

2 **VIEW** 

view entry details

<b>Press</b>	<b>To</b>
<b>3</b> EDIT (  )	edit the entry
<b>4</b> 	scroll to <b>Voice Name</b>
<b>5</b> RECORD (  )	begin recording
<b>6</b> RECORD (  ) and release, then say the entry's name (within 2 seconds)	record the voice name
<b>7</b> RECORD (  ) and release, then repeat the name	confirm the voice name
<b>8</b> DONE (  )	store the voice name

## Dialling a Phonebook Entry



Use one of the following procedures to call a number (or send a text message to an email address) stored in your phonebook.

**Note:** You can also use TurboDial (see page 51).

## Using the Phonebook List

### Find the Feature

 > **Phonebook**

<b>Press</b>	<b>To</b>
<b>1</b> keypad key letters	jump to entries that begin with that letter (optional)
<b>2</b> 	scroll to the entry you want
<b>3</b> 	call the entry

## Using Voice Dial

To call a phonebook entry that you stored with a voice name, press and hold the left soft key until your phone says **Say Name Now**. Say the entry's name (in two seconds).

Left  
Softkey



To store a voice name for a phonebook entry, see page 67.

## Editing a Phonebook Entry

Find the Feature

Ⓢ > Phonebook

Press

To

1



scroll to the entry you want to edit

2

**VIEW** (Ⓢ)

display the entry's detailed view

3

**EDIT** (Ⓢ)

edit the phonebook entry

Edit the entry as described on page 64.

**Tip:** Press Ⓢ to open the Phonebook Menu to perform various operations on the selected entry.

## Deleting a Phonebook Entry

Find the Feature

ⓔ > **Phonebook**

Press

To

1 

scroll to the entry

2 

open the **Phonebook Menu**

3 

scroll to **Delete**

4 **SELECT** ()

delete the entry

## Using Caller Groups

You can put phonebook entries into groups. When you get a call or message from someone in a group, your phone uses the group's special ring.



## Setting Up a Group

Find the Feature

ⓔ > **Settings**  
> **Personalise**  
> **Caller Groups**  
> *group name*

You can edit the following settings:

Setting	Description
<b>Name</b>	name of the group
<b>Ring</b>	ring alert your phone uses for calls from group members
<b>Icon</b>	icon your phone displays for calls from group members

Setting	Description
Use Defaults	reset all of the settings to the phone defaults

## Viewing Only One Group in Your Phonebook

To make your phonebook display only the entries in one group:

### Find the Feature

- ③ > **Phonebook**
- ③ > **Caller Groups**
- > *the group to view*

Your phone hides all phonebook entries except for the members of the group you selected.

## Sorting Phonebook Entries

You can sort your phonebook list by speed dial number Alpha Sorting, Bopomofo Sorting, Pinyin Sorting, and Stroke Sorting.

### Find the Feature

- ③ > **Phonebook**
- ③ > **PB Sorting**
- > *sort order*

## Copying Phonebook Entries

**Note:** These procedures do not delete the original entries.

### Copying a Single Entry

#### Find the Feature

- ③ > **Phonebook**

#### Press




1 

#### To

scroll to the entry

2 

open the **Phonebook Menu**





Press	To
3 	scroll to <b>Copy Entry</b>
4 <b>SELECT</b> (  )	select <b>Copy Entry</b>  The phone asks for a confirmation.
5 <b>YES</b> (  )	copy the entry to the new location

**Tip:** The SIM card cannot store **Type** and **Voice Name** data for entries. When you try to copy an entry with a type or voice name to the SIM card, the phone asks you for confirmation before dropping this information and copying the entry.

## Copying All Entries

### Find the Feature

-  > **Phonebook**
-  > **Copy Entries**

Press	To
1 	open the <b>Phonebook Menu</b>
2 	scroll to <b>SIM to Phone, Phone to SIM, SIM to Caller Group, or CallerGroup to SIM</b>
3 <b>SELECT</b> (  )	select the copy option
4 <b>YES</b> (  )	confirm the copy



## Checking Phonebook Capacity

You can see how much memory space remains for storing phonebook and datebook entries on the phone, and how many more phonebook entries you can store on the SIM.

### Find the Feature

☰ > Phonebook

#### Press

#### To

1 

open the **Phonebook Menu**

2 

scroll to **Phone Capacity** or  
**SIM Capacity**

3 **SELECT** ()

select **Phone Capacity** or **SIM Capacity**

Your phone displays the phone memory meter, or the number of SIM card phonebook entries available.

# Personalising Your Phone

---

## Selecting or Editing a Profile

A *profile* stores your settings for alerts, colour style, and answer options. To select a profile:

### Find the Feature

ⓘ > **Profile Settings**  
> *profile* > **Activate**

**Note:** *profile* represents the profile you want.

You can also customise any profile

### Find the Feature

ⓘ > **Profile Settings**  
> *profile* > **Edit**

Setting	Description
<b>Colour Setting</b>	the colour palette for your display indicators, highlights, and soft key labels
<b>Ring Style</b>	ring or vibration settings for calls, messages, and alarms <b>Note:</b> You can also change these settings under ⓘ > <b>Ring Styles</b> (see page 42).
<b>Keypad Tone</b>	the sound for key presses
<b>Warning Tone</b>	turn warning tones <b>On</b> or <b>Off</b>
<b>Call Time Reminder</b>	select a <b>Single</b> or <b>Multiple</b> call time reminder
<b>Connected Alert</b>	select the alert for connected calls

Setting	Description
Answer Mode	select a method for answering incoming calls

## Creating and Editing Alert Tones

You can create and store custom alert tones on your phone. The tones appear in the list of available alerts.

### Creating a Tone

#### Find the Feature

- ① > **Media Centre**
- > **Melody**
- ① > **New**

#### Press

#### To

1 **CHANGE** ()

select **Notes**

2 

enter notes for the tone (see the following section)

or

keypad keys

3 **OK** ()

store the notes

4 **CHANGE** ()

select **Name**

5 keypad keys

enter the name for the tone


6 **OK** ()

store the name

7 **DONE** ()

store the tone







### Entering Notes

Press  up or down to select a note in octaves 0-8.



**Basic notes:** c d e f g a b **Sharp Notes:** #c #d #f #g #a







You can also enter note details and rests. For example, **\*2##g0r** plays a second-octave G sharp whole note followed by a rest. Press number keys repeatedly to cycle cycle through the options in the following table.

## Note Table

Key	Display	Description
1 	1	First octave, as in <b>1G</b>
	2	Second octave, as in <b>2G</b>
	3	Third octave, as in <b>3G</b>
2 	A	A note
	B	B note
	C	C note
	2	Second octave, as in <b>2G</b>
3 	D	D note
	E	E note
	F	F note
	3	Third octave, as in <b>3G</b>
4 	G	G note
	R	inserts a rest (you can add length modifiers, such as <b>Rh</b> )
7 	#	sharp note, as in <b>F#</b>
	b	flat note, as in <b>Gb</b>
0 	q	1/4 note, as in <b>Gq</b>
	h	1/2 note, as in <b>Gh</b>
	w	whole note, as in <b>Gw</b>

## Example

To create a simple tone, you can enter notes by pressing  up and down, and enter rests by pressing . For example:

Press	To	Display
1 	scroll up to <b>C</b> , then wait for the highlight to disappear	<b>C</b>
2 	scroll up to <b>E</b>	<b>CE</b>
3 	scroll down to <b>1A</b>	<b>CE1A</b>
4 	scroll down to <b>C</b>	<b>CE1AC</b>
5 	select <b>R</b> for a rest	<b>CE1ACR</b>
6 <b>OK</b> (  )	store the tone	

## Playing a Tone

### Find the Feature


- ③ > **Media Centre**
- > **Melody**
- > *the tone name*






## Editing a Tone

You cannot edit the standard alert tones included with your phone. To edit a custom tone that you created:

### Find the Feature

- ③ > **Media Centre**
- > **Melody**

Press	To
1 	scroll to the tone
2 ③ > <b>Edit</b>	open the tone details




<b>Press</b>	<b>To</b>
3 	scroll to <b>Name</b> or <b>Notes</b>
4 <b>CHANGE</b> (  )	select the details to edit
5 	enter new text or notes
<b>or</b>	
keypad keys	
6 <b>OK</b> (  )	store the details
7 <b>DONE</b> (  )	store the tone

## ***Deleting a Tone***

You cannot delete the standard alert tones included with your phone. To delete a custom tone that you created:

### **Find the Feature**

 > **Media Centre**  
> **Melody**

<b>Press</b>	<b>To</b>
1 	scroll to the tone
2  > <b>Delete</b>	select <b>Delete</b>
3 <b>YES</b> (  )	confirm the deletion

## ***Downloading a Tone***

You can download custom ring tones from the micro-browser application, or from a text message. To download tones from the micro-browser, see page 100. To download tones from a text message, see page 57.

## Send Tones

You can send ring tones to other wireless phone users. To insert a tone in a text message, see page 55.

## Setting the Menu Language

You can set the language in which menu features and options are displayed.

### Find the Feature

- ④ > **Settings**
- > **Initial Setup**
- > **Language**

## Resetting All Options

You can reset all options back to their factory settings except for the unlock code, security code, and lifetime timer.

### Find the Feature

- ④ > **Settings**
- > **Initial Setup**
- > **Master Reset**

## Clearing All Information

You can reset all options back to their factory settings except for the unlock code, security code, and lifetime timer *and* clear all user entries (such as Phonebook entries and downloaded wallpapers, screen savers, and sounds).

**Caution:** Master clear *erases all user-downloaded content and user-entered information* stored in your phone's memory, including phonebook and datebook entries. Once you erase the information, it cannot be recovered. Master clear does *not* delete any information stored on the SIM card.

### Find the Feature





- ④ > **Settings**
- > **Initial Setup**
- > **Master Clear**

## Using the Shortcuts Menu

Your phone includes several standard shortcuts. You can create additional custom shortcuts to frequently used menu items.

### Standard Shortcuts

The following shortcuts are pre-programmed in your phone. You cannot edit or delete these shortcuts.

Action	To
Press  in idle	lock/unlock your keypad
Press  in idle	go to the dialled calls list
Press 	exit the menu system and return to the idle display
Press  up or down	open the idle menu



### Editing the Shortcuts List

To edit the Shortcuts Menu list:

#### Find the Feature

 > **Settings** > **Shortcuts Setup**

This opens the list of Shortcuts options. The current Shortcuts options are numbered in the list (1-9).

- To replace a Shortcuts option with an unnumbered option, select the unnumbered option and press **OPTION** () > **Assign Key**
- To assign a voice tag to an option, select the option and press **OPTION** () > **Add or Modify Voice Tag**

### Using a Shortcuts Shortcut

To select a feature from the Shortcuts Menu list:

#### Find the Feature

 > **Shortcuts** > *the feature*









# Getting More Out of Your Phone

---

## Making a Conference Call



Link an active call and a call on hold together so that all parties can speak to each other.

Press	To
1 keypad keys	dial the first person's number
2 	call the number
3 <b>HOLD</b> (  (if available)	put the first call on hold
<b>or</b>	
 > <b>Hold</b>	
4 keypad keys	dial the next person's number
5 	call the number
6 <b>LINK</b> (  )	connect the two calls
7 	end the entire call

**Tip:** Repeat steps 3-6 to add additional parties to the conference call.

## Diverting a Call



You can divert your phone's incoming voice, fax, and/or data calls directly to another phone number.

Setting	Description
<b>If Unreachable</b>	diverts if your phone is turned off or not on a network
<b>If No Answer</b>	diverts if you do not answer
<b>If Busy</b>	diverts if your phone is busy
<b>Unconditional</b>	diverts all calls
<b>If Unavailable</b>	diverts if your phone is turned off, not on a network, busy, or if you do not answer

## Setting Up or Cancelling Call Diverting

### Find the Feature

 > **Settings** > **Call Divert**

### Press

1 

### To

scroll to the type of calls you want to stop or start diverting

2 **SELECT** ()

view call diverting settings

3 

scroll to a diverting setting (such as **If Busy**)

4 **SELECT** ()

select the setting

5 

scroll to **On** or **Off**

**Note:** *Query* confirms this setting on the network.

6 **SELECT** ()

select the option

7 keypad keys

enter the diverting phone number

**Press**8 **OK** (☎)**To**

send the divert setting to the network

**Note:** Repeat this procedure to enter diverting information for other call types.

## Barring Calls



Call barring lets you restrict outgoing or incoming calls. You can restrict all calls, calls to international numbers, or calls while roaming, or all calls but home.

### Find the Feature

ⓘ > **Settings** > **Security**  
> **Call Barring**

**Press**

1

**To**scroll to **Outgoing Calls** or **Incoming Calls**2 **CHANGE** (☎)

select the option

3

scroll to a restriction setting

4 **SELECT** (☎)

select the restriction setting

5 keypad keys

enter your call barring password

6 **OK** (☎)

submit your password

## Using Fixed Dialling



When you turn on fixed dialling, users can only call numbers stored in the fixed dial list. Use this feature to limit outgoing calls to a predefined list of numbers, country codes, area codes, or other prefixes.

## Turning Fixed Dial On or Off

Find the Feature

ⓘ > **Settings** > **Security**  
> **Fixed Dial** > **On or Off**

## Using the Fixed Dial List

You must turn on fixed dialling to open the fixed dial list (see above)

Find the Feature


ⓘ > **Tools** > **Fixed Dial**

You create and edit fixed dial entries just like phonebook entries. Fixed dial entries are stored on your SIM card, and do not have **Type**, **Voice Name**, or **Ringer ID** information.

## Monitoring Phone Use

### Viewing and Resetting Call Timers



*Network connection time* is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

**The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.**

To view a call timer:

Find the Feature

ⓘ > **Recent Calls** > **Call Times**

Select one of the following options:

Setting	Description
Last Call	Time spent on the last call dialled or received. You cannot reset this timer.

Setting	Description
All Calls	Total time spent on dialled and received calls since the last time you reset this timer.
Lifetime	Total time spent on all calls on this phone. You cannot reset this timer.

To reset the call timer:

<b>Press</b>	<b>To</b>
1 <b>RESET</b> (📞)	reset the time (if available)
2 <b>YES</b> (📞)	confirm the reset

## Using Timers During a Call

You can set a timer to beep at selected intervals during a call, and display information during a call.

### Find the Feature

- ⓘ > **Settings**
- > **In-Call Setup**
- > **In-Call Timer**
- > **Display**

Select one of the following options:


Setting	Description
Call Times	Display the approximate elapsed time for the current call.
Off	No in-call timer display.

## Viewing Call Cost Trackers

Find the Feature

④ > Recent Calls > Call Cost

Select one of the following options:

Setting	Description
<b>Credit Available</b>	Amount of credit available. For GSM advice-of-charge, this is only available if you set a credit limit. 
<b>All Call Cost</b>	Amount spent on all dialed and received calls since the last time you reset this cost tracker.  You can reset this value separate from <b>Dialed Calls</b> and <b>Received Calls</b> , so <b>Dialed Calls</b> plus <b>Received Calls</b> may not equal <b>All Calls</b> .
<b>Last Call Cost</b>	Amount spent on the last call you dialed or received. You cannot reset this cost tracker.

## Viewing Credit Information

### Viewing Advice of Charge Option



If you subscribe to an advice of charge option, you can view the amount of credit available.

Find the Feature

④ > **Settings**  
> **Phone Status**  
> **Credit Available**

## Adjusting and Resetting Call Cost Settings



You can set a credit limit so that the phone displays your remaining credit during calls. The phone notifies you when you near your limit, and ends the call when you reach it.

### Find the Feature

- ③ > **Settings**
- > **In-Call Setup**
- > **Call Cost Setup**

You can choose **Reset All Costs**, **Credit Limit**, or **Currency Setup**.

## Adjusting Network Settings



Your service provider registers your phone to a network.

You can view information about the current network, change how your phone searches for a network, specify your preferred networks, and activate alerts that indicate when a call is dropped or network registration changes.

### Find the Feature

- ③ > **Settings** > **Network**

# Personal Organiser Features

---

## Using the Datebook

The datebook is a calendar that lets you schedule and organise events such as appointments and meetings. You can set the datebook to play a reminder alarm for specific events.

**Note:** You must set the correct time and date on your phone to use the datebook (see page 42).


To schedule or review events in the datebook:

**Find the Feature**

☰ > Tools > Datebook

## Viewing by the Week


The datebook initially displays a calendar for the week. Lines or filled boxes indicate scheduled events.

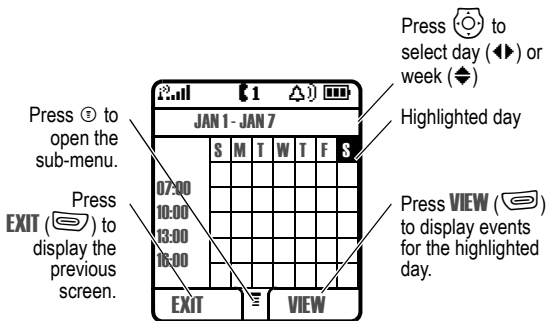




## Viewing by the Day

Select a day and press **VIEW** (📎) to see the day's events.

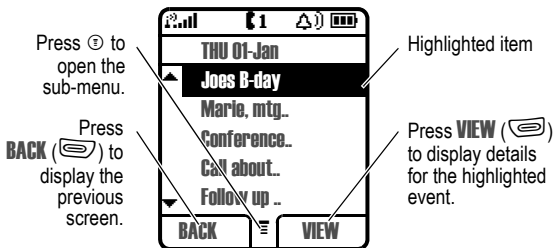

## Viewing by the Event

Select an event and press **VIEW** (📎) to see event details.

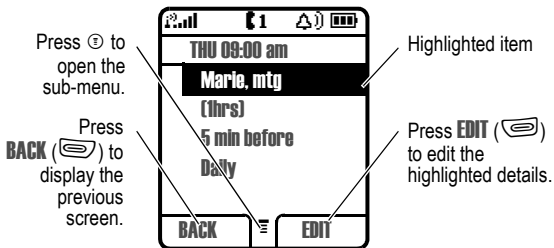

## Adding a Datebook Event

A title is required for a datebook event. All other information is optional.

### Notes:

- You must create an event to use the reminder alarm.

- Your phone must be turned on for the reminder alarm to sound.

### Find the Feature

ⓔ > **Tools** > **Datebook**  
 > *day*  
 ⓔ > **New**

### Press

### To

1 **CHANGE** ()

select **Title**

2 keypad keys

enter a title for the event

3 **OK** ()

store the event title

4 

scroll to other fields and enter information as necessary

You can enter start time, duration, date, repeating events, and reminder alarm.

5 **DONE** ()

store the event

## Changing Event Information

### Find the Feature

ⓔ > **Tools** > **Datebook**

### Press

### To

1 

scroll to the day

2 **VIEW** ()

display the day view

3 

scroll to the event

4 **VIEW** ()



display the event view

5 **EDIT** ()

edit the event

6 











scroll to the information you want to change

Press	To
7 <b>CHANGE</b> (  )	edit the information
8 keypad keys	enter the new information
9 <b>DONE</b> (  )	store the information

## Copying an Event

### Find the Feature








 > **Tools** > **Datebook**

Press	To
1 	scroll to the day
2 <b>VIEW</b> (  )	display the day view
3 	scroll to the event to copy
4 	open the <b>Datebook Menu</b>
5 	scroll to <b>Copy</b>
6 <b>SELECT</b> (  )	copy the event
7 <b>YES</b> (  )	confirm the copy
	Your phone assumes that you want to change the date, and displays the <b>Date</b> field.
8 keypad keys	enter the date information
9 	move to day, month, and year
10 <b>OK</b> (  )	save the copy of the event
11 <b>DONE</b> (  )	store the information

## Deleting an Event

### Find the Feature




☰ > **Tools** > **Datebook**

Press	To
1 	scroll to the day
2 <b>VIEW</b> (  )	display the day view
3 	scroll to the event to delete
4 	open the <b>Datebook Menu</b>
5 	scroll to <b>Delete</b>
6 <b>SELECT</b> (  )	select <b>Delete</b>
7 <b>YES</b> (  )	confirm the <b>Delete</b>

## Viewing and Dismissing an Event Reminder

When you set a reminder alarm for an event, the phone displays an event reminder and sounds a reminder alarm.

To view or dismiss an event reminder:

Press	To
<b>VIEW</b> (  )	view the event
	Press  to scroll through the event details.
<b>or</b>	
<b>OK</b> (  )	dismiss the reminder

If you have more than one event set up for the same time, the phone displays each event in sequence. As you view and dismiss each event reminder, the next one is displayed.

## Changing the Datebook Setup

You can change the datebook's daily start time, and set the length of time that events are stored

Find the Feature

③ > **Tools** > **Datebook**  
③ > **Setup**

## Using the Alarm Clock

**Note:** The alarm clock setting does not appear in the datebook day view, and is not synchronised with datebook settings.

## Setting the Alarm

Find the Feature

③ > **Alarm** > **On**

Press

To

1 **CHANGE** ()

select **Start**

2 keypad keys

enter the alarm time

3 **OK** ()

store the time

4 

scroll to other fields and enter information as necessary

You can set the name and repeat duration.

5 **DONE** ()

store the alarm setting

## Responding To an Alarm

When the alarm is activated, your phone rings or vibrates (depending on the alarm ring alert setting for the current ring style), and displays the time and alarm title.

Press	To
OK (  ) or 	turn off the alarm

---



---

## Using the Calculator

You can use your phone as a convenient calculator and currency converter.


### Calculating Numbers

Find the Feature ☰ > Tools > Calculator

Press	To
1 number keys	enter a number
2  left or right	highlight a calculator function
3 <b>SELECT</b> (  )	perform the function

---

---

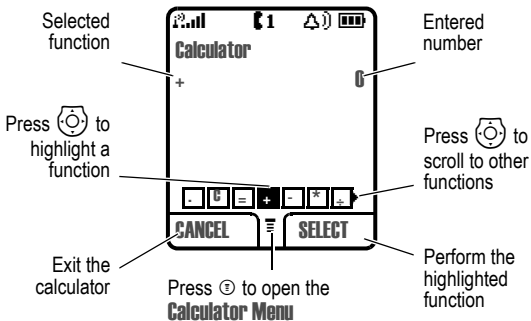

The calculator can perform the following functions:

Function	Description
.	Insert a decimal point
<b>C</b>	Clear the calculation
<b>CE</b>	Clear entry (replaces the <b>C</b> function when you enter more values in a calculation)
+	Add
-	Subtract
*	Multiply
÷	Divide
%	Divide the displayed value by 100
\$	Calculate the exchange rate
±	Change the entry's sign (positive/negative)
<b>MR</b>	Recall the value stored in memory
<b>MS</b>	Store the displayed number in memory
<b>MC</b>	Clear memory




## Converting Currency

The currency converter works just like the calculator, but uses the **€** (currency) function:

### Find the Feature

**€** > **Tools** > **Calculator**

**€** > **Exchange Rate**

Press	To
1 number keys	enter the exchange rate
2 <b>OK</b> (  )	store the exchange rate
3 number keys	enter the amount to convert (amount to multiply by the exchange rate)
4  (left or right)	highlight the <b>€</b> function
5 <b>SELECT</b> (  )	perform the conversion



# Security

---

## Locking the SIM Card

Your PIN (Personal Identification Number) code protects the information stored on your SIM card. When the SIM PIN feature is activated, you must enter your SIM card PIN code to unlock the SIM card each time you turn on the phone or insert the SIM card in the phone.

### Find the Feature

③ > **Settings** > **Security**  
> **SIM PIN** > **On** or **Off**

## Unlocking the SIM Card PIN Code

If you enter an incorrect SIM card PIN code three times in a row, your SIM card is disabled and your phone displays **SIM Blocked**. You must enter a PIN unblocking key (PUK) code, which you can obtain from your service provider.

**Caution:** In the following key sequence, each key press must occur within two seconds of the previous keypress. If the unblocking attempt is tried unsuccessfully 10 times, the SIM card is permanently disabled and your phone displays **SIM Disabled**.

Press	To
1 <b>UNBLOCK</b> (🔑)	open the PIN unblocking editor
2 keypad keys	enter the PUK code
3 <b>OK</b> (🔑)	submit the PUK code
4 keypad keys	enter a new SIM card PIN
	<b>Note:</b> <i>The SIM PIN must be between four and eight digits.</i>
5 <b>OK</b> (🔑)	assign the new SIM PIN

<b>Press</b>	<b>To</b>
<b>6</b> keypad keys	re-enter the new SIM PIN
<b>7</b> OK (OK)	confirm the new SIM PIN and unblock the SIM card



# News and Entertainment

---

## Using the Micro-Browser



The micro-browser lets you access Web pages and Web-based applications on your phone. Contact your service provider to set up access, if necessary.

**Note:** Your phone may use a high-speed GPRS (General Packet Radio Service) network connection. This type of connection can be identified by a  GPRS indicator in the idle display that disappears when you start a micro-browser session. If a  (connected call) indicator displays when you start a micro-browser session, your phone is using a standard voice channel connection. Your network connection charges may vary depending on the type of connection used. To change GPRS settings:

### Find the Feature

- ③ > **Settings**
- > **WAP Profile**
- > **Set GPRS**

You can select **GPRS Always** (connects GPRS when the phone is on), **GPRS When Needed** (connects GPRS when the browser opens a connection), or **GPRS Off**.

## Starting a Micro-Browser Session

### Find the Feature

- ③ > **Browser**

### Press

1 

### To

scroll to a bookmark or service, or application

---



2 **SELECT** ()

---

select the item



---

## Shortcuts:

- If you open a text message with a Web address (URL) in it, you can press  > **Go To URL** to launch the micro-browser and go directly to the URL.
- To open the browser to a page you saved as a **Bookmark**, select  > **Web Shortcuts**.

If you are unable to establish a network connection with the micro-browser, contact your service provider.

## Interacting With Web Pages

Press	To
 up or down	scroll through a page
	open the <b>Browser Menu</b> Select <b>Exit</b> to close the browser.

## Downloading Pictures, Games, and Sounds

You can download a picture, animation, sound, or game upgrade from a Web page by selecting its link. A picture or animation displays when downloading is complete.

You can store these object files on your phone, and use them as screen saver images, wallpaper images, and ring tones.

To download files:

### Find the Feature

 > **Media Centre** > **Download**

### Downloading a File Using a Web Browser

- 1 In the browser, go to the Web site and find the file you want.
-

## Downloading a File Using a Web Browser

- 2 Follow the directions on the site to purchase the file (payment details vary). The site sends a text message to your phone, containing the attached file or a URL link to the file.

---

- 3 Open the message and store the file (see page 57).

### Notes:

- *Call charges apply during download sessions.*
- *When your phone runs out of memory for downloaded files, new files overwrite the old ones. Downloaded files share your phone's memory, so you can make room for a picture, for example, by deleting ring tones.*
- *Some games might make your phone vibrate, or light up the display and keys. To change game vibrations, see page 105.*
- *Some ring tones might have vibrations programmed into them, so your phone rings and vibrates when the ring tone is active.*

## Editing a Web Session

You can select or edit a *Web session*, or network connection profile. You can use different Web sessions to connect to the Internet in different ways.

### Find the Feature

- Ⓢ > **Settings**
- > **WAP Profile**
- > **Set Profile**
- > *profile*

Setting	Description
Set default	Set the session as your default
Edit	Edit session settings (see the following table)

<b>Setting</b>	<b>Description</b>
<b>Rename</b>	Rename the session

## WAP Session Settings

- **Bearer Type**
  - GPRS
    - User Name
    - Password
    - APN
  - CSD
    - User Name
    - Password
    - Phone Number
    - Line Type
    - Transfer Rate
- **WAP Setting**
  - Primary IP
  - Primary Port
  - Secondary IP
  - Secondary Port
  - Timer
  - Homepage

To create a Web session, you must configure the following settings. Contact your service provider to obtain the following information, if necessary. Actual field names and values may vary depending on the technologies available to your service provider. Some settings may not be available for all phone models.

<b>Setting</b>	<b>Description</b>
<b>User Name</b>	user name for connection
<b>Password</b>	password for connection
<b>APN</b>	GPRS access point name (the name of the WAP service provider)
<b>Phone Number</b>	phone number to use to set up a CSD connection
<b>Line Type</b>	CSD line type (analogue or ISDN)
<b>Transfer Rate</b>	CSD connection speed
<b>Primary IP</b>	primary WAP gateway IP address
<b>Primary Port</b>	primary WAP port number
<b>Secondary IP</b>	secondary WAP gateway IP address

Setting	Description
Secondary Port	secondary WAP port number
Timer	time at which the phone exits the micro-browser application when no keypress activity is detected
Homepage	default home page

## ***Picture and Animation Viewers***

Your phone contains pictures and animations that you can insert into text messages, and use as wallpaper and screen saver images.

To download pictures or animations, see page 100. Your phone may also include predefined images. You cannot rename, delete, or view details about predefined images.

### **Find the Feature**

ⓔ > **Media Centre**  
> **Picture or Animation**

### **Press**

1 

### **To**

scroll to the picture or animation name

---

2 **VIEW** ()

view the picture or animation

**or**

ⓔ

open the menu for the following options.

---



---

The **Picture** and **Animation** menus can include:

<b>Option</b>	<b>Description</b>
<b>Set as Wallpaper</b>	Set a picture as your wallpaper image.
<b>Set as Screen Saver</b>	Set an animation as your screen saver image (animation only).
<b>Details</b>	View item information.
<b>View Free Space</b>	Check the space available for more pictures and animations

## ***Playing Games***

Your phone comes with 5 games. If you get an incoming call, message, alarm, or alert while playing a game, the game pauses.

## ***Selecting and Starting a New Game***

**Find the Feature**

☰ > **Games** > *the game*

When the game is over, you can play again or return to the games menu. Depending on the game:

<b>Press</b>	<b>To</b>
<b>BACK</b> (⏪) or <b>NO</b> (⏪)	return to the games menu
<b>NEW</b> (⏪) or <b>YES</b> (⏪)	start another session of the game you just played



## ***Ending a Game***

You can end a game at any time.

**Press**

**BACK** ()

**or**



**To**

end the game session and  
return to the games menu

---

---

## ***Changing Game Vibrations***

Some games might make your phone vibrate. To change the vibration setting:






**Find the Feature**

③ > **Games**  
> **Vibration Setting**


# Troubleshooting



---


Check these questions first if you have problems with your phone.

Question	Answer
<b>Is your battery charged? Do you see  in the display?</b>	The battery level indicator should have at least one segment showing (  ). If it does not, recharge your battery. See page 19.
<b>Do you have a valid 3 volt SIM card inserted in your phone?</b>	If necessary, turn off your phone and make sure that you have inserted a valid SIM card. See page 16.
<b>Does the handset have a signal? Do you see  in the display?</b>	The signal strength indicator should have at least one segment showing (  ). If it does not, move to an area with a stronger signal to use your phone.
<b>Is the earpiece volume too low?</b>	While on a call, press up on the  key.
<b>Is the other party unable to hear you?</b>	Your phone may be muted. Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.
<b>Has the phone been damaged, dropped, or got wet?</b>	Dropping your phone, getting it wet, or using a non-Motorola battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
<b>Was a non-Motorola battery charger used?</b>	


The following refer to specific problems:

Problem	Solution
<b>My phone was stolen. To whom should I report this?</b>	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
<b>I forgot my password.</b>	See page 37 for information about what to do if you forget a code or password. .
<b>I pressed the End/Power key, but nothing happened.</b>	Be sure to press and hold  (the End/Power key) until the display appears and you hear an audible alert (this could take a couple of seconds). If nothing happens, check that the battery is charged and correctly installed. See page 19.
<b>The display says: Insert SIM Card or Check SIM Card even though I have inserted my SIM card in the phone.</b>	The SIM card may be incorrectly inserted. Check the SIM card to make sure that it is inserted properly as described on page 16. Make sure that you have a valid 3 volt SIM card. <b>Note:</b> Be sure to turn your phone off and then back on after you re-insert the SIM card.
<b>The display says: SIM Blocked. How do I unblock my SIM card?</b>	Call your service provider (the company that sends you your monthly wireless service bill) to obtain the PIN unblocking key (PUK) code. See page 97.

Problem	Solution
<p><b>The display says: Enter Unlock Code. How do I unlock my phone?</b></p>	<p>Enter the factory-preset unlock code (1234), or the last four digits of your phone number. See page 35.) If this fails, call your service provider (the company that sends you your monthly wireless service bill).</p>
<p><b>My phone says Terminal Blocked.</b></p>	<p>Your phone does not accept the SIM card inserted. Contact your service provider.</p>
<p><b>My phone does not ring.</b></p>	<p>If you see  or  in the display, then the ring tone is turned off. To turn a ring tone on, see page 42.</p> <p>Also, the ring tone may be set to <b>Silent</b> even though your phone is set to a ringing alert style. Be sure to listen to your ring tone before setting it to make sure it is effective in the environment where you use your phone.</p>
<p><b>My phone rings even though I selected the Silent (or Vibrate) alert style.</b></p>	<p>The ring tone may be set to play a tone even though your phone is set to a silent alert style. See page 74.</p>
<p><b>I tried to place a call and heard an alternating high/low tone.</b></p>	<p>Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display shows the name of your service provider before making a call.</p>

Problem	Solution
<p><b>I cannot make/answer calls.</b></p>	<p>Make sure that you have a phone signal (see the “Signal Strength Indicator” item on page 25). Avoid electrical or radio interference, and obstructions such as bridges, car parks, or tall buildings.</p> <p>Your phone also may have the <b>Call Barring</b> feature turned on. If you know the unlock code, you can change this setting in the security menu (☎ &gt; <b>Settings</b> &gt; <b>Security</b>). Also, check to be sure your SIM card is installed and working.</p>
<p><b>My phone has poor reception and drops calls.</b></p>	<p>Make sure you have a phone signal (see the “Signal Strength Indicator” item on 25). Stay clear of any obstructions such as bridges, car parks, or tall buildings.</p>
<p><b>I cannot hear others on my phone.</b></p>	<p>While on a call, press . Your phone display should show the volume increasing.</p> <p>Also, make sure that your phone’s earpiece is not blocked by its carrying case.</p>
<p><b>I cannot open my inbox.</b></p>	<p>Before you can use text or information services messages, you must set up the appropriate inbox. See page 55.</p>

Problem	Solution
<p><b>How do I see the calls I sent or received?</b></p>	<p>To see the most recent calls you dialed or received, open the “Recent Calls” lists:</p> <ul style="list-style-type: none"> <li>③ &gt; <b>Recent Calls</b></li> <li>&gt; <b>Received Calls</b> or <b>Dialed Calls</b></li> </ul>
<p><b>What can I do to extend battery life?</b></p>	<p>Your battery’s performance is affected by charge time, feature use, temperature changes, and other factors. For tips on extending your battery life, see page 20.</p>
<p><b>I can’t find a file I downloaded.</b></p>	<p>When your phone memory is full, it writes new downloaded files over the old ones. See page 100.</p>
<p><b>I plugged the data cable into my phone but my phone did not beep. How do I know if the data cable is ready to go?</b></p>	<p>The beep indicates that you are set up correctly. If you did not hear a beep, make sure that both ends of the data cable are connected—the smaller end to your phone and the larger end to your computer.</p> <p>Finally, your computer may have deactivated the port to save power. Try opening an application that uses the port, like a fax or dial-up application, and your computer will automatically activate the port.</p>

Problem	Solution
<p><b>My phone beeped when I attached the data cable, but my fax and data applications don't work.</b></p>	<p>Some wireless networks may not support data or fax transmission. If you are roaming on an unfamiliar network, this may be the case.</p> <p>Also, remember that data and fax transmission usually requires a subscription. Call your service provider for more information.</p>
<p><b>When sending data with the data cable, why does the computer show a connection rate of 19200 Kbps?</b></p>	<p>19200 Kbps is the data transfer rate of the connection between your computer and the phone in a standard CSD (Circuit Switch Data) connection. The rate of the connection between your phone and the network is displayed on your phone, and will be either 14400 or 9600 Kbps.</p> <p>A GPRS connection may have a higher data transfer rate.</p>
<p><b>I can't end my data call by closing the application on my computer. What can I do?</b></p>	<p>Try pressing  on your phone. Also try disconnecting the cable or turning off the phone. If possible, always close the connection through your computer. These alternative methods may disrupt the application on your computer.</p>
<p><b>I launched the micro-browser but the display says: Service Not Available.</b></p>	<p>You may be in an area without service, or you may be connected to a network that does not support Internet access.</p>

<b>Problem</b>	<b>Solution</b>
<b>I launched the micro-browser but the display says: Data Server Unavailable.</b>	Try again in a few minutes. The servers may be temporarily busy.



# ***Specific Absorption Rate Data***

---

## ***This model handset meets international standards for exposure to radio waves***

Your mobile handset is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your handset model, the SAR limit is 2.0 W/kg.\* Tests for SAR are conducted in accordance with CENELEC\*\* testing procedures using standard operating positions with the handset transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the handset while operating can be well below the maximum value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the handset.

Before a handset model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions and locations (e.g., at the ear and worn on the body) that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model handset when tested for use at the ear is:  
0.88 W/kg.\*\*\*

While there may be differences between the SAR levels of various handsets and at various positions, they all meet the governmental requirements for safe exposure. Please note that modifications to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

---

- \* The SAR limit recommended by international guidelines (ICNIRP) for mobile handsets used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
- \*\* CENELEC is a European Union standards body.
- \*\*\* Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

# **Warranty Information**

---

Motorola guarantees you, the original purchaser, the Personal handset and accessories which you have purchased from an authorised Motorola dealer (the "Products"), to be in conformance with the applicable Motorola specifications current at the time of manufacture for a term of [1] year from date of purchase of the Product(s) (Warranty Term).

You must inform Motorola of the lack of conformity to the applicable specifications of any of the Products within a period of two (2) months from the date on which you detect a defect in material, workmanship or lack of conformity and in any event within a term not to exceed the Warranty Term, by submitting the Product for service to Motorola. Motorola shall not be bound by Product related statements not directly made by Motorola nor any warranty obligations applicable to the seller.

A list of the Motorola Call Centre numbers is enclosed with this Product.

During the Warranty term, Motorola will, at its discretion and without extra charge, as your exclusive remedy, repair or replace your Product which does not comply with this warranty; or failing this, to reimburse the price of the Product but reduced to take into account the use you have had of the Product since it was delivered. This warranty will expire at the end of the Warranty Term.

This is the complete and exclusive warranty for a Motorola Personal handset and accessories and in lieu of all other warranties, terms and conditions, whether express or implied.

Where you purchase the product other than as a consumer, Motorola disclaims all other warranties, terms and conditions express or implied, such as fitness for purpose and satisfactory quality.

In no event shall Motorola be liable for damages nor loss of data in excess of the purchase price nor for any incidental special or consequential damages\* arising out of the use or inability to use the Product, to the full extent such may be disclaimed by law.

This Warranty does not affect any statutory rights that you may have if you are a consumer, such as a warranty of satisfactory quality and fit for the purpose for which products of the same type are normally used under normal use and service, nor any rights against the seller of the Products arising from your purchase and sales contract.

(\*):including without limitation loss of use, loss of time, loss of data, inconvenience, commercial loss, lost profits or savings.

## ***How to get warranty service?***

In most cases the authorised Motorola dealer which sold and/or installed your Motorola Personal handset and original accessories will honour a warranty claim and/or provide warranty service. Alternatively, for further information on how to get warranty service please contact either the customer service department of your service provider or Motorola's call centre at the telephone numbers below for your country.

In order to claim the warranty service you must return the Personal handset and/or accessories in question to Motorola. Please avoid leaving any supplementary items like USIM cards. The Product should also be accompanied by a label with your name, address, and telephone number; name of operator and a description of the problem. In the case of vehicular installation, the vehicle in which the Personal handset is installed should be driven to the Authorised Repair Centre, as analysis of any problem may require inspection of the entire vehicular installation.

In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The handset should also clearly display the original compatible electronic serial number (IMEI) and mechanic serial number [MSN]. Such information is contained with the Product.

## **Conditions**

This warranty will not apply if the type or serial numbers on the Product has been altered, deleted, duplicated, removed, or made illegible. Motorola reserves the right to refuse free-of-charge warranty service if the requested documentation can not be presented or if the information is incomplete, illegible or incompatible with the factory records.

Repair, at Motorola's option, may include reflashing of software, the replacement of parts or boards with functionally equivalent, reconditioned or new parts or boards. Replaced parts, accessories, batteries, or boards are warranted for the balance of the original warranty time period. The Warranty Term will not be extended. All original accessories, batteries, parts, and Personal handset equipment that have been replaced shall become the property of Motorola. Motorola does not warrant the installation, maintenance or service of the products, accessories, batteries or parts.

Motorola will not be responsible in any way for problems or damage caused by any ancillary equipment not furnished by Motorola which is attached to or used in connection with the Products, or for operation of Motorola equipment with any ancillary equipment and all such equipment is expressly excluded from this warranty.

When the Product is used in conjunction with ancillary or peripheral equipment not supplied by Motorola, Motorola does not warrant the operation of the Product/peripheral combination and Motorola will not honour any warranty claim where the Product is used in such a combination and it is determined by Motorola that there is no fault with the Product. Motorola specifically disclaims any responsibility for any damage, whether or not to Motorola equipment, caused in any way by the use of the Personal handset, accessories, software applications and peripherals (specific examples include, but are not limited to: batteries, chargers, adapters, and power supplies) when such accessories, software applications and peripherals are not manufactured and supplied by Motorola.

## ***What is not covered by the warranty***

This warranty is not valid if the defects are due to damage, misuse, tampering, neglect or lack of care and in case of alterations or repair carried out by unauthorised persons.

- 1** Defects or damage resulting from use of the Product in other than its normal and customary manner.
- 2** Defects or damage from misuse, access to incompatible sources, accident or neglect.
- 3** Defects or damage from improper testing, operation, maintenance, installation, adjustment, unauthorised software applications or any alteration or modification of any kind.
- 4** Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- 5** Products disassembled or repaired in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim.
- 6** Defects or damage due to range, coverage, availability, grade of service, or operation of the cellular system by the cellular operator.
- 7** Defects or damage due to moisture, liquid or spills of food.
- 8** Control unit coil cords in the Product that are stretched or have the modular tab broken.
- 9** All plastic surfaces and all other externally exposed parts that are scratched or damaged due to customer normal use.
- 10** Leather cases (which are covered under separate manufacturer's warranties).
- 11** Products rented on a temporary basis.
- 12** Periodic maintenance and repair or replacement of parts due to normal wear and tear.

**Note:** *The talk-time, stand-by time and total life cycle of a Motorola rechargeable battery for your Personal handset will depend on usage conditions and network configurations. As a consumable product, the specifications indicate that you should be able to obtain optimum performance for your Motorola Personal handset within the first six months from date of purchase and up-to (200) charges.*

*The warranty for Motorola rechargeable batteries becomes void if (i) the batteries are charged other than by Motorola approved battery chargers specified for the charging of the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, (iii) the battery is used in equipment or service other than the cellular telephone equipment for which it is specified.*

# Index

---

## A

- accessories 16
  - connector ports 1
- active line 25, 46
- Add Digits** feature 49
- alarm clock 93
- alert
  - creating 75
  - defined 42
  - indicators 26, 43
  - profile 42, 74
- alert indicator 25
- animation 100
  - managing 103
  - screen saver 104
  - wallpaper 41, 44, 104
- appointments. *See* datebook

## B

- backlight 45
- barring calls 83
- battery 45
  - Battery Save** feature 45
  - charging 19
  - extending battery life 20, 45, 110
  - installing 18

- level indicator 25, 26
- browser. *See* micro-browser

## C

- calculator 94
- calendar. *See* datebook
- call
  - adding digits after phone number 49
  - alert profile 42
  - alert type, selecting 74
  - alert, creating 75
  - answer mode 43
  - answering 23
  - automatic answer 43
  - barring 83
  - call waiting 52
  - calling card 66
  - cancelling 47
  - costs 85, 86, 87
  - deleting 48
  - dialled calls list 48
  - dialling 22
  - dialling a recent call 48
  - emergency number 47
  - ending 22, 23
  - hold 53
  - ignoring 47



- making 22
- placing 22
- received calls list 48
- receiving 23
- recent calls 48
- storing 48
- terminating 47
- timing 84, 85
- transferring 53
- unanswered call 50
- call barring 83
- call cost information 85, 86, 87
- call diverting 81
- call timers 84, 85
- call waiting 52
- caller ID
  - incoming calls 46
- calling card call 66
- calling line identification. *See* caller ID
- camera
  - taking photos 38
- charging battery 19
- chat 60
- clock
  - illustration 24
- codes. *See* passwords
- colour, display 44
- conference call 81
- cost trackers 86
- credit information 86, 87

- currency converter 96
- cursor 29

## D

- date, setting 42
- datebook
  - adding an event 89
  - alarm 90
  - calendar 88
  - changing event information 90
  - copying an event 91
  - day view 89
  - deleting an event 92
  - event view 89
  - menu feature icon 24
  - reminders 89, 90, 92
  - week view 88
- default passwords 37
- deleting a call 48
- dialled calls list 48
- dialling a number 22
- display
  - backlight 45
  - colour 44
  - description 24
  - idle display, defined 24
  - language 79
- diverting calls 81
- DTMF tones 49

## E

- earpiece 1
- email address, storing in
  - phonebook 65
- emergency number 47
- end key 1, 27
  - functions 22, 23
- ending a call 22, 23
- Enter Unlock Code** message 36, 37
- event alert 74
- exchange rate, calculating 96

## F

- factory settings, resetting 79
- fixed dial
  - defined 83
  - dialling numbers 83
  - editing an entry 69, 83
  - storing an entry 64, 66
- flashing cursor, defined 29
- 4-way navigation key 26
- frequency, changing 87

## G

- games 104
- GPRS indicator 25
  - displayed 99
- GPRS, defined 99
- groups, phonebook 70

## H

- hold a call 53

## I

- idle display 24
- ignoring a call 47
- in use indicator 25
- inbox, text message 55
- incoming call
  - cancelling 47
  - ignoring 47
  - terminating 47
- Incoming Call** message 47
- indicators
  - active line 25
  - alert 25, 26
  - alert setting 43
  - battery level 25, 26
  - GPRS 25, 99
  - in use 25
  - menu 24
  - message 26
  - message waiting 25
  - roam 25
  - signal strength 25
  - transmit 25
- information services 59
- iTAP software
  - activating 32
  - entering novel words 33
  - entering words 32

## K

### key

- end 1, 22, 23, 27
- 4-way navigation 26
- left soft key 1, 27, 39
- menu 1, 27
- navigation 1, 26
- right soft key 1, 27
- send 1, 22, 23, 48

### keypad

- answering calls 43

## L

language, setting 79

### Last Calls Menu

- opening 49
- options 49

left soft key 1, 39

- functions 27

### lights

- incoming call 70

line, active 46

### lock

- phone 35
- SIM card 97

## M

making a call 22

master clear 79

master reset 79

Melody 75

**Memory is Full!** message 61

### menu

**Browser Menu** 100

entering text 29

features 81

key 1

language, setting 79

**Last Calls Menu** 49

lists 28

navigating 27

**Phonebook Menu** 64

Shortcuts Menu 80

using features 29

menu indicator 24

defined 24

menu key 27

### message

chat 60

deleting 58

inbox setup 55

information services 59

menu feature icon 24

outbox 57

picture 38

quick note 57

reading 58

receiving 57

reminders, text message 58

sending 55

status 57

- voicemail 51
- message indicator 26
- message waiting indicator 25
- messages menu feature icon 24

- micro-browser
  - animation 100
  - Browser Menu** 100
  - defined 99
  - functions 100
  - picture 100
  - sound 100
  - starting 99, 100

- microphone 1

- Mindblaster 105

- Missed Calls** message 50

- MMS, defined 38

## N

- n character, storing in number 67

- navigation key 1, 26

- network settings 87

- notepad

  - defined 50

  - entering digits 50

- numeric text mode 30

## O

- optional accessory, defined 16

- optional feature, defined 16

- outbox 57

## P

- passwords

  - changing 37

  - default 37

  - if you forget a password 37

- pause, storing in number 66

- phone

  - answer mode 43

  - automatic answer 43

  - credit available 86

  - credit information 87

  - date, setting 42

  - erase user-entered

    - information 79

  - frequency, changing 87

  - keypad, answering calls 43

  - language, setting 79

  - line 46

  - locking 35

  - network settings 87

  - passwords 37

  - reset all options 79

  - security code 37

  - speed dial, using 50

  - time, setting 42

  - TurboDial 51

  - unlock code 37

  - unlocking 21, 35

- phone number

- adding digits after 49
  - line 46
  - redialling 46
  - storing in phonebook 64, 66
- phonebook
  - capacity, checking 73
  - copying entries 71
  - deleting an entry 70
  - dialling a number 68
  - editing an entry 69
  - email address 64
  - entry name 64
  - fields 64
  - groups 70
  - menu feature icon 24
  - phone number 64
  - sorting entries 71
  - speed dial number 50
  - speed dial, using 50
  - storing an entry 64, 66
  - TurboDial 51
  - TurboDial number 65
  - voice name entry 67
- Phonebook Menu** 64
- photo 38
- picture
  - managing 103
  - screen saver 104
  - storing 100
  - wallpaper 41, 44, 104
- picture message 38

- PIN code
  - activating/deactivating 97
  - defined 97
  - protecting the SIM card 97
  - unblocking 97
- PIN code, inserting in number 66
- predictive text entry
  - activating 32
  - entering novel words 33
  - entering words 32
- profile
  - customising 74
  - setting 42
- prompt, storing in number 67
- PUK code 97

## Q

- quick note 57

## R

- received calls list 48
- receiving a call 23
- recent calls 48
- redial
  - busy number 46
- reminders
  - chat message 62
  - datebook 89, 90, 92
  - text message 58
- right soft key 1

- functions 27
- roam indicator 25
  - defined 25

## S

- screen saver 104
- security code 37
- send key 1, 22, 23, 48
- sending a call. See making a call
- short message service. See text message
- Shortcuts Menu
  - creating 80
  - using 80

- signal strength indicator 25
  - defined 25

- SIM Blocked** message 21, 97

- SIM card

  - defined 16

  - installing 16

  - precautions 16

  - protecting 97

  - SIM Blocked** message 21, 97

  - SIM Disabled** message 97

  - unlocking 97

- SIM Disabled** message 97

- SIM PIN code

  - activating/deactivating 97

  - protecting the SIM card 97

  - unlocking 97

- SMS. See text message

  - soft keys 1, 39

    - illustration 27

    - labels 24

  - sound

    - storing 100

  - special characters 66

  - speed dial

    - number, defined 50

    - using 50

  - storing a call 48

## T

- tap method text entry 30

- text

  - character chart 31

  - entering from keypad 29

  - entry mode, changing 30

  - flashing cursor 29

  - iTAP software predictive text
    - entry 32

  - numeric mode 30

  - tap method 30

- text message

  - deleting 58

  - inbox setup 55

  - reading 58

  - receiving 57

  - reminders 58

  - sending 55

  - status 57

## **Text Msg Menu**

- options 59
- time, setting 42
- timers 84, 85
- transfer a call 53
- transmit indicator 25
- travel charger 19
- TurboDial 51
  - changing number 65

## **U**

- unblocking the SIM card 97
- unlock code 35, 37

## **V**

- vibration
  - alert 74
  - games 105
- voice dial
  - dialling a number 69
  - recording voice name 67
- voice name
  - defined 67
  - recording 67
- voicemail 51

## **W**

- wait, storing in number 66
- wallpaper 41, 44, 104
- Web pages 99, 100