

SWITCH ON

Press and hold



Enter PIN:

—



Enter your PIN code.



MAKE A CALL



Enter phone number.



Call the number

(e.g.: 112 for emergency see p. 9)

ANSWER A CALL



12345678



Accept.

END A CALL



End.

ADD A NAME



Network



Enter phone number.



1234_



1234_

◀ Store no. ▶



Name :

—



Enter name



Number :

1234_



If number is OK



Stored

For Voice dial options
(see page 13)

ACCESS TO MENU



Enter or exit the menus.

NAVIGATION



Move Up or Back.



Move Right.



Move Left.



Move Down or Forward or Validate.

SWITCH OFF



Press and hold.



When your phone is switched off, you cannot receive calls.

MENU

FORWARDING MESSAGES NAMES CALLS EXTRA SETTINGS SECURITY

Forwarding

Always no reply If busy Unreachable Cancel all

Messages

Centre no. Archive Send Usual msg.

Names

Search View Add Own number

Calls

Delete all View Meters

Extra

Stopwatch Clock Alarm clock Calculator Converter BioCalendar Reflex Total

Settings

Register Key tones Ringer Box number Broadcast

Security

Change PIN2 Change PIN PIN code Fixed names



TABLE OF CONTENTS

Games	1	Service center number	17
Biorythm calendar	1	Read new messages	16
Reflex	1	Read archived messages	17
Total	1	Send short messages (SMS)	17
Before you start	2	Emotion icons	18
The micro-SIM card	2	Send short messages from phoneboock	19
The battery	2	Usual messages	20
Insert the micro-SIM card	3	Calls	20
Insert the battery	3	View calls	20
Discover your phone	4	Delete all calls	21
Display	5	View meters	21
Entering text	6	Reset meters	22
Basic functions	7	Settings	22
Switch ON/OFF	7	Set up meters	22
Voice dialling	7	Key tones ON/OFF	23
Make a call	7	Choose ringer	23
Answer or reject a call	8	Cell broadcast	23
Earpiece volume	8	View topics	23
Consult last calls	8	Add a topic	24
Adjust ringer volume	8	Manual registration	24
Emergency call	9	Voice mailbox number	24
Change language	9	Consult your voice messages	25
International call	9	Security	25
Keypad lock/unlock	9	Pin request,	25
Special functions	10	change PIN and PIN 2 codes	26
Answer a second call	10	Fixed names	26
Automatic redial	10	Extra	27
Scratchpad	10	Alarm clock, (set off/set on)	27
Touchtones (DTMF)	11	Set clock	28
Hide your identity	11	Calculator	28
Setting up Flash Dial	11	Euro converter	29
Menus	12	Stopwatch	29
Discover the Compass key	12	Call forwarding	30
Names	13	Forward always to mailbox	30
Add a name	13	Forward always to number	30
Add voice dial	13	Cancel all	30
View names in the name list	14	Philips Authentic Accessories	31
Quick access to names	14	Safety Precautions	33
Search for a specific name	15	Troubleshooting	34
Road your own number	15	Index	36
Delete a name	15		
Messages	16		

GLOSSARY

DTMF	Dual Tone Multi Frequency The tones are transmitted by the phone to the network. They are used to interrogate answering machines, transmit codes,...
GSM Network	Global System for Mobile communications. The type of phone network used by your phone.
PIN Code	Personnal Identification Number, this is the secret code of the SIM Card. If you, or someone else, enters the wrong PIN code three times your SIM card is blocked. If this happens, please contact your service provider.
PIN2 Code	Secret code that allows you to access certain SIM card dependent features. If you, or someone else, enters the wrong PIN2 code three times your SIM card is blocked. If this happens, please contact your service provider.
PUK Code	Secret code used to unblock your SIM card if you, or someone else, enters the wrong PIN code three times. This code will be given to you by your service provider.
Roaming	Using your phone in a network other than your home network in your country or abroad.
SIM card	Subscriber Identification Module. This card which is provided by your GSM service provider allows you to make phone calls with your GSM phone. Your phone number is contained inside the card.
SMS	Short Messages Service. This service provided by the operator allows you to send and receive short written messages (Maximum : 160 characters).

Biorythm Calendar

Predict your or your friends' day.



from "Extra"
switch to
"Bio calendar".



Extra

◀ Bio calendar ▶

Biorythm will ask for
your birth date



Birth date:

dd/mm/yyyy

and the date of the day
you want to predict.
Then, discover your
destiny in terms of



Chance ▶



◀ Love ▶



◀ Energy ▶



◀ Success ▶



Be sure to check your
battery level before
and after each game
in order to ensure
continuity ...
Reflex and Total are
only available in
Savvy Vogue.

Reflex

Eliminate those pesty
scrolling invaders.



from "Extra"
switch to
"Reflex".



Extra

◀ Reflex ▶

5

JKL

*

+

#

=

Shoot with your
gun (<) located
on the right-hand
side of the screen



7 3 8 . . . < 8

4

You have to select the
same number and be on
the same line as the
invader when you shoot.



Change your
shooter number

or use your keypad

4

GH

6

MNO



Change line

or use your keypad

2

ABC

8

TUV

Points are tallied each time
an invader is hit, points are
lost each time you shoot a
wrong invader.



BONUS LEVELS await
the exceptional players
...

Total

Find the right TOTAL



from "Extra"
switch to
"Total".



Extra

◀ Total ▶

Three difficulty levels
exist.

Find the total with the
four given numbers.

4 3 2	4 . 4 . 8 . 9
	8 + 9 * 4

Enter numbers on the
second line of the screen:
Add, subtract,
multiply or divide.

*

+

#

=

To find the
result.



Ask for help and
your mobile gives
the beginning of
the operation.

The game is played in 10
rounds.

The score depends on :

- time spent,
- number of jokers asked for
- number of wrong attempts.




The player can exit the
games at any time by
tapping "Menu" on
the keypad.
A player answering an
incoming call while
playing "games" will
automatically switch
the game off.

From your card, remove the micro-SIM card

The micro-SIM card


To use your phone, you must insert a valid micro-SIM card supplied by your GSM network operator. When you switch the phone on, it may ask for the PIN code. The PIN code is the secret code of the micro-SIM card.

The micro-SIM card contains your subscription number and phone number. It also contains a memory in which you can store phone numbers and messages. If you use your micro-SIM card on another phone, you still retain the same phone number, stored numbers, and messages.

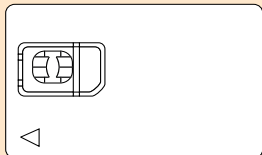

The battery

Your phone is powered by a rechargeable battery.

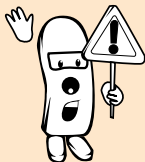

- After you plug in the battery, please wait a few seconds before pressing the on/off key to switch the phone on.
- A battery only reaches its maximum capacity after being totally discharged and recharged 2 or 3 times.
- A battery lasts longer if you allow it to fully discharge from time to time.
- If you do not use your phone for several days, it is better to remove the battery.


Remove the battery cover

Press on the latch on the back of the phone and lift off the battery cover.



Remove the battery (if necessary)


Lift up on the bottom of the battery and remove it from the phone.

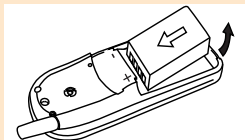

Insert the micro-SIM card


First, place the micro-SIM card into the appropriate slot in the battery compartment (the clipped corner should be at the top left).

Then, slide the card with your finger until it stops.

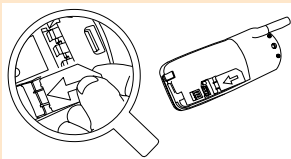


Insert the battery

1. Keep the battery + and - on the top facing the + and - of the phone.
2. Slide the battery onto the contacts points and press.

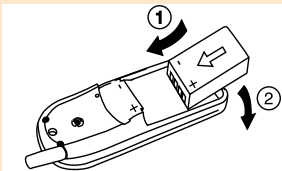


Replace the battery cover

Hook the battery cover onto the hinges on bottom of phone and press forward until the latch catches.

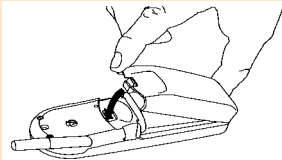

Charge the battery

With the battery inserted in the phone, plug the connector into the right socket at the base of the phone. Next, plug the transformer unit into an AC power socket.

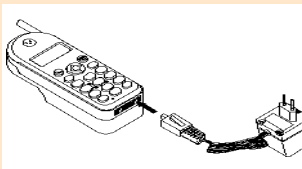

The only way to turn off the charger is to unplug it, so use an easily accessible AC power socket.

The battery icon on your phone's display indicates the state of the charge process:

- Bars moving = battery is charging.
- Bars steady = battery is fully charged.
- Battery outline flashing (see Troubleshooting p. 33).

You can switch the phone on and use it during charging.

Do not wait for an empty battery to charge your phone again in order to save battery capacity.



The first time you charge the battery and later, if it is completely discharged, the battery icon will only appear 2 to 3 minutes after you connect the charger. Please charge the phone for a minimum of 3 hours before first use.

DISCOVER YOUR PHONE

"Compass" key

use this key to navigate in the menus, the OK key is used to validate information

Earpiece
listen here

Antenna

Display
see next page

Green "CALL" key

press this key to dial the number or name on the display, or use it to answer a call

Red "ON/OFF" key
a long press on this key switches the phone on/off, a short press ends a call

PHILIPS

"CLEAR" key


to delete numbers and letters on the display


Red MENU key
to enter and exit the menus

Keypad

to enter numbers and text

Microphone

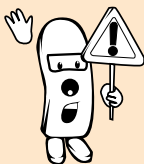

If you encounter the  symbol in this manual, it means that you have to press and hold the key to activate the function.

New text message(s)

- if on: you received new messages
- if flashing: the memory is full, you need to delete old messages before you can receive new ones

Silent mode

if on: phone will not ring or beep (except for the alarm clock)

Network

if on: your phone is registered to a network
if flashing: registration is in progress

Battery level

the bars indicate the battery level (4 bars is full, no bars means recharging is needed)

New voicemail


if on: there are new messages waiting in your voicemailbox (*)

Roaming

your phone is registered to a foreign network

Reception quality

the more bars are shown the better the reception

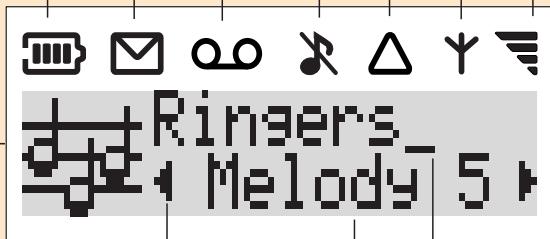


Graphics area

displays the clock and guides you through the menu

Arrows

indicate in which directions you can go using the Compass key

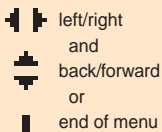

left/right

and

back/forward

or

end of menu

Cursor

indicates that you can enter numbers or text

2 text lines




to enter numbers and text or to read text messages













(*) Depending on the network.

ENTERING TEXT


Each key allows you to obtain several characters. You have to quickly press the same key several times to reach the desired character.





Example:

TO OBTAIN	Space	D	ü
PRESS	 Once	 Once	 Five times quickly

Key	Characters
	space 1 @ # = <> () & £ \$ ¥
	a b c 2 à ä å æ ç
	d e f 3 é è Æ Φ
	g h i 4 Γ ì
	j k l 5 Λ
	m n o 6 ñ ò ö ø
	p q r s 7 β Π Θ Σ
	t u v 8 ü ù
	w x y z 9 Ω Ξ Ψ
	. 0 " ' ? ! , ; : ÿ
	* + - / %
	upper-case lower-case mode

While you enter text your phone changes between upper-case and lower-case automatically.

If you wish to enter text in the upper-case mode press , to enter text in the lower-case mode press  again.

The   icons will show that you are in the upper-case mode. In the lower-case mode the   icons appear.



Switch on/off...

SWITCH ON



Press and hold.



Enter PIN:

—

Sometimes entering the PIN code is not necessary (depends on your subscription and on your PIN request settings - see page 25).



Enter your PIN code.

The digits entered are replaced by big dots.




If you enter a wrong code 3 times your card will be blocked. If this happens, contact your operator.



PIN correct

...



If this is the phone's initial use or if the battery has been removed since the last use, you will need to re-set the clock (see page 28).



Registering



Network

SWITCH OFF



Press and hold.



Goodbye

Voice dialling

You can also make a call by pronouncing the voice tag you have associated to a number (see p. 13).



Press and hold



Speak now

Pronounce the name you have associated to the number. The phone dials automatically the number.

Make a call



Network



Enter phone number



01456—



Call the number



Calling

0145678901



Black Jack

00:02

Display shows a call cost if sent by your network.



The name will be displayed only if the name is stored in your phone's Names list.

END CALL



BASIC FUNCTIONS

Answer or reject a call



123456789

The caller number is displayed only if your subscription supports caller line identification.

If the number is in your Names list, the name will appear instead.



Accept the call
or



Reject the call.

Earpiece volume

While on a call you can adjust the earpiece volume.



Helen

17:24

Raise earpiece volume.

OR



Helen

17:24

Lower earpiece volume.



Helen

17:24

Consult last calls

Your phone automatically stores a list of the last 10 calls you dialed and the last 10 callers who dialed you (including missed calls).



Network



Display the last call made, received or missed.



Calls

Florence ▶



To view other calls.



To call.



For information on viewing the last 20 calls you placed or received, see "Calls Section" p. 20.

Adjust ringer volume and vibrator

You can select the vibrator options and adjust or turn off the ringer volume



Network



Display ringer volume selection.



Volume

◀ Medium ▶

■ Silent ◊ Vibrator ◊ Vibra+ring ◊
Low ◊ Medium ◊ High ■



Select the volume.



Volume

◀ High ■

OR



Select vibrator mode



Volume

◀ Vibrator ▶



Validate vibrator or volume selection.

Emergency call



Enter 112



Calling
112



Depending on your network operator, the emergency number 112 can be dialed without the micro-SIM card inserted.

Change language

Normally your phone automatically selects the right language for your country, but in case you want to change it:



Press and hold.



Language

English ▶



Select language.



International call



To make an international call, you can use "+" as the international prefix.



Network



Press and hold.



+ _

Dial the number (international country code and local number).



Call the number.



Calling

+831234567

Keypad lock/unlock

Avoid undesired keystrokes when the phone is in your pocket or purse.



Network



Press and hold to lock keypad.



Keypad is locked



Network



Press and hold to unlock keypad.



Keypad is unlocked




When the keypad is locked, it is possible to dial the emergency number and to receive calls.

SPECIAL FUNCTIONS

Answer a second call (Call Waiting)



This feature depends on the network. If a second person calls you, you will hear a beep. Check the display for a second call.



Reject second call

OR



Accept second call

Call 1 is put on hold.




Switch between Call 1 and Call 2.




To end the call on display and return to other call.

Return to single call state.




Automatic redial

When you dial a number and your correspondent is busy, your phone offers the function of automatically redialling.




Call failed or recipient is busy.




Confirm. OR

Any other key cancels autoredial.



A beep will sound for each redial attempt or vibrate 5 seconds in both vibrator modes




A beep informs you when the connection has been made. An incoming call or any use of the phone will end automatic redial.

Scratchpad

The scratchpad feature is useful if you want to store a telephone number during a call.


The number can be dialled or viewed later.



Enter the number you want to keep.



The display automatically returns to your call.




End the call.



Call the number on the scratchpad.

OR

For options.



SPECIAL FUNCTIONS

Touchtones (DTMF)


During a call or in direct dialling, the numeric keys always transmit DTMF tones (Dual Tone Multi Frequency) also known as "touchtones".

These tones are used to operate services that you can reach with your phone, like a pager or an answering machine.

Example, to consult your home answering machine:




Enter telephone number of your home answering machine.



0123456789_

Enter a "wait" signal to give time for the phone to connect.



0123456789w_


Enter the password of your home answering machine (e.g.: code: 9876).



Hide your identity



Enter "pause" character.




0123456789w_

876p_



Enter code to listen to new message (e.g.: code 3).



0123456789w_


876p3_



Call.

Hide your identity

If you type #31# followed by the phone number you call, your phone number is hidden to the other person.



#31#0123456_


78_



Availability of this feature depends on your network.

Setting up Flash Dial

You can associate 8 names in the Names list or FDN list with keys 2-9 on the keypad. A long press on one of these keys will automatically dial the associated number.



Names

Vincent

Choose the name you want to make Flash Dial.



Press and hold to link the name to key 4.

CANCEL FLASH DIAL



Names

Vincent



Press and hold to cancel link.

TO FLASH DIAL



Network



Press and hold to dial linked number.

Discover the Compass Key

The Compass Key is your navigator while in the menus.

Press  to enter or exit the menus.

Move one menu-level back.

Switches to option on the left.



Switches to option on the right.








Move forward or validate the displayed option.

Here's an example:

What you see on the display

Press this key

The Names list menu options



Add a name

With your phone, you can store the names and phone numbers of people you call frequently.

MENU



Menu

Names



Names

View

Switch to "Add".



Names

Add

Accept.



Name :

—

Enter name (max 11 characters).

For example: Jim

J

I

M

5

Once

4

Three times quickly

6

Once

...



Delete one character.

OR



Press and hold to delete all characters.



Name :

Jim_



Number :

—

Enter number (20 digits max).



Number :

0123456789_



Accept number.

Add Voice Dial

NO VOICE DIAL



Voice dial

Yes



Select "No"



TO ADD VOICE DIAL



Press OK

and speak



Pronounce the voice tag you want to associate to the number



Press OK

and speak



Repeat the voice tag you want to associate to the name




Stored





When Voice dial memory is full (10 names) the Voice dial menu disappears


MENUS / NAMES...


View names
in the Names list







 **Accept.**




 **Accept.**



 **To scroll through the list.**

OR


 **Use the keypad to quickly jump to a name.**


...


For example:

7
PQRS

Press to jump to names starting with "P", "Q", "R" or "S".





 **Press to jump to next name.**




 **Call the number.**


OR


 **To view the number.**



 **To view the available options.**

Quick access
to names..





 **Switch to the option you want.**


 **Accept.**

Quick access to names

There is a quick way to access the names you stored:







 **Switch to other names.**

 **Call.**

Search for a specific name

MENU

	Menu
◀	Names ▶

OK Accept.

	Names
◀	View ▶

Switch to "Search".

OK Accept.

Example:

	Search for:
	Ur_

Enter first few letters of name

U	R
8 TUV	7 PQRS

Twice quickly Three times quickly

OK

	Names
◀	Urszula ▶

Call icon Call name on display.

Read your own phone number

MENU

	Menu
◀	Names ▶

OK

Switch to "Own number".

	Names
◀	Own number ▶

OK Accept.

	Own number
	0123456789

OK

Only available if present in the SIM card.

Delete a name

OK To access directly to phonebook

	Names
◀	Axel ▶

Select name you want to delete

	Names
◀	Xavier ▶

OK "Accept twice"

	Xavier
◀	Send msg. ▶

Go to delete

OK

	Press C to delete
--	-------------------

C

	Deleted
--	---------


MENUS / MESSAGES..

Messages

With your GSM phone you can receive text messages (SMS) and send messages to other GSM phones. To have the possibility of writing and sending messages, you need to enter a service center number first. If it is not present in the SIM card, ask your network operator for it.



Switch to "Messages".



Switch to "Centre no."



Enter number.



New message(s)

Your phone allows you to send or receive short written messages.

NEW MESSAGE INDICATORS




Lights up on the display when you receive a text message.



Flashes when the message memory is full. If this happens, you need to delete archived messages otherwise new ones will be rejected.


READ NEW MESSAGE(S)



OR



...



Switch to "Messages".



Read the message.



Scroll through the message.



To switch to other messages.

MENUS / MESSAGES...

Read archived messages

Send short messages (SMS)



At the end of a message.



Delete ◊ Reply ◊ Forward ◻



Switch to the option you want.



Accept.

When you receive a text message that comprises a telephone number enclosed between double quotes (e.g.: "+33900112233"), then the number is automatically extracted and stored in your calls list so that you can call it back easily.



Messages you have read and messages you have saved can be found in the Archive.




Switch to "Messages".



Switch to "Archives".



Accept



Switch to the message you want to read.



Read the message.



To switch to other messages



Menu

◀ Messages ▶



Messages

◀ Send ▶



Accept



Enter phone number or select a name from the phonebook by pressing OK a second time.



To number :

0123_




Text :

—

Enter message (maximum 160 characters). See "Entering Text" section page 6 for instructions.





...



Icons


None ▶


Select the icon you want to send. (See "Emotion Icons" table at the end of this procedure). If you do not want to send an icon, choose "None".


Select a category


Validate.



Select icon



Validate.


Send

Yes |

| No ◆ Yes |
Decide to send or not.






Requesting

Wait while message is being sent.

Icons

Confirmation will appear.


Sent


Save

Yes |






| No ◆ Yes |

Decide to save or not.

















IMPORTANT!

To see the icon the receiver needs a new Philips phone: Savvy Vogue, Ozeo or Xenium; otherwise the equivalent code will be displayed at the end of the receiver's message.

Emotion Icons

Icon	Code	sent
	Smile	:-)
	Wink	;-)
	Cool	B-)
	Pfrft...	:-P
	Sad	:-(

...

	Grrr	:-/
	Love	(O)
	Broken	(X)
	Yo!	Yo!
	Well done	==b
	BOOM!	>*<
	Deadly	%-I
	Magic	=:I
	Hugging	ΩΩ
	Kiss	:-X
	Idea	?-)
	Sleep	Zzz
	Trapped	:-I
	Failed	==p
	Police	:-!
	Smell!	&@*

Send SMS from
phonebook

Events Icons

	Party	o<I
	Hooray!	iii
	Gift	IEI
	Drink	>-I
	Coffee	I D
	Holidays	-Y-
	Cloudy	;::
	Sunny	>o<
	Flowers	@>-
	Money	\$\$\$
	Snowman	<:7
	Music	Σ-)
	Shopping	\$-)
	Lunch	(II

Animals Icons

	Miaaaw!	:<*
	Whoof	:>#
	Teddy	8<)
	Monkey	8:)
	Fish	<<<
	Bug	(x)
	Dragon	:>>

Sports Icons

	Ball	(I)
	Shoot	0-/
	Goal!	(!)
	Victory	:>-
	Red card	II!
	Racquet	o--
	Boarding	o-o
	Golf	o-)

You can also send an SMS directly from your phonebook without having to enter the phone number.

	Network
--	---------



	Names :
	Anders ▶



	Names
	◀ Sebastian ▶



Accept
twice

	Sebastian
	◀ Send msg. ▶




	Text :
	_

Enter message (maximum 160 characters).

See "Send short messages (SMS)" for more instructions.




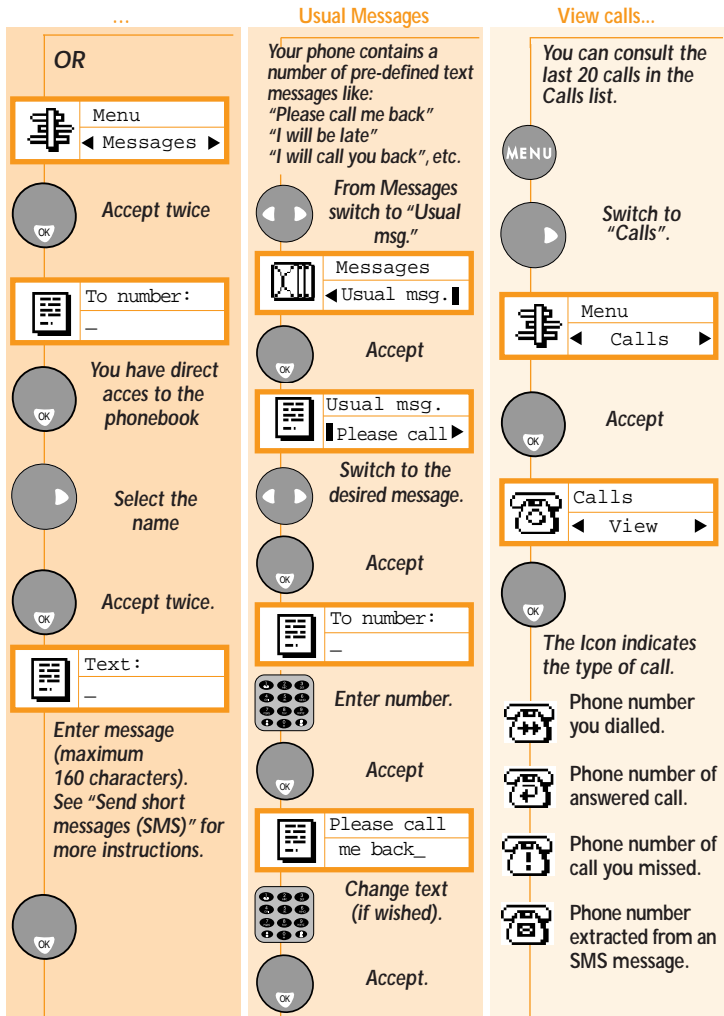

...

Delete all calls

View Meters



To view other calls,




To call,

OR



To view the number.



To options.



Delete ♦ Store no. ♦
Send msg. ♦ Usual msg. █



Choose other option if you wish.




Confirm selection.

You can delete all the calls in the calls list.




Switch to "Calls".




Accept.



Switch to "Delete All".




Accept.




You must confirm the deletion.




To delete.





Your phone has meters that allow you to see the total cost of your calls. It also allows you to set limits on cost and check your consumption.



Switch to "Meters".



The cost counters and limits will only work if the network supports this feature.



Duration ♦ Remaining ♦ Cost █


Reset meters




Switch to the meter you want.



Accept.



Reset meters



Switch to "Reset".



Accept.



Select "Duration" or "Cost".



To reset.





For some of these options you might need your PIN or PIN2 code (depending on your operator).


Set-up meters



From Meters switch to "Setup".



Type your PIN code (or more often, your PIN2). Depending on the network.



Press and hold to clear your entry.




For example BEF (Belgian francs).

...



For example 2.50 francs per unit.



Press and hold for the decimal point.



Key tones ON/OFF

Each time you press a key, a tone is emitted. You can silence the key tones by turning them off.

MENU

Switch to "Settings".

From Settings switch to "Key tones".



Settings
◀ Key tones ▶



Key tones
◀ Set off ▶

Set off ♦ Set on

Accept.



Set

Choose ringer

When your phone rings, it plays a melody. You can change this melody.



Settings
◀ Ringer ▶



Ringer
Special ▶

Current melody

For other melodies.



Ringer
◀ Fortissimo ▶

Phone plays the melody.

Accept.



Set



The «Key tones» and «Ringers» menu items are not visible when the volume is set to "Silent" or "Vibrator"

Cell broadcast

The broadcast menu allows you to activate or deactivate the reception of SMS broadcast by the network.



From "Setting" switch to "Broadcast"



Settings
◀ Broadcast ▶



Accept.



Broadcast
◀ Topics ▶

Reception ♦ Topics ♦ District



The topics menu allows you to define the type of message you want to receive.

VIEW TOPICS



Accept.



Topics
View ▶

View ♦ Add



This fonction allows you to view which topics are registered in your phone (e.g: weather report). To delete or change a topic in the topics list use delete or change options.

ADD A TOPIC




Accept.



Enter the name you want to associate with the topics.



Accept.



Enter the code given by your network operator for this topics.



Accept.

RECEPTION

The reception menu allows you to activate or deactivate the reception of registered topics.



From Broadcast switch to "Reception"



Accept.



Set on Set off



Select the desired option.




Accept.

DISTRICT

The district menu allows you to select a topic from the topics list, which you would like to be permanently displayed.

As a result, for this special handling of messages you must enter the topic in both the district menu and the topics menu.



Accept.






This menu may not appear. Depends on your subscription.

When travelling abroad, it may be useful to manually register with a network of your choice.




From Settings switch to "Register".



Switch to desired network.



Accept.



Your phone will revert to automatic network selection next time you switch it on.

MENUS / SECURITY...

Voice Mailbox number

To be able to use Voicemail you need to set up your voice mailbox number.

Ask your network operator for this number.



From Settings switch to "Box number".



Settings

◀ Box number ▶



Box number:


—



Enter number.



To correct (if needed).



This menu may not appear. Depends on your subscription.

Consult your voice messages



Lights up on the display if you have a new voice message.

Availability of this feature depends on your network.



Press and hold to call for your voicemail.

OR



Network Consult ▼



Voicemail
0123456789



To call.

Pin request



Switch to "Security"



You can (de)activate the request for the PIN code at power-on.



Security

◀ PIN code ▶



PIN code

■ Set off ▶

■ Set off ◆ Set on ■

Switch to desired option.



Enter PIN:

—




Enter the PIN code.





Deactivated


MENUS / SECURITY...


Change PIN and PIN 2 codes


 Security
◀ Change PIN ▶


 Accept.


 Old PIN:
—


 Enter old PIN code.


 OK


 New PIN:
—


 Enter new PIN code.

 Accept.

 Repeat PIN:
—

 Enter new PIN code again.


 Accept.

 Changed


Fixed names


Your network operator may have provided you with a SIM card which supports fixed names (FDN). You can restrict the use of your phone to the numbers stored in the fixed names list.


VIEW FIXED NAMES


 ◀ ▶


From Security switch to "Fixed names".


 Security
◀ Fixed names ▶


 OK

 Fixed names
◀ View ▶

 Search ◊ View ◊ Add ◊ Restrictions ▶


 OK

 Fixed names
Thomas ▶


 ◀ ▶

To view other names.


OR


 To call.


Add names


 ◀ ▶


From "Fixed Names" switch to "Add".


 Fixed names
◀ Add ▶


 OK


 Enter PIN2:
—


 Enter PIN2.


 Name:
—


 Enter name.

 OK

 Number:
—

 Enter number.


 OK

 Stored

Restrict to fixed names




From "Fixed Names" switch to Restriction.



Set off ♦ Set on



Accept.



Enter PIN2:



If «Restriction» is activated, then only the numbers in the fixed names list can be called.

Alarm

The phone offers you some fun and practical functions.




Switch to "Extra"



ALARM

Your phone has a 24 hour alarm clock. The alarm will ring even if the phone is switched off. When the alarm rings press any key to silence it.

SET ALARM OFF



Set off ♦ Set on



Set alarm on



Set off ♦ Set on




> Minutes decrease
< Minutes increase

OR



Enter hour and minutes (eg: 07:45).



Set clock



From Extra switch to "Set clock".



Extra

◀ Set clock ▶



Set clock

◀ 11:37 ▶



< Minutes decrease

> Minutes increase

OR



Enter hour and minutes (eg: 19:42).



Set clock

◀ 19:42 ▶



Accept.



Set



You have to set the clock if you remove the battery.

Calculator

Your phone has a calculator to add (+), subtract (-), multiply (*), and divide (/).



Network



Press and hold to use calculator.

OR



from Extra switch to "Calculator".



Extra

◀ Calculator ▶



Calculate:

0_

To	+	-	*	/
PRESS				
	Once	Twice	Three times	Four times

For example
 $3 \times 6 = 18$



...



Calculate:

3_



Calculate:

3 * _



Calculate:

3 * 6_



Calculate:

=18



To clear.



Press and hold zero to enter a decimal point.

Euro converter

This feature is only available for countries participating in the European Monetary Union. It allows you to easily convert Euros into your local currency and vice versa.



From Extra switch to "Converter".



■Euro->FF◆FF->Euro■




Switch to desired type of conversion.



Enter amount (e.g.: 10.5 Euros).

...



Press and hold zero to enter a decimal point.


Stopwatch

You can time a race or other event.

This stopwatch is not a professional measuring device. Its measurements cannot be applied in an official context.



From Extra switch to "Stopwatch".



Start the stopwatch.



Stop the stopwatch.



Restart the stopwatch.



Reset the stopwatch to zero (when stopped).

MENUS / CALL FORWARDING...

Call forwarding

Depending on your network operator your phone will allow you to divert all your calls to voicemail or to another number. You will have to select the type of forwarding you want .

MENU



Switch to
"Forwarding"



Menu

Forwarding



Forwarding

If no reply

Always If no reply If busy
Unreachable Cancel all



Select the option
wanted by pressing
the OK key

Example : Always
FORWARD ALWAYS
TO MAILBOX



Forwarding

Always

Status Cancel To mailbox To number



Switch to
mailbox



...



Requesting



Activated



Your phone will not ring
as long as your calls
are forwarded to your
mail box.

To be able to forward
calls to your voice mail
check that your mail box
number has been set
correctly (see "Settings"
section page 25)

FORWARD ALWAYS TO
NUMBER



From
"Forwarding"
switch to
"Always"



Forwarding

Always

Status Cancel To mailbox To number



Select "To
number"



Number :

_

Cancel all



Enter the
number to which
you want to
divert your calls



Requesting



235

Activated



"Status" will show you
if this specific call
forwarding option is
activated or not .
You can cancel each
individual forwarding
option by using "Cancel"
instead of "Cancel all"

CANCEL ALL



From "Forwarding"
switch to
"Cancel all"



Forwarding

Cancel all



Deactivated

Your phone will now
receive calls as normal ;

"When Performance Counts... Philips Authentic Accessories are Designed to Maximize the Performance of Your Philips Phone".

PLUS Battery

Reference	
BHR 130/P	9911 240 32041
NiMH	1300 mAh



SLIM Battery

Reference	
BHR 127/P	9911 240 32040
NiMH	700 mAh



Cigarette Lighter Adapter 12V - 24V

Reference	
CKLR 12/P	9911 240 34118



Deskstand Charger

Compact and convenient solution for charging and standing your phone ready for use.

Reference	
DTSC 12/P	9911 240 35143



Fast Travel Charger

	Reference	
Europe	ACSR 12/P	9911 240 30042
Taiwan/USA	ACTR 12/P	9911 240 30043
UK	ACUB 12/P	9911 240 30044
Australia	ACAR 12/P	9911 240 30045



Fast Battery Charger and Conditioner

The cradle holds a single battery. Four versions of AC plugs available.

	Reference	
Europe	DTER 12/P	9911 240 35137
Taiwan/USA	DTTC 12/P	9911 240 35139
UK	DTUC 12/P	9911 240 35140
Australia	DTAC 12/P	9911 240 35141



PHILIPS AUTHENTIC ACCESSORIES

Basic Car Kit

Keeps your phone secure and within easy reach while the battery is charging.

Reference
CKBR 12/P 9911 240 34210



Car Kit with Headset

Enjoy hands-free conversation while your phone is secure and within easy reach.

Reference
CKSR 12/P 9911 240 34211



Compact Car Kit

Easy to use, this very compact hands-free solution offers a high audio quality while also charging your mobile.

Reference
HSSX 15/P 9911 241 30018



Headset

Use your phone under almost any situation with this convenient hands-free, very mobile solution.


Reference
HSLB 12/P 9911 241 30023



Deluxe Hands-Free Headset

Additional in line answer button offers you a simplified alternative to searching for the phone keypad.

Reference
HSLD 15/P 9911 241 30024

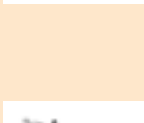

Personal Accessories

Keeps your phone within easy reach, safe and secure.

Carry Case with Belt Clip	Reference PBCR 12/P	9911 240 37023
Belt Clips (3 colors per package)	VBCR 12/P	9911 241 39203
Phone Necklace	VPNR 12/P	9911 241 39204



Easel-Style Phone Stand

Keeps the display on your phone at an easy-to-read angle.

Reference
VPER 12/P 9911 241 39205



Ask for Philips Authentic Accessories where you bought your Philips phone.

SAFETY PRECAUTIONS

RADIO WAVES


- Your phone transmits/receives radio waves in the GSM frequency (900/1800 Hhz).
- The GSM network controls transmission power (0.01 to 2 watts).
- Your phone complies with all relevant safety standards.
- The CE mark on your phone shows compliancy with European electromagnetic compatibility (Ref. 89/336/EEC) and low voltage directives (Ref. 73/23/EEC).

SAFETY PRECAUTIONS

- Careless use can cause harm to you and others.
- Please inquire and respect local laws and regulations.
- Use your phone in the normal operating position (to ear).
- Avoid touching the antenna while a call is in progress.
- Do not use your phone if the antenna is damaged (risk of minor skin burn).
- Keep your phone in a safe place, out of reach of small children.
- Check with other manufacturers that consumer electronics will not be affected by radio energy.
- Avoid use of phone while driving. It affects your concentration.
- Switch phone off in an aircraft. It is illegal to use cellular phones when airborne.
- Switch phone off near hospitals or medical equipment.
- Ask manufacturer about radio wave shielding of electronic medical devices you may use (pacemaker, hearing aid).
- Switch phone off where blasting is in progress (for example in quarries).
- Switch phone off in potentially flammable atmosphere (petrol stations, fuel depot, chemical plants).



ENVIRONMENTAL CARE

- Please remember to observe the local regulation regarding the disposal of your packaging material, exhausted batteries and old phone and where possible promote their recycling.



- *The phone must ALWAYS be switched OFF by pressing the Red ON/OFF key and never by removing the battery while the phone is ON. Otherwise, the stability of the settings, alarm clock and ring cannot be guaranteed.*
- *The phone is equipped with an alarm clock that, if set, will ring. If the phone is off and the alarm rings, no radio waves are transmitted. Press any key to turn off the alarm.*

TROUBLESHOOTING

PROBLEM	SOLUTION
<i>The phone does not switch on.</i>	Check if the battery is correctly inserted (big arrow facing you and pointing to the top) and/or charge the phone until the battery icon has stopped flashing.
<i>The display shows "BLOCKED" when you switch on.</i>	Somebody tried to use your phone but did not know the PIN code or Unlocking code. Contact your service provider.
<i>After switching on your phone, the SIM lock code is required (NCK, NSCK, SPCK, CCK, PCK).</i>	Your phone is configured to work only with your service provider's SIM card. Please contact your service provider to get further information.
<i>The  and  symbols are not displayed.</i>	The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside of the network coverage area. Try from another place.
<i>The display doesn't respond (or responds slowly) to key pushes.</i>	The display responds more slowly at very low temperatures. This is normal and does not affect the operation of the phone. Take the phone to a warmer place and try again.
<i>Your phone shows "insert SIM" on the display.</i>	Remove your battery. Check that the micro SIM card is correctly inserted (clipped corner at the top left - see page 3).
<i>Your phone does not display the caller's number.</i>	This feature is subscription dependent. If your subscription does not support it, the phone displays "Call". Please contact your service provider to get further information.
<i>When attempting to use a feature in the menu, the mobile displays "not allowed".</i>	Many features are subscription dependent. They are only available, therefore, if your subscription supports them. Please contact your service provider to get further information.

TROUBLESHOOTING

PROBLEM	SOLUTION
<i>You cannot send messages or your correspondent does not receive your messages.</i>	Some networks do not allow message exchange with other networks. Please contact your service provider to get further information. The network can be crowded and messages can take some time to arrive.
<i>Your correspondent does not receive your emotion icons.</i>	Only Philips phones (see page 18) can receive emotion icons.
<i>The display shows SIM FAILURE.</i>	Your SIM card may be damaged. Please contact your network operator.
<i>The display shows IMSI FAILURE.</i>	The problem is related to your subscription. Please contact your network operator.
<i>Your telephone is wet.</i>	Switch it off and remove the battery (see page 2). Let them to dry separately 24 hours before using it again.
<i>You cannot enter operator services.</i>	Press and hold the "Menu" key. If this does not work, please contact your service provider.
<i>Keys tones or ringer menu have disappeared.</i>	You are probably in Silent or Vibra mode (see page 23).
<i>While charging the battery icon is not displayed.</i>	Your battery is completely empty, please wait a few minutes after connecting the charger.
<i>When charging the battery, the battery icon shows no bars and the outline is flashing.</i>	Only charge the battery in an environment where the temperature does not go below 0°C (32°F) or above 50°C (113°F).
<i>Ear piece volume is too low or too high.</i>	You can adjust it (see page 8).

INDEX

- Accessories - 31,32
- Alarm - 27
- Battery - 2, 31
- Biorhythm calendar - 1
- Calculator - 28
- Calls - 20
 - Answer a call - 8
 - Answer a second call - 10
 - Call forwarding - 30
 - Emergency call - 9
 - End a call - 7
 - International call - 9
 - Last calls - 8
 - Make a call - 7
 - Menu - 20
 - Reject a call - 8
- Capital letters - 6
- Cell Broadcast - 23
- Clear display - 4
- Clock - 28
- Compass key - 4, 12
- Consult last calls - 8
- Display - 5
- DTMF tones - 11
- Earpiece volume - 8
- Emergency - 9
- Emotion Icons - 18
- Entering Text - 6
- Euro Converter - 29
- Extra - 27
 - Alarm - 27
 - Biorhythm calendar - 1
 - Calculator - 28
 - Clock - 28
 - Euro Converter - 29
 - Reflex - 1
 - Total - 1
 - Stopwatch - 29
- Fixed names - 26
- Flash Dial - 11
- Forward calls - 30
- Games - 1
- Hide identity - 11
- Keypad - 4
 - Lock - 4,9
 - Unlock - 4,9
- Languages - 9
- Last calls - 8
- Mailbox number - 25
- Manual registration - 24
- Menus
 - Calls - 20
 - Extra - 27
 - Messages - 16
 - Names - 13
 - Security - 25
 - Settings - 22
 - Voicemail - 25
- Messages - 16
 - Cell Broadcast - 23
 - Menu - 16
- Meters - 21
- Micro-SIM card - 2
- Names - 13
 - Add a name - 13
 - Menu - 13
 - Fixed names - 26
 - Search a name - 15
 - View list - 14
- Phone - 4
 - Own number - 15
- PIN - 25
- Ringer volume - 8
- Restrict to FDN - 27
- Scratchpad - 10
- Safety Precautions - 33
- Security - 25
- Settings - 22
- Set
 - Alarm On/Off - 27
 - Clock - 28
- Set-Up meters - 22
- Switch On/Off - 7
- Stopwatch - 29
- Touchtones (DTMF) - 11
- Troubleshooting - 34,35
- Voice dialling - 7
- Voicemail - 25
- Volume
 - Earpiece - 8
 - Ringer - 8
 - Vibrator - 8